




# Brother Color Laser Printer **SERVICE MANUAL**

---

**MODEL: HL-2600CN**

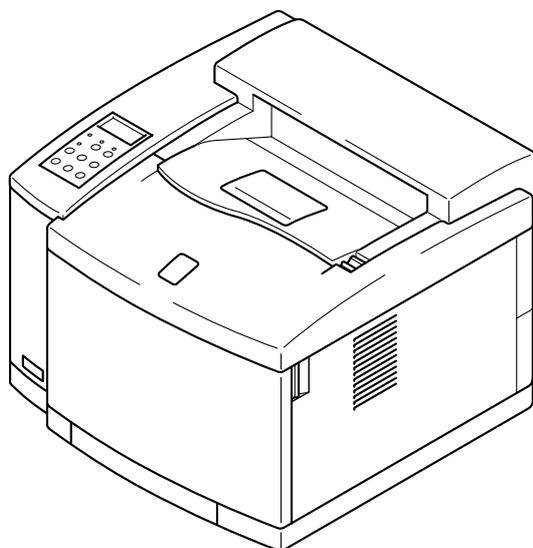

Read this manual thoroughly before maintenance work.

Keep this manual in a convenient place for quick and easy reference at all times.

October 2001  
SM-PRN023

Product: 2001 Brother HL-2600CN Color Laser Printer Service Repair Workshop Manual  
Full Download: <https://www.arepairmanual.com/downloads/2001-brother-hl-2600-cn-color-laser-printer-service-repair-workshop-manual/>

© Copyright Brother 2001

All rights reserved.

No part of this publication may be reproduced in any form or by any means without permission in writing from the publisher.

Specifications are subject to change without notice.

Trademarks:

The brother logo is a registered trademark of Brother Industries, Ltd.

Apple, the Apple Logo, and Macintosh are trademarks, registered in the United States and other countries, and True Type is a trademark of Apple computer, Inc.

Epson is a registered trademark and FX-80 and FX-850 are trademarks of Seiko Epson Corporation.

Hewlett Packard is a registered trademark and HP Laser Jet is a trademark of Hewlett Packard Company.

IBM, IBM PC and Proprinter are registered trademarks of International Business Machines Corporation.

Microsoft and MS-DOS are registered trademarks of Microsoft Corporation.

Windows is a registered trademark of Microsoft Corporation in the U.S. and other countries.

Sample of manual. Download All 385 pages at:

<https://www.arepairmanual.com/downloads/2001-brother-hl-2600cn-color-laser-printer-service-repair-workshop-manual/>

# PREFACE

This service manual contains basic information required for after-sales service of the color laser printer (here-in-after referred to as "this machine" or "the printer"). This information is vital to the service technician to maintain the high printing quality and performance of the printer.

This service manual covers the HL-2600CN color laser printer.

This manual consists of the following chapters:

**CHAPTER I : OUTLINE OF PRODUCT**

Features, parts names, internal structure, and description of the control panel.

**CHAPTER II : SPECIFICATIONS**

Specifications, etc.

**CHAPTER III : INSTALLATION**

Installation conditions and installation procedures.

**CHAPTER IV : STRUCTURE OF SYSTEM COMPONENTS**

Basic operation of the mechanical system, the electrical system and the electrical circuits and their timing information.

**CHAPTER V : CONTROL PANEL OPERATION**

Operation and setting procedures on the control panel.

**CHAPTER VI : PERIODIC MAINTENANCE**

Description of periodic maintenance parts, and procedures for periodic replacement and cleaning.

**CHAPTER VII : DISASSEMBLY**

Procedures for replacement of the mechanical system parts.

**CHAPTER VIII : TROUBLESHOOTING**

Description of error messages on the control panel, troubleshooting image failure, etc.

**APPENDICES : SERIAL NO. DESCRIPTIONS, ETC.**

Information in this manual is subject to change due to improvement or re-design of the product. All relevant information in such cases will be supplied in service information bulletins (Technical Information).

A thorough understanding of this printer, based on information in this service manual and service information bulletins, is required for maintaining its print quality performance and for improving the practical ability to find the cause of problems.

# CONTENTS

<b>CHAPTER I PRODUCT OUTLINE .....</b>	<b>I-1</b>
1. FEATURES .....	I-1
2. PARTS NAMES & FUNCTIONS .....	I-4
3. INTERNAL STRUCTURE.....	I-6
4. DESCRIPTION OF CONTROL PANEL.....	I-7
4.1 Video Controller Mode .....	I-7
4.2 Engine Controller Mode .....	I-7
<b>CHAPTER II SPECIFICATIONS .....</b>	<b>II-1</b>
1. RATING.....	II-1
2. GENERAL SPECIFICATIONS .....	II-2
2.1. Printing.....	II-2
2.2. Functions .....	II-3
2.3. Electrical and Mechanical .....	II-3
2.4. Network.....	II-4
2.5. Paper Specification .....	II-5
3. ENVIRONMENTAL CONDITION.....	II-9
3.1 Ambient Temperature / Humidity / Altitude .....	II-9
<b>CHAPTER III INSTALLATION .....</b>	<b>III-1</b>
1. CONDITIONS REQUIRED FOR INSTALLATION.....	III-1
1.1. Environmental Conditions .....	III-1
1.2. Basic Layout of Printer Set-up Location.....	III-1
2. UNPACKING .....	III-2
2.1 Unpacking of Printer .....	III-2
2.2 Unpack the Starter Kit.....	III-4
3. INSTALLATION WORK.....	III-5
3.1 Install the Fuser Cleaner and Oil Bottle .....	III-5
3.2 Install the OPC Belt Cartridge.....	III-6
3.3 Install the Toner Cartridge to the Printer.....	III-8
3.4 Test Print.....	III-9
<b>CHAPTER IV STRUCTURE OF SYSTEM COMPONENTS .....</b>	<b>IV-1</b>
1. BASIC STRUCTURE.....	IV-1
1.1 Print System and Transfer System .....	IV-6
1.2 Scanning System .....	IV-21
1.3 Paper Transportation System .....	IV-23
1.4 Fusing Unit.....	IV-25

<b>2. STRUCTURE OF THE CONTROL SYSTEM .....</b>	<b>IV-27</b>
2.1 Basic Structure.....	IV-27
2.2 Control System .....	IV-34
2.3 Main PCB (Video Controller PCB) .....	IV-42
2.4 Power Supply Unit .....	IV-56
2.5 High Voltage Power Supply Unit.....	IV-60
2.6 Wiring Diagram .....	IV-63

## **CHAPTER V CONTROL PANEL OPERATION.....V-1**

<b>1. PANEL LAYOUT .....</b>	<b>V-1</b>
<b>2. VIDEO CONTROLLER MODE .....</b>	<b>V-2</b>
2.1 Configuration of Operational Mode .....	V-2
2.2 Line Test Mode .....	V-3
2.3 DRAM Test Mode .....	V-7
2.4 Test Print Mode.....	V-8
2.5 NVRAM Reset Mode.....	V-8
<b>3. ENGINE CONTROLLER MODE .....</b>	<b>V-9</b>
3.1 Configuration of Operational Mode .....	V-9
3.2 Operation of Normal Mode.....	V-11
3.3 Service Mode .....	V-18
3.4 Adjustment Work Procedures .....	V-41

## **CHAPTER VI PERIODIC MAINTENANCE..... VI-1**

<b>1. GENERAL .....</b>	<b>VI-1</b>
1.1 Handling Precautions.....	VI-1
1.2 Periodic Maintenance Cleaning .....	VI-4
1.3 Periodic Maintenance Parts and Maintenance Cycle .....	VI-17
<b>2. PERIODIC MAINTENANCE PROCEDURES .....</b>	<b>VI-20</b>
2.1 OPC Belt Cartridge Replacement.....	VI-20
2.2 Fusing Unit Replacement.....	VI-23
2.3 Transfer Roller 2 Replacement.....	VI-27
2.4 Paper Discharger Unit Replacement .....	VI-30
2.5 Drum Cleaner 2 Replacement .....	VI-32
2.6 Ozone Filter Replacement .....	VI-35
2.7 Paper Pick-up Roller and Separator Pad 2 Replacement.....	VI-36
2.8 Transfer Drum 2 Replacement.....	VI-37

## **CHAPTER VII DISASSEMBLY ..... VII-1**

<b>1. BEFORE STARTING DISASSEMBLY .....</b>	<b>VII-1</b>
1.1 Precautions .....	VII-1
1.2 Preparation of Disassembly .....	VII-1
<b>2. PARTS NAME .....</b>	<b>VII-3</b>
2.1 Cover .....	VII-3
2.2 Circuit Boards (PCBs) .....	VII-4
2.3 Motor Units .....	VII-4
2.4 Clutches and Solenoids .....	VII-5
2.5 Sensors .....	VII-5
<b>3. DISASSEMBLY FLOW .....</b>	<b>VII-6</b>
<b>4. DISASSEMBLY PROCEDURE .....</b>	<b>VII-7</b>
4.1 Top of the Printer .....	VII-7
4.2 Right Side of the Printer .....	VII-20
4.3 Left Side of the Printer .....	VII-32
4.4 Paper Exit Unit .....	VII-49
4.5 Front of the Printer .....	VII-56
4.6 Rear of the Printer .....	VII-63
4.7 Fusing Unit .....	VII-68

## **CHAPTER VIII TROUBLESHOOTING ..... VIII-1**

<b>1. OUTLINE OF TROUBLESHOOTING .....</b>	<b>VIII-2</b>
<b>2. OPERATOR CALL .....</b>	<b>VIII-3</b>
2.1 Video Controller Mode .....	VIII-3
2.2 Engine Controller Mode .....	VIII-6
<b>3. PAPER TRANSPORT ERROR .....</b>	<b>VIII-8</b>
3.1 Feed Jam .....	VIII-8
3.2 Inner Jam .....	VIII-9
3.3 Outer Jam .....	VIII-9
3.4 Others .....	VIII-9
<b>4. SERVICE CALL .....</b>	<b>VIII-10</b>
4.1 Video Controller Mode .....	VIII-11
4.2 Engine Controller Mode .....	VIII-15
<b>5. IMAGE FAILURE .....</b>	<b>VIII-43</b>

## **APPENDIX A ..... A-1**

# REGULATIONS

## LASER SAFETY (FOR 110-120 V MODEL ONLY)

This printer is certified as a Class I laser product under the U.S. Department of Health and Human Services (DHHS) Radiation Performance Standard according to the Radiation Control for Health and Safety Act of 1968. This means that the printer does not produce hazardous laser radiation.

Since radiation emitted inside the printer is completely confined within protective housings and external covers, the laser beam cannot escape from the machine during any phase of user operation.

## FDA REGULATIONS (FOR 110-120 V MODEL ONLY)

U.S. Food and Drug Administration (FDA) has implemented regulations for laser products manufactured on and after August 2, 1976. Compliance is mandatory for products marketed in the United States. One of the following labels on the back of the printer indicates compliance with the FDA regulations and must be attached to laser products marketed in the United States.

### **Caution**

Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

## IEC 60825 SPECIFICATION (FOR 220-240 V MODEL ONLY)

This printer is a Class 1 laser product as defined in IEC 60825 specifications. The label shown below is attached in countries where required.



This printer has a Class 3B Laser Diode which emits invisible laser radiation in the Scanner Unit. The Scanner Unit should not be opened under any circumstances.

### Caution

Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

The following caution label is attached near the scanner unit.



### For Finland and Sweden

#### LUOKAN 1 LASERLAITE

#### KLASS 1 LASER APPARAT

Varoitus! Laitteen käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

Varning – Om apparaten används på annat sätt än i denna Bruksanvisning specificerats, kan användaren utsättas för osynlig laserstrålning, som överskrider gränsen för laserklass 1.

# SAFETY INSTRUCTIONS

## SAFETY PRINCIPLE

- 1) Before starting any operations, read this manual thoroughly. Especially read the safety instructions in this section carefully and ensure that you understand the contents.
- 2) Perform all the operations by following the procedures described in this manual. Follow all the cautions and warnings set out in the procedures and on safety labels affixed to the machine. Failure to do so may result in human injury or equipment damage.
- 3) Perform only the procedures explained in this manual. Refrain from opening or touching any portions that are not related to your required operation(s).
- 4) Repair and replacement of parts should be performed by trained and qualified persons only. Operators should not attempt to do such repair or replacement work.
- 5) It must be appreciated that the above-mentioned cautions and warnings do not cover everything because it is impossible to evaluate all the circumstances of repair situations.

## SPECIAL SAFETY INFORMATION

### Introductory Information

Cautions and warnings are made clear by following the 'Safety Alert Symbols' or 'Signal Words' such as DANGER, WARNING and CAUTION.

<SAFETY ALERT SYMBOL>

This is the safety alert. When you find this symbol placed on the equipment or marked in this manual, be aware of the potential of human injuries. Follow the recommended precautions and safety operation practices.

<Understanding Signal Words>

DANGER is used to indicate the presence of a hazard which will cause severe human injuries or a fatal accident if the warning is ignored.

WARNING is used to indicate the presence of a hazard or unsafe practices which may cause severe human injuries or a fatal accident if the warning is ignored.

CAUTION is used to indicate the presence of a hazard or unsafe practices which may cause minor human injuries if the warning is ignored. CAUTION also calls your attention to safety messages in this manual.

<Follow Safely Instructions>

Carefully read all the safety messages set out in this manual and also in the safety warning signs placed on the equipment. In this manual, the safety instructions (safety alert symbols and signal words) are enclosed in a rectangular enclosure to bring them to your attention.

Keep the safety signs on the equipment in good condition and ensure none are missing or damaged. Replace the safety signs if unreadable or damaged. Learn how to operate the equipment and how to use the controls properly. Do not let anyone operate this equipment without following the instructions. Keep the equipment in proper working condition.

Unauthorized modification to the equipment may impair the function & safety and affect the life of the equipment.

Listed below are the various kinds of "WARNING" messages contained in this manual.

<Caution for the battery>

There is a danger of explosion if the battery is incorrectly replaced.

Do not replace the battery.

Do not disassemble, recharge or dispose of in fire.

Used battery should be disposed of according to local regulations.

 **WARNING**

**HAZARDOUS VOLTAGE**

*May cause serious injuries or fatal accidents. Voltage is now applied from the power supply of printer. There is a danger of electrical shock if you touch the active area inside the printer.*

*Be sure to turn the power supply switch OFF and pull the plug out from the power outlet before starting maintenance work on the printer.*

 **WARNING**

**HARMFUL OZONE GAS**

*Inhalation of an excessive amount of ozone gas may adversely affect the respiratory organs.*

*An Ozone Filter is fitted to this printer to reduce the exhausted ozone. This filter must be replaced with a new filter periodically in accordance with the manual supplied with the printer.*

 **WARNING**

**HOT SURFACE**

*The Fusing Unit reaches a temperature of approx. 170°C and adjacent parts are also very hot.*

*When you need to change the cleaning pad or remove jammed paper, wait about 20 minutes after opening the paper exit unit to allow the unit to cool down.*

 **CAUTION**

**ROTATING PARTS**

*Be aware of the potential danger of various rollers and take care not to get your fingers or hand caught into the machine, this can cause serious injuries. Note that the exit roller that ejects the printed paper is rotating while printing.*

*Be careful not to get your hair, fingers, hands, sleeve or necktie caught in the machine while operating the machine.*



## **CAUTION**

### **HAZARDOUS POWDER**

*Toner is a fine powder which can cause a powder explosion if disposed of into a fire. Under no circumstances dispose of toner into a fire.*



## **CAUTION**

### **HAZARDOUS POWDER**

*Toner is a fine powder which may cause irritation to the eyes and respiratory organs if inhaled.*

*Handle the toner cartridge, waste toner pack and developing unit carefully so as not to spill the toner.*



## **CAUTION**

### **POWER CORDS & PLUGS**

*This printer is equipped with a 3-wire power cord fitted with a 3-pronged plug (bi-polar plug with grounding) for the user's safety.*

*Use these power cords in conjunction with a properly grounded electrical outlet to avoid an electrical shock.*




## **CAUTION**

### **SAFETY INTERLOCK**


*The front cover, paper exit unit and transfer unit of this printer have electrical safety interlocks to turn the power off whenever they are opened. Do not attempt to circumvent these safety interlocks.*

**⚠ CAUTION**

*Do not lean against or apply any excessive force to the paper cassette, open cover of Duplex unit. Otherwise it may cause the product to decline or fall down and result in the injuries.*

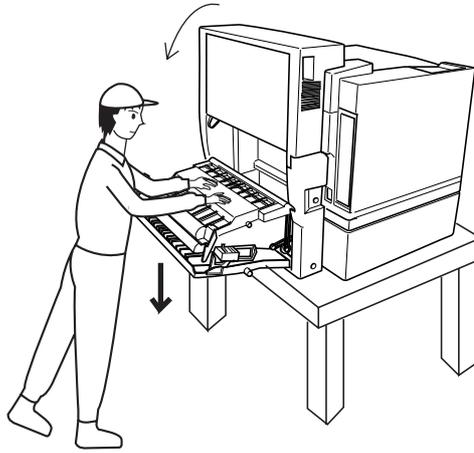

<Label Location>

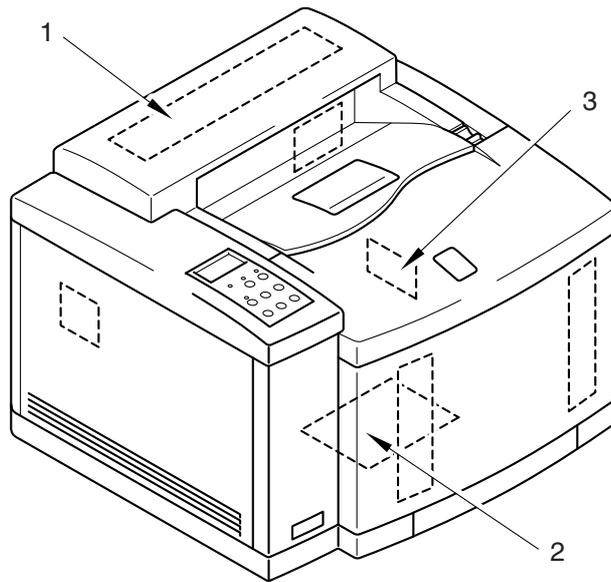

1. Hot Caution Label



2. Laser Caution Label




5mW  
780nm-800nm


<b>DANGER-</b>	INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM.
<b>VORSICHT-</b>	UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET UND SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT. NICHT DEM STRAHL AUSSETZEN.
<b>DANGER-</b>	RAYON LASER INVISIBLE LORS DE L'OUVERTURE. EVITER L'EXPOSITION DIRECTE.
<b>PELIGRO-</b>	RADIACION LASER INVISIBLE AL ABRIR. EVITAR LA EXPOSICION DIRECTA AL HAZ.
<b>危険</b>	開けたときレーザ放射の危険有り。 ビームに直接当たらないように注意して下さい。 <b>MAS</b>

3. Rating Label


(For US)

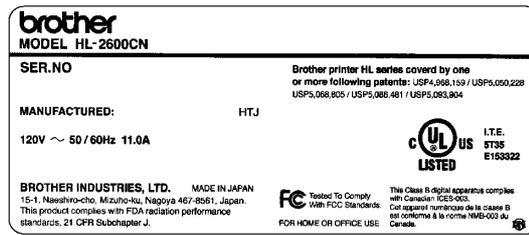

(For Europe)

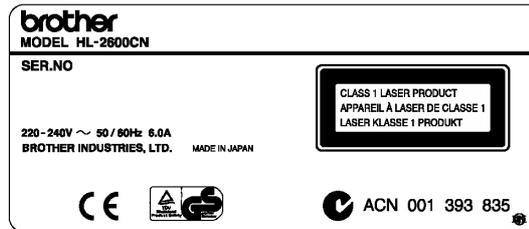

(Jam label)

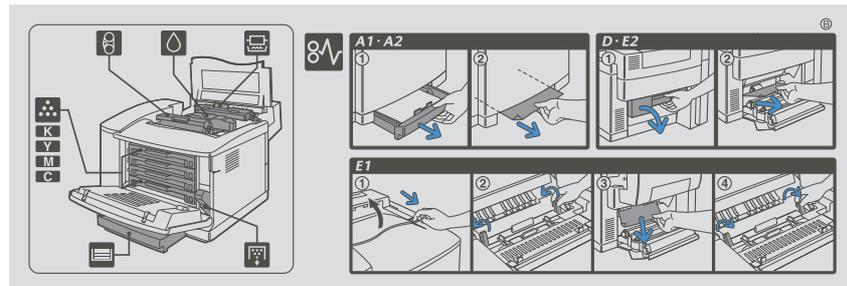


## SHIPMENT OF THE PRINTER

If for any reason you must ship the printer, carefully package the printer to avoid any damage during transit. It is recommended that you save and use the original packaging. The printer should also be adequately insured with the carrier.

### CAUTION

- *When shipping the printer, remove the toner cartridges, the OPC belt cartridge and the waste toner pack from the printer to prevent toner spill in the printer or damage of the toner cartridge and the OPC belt cartridge.*
- *When shipping the printer, remove the oil bottle and the fuser cleaner from the fusing unit. After removing the oil bottle, be sure to remove the oil remaining in the fusing unit with the supplied syringe. Failure to do so will cause severe damage to the printer.*

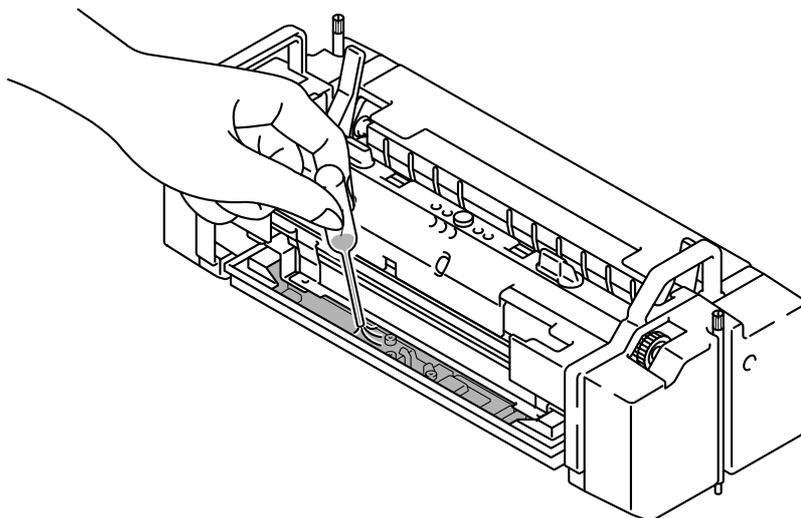

# **CHAPTER I**

## **PRODUCT OUTLINE**

# CONTENTS

<b>CHAPTER I PRODUCT OUTLINE .....</b>	<b>I-1</b>
1. FEATURES .....	I-1
2. PARTS NAMES & FUNCTIONS.....	I-4
3. INTERNAL STRUCTURE.....	I-6
4. DESCRIPTION OF CONTROL PANEL.....	I-7
4.1 Video Controller Mode.....	I-7
4.2 Engine Controller Mode.....	I-7

## CHAPTER I PRODUCT OUTLINE

### 1. FEATURES

This printer has the following features:

#### **2400 x 600 dpi Class Resolution**

The printer prints pages with a resolution of 600 dots per inch (dpi) as default. It also provides higher quality printout which is the equivalent of 2400 x 600 dpi resolution when using HRC or CAPT.

#### **High Speed Color Laser Printing**

The printer allows crisp printing in 24 bit brilliant color. The printer prints at a speed of 24 pages per minute in monochrome mode and 6 pages per minute in full color mode. The controller utilizes a high speed 32-bit RISC microprocessor and special hardware chips, which provides a very fast processing speed.

#### **High Resolution Control (HRC)**

The high resolution control (HRC) technology provides clear and crisp printouts and improves even the 600 dpi resolution. This mode is effective when printing text data.

#### **Color Advanced Photoscale Technology (CAPT)**

The printer can print graphics in 256 shades for each color in HP® color printer PCL5C™ and BR-Script 3 emulations, producing nearly photographic quality. This mode is effective when printing photographic images.

#### **Maintenance-Free Toner Cartridge**

A toner cartridge can print up to 12,000 (Black) and 7,200 (Cyan, Magenta and Yellow) single-sided pages at 5% coverage. The one piece, easy-to-replace toner cartridges do not require difficult maintenance.

#### **Universal Media Cassette**

This printer loads paper automatically from the media cassette. Since the media cassette is a universal type, a number of different sizes of paper can be used. Even envelopes can be loaded from the media cassette.

### **Three Interfaces**

This printer has a high speed, bi-directional parallel interface, USB and Ethernet 10/100BaseTX.

If your application software supports the bi-directional parallel interface, you can monitor the printer status. It is fully compatible with the industry-standard bi-directional parallel interface.

The Brother network board (NC-4100h) is factory installed in the HL-2600CN, which enables you to use this printer in the TCP/IP, IPS/SPX, Apple Talk, DLC/LLC, Banyan VINES, DEC LAT and NetBEUI environments. Also, many useful utilities, such as BRAdmin Professional for the administrator and Brother network printing software, are included in the CD-ROM supplied with the HL-2600CN printer. For setup, see the Network User's Guide.

### **Automatic Interface Selection**

The printer can automatically select the bi-directional parallel, USB, NETWORK depending on the interface port through which it receives data. With this feature, the printer can be connected to more than one computer.

### **Five Emulation Modes**

The printer can emulate Hewlett-Packard Color PCL<sup>®</sup> 5C (PCL6<sup>®</sup> in monochrome mode) and PostScript<sup>®</sup> 3 language emulation (Brother BR-Script 3) printers, the industry-standard HP-GL<sup>™</sup> plotter as well as EPSON<sup>®</sup> FX-850<sup>™</sup>, and IBM<sup>®</sup> Proprinter XL<sup>®</sup> printers (in monochrome mode). It is possible to print with all application programs that support one of these printers.

### **Automatic Emulation Selection**

The printer can automatically select the printer emulation mode depending on the print commands it receives from the computer software. With this feature, many users can share the printer on a network.

### **Data Compression Technology**

The printer can internally compress the received graphics and font data in its memory so that it can print larger graphics and more fonts without additional memory.

## **Various Fonts**

The printer has 66 scalable and 12 bitmapped fonts. The fonts that can be used will vary according to the selected emulation mode.

In PCL mode, you can also print the 13 kinds of bar codes listed below. In BR-Script mode, the printer has 165 scalable fonts.

< Bar Code Printing >

This printer can print the following 13 types of bar codes:

- Code 39
- Interleaved 2 of 5
- EAN-8
- EAN-13
- EAN-128
- Code 128
- UPC-A
- UPC-E
- Codabar
- FIM (US-PostNet)
- Post Net (US-PostNet)
- ISBN (EAN)
- ISBN (UPC-E)

## **CCITT G3/G4**

Since the printer supports the CCITT G3/G4 format in addition to HP-compatible formats, it can quickly receive and print data compressed in this format.

## **Lock Panel**

If the panel button settings have been changed, the printer may not work as expected. It is possible for the administrator of the printer to lock the settings to prevent changes from being made.

## **Power Save Mode**

The printer has a power saving mode. As laser printers consume power to keep the fixing assembly at a high temperature, this feature can save electricity when the printer is on but not being used. The factory setting of the Power Save mode is ON so that it complies with the EPA Energy Star new specification. Compared with conventional laser printers, this printer consumes less power even when the power saving mode is turned off.

## **Toner Save Mode**

The printer has an economical toner save mode. This mode allows you to reduce the printer running cost substantially in addition to the improved life expectancy of the toner cartridge.

## **Reprint Function**

A touch of a panel button allows reprinting of the last print job without sending the data again from the computer. When there is not enough memory to print the last complete job out, the last print page can be reprinted.

## **Saving User Settings**

It is possible to operate the printer differently from other users with the panel button settings. One set of user settings can be stored.

## 2. PARTS NAMES & FUNCTIONS

### <Front View>

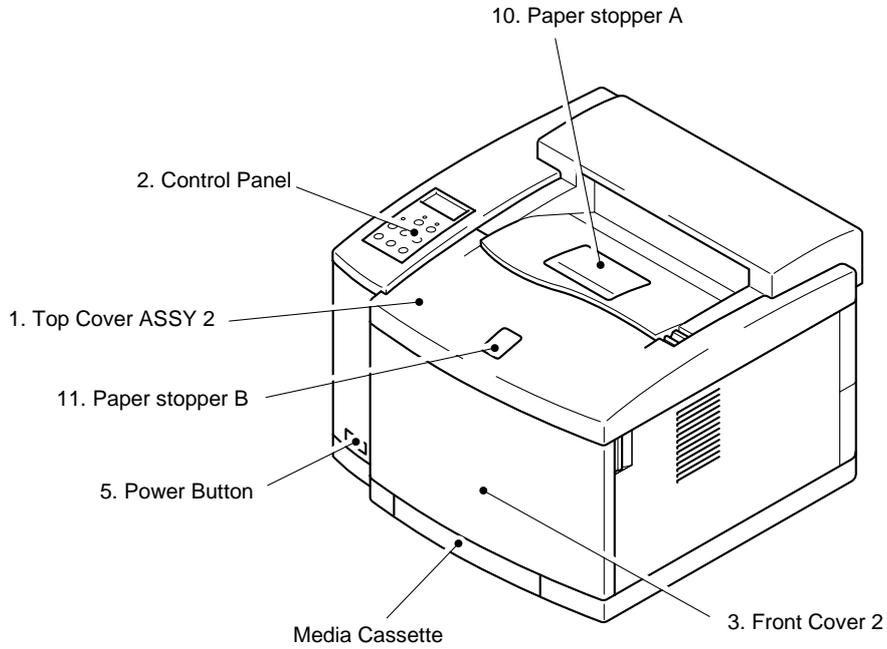


Fig.1-1

### <Rear View>

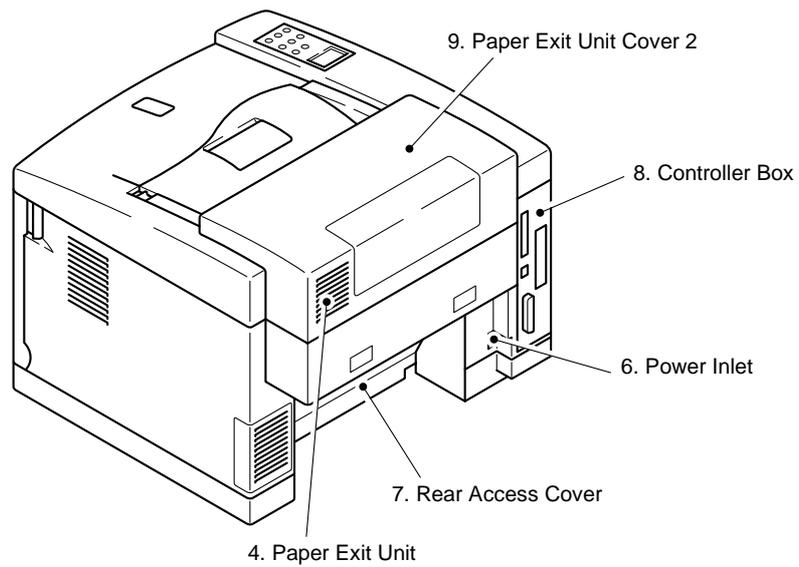


Fig.1-2

No.	Part Name	Outline of Functions
1	Top Cover ASSY 2	To act as an upper enclosure and also as a paper tray for printed paper.
2	Control Panel	To display the status of printer operation.
3	Front Cover 2	To act as a front enclosure, opened when replacing a toner cartridge or waste toner pack.
4	Paper Exit Unit	To exit a printed paper onto a top cover ASSY 2, acting also as paper tray for printed paper. To be opened when replacing an OPC belt cartridge.
5	Power Button	To operate power-on and off to the printer. (Push for On/Off operation)
6	Power Inlet	To connect a power supply cable.
7	Rear Access Cover	To act as a rear enclosure, opened when clearing an internal jam or doing maintenance work.
8	Controller Box	Space for a controller PCB to be installed.
9	Paper Exit Unit Cover 2	Cover to be provided at duplex transportation inlet and to be removed when installing the duplex transportation unit.
10	Paper Stopper A	Stopper to be erected for alignment of exited papers and also prevention of falling down.
11	Paper Stopper B	Stopper to be erected for preventing exited papers from falling down.

### 3. INTERNAL STRUCTURE

#### <Cross Sectional View >

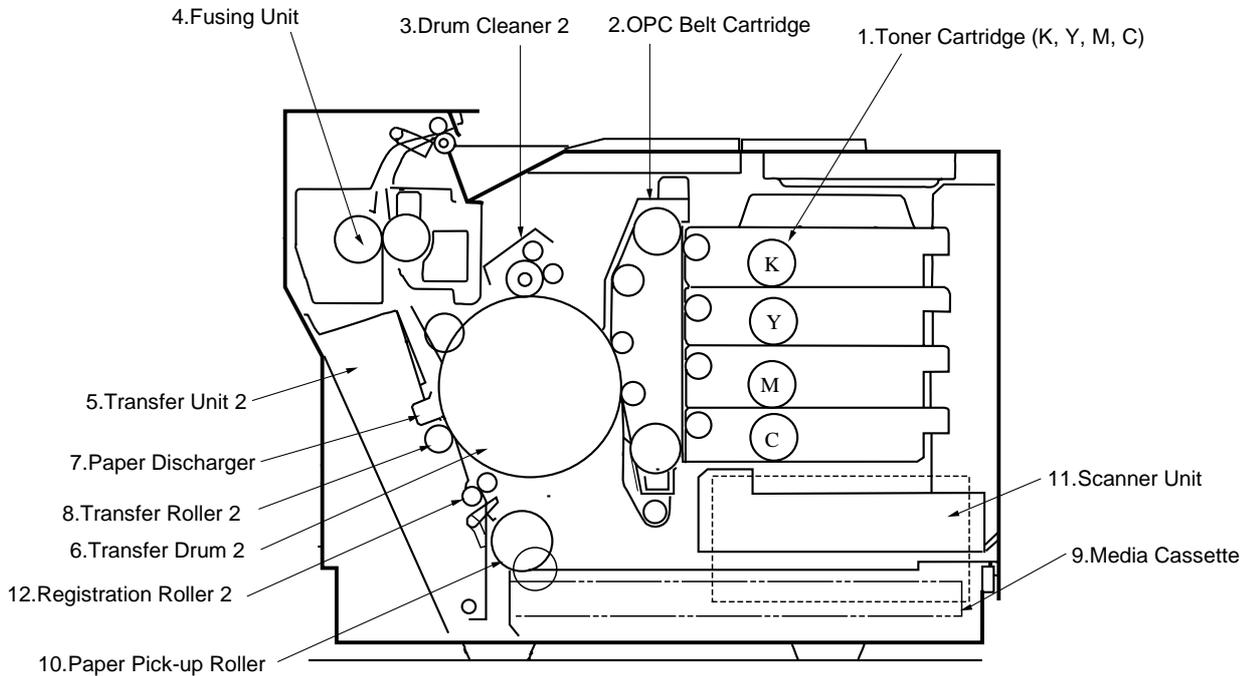


Fig.1-3

No.	Components Name	Outline of Functions
1	Toner Cartridge	Contain the toner (K, Y, M, C) for developing. Each toner cartridge (K, Y, M, C) is independent.
2	OPC Belt Cartridge	Forms images and includes the photoconductive belt.
3	Drum Cleaner 2	Cleans and collects waste toner adhering to the transfer drum 2.
4	Fusing Unit	Fixes by heat and pressure the toner image onto the paper.
5	Transfer unit 2	Transfers toner images from the transfer drum 2 to the paper.
6	Transfer Drum 2	Forms color images, combining the toner images from the OPC belt on the drum.
7	Paper Discharger	Emits a corona charge for separating the paper from the transfer drum 2.
8	Transfer Roller 2	Transfer the toner image on the transfer drum 2 to the paper.
9	Media Cassette	Feeds paper automatically.
10	Paper Pick-up Roller	Feeds paper automatically from the paper cassette.
11	Scanner Unit	Generates a laser beam and scans the OPC belt.
12	Registration Roller 2	Aligns the paper correctly ready for printing

## **4. DESCRIPTION OF CONTROL PANEL**

The printer control panel provides control of the printer including test printing, maintenance operations performed by the video controller and also the ones which are performed by the engine controller.

The Video Controller Mode and the Engine Controller Mode have some common functions. Under normal circumstances the functions in the Video controller mode will be used. Refer to Chapter V for further information.

### **4.1 Video Controller Mode**

The printer goes into the Video Controller Mode when the power is turned on by pressing the power button.

The Video Controller Mode supplies the general test printing and setting functions and some of the maintenance operations. If further engine settings are required, use the Engine Controller Mode.

### **4.2 Engine Controller Mode**

The printer goes into the Engine Controller Mode when power is turned on by pressing the power button at the same time as holding down the secure print, back, set. (Refer to Fig.1-4.)

*Note:*

*This mode provides unique control panel display and operation functions which are completely different from the ones described on the actual control panel or in the user's guide. Refer to Chapter V for detailed information.*

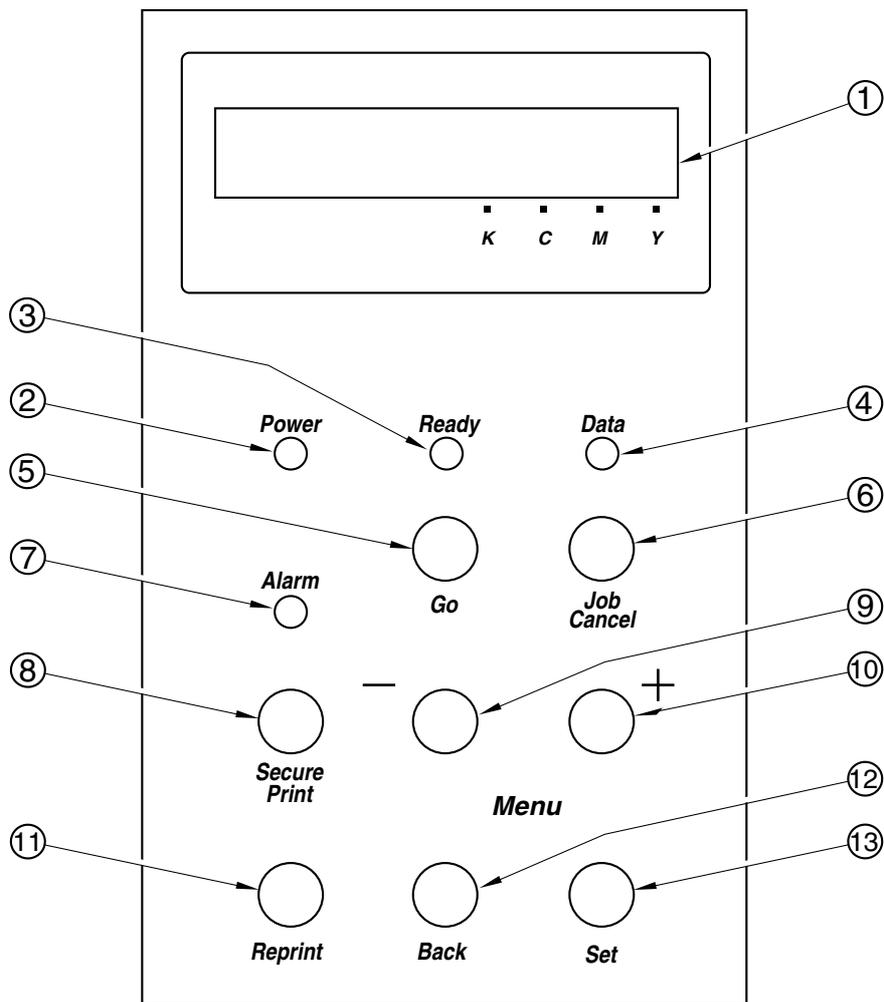


Fig.1-4

No.	LED / Button Name
1	LCD: 16 character by 2 lines
2	Power LED
3	Ready LED
4	Data LED
5	Go button
6	Job Cancel button
7	Alarm LED
8	Secure Print button
9	- button
10	+ button
11	Reprint button
12	Back button
13	Set button

# **CHAPTER II**

## **SPECIFICATIONS**

# CONTENTS

<b>CHAPTER II SPECIFICATIONS.....</b>	<b>II-1</b>
1. RATING .....	II-1
2. GENERAL SPECIFICATIONS.....	II-2
2.1. Printing .....	II-2
2.2. Functions.....	II-3
2.3. Electrical and Mechanical.....	II-3
2.4. Network .....	II-4
2.5. Paper Specification.....	II-5
2.5.1 Printable Media & Cassette Capacity .....	II-5
2.5.2 Printed Output.....	II-6
2.5.3 Recommended Paper Specifications.....	II-6
2.5.4 Effective Printing Area .....	II-6
2.5.5 Paper Feed Jam Rate.....	II-8
3. ENVIRONMENTAL CONDITION.....	II-9
3.1 Ambient Temperature / Humidity / Altitude.....	II-9

## CHAPTER II SPECIFICATIONS

### 1. RATING



#### WARNING

Use the power supply cable supplied with the printer, or a similar cable complying with the following specification (3-wire power cable with ground).

Use of an "out of specification" cable may result in an electric shock.

Destination	Voltage (V)	Frequency (Hz)	Input Current (A)	Power Cord (Piece)
US / Canada	120	50/60	11	1
Europe	220 - 240	50/60	6	1 *

\* For the model for Europe, the power supply cable depends on the country as follows;

Figure	Rating	Approval Agency	Applicable Area
A	250VAC, 6A	VDE, DEMKO, SEV	Europe (Continent)
B		BS	UK

Figure A: For Europe (Sample)


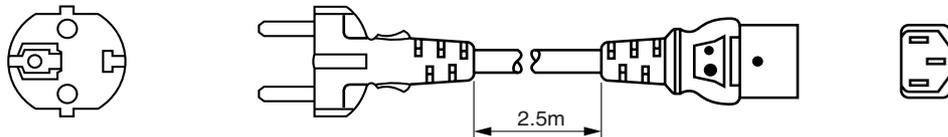


Figure B: For UK

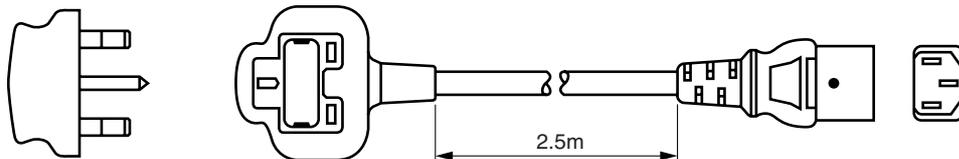

Note:

For details of other power supply cables, refer to the parts reference list.

\*\* For rating labels, refer to the Safety Instruction on Page vi.

## 2. GENERAL SPECIFICATIONS

### 2.1. Printing

Print method: Electrophotography by semiconductor laser beam scanning

Resolution: 600 x 600 dots per inch (Fine)  
The resolution can be enhanced to 2400 dpi class by using the HRC(High Resolution Control) and CAPT (Color Advanced Photoscale Technology) features.

Print speed: Monochrome mode: 24 page/minute (A4/Letter-size)  
Full color mode: 6 page/minute (A4/Letter-size)

Warm-up: Max. 4 minute at 20°C (68°F)

First print: Monochrome mode: 15 seconds or less  
Full color mode: 22.5 seconds or less  
(when loading A4/Letter-size paper by face down print delivery from standard upper cassette feed)

Print media: Toner in a single-color single-component cartridge  
Life Expectancy: 12,000 single-sided pages/cartridge (Black)  
7,200 single-sided pages/cartridge (Cyan, Magenta, Yellow)

*Note: These figures are based on an average of 5% coverage of the printable area for one color using laser paper. The frequency of replacement will vary, depending on the complexity of the prints, the percentage of coverage, and the type of media. Transparencies, glossy coated paper and other special media will result in shortened consumable life.*

Resident Printer Fonts:

<HP PCL, EPSON FX-850, and IBM Proprinter XL modes>  
66 scalable fonts and 12 bitmapped fonts, 11 bar codes  
<BR-Script 3 mode>  
165 scalable fonts

## 2.2. Functions

CPU:	Toshiba TMPR 4955AF-266 (TX4955 266MHz)
Emulation:	Automatic emulation selection HP Color Printer (PCL5C) including HP LaserJet 4+ (PCL5e) and HP LaserJet 5 (PCL6 monochrome) BR-Script 3 (Adobe PostScript 3 compatible) HP-GL EPSON FX-850 IBM Proprinter XL
Interface:	Bi-directional parallel Universal Serial Bus (USB) Ethernet 10/100 Base-TX
RAM:	Standard model: 64Mbytes (Expandable up to 384Mbytes with DIMMs)  The standard memory fitted can vary depending on the printer model and country
Control panel:	8 buttons, 4 LEDs and a 16-column x 2 lines liquid crystal display
Diagnostics:	Self-diagnostic program

## 2.3. Electrical and Mechanical

Power source:	U.S.A. and Canada: AC 120V, 50/60Hz Europe and Australia: AC 220 to 240V, 50/60Hz
Power consumption:	Printing: 600W or less Standing by: 260W or less Sleep: 30W or less
Noise:	Printing: 55dB A or less Standing by: 48dB A or less
Temperature:	Operating: 10 to 32.5°C (50 to 90.5°F) Non Operating: 5 to 35°C (41 to 95°F) Storage: 0 to 35°C (38 to 95°F)
Humidity:	Operating: 20 to 80% (non condensation) Storage: 20 to 80% (non condensation)
Dimensions (W x D x H):	500 x 520 x 410 mm (19.7 x 20.5 x 16.1 inches) 500 x 520 x 555 mm (19.7 x 20.5 x 21.9 inches) with the optional lower tray unit fitted
Weight:	Approx. 39kg (86lbs.) Approx. 54.4kg with the optional lower tray unit and toner cartridges fitted