


English

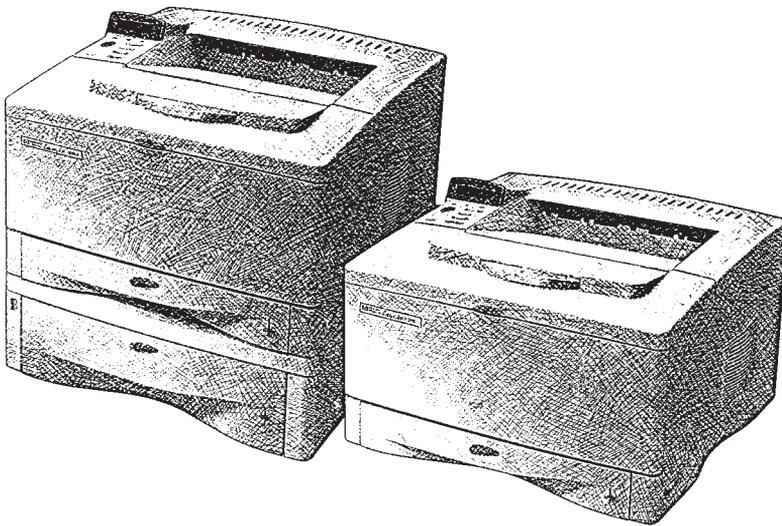

HP LaserJet 5000, 5000 N and 5000 GN Printers Service Manual

Product: 1998 HP LaserJet 5000, 5000 N and 5000 GN Printers Service Repair Workshop Man

Full Download: <https://www.arepairmanual.com/downloads/1998-hp-laserjet-5000-5000-n-and-5000-gn-printers-service-repair-workshop-manual>

/

HP LaserJet 5000, 5000 N, and 5000 GN Printers

Service Manual

Sample of manual. Download All 387 pages at:

<https://www.arepairmanual.com/downloads/1998-hp-laserjet-5000-5000-n-and-5000-gn-printer>

**© Copyright Hewlett-Packard
Company 1998**

All Rights Reserved.
Reproduction, adaptation, or
translation without prior written
permission is prohibited, except
as allowed under the copyright
laws.

Publication number
C4110-91033

First Edition

Warranty

The information contained in
this document is subject to
change without notice.

Hewlett-Packard makes no
warranty of any kind with
respect to this information.
HEWLETT-PACKARD
SPECIFICALLY DISCLAIMS
THE IMPLIED WARRANTY OF
MERCHANTABILITY AND
FITNESS FOR A PARTICULAR
PURPOSE.

Hewlett-Packard shall not be
liable for any direct, indirect,
incidental, consequential, or
other damage alleged in
connection with the furnishing or
use of this information.

Trademark Credits

PostScript™ is a trademark of
Adobe Systems Incorporated
which may be registered in
certain jurisdictions.

CompuServe™ is a U.S.
trademark of CompuServe, Inc.

Windows® is a U.S. registered
trademarks of Microsoft
Corporation.

TrueType™ is a U.S. trademark
of Apple Computer, Inc.

ENERGY STAR® is a U.S.
registered service mark of the
U.S. EPA.

Contents

1 Printer Description

Overview	1-1
Printer Features	1-2
Identification	1-5
Model and Serial Numbers	1-5
Site Requirements	1-6
Space Requirements	1-7
Paper Specifications	1-11
Supported Types of Paper	1-14
Guidelines for Using Paper	1-15
Labels	1-18
Transparencies	1-18
Vellum	1-18
Envelopes	1-19
Card Stock and Heavy Paper	1-20
Safety Information	1-22
Laser Safety Statement	1-22
Canadian DOC Regulations	1-22
FCC Regulations	1-23
Laser Statement for Finland	1-24
Toner Safety	1-25
Environmental Product Stewardship	1-26

2 Service Approach

Overview	2-1
Service Approach	2-2
Parts and Supplies	2-3
Ordering Information	2-3
Helpful Documentation	2-4
Phone Numbers for Ordering	2-5
Exchange Program	2-5
Consumables	2-5
Technical Assistance	2-5
Toner Cartridge Information	2-8
Warranty Statement	2-9

3 Printer Operation

Overview	3-1
Using the Control Panel	3-2
Control Panel Layout	3-2
Control Panel Lights	3-2
Control Panel Keys	3-3
Settings and Defaults	3-4
Control Panel Menus	3-5
Information Menu	3-6
Paper Handling Menu	3-7
Print Quality Menu	3-10
Printing Menu	3-13
Configuration Menu.	3-17
I/O Menu	3-24
EIO Menu (Networked Printers)	3-27
Resets Menu.	3-29
Service Mode	3-30
Service Menu	3-31
Setting the Page Count, Maintenance Count, and Serial Number	3-31
Cold Reset Paper	3-34
Diagnostics	3-34
Clear Event Log	3-34
Testing the Printer	3-35
Resetting the Printer	3-36
System Configuration	3-37
MS-DOS System Configuration	3-37
Parallel DOS Commands	3-37
Serial MS-DOS Commands	3-38
Printer I/O Configuration	3-39
Parallel Menu	3-39
Serial Configuration	3-39

4 Printer Maintenance

Overview	4-1
Cleaning the Printer and Accessories	4-2
Cleaning Spilled Toner	4-4
Preventative Maintenance.	4-5
Reset Maintenance Count	4-5
Expected Life of Components.	4-5

5 Functional Information

Overview	5-1
Printer Subsystems	5-2
Power Supply System	5-3
AC/DC Power Distribution	5-3
Overcurrent Overvoltage Protection	5-5
High Voltage Power Distribution	5-6
Toner Cartridge Detection	5-7
DC Controller System	5-7
Laser and Scanner Drive	5-8
Paper Motion Monitoring and Control	5-9
Solenoids, Sensors, Clutches, and Switches	5-9
Engine Test Print	5-9
Motors	5-10
Formatter System	5-12
PowerSave	5-12
Resolution Enhancement technology (REt)	5-13
EconoMode	5-13
Input/Output	5-14
CPU	5-14
Printer Memory	5-15
Random Access Memory (RAM)	5-15
DIMM Slots	5-16
Memory Enhancement technology (MEt)	5-16
Page Protect	5-16
PJM Overview	5-17
PML	5-17
Control Panel	5-17
Image Formation System	5-18
Toner Cartridge	5-20
Photosensitive Drum	5-21
Writing the Image	5-24
Developing the Image	5-25
Transferring the Image	5-26
Image Fusing/Variable Fusing Temperature	5-27
Paper Feed System	5-29
Clutches and Sensors	5-30
Printing from Tray 1	5-31
Printing from Tray 2	5-33
Printing from the Optional 500-sheet and 250-sheet Trays	5-35
Paper Jam	5-37
Duplexer	5-38
Paper Jam in the Duplexer	5-44
Basic Sequence of Operation	5-45

6 Removing and Replacing Parts

Overview	6-1
User Installable Accessories	6-2
Removal and Replacement Strategy	6-7
Required Tools	6-7
Removing Covers	6-10
Rear Door / Rear Output Bin	6-10
Top Cover	6-12
Control Panel Overlay and Control Panel	6-15
Toner Cartridge Door Assembly	6-17
Front Cover and Tray 1	6-18
Front Cover Pins	6-20
Face Down Assembly	6-21
Left and Right Side Covers	6-23
Tray 1 Inner Cover	6-24
Right and Left Corner Covers	6-26
Removing Assemblies	6-27
Transfer Roller Assembly	6-28
Fuser	6-30
Paper Handling PCA	6-31
Main Gear Assembly	6-35
Pickup Gear Assembly	6-37
Tray 1 Pickup Solenoid	6-39
Fan	6-40
Formatter Assembly	6-41
Tray 1 Roller	6-42
Tray 2 Roller	6-43
Paper Feed Roller Assembly	6-44
DC Controller Board and Power Supply	6-47
Paper Feed Belt Assembly	6-51
Tray 1 Shaft	6-53
Tray 2 Shaft	6-55
Tray 1 Lift Plate	6-57
Tray 1 Separation Pad	6-58
Paper Guide	6-59
Paper Path Detect Sensor	6-60
Face Down Bin Full Sensor	6-61
Power Connection	6-63
Registration Assembly	6-64
Upper Delivery Assembly	6-66
Delivery Roller Removal	6-68
Laser Scanner Assembly	6-70
Main Motor	6-71
Toner Cartridge Guides	6-72
Power Inlet Assembly	6-73

Optional 500-sheet Tray Disassembly	6-74
Tray Indicator Assembly	6-76
Left Front Corner Cover Installation	6-77
Paper Size Spring Assembly	6-78
D-roller and Feed Roller	6-79
Gear Assembly and PCA	6-81
Power Connector	6-82
Separation Roller	6-83

7 Troubleshooting

Overview	7-1
Troubleshooting Process.	7-2
Troubleshooting Process Flow	7-4
Troubleshooting the Printing System	7-6
Preliminary Operating Checks	7-6
Power On	7-7
Display	7-11
Event Log	7-12
Printer Messages	7-16
General Paper Path Troubleshooting	7-41
Information Pages.	7-44
Image Quality	7-49
Interface Troubleshooting	7-77
Reference Diagrams	7-80
Locations of Components.	7-80
Sensors and Signals.	7-88
DC Controller PCA Inputs and Outputs	7-107

8 Parts and Diagrams

Overview	8-1
How To Use the Parts Lists and Diagrams	8-2
Accessories and Supplies	8-4
Common Hardware and Replacement Cables	8-6
Illustrations and Parts Lists	8-7
Alphabetical Parts List	8-39
Numerical Parts List	8-44

Index

1 Printer Description

Overview

This chapter discusses the following:

- Printer Features
- Identification
- Site Requirements
- Paper Specifications
- Safety Information

Printer Features

Table 1-1. Printer Features

Speed	17 pages per minute (ppm), A4 paper or 16 ppm, letter paper 100 MHz RISC microprocessor First Page Out = 13 sec.
Resolution	300 dpi with PCL5e/PostScript™ Level 2 emulation (PS) 600 dpi with PCL5e/PS HP FastRes 1200 (PCL6 only) HP ProRes 1200 (PCL6, PS)
Typefaces	110 Scalable TrueType™ (80 built-in, 30 via FontSmart, all PS and PCL accessible)
Memory Options	HP LaserJet 5000: 4 MB RAM standard HP LaserJet 5000 N: 8 MB RAM standard HP LaserJet 5000 GN: 12 MB RAM standard Optional Memory: 2, 4, 8, 16 MB EDO DIMMs 32 MB SDRAM DIMM
Expansion Slots	3 100-pin DIMM slots 2 enhanced I/O (EIO) slots
Interface	Bidirectional IEEE 1284 compliant parallel interface RS-232 9-pin serial Paper Handling Connector (PHC)
Optional Networking	10Base-T and 10Base-2 10/100Base-TX Token Ring LocalTalk
Mass Storage Options	2 and 4 MB Flash DIMMs

Table 1-1. Printer Features (continued)

Paper Trays	100-sheet Tray 1 Size: 3 by 5 in (76 by 127 mm) to 12.28 by 18.5 in (312 by 470 mm) Optional 250-sheet Tray 2 supports Size: 5.8 by 8.2 in (149 by 210 mm) to 11 by 17 in (279 by 432) Optional Universal 500-sheet Tray supports standard and custom sizes from 5.8 by 8.2 in (149 by 210 mm) to 11 by 17 in (279 by 432)
Paper Path	Straight through from Tray 1 to rear output bin Or to top output bin
Output Capacity	250-sheet top output bin 50-sheet rear output bin
Paper Handling Options	Duplexer, optional 250-sheet and 500-sheet universal tray assembly

Table 1-2. Comparison of HP LaserJet 5000 Series Printers

	HP LaserJet 5000	HP LaserJet 5000 N	HP LaserJet 5000 GN
Ethernet 10-T/ 10-2	optional	standard	standard
Max. # input bins	4	4	4
Standard RAM	4 MB internal	8 MB ¹	12 MB ¹
250-sheet Tray	1 standard 1 optional	1 standard 1 optional	1 standard 1 optional
500-sheet Universal Tray	optional	standard	standard
1.4 GB EIO Drive	optional	optional	standard
Duplexer	optional	optional	optional
Envelope feeder	not available	not available	not available
LocalTalk	optional	standard	standard

1. 4 MB internal, with remainder in DIMM

Identification

Model and Serial Numbers

The model number and serial numbers are listed on identification labels located on the rear left side of the printer. The serial number is alphanumeric, such as USB0000146 for the HP LaserJet 5000 N printer.

The serial number contains information about the Country of Origin, the Revision Level, the Production Code, and Production Number of the printer.

The rear labels also contain power rating and regulatory information as shown in Figure 1-1.

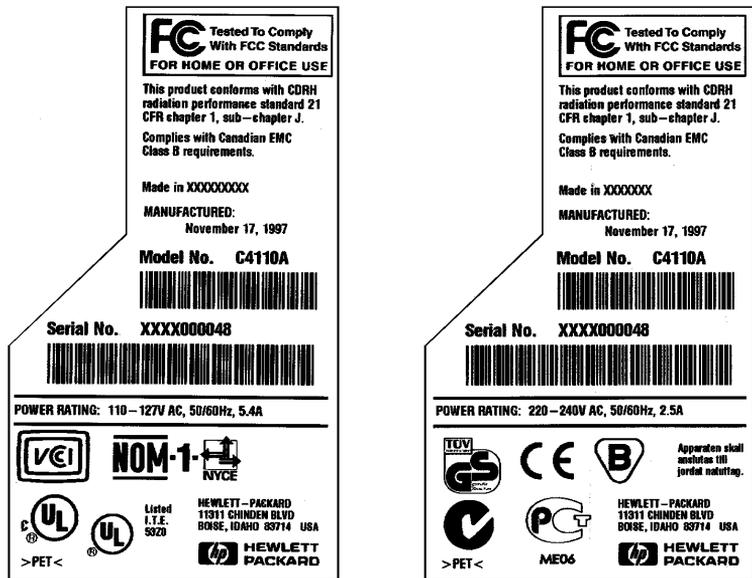


Figure 1-1 Sample Labels

Site Requirements

The following environmental specifications must be maintained to ensure the proper operation of the printer. Consider the following points before installing the printer:

- Install in a well-ventilated, dust-free area.
- Install on a hard, flat and continuous surface, with all four printer feet level. Do not install on carpet or other soft surfaces.
- Ensure adequate power is supplied. Printer power requirements are listed in Table 1-3.
- Install where temperature and humidity is stable, away from water sources, humidifiers, air conditioners, refrigerators, or other major appliances.
- Install away from direct sunlight, open flames, or ammonia fumes. If the printer is placed near a window, make sure the window has a curtain or blind to block any direct sunlight.
- Install with enough space around the printer for proper access and ventilation.
- Install printer away from the direct flow of exhaust from air ventilation systems.

Table 1-3. Electrical Specifications

Volts	Frequency	Amps	Watts (typical)
100-127 VAC±10%	50/60 Hz ±3Hz	11 amps	printing = 365 standby = 40 PowerSave On = 27 (EPA ENERGY STAR®)
220-240 VAC±10%	50/60 Hz ±3Hz	5 amps	printing = 355 standby = 40 PowerSave On = 22 (EPA ENERGY STAR®)

Space Requirements

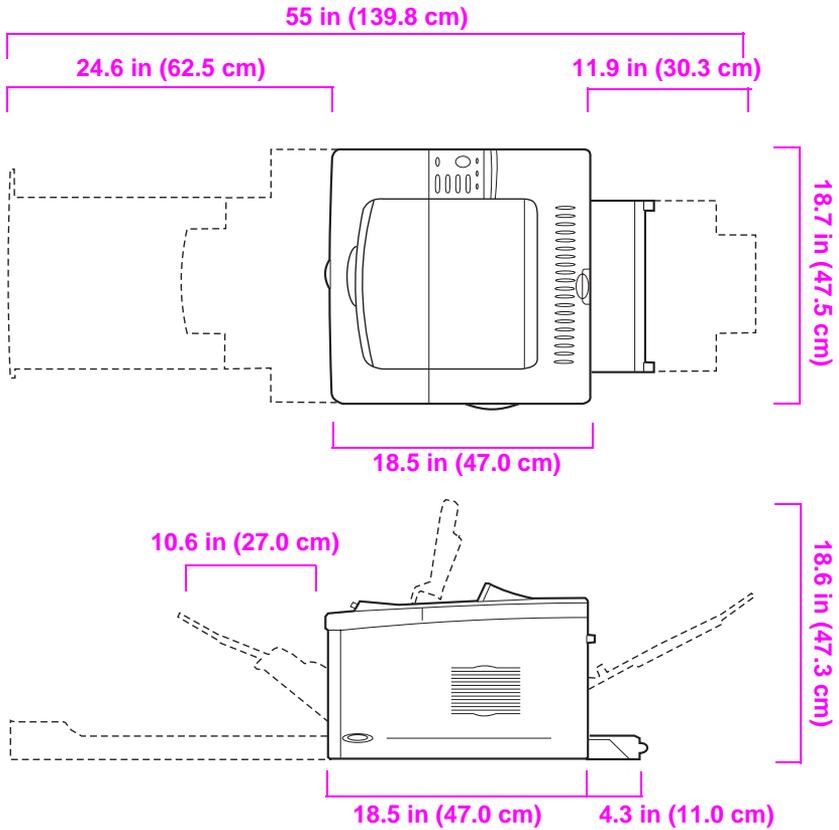


Figure 1-2 Printer Dimensions, HP LaserJet 5000

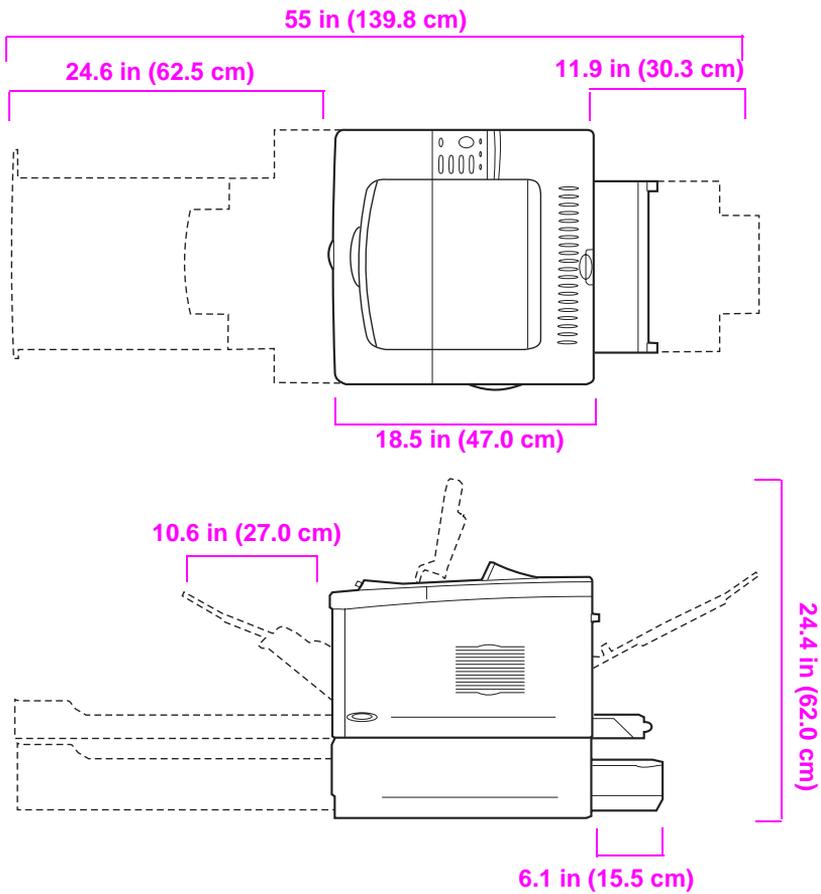


Figure 1-3 Printer Dimensions, HP LaserJet 5000 N/5000 GN

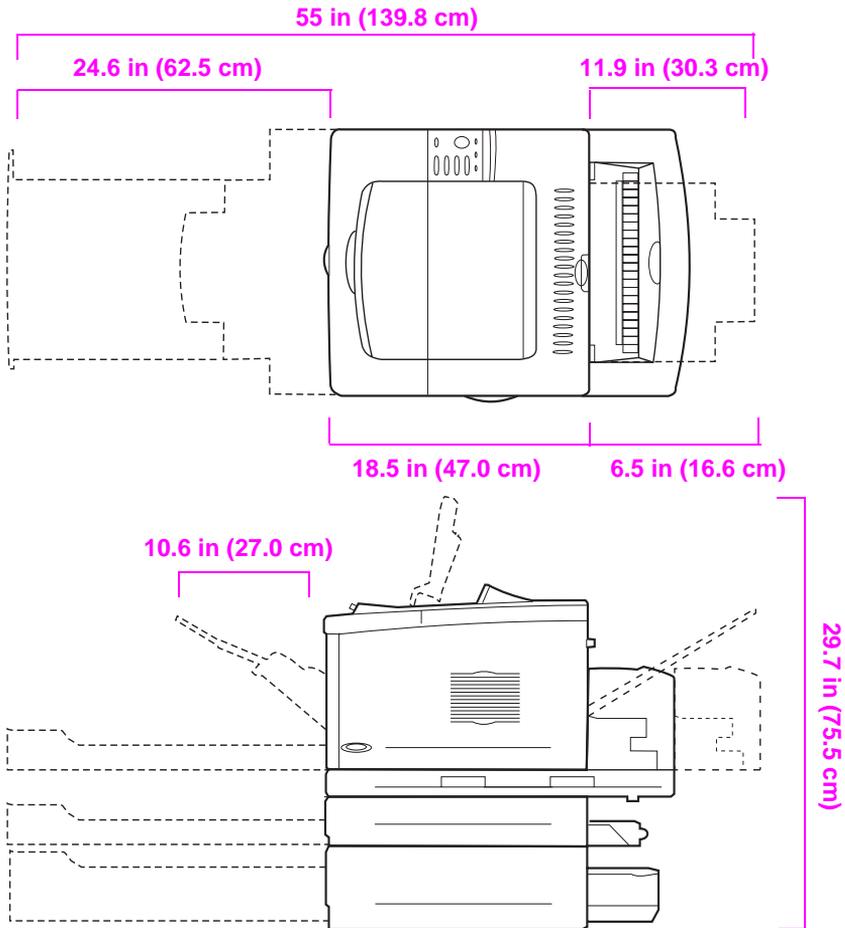


Figure 1-4 Printer Dimensions, HP LaserJet 5000 with Accessories

Printer Weight (without toner cartridge)

- HP LaserJet 5000 printer: 50 lb (23 kg)
- HP LaserJet 5000 N/5000 GN printers: 75 lb (34 kg)
- HP LaserJet 5000 N/5000 GN printers with duplexer and optional 250-sheet feeder: 114 lb (52 kg)

Environmental Requirements

Table 1-4. Printer and Toner Cartridge Environmental Conditions

Item	Operating	Storage
Temperature	50-91° F (10-32° C)	-4 to 140°F (-20 to 60°C)
Relative Humidity	20-80% RH (with no condensation)	10% TO 95% RH

Table 1-5. Acoustic Emissions (Per ISO 9296)

Printer State	Sound Power
Printing, 16 pages per minute (ppm)	$L_{wad} = 6.6$ bels (A)
Printing, 8 ppm	$L_{wad} = 6.3$ bels (A)
PowerSave	$L_{wad} = 4.4$ bels (A)

Paper Specifications

The following tables show paper specifications for the printer.

Table 1-6. Paper Specifications, Tray 1

Supported Paper	Dimensions ¹	Weight	Capacity ²
Minimum Size (custom)	3 by 5 in (76 by 127 mm)	16 to 53 lb (60 to 199 g/m ²)	100 sheets of 20 lb (75 g m ²) paper
Maximum Size (custom)	12.28 by 18.5 in (312 by 470 mm)		
Transparencies	Same as minimum and maximum paper sizes listed above.	Thickness: 0.0039 in to 0.0045 in (0.099 to 0.114 mm)	75 transparencies
Labels		Thickness: 0.005 in to 0.007 in (0.127 mm to 0.178 mm)	50 labels
Envelopes		20 to 28 lb (75 to 105 g/m ²)	10 envelopes

1. The printer supports a wide range of paper sizes. Check the printer software for supported sizes. To print custom-size paper see the User's Guide.
2. Capacity may vary depending on paper weight and thickness, and environmental conditions.

Table 1-7. Paper Specifications, Tray 2 or Optional 250-sheet Tray

Supported Paper	Dimensions¹	Weight	Capacity²
Letter	8.5 by 11 in (216 by 279 mm)	16 to 28 lb (60 to 105 g/m ²)	250 sheets of 20 lb (75 g/m ²) paper 50-100 transparencies
A4	8.3 by 11.7 in (210 by 297 mm)		
Executive	7.3 by 10.5 in (191 by 267 mm)		
Legal	8.5 by 14 in (216 by 356 mm)		
B5 (JIS)	7.2 by 10 in (182 by 257 mm)		
A5	5.8 by 8.2 in (148 by 210 mm)		
11 x 17	11 by 17 in (279 by 432 mm)		
A3	11.7 by 16.5 in (297 by 420 mm)		
B4 (JIS)	10.1 by 14.3 in (257 by 364 mm)		

1. The printer supports a wide range of media sizes. Check the printer software for supported sizes.
2. Capacity may vary depending on media weight and thickness, and environmental conditions.

Table 1-8. Paper Specifications, Optional 500-sheet Tray

Supported Paper	Dimensions¹	Weight	Capacity²
Letter Letter-R ³	8.5 by 11 in (216 by 279 mm)	16 to 28 lb (60 to 105 g/m ²)	500 sheets of 20 lb (75 g/m ²) paper 50-100 transparencies
A4 A4-R ³	8.3 by 11.7 in (210 by 297 mm)		
Executive	7.3 by 10.5 in (191 by 267 mm)		
Legal	8.5 by 14 in (216 by 356 mm)		
B5 (JIS)	7.2 by 10 in (182 by 257 mm)		
A5	5.8 by 8.2 in (148 by 210 mm)		
11 by 17	11 by 17 in (279 by 432 mm)		
A3	11.7 by 16.5 in (297 by 420 mm)		
B4 (JIS)	10.1 by 14.3 in (257 by 364 mm)		
Custom ⁴	5.8 by 8.2 to 11.7 by 17 in (148 by 210 to 297 by 432 mm)		

1. The printer supports a wide range of media sizes. Check the printer software for supported sizes.
2. Capacity may vary depending on media weight and thickness, and environmental conditions.
3. To print rotated paper see the User's Guide.
4. To print custom-size paper see the User's Guide.

Table 1-9. Paper Specifications, Optional Duplex Printing Accessory (Duplexer)

	Dimensions¹	Weight
Minimum	5.8 by 8.3 inches (148 by 210 mm)	16 to 28 lb (60 to 105 g/m ²)
Maximum	11.7 by 17 inches (297 by 432 mm)	

1. The printer supports a wide range of media sizes. Check the printer software for supported sizes.

Supported Types of Paper

The printer supports the following types of paper:

- plain
- letterhead
- prepunched
- bond
- color
- rough
- vellum
- preprinted
- transparency
- labels
- recycled
- card stock
- user-defined (5 types)

Guidelines for Using Paper

For best results, use conventional 20 lb (75 g/m²) paper. Make sure the paper is of good quality and free of cuts, nicks, tears, spots, loose particles, dust, wrinkles, voids, and curled or bent edges.

Some paper causes print quality problems, jamming, or damage to the printer.

For more specific information, see “Image Defects” on page 7-50.

Table 1-10. Guidelines for Using Paper

Symptom	Problem with Paper	Solution
Poor print quality or toner adhesion. Problems with feeding.	Too moist, too rough, too smooth, or embossed; faulty paper lot.	Try another kind of paper, between 100-250 Sheffield, 4-6% moisture content.
Dropouts, jamming, curl.	Stored improperly.	Store paper flat in its moisture-proof wrapping.
Increased gray background shading.	Too heavy.	Use lighter paper. Open the rear output bin.
Excessive curl. Problems with feeding.	Too moist, wrong grain direction or short-grain construction.	Open the rear output bin. Use long-grain paper. Set PAPER REFORMING=ON. Set FUSER MODE=LOW.
Jamming, damage to printer.	Cutouts or perforations.	Do not use paper with cutouts or perforations.
Problems with feeding.	Ragged edges.	Use quality paper.

Note

Do not use letterhead paper that is printed with low-temperature inks, such as those used in some types of thermography.

Do not use raised letterhead.

The printer uses heat and pressure to fuse toner to the paper. Make sure that any colored paper or preprinted forms use inks that are compatible with the printer's temperature (392° F or 200° C for 0.1 second).

Paper Weight Equivalence Table

Use this table to determine approximate equivalent points in weight specifications other than U.S. bond weight. For example, to determine the equivalent of 20 lb U.S. bond weight paper in U.S. cover weight, locate the bond weight (in row 3, second column) and scan across the row to the cover weight (in the fourth column). The equivalent is 28 lb.

Shaded areas indicate a standard weight for that grade.

Table 1-11. Paper Weight Equivalence

	U.S. Post Card ¹ thickness (mm)	U.S. Bond Weight (lb)	U.S. Text/Book Weight (lb)	U.S. Cover Weight (lb)	U.S. Bristol Weight (lb)	U.S. Index Weight (lb)	U.S. Tag Weight (lb)	Europe Metric Weight (g/m ²)	Japan Metric Weight (g/m ²)
1		16	41	22	27	33	37	60	60
2		17	43	24	29	35	39	64	64
3		20	50	28	34	42	46	75	75
4		21	54	30	36	44	49	80	80
5		22	56	31	38	46	51	81	81
6		24	60	33	41	50	55	90	90
7		27	68	37	45	55	61	100	100
8		28	70	39	49	58	65	105	105
9		32	80	44	55	67	74	120	120
10		34	86	47	58	71	79	128	128
11		36	90	50	62	75	83	135	135
12	.18	39	100	55	67	82	91	148	148
13	.19	42	107	58	72	87	97	157	157
14	.20	43	110	60	74	90	100	163	163
15	.23	47	119	65	80	97	108	176	176
16		53	134	74	90	110	122	199	199

1. U.S. Post Card measurements are approximate. Use for reference only.

Labels

CAUTION

To avoid damaging the printer, use only labels recommended for use in laser printers.

If you have problems printing labels, use Tray 1 and open the rear output bin.

Never print on the same sheet of labels more than once.

Label Construction

When selecting labels, consider the quality of each component:

- **Adhesives:** The adhesive material should be stable at 392° F (200° C), the printer's maximum temperature.
- **Arrangement:** Only use labels with no exposed backing between them. Labels can peel off of sheets that have spaces between the labels, causing serious jams.
- **Curl:** Prior to printing, labels must lie flat with no more than 0.5 in (13 mm) of curl in any direction.
- **Condition:** Do not use labels with wrinkles, bubbles, or other indications of separation.

Transparencies

Transparencies used in the printer must be able to withstand 392° F (200° C), the printer's maximum temperature. For best results, close the rear output bin to print transparencies to the top output bin.

CAUTION

To avoid damaging the printer, use only transparencies recommended for use in laser printers.

If you have problems printing transparencies, use Tray 1.

Vellum

Vellum is special lightweight paper similar to parchment. Print vellum from Tray 1 only, and open the rear output bin. Do not print on both sides of vellum.

Vellum used in the printer must be able to withstand 392° F (200° C), the printer's maximum temperature.

Envelopes

Envelope Construction

Envelope construction is critical. Envelope fold lines can vary considerably, not only between manufacturers, but also within a box from the same manufacturer. Successful printing on envelopes depends upon the quality of the envelopes. When selecting envelopes, consider the following components:

- **Weight:** The weight of the envelope paper should not exceed 28 lb (105 g/m²), or jamming may result.
- **Construction:** Prior to printing, envelopes should lie flat with less than 0.25 in (6 mm) curl, and should not contain air. (Envelopes that trap air may cause problems.)
- **Condition:** Make sure envelopes are not wrinkled, nicked, or otherwise damaged.
- **Sizes in Tray 1:** From 3 by 5 in (76 by 127 mm) to 12.28 by 18.5 in (312 by 470 mm).

Always print envelopes from Tray 1. To prevent envelopes from wrinkling or jamming, open the rear output bin.

Envelopes with Double-Side-Seams

Double-side-seam construction has vertical seams at both ends of the envelope rather than diagonal seams. This style may be more likely to wrinkle. Be sure the seam extends all the way to the corner of the envelope as illustrated below.

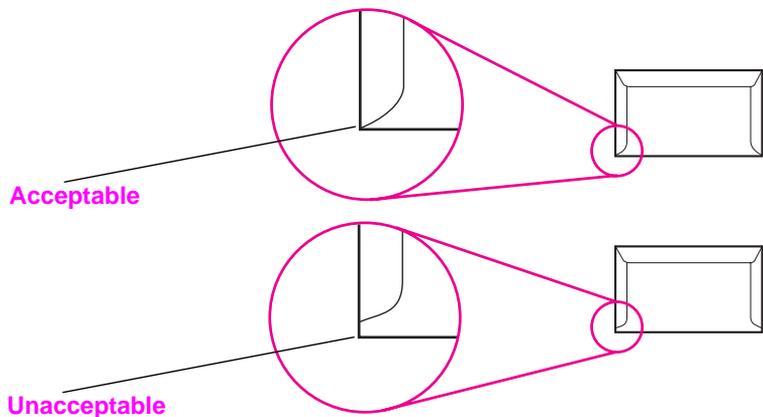


Figure 1-5 Envelopes with Double-Side-Seams

Envelopes with Adhesive Strips or Flaps

Envelopes with a peel-off adhesive strip or with more than one flap that folds over to seal must use adhesives compatible with the heat and pressure in the printer. The extra flaps and strips might cause wrinkling, creasing, or jams.

Envelope Margins

The following table gives typical address margins for a Commercial #10 or DL envelope.

Table 1-12. Envelope Margins

Type of Address	Top Margin	Left Margin
Return Address	0.6 in (15 mm)	0.6 in (15 mm)
Delivery Address	2 in (51 mm)	3.5 in (89 mm)

Note

For the best print quality, position margins no closer than 0.6 in (15 mm) from the edges of the envelope.

Envelope Storage

Proper storage of envelopes helps contribute to good print quality. Envelopes should be stored flat. If air is trapped in an envelope, creating an air bubble, the envelope may wrinkle during printing.

Card Stock and Heavy Paper

Many types of card stock can be printed from Tray 1, including index cards and postcards. Some card stock performs better than others because its construction is better suited for feeding through a laser printer.

For optimum printer performance, do not use paper heavier than 53 lb (199 g/m²) in Tray 1 or 28 lb (105 g/m²) in other trays. Paper that is too heavy might cause misfeeds, stacking problems, paper jams, poor toner fusing, poor print quality, or excessive mechanical wear.

Note

Printing on heavier paper may be possible if the tray is not filled to capacity, and paper with a smoothness rating of 100-180 Sheffield is used.

Card Stock Construction

- **Smoothness:** 36-53 lb (135-199 g/m²) card stock should have a smoothness rating of 100-180 Sheffield. 16-36 lb (60-135 g/m²) card stock should have a smoothness rating of 100-250 Sheffield.
- **Construction:** Card stock should lie flat with less than 0.2 in (5 mm) of curl.
- **Condition:** Make sure card stock is not wrinkled, nicked, or otherwise damaged.
- **Sizes:** Use only card stock within the following size ranges:
 - minimum: 3 by 5 in (76 by 127 mm)
 - maximum: 12.28 by 18.5 in (312 by 470 mm)

Note

Before loading card stock in Tray 1, make sure it is regular in shape and not damaged. Also, make sure the cards are not stuck together.

Card Stock Guidelines

- If cards curl or jam, try printing from Tray 1 and opening the rear output bin.
- Set margins at least 0.08 in (2 mm) away from the edges of the paper.