


PARTS MANUAL

TC-75105 Series

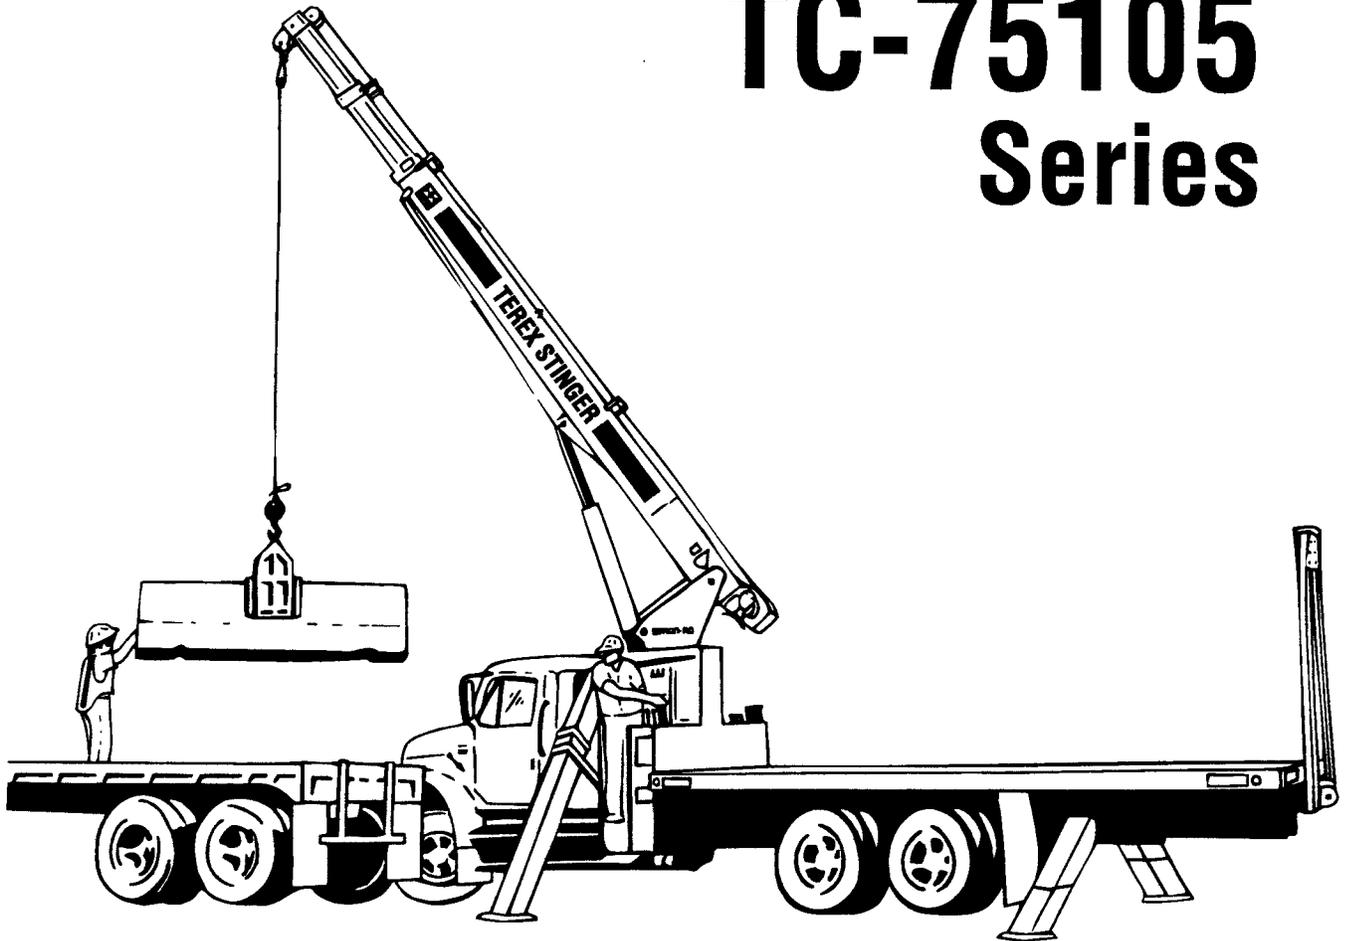

STINGER® Truck-Mounted Cranes

TC-75105

Truck Crane

Parts Manual

990-10152 (6/95)

This **TEREX CRANES** parts manual is supplied to aid you in the location and correct identification of component parts replacement and is based upon **TEREX CRANES** assembly standards at the time of manufacture.

The **TEREX CRANES** parts manual will enable you to maintain your unit according to the manufacturer's recommendations. This unit is not to be altered or modified without prior factory approval.

NOTICE

If this crane becomes involved in an accident resulting in property damage or personal injury, please contact your local **TEREX CRANES** dealer or the **TEREX CRANES** service department at (913) 782-1200 **IMMEDIATELY**.

All illustrations and specifications contained in this manual are based on the latest product information available at the time of publication. Right is reserved to make changes at any time, without notice, in specifications, material, and descriptions.

MADE IN THE U.S.A.

© **TEREX CRANES** 1995

This manual is delivered for the sole purpose of operating and maintaining specific equipment for its intended use and shall not be copied or information contained herein delivered to third parties without prior written approval of **TEREX CRANES**.

INFORMATION

LOCATING PARTS

IN ORDER TO LOCATE A SPECIFIC PART, FIRST DETERMINE THE ASSEMBLY GROUP WITHIN WHICH IT WOULD MOST LIKELY BE CONTAINED. AFTER LOCATING THE GROUP IDENTIFICATION PAGE FOR THAT GROUP, REVIEW THE TABLE OF CONTENTS FOR THE ILLUSTRATION WHICH WOULD MOST LIKELY DETAIL THE PART IN QUESTION. OPPOSITE EACH ILLUSTRATION IS IT'S CORRESPONDING PART LIST. THESE ARE SPECIFICALLY IDENTIFIED BY ILLUSTRATION NAME AND MODEL NUMBER. ALWAYS BE SURE THAT YOU ARE USING THE CORRECT ILLUSTRATION FOR YOUR MODEL WHEN LOCATING AND IDENTIFYING PARTS.

READING THE PARTS LIST

EACH PARTS LIST CONTAINS, FROM LEFT TO RIGHT, AN ITEM NUMBER, CORRESPONDING REPLACEMENT PART NUMBER, A DESCRIPTION OF THE PART, AND A QUANTITY REQUIRED FOR ASSEMBLY. QUANTITIES MAY VARY DUE TO TRUCK AND/OR MANUFACTURER'S SPECIFICATIONS. IN THESE INSTANCES AN A/R WILL APPEAR IN THE QUANTITY COLUMN.

VALUES FOR ALL BOOM LENGTHS						
50'	55'	60'	65'	70'	75'	78'
1850	2450	3200	4050	5000	6100	6300
1350	1650	2250	2500	2850	3000	3250

RO	75105
	25 TON • 10 FEET
MAXIMUM LOAD CHART MAXIMUM OUTRIGGER SPREAD	
9786, 5012939	CANADA PAT. NO. 1097265

ORDERING INFORMATION

EACH SIMON-RO CORPORATION UNIT IS ASSIGNED A MODEL AND UNIT SERIAL NUMBER. THE MODEL NUMBER IS LOCATED ON THE LOWER RIGHT HAND CORNER OF THE MAXIMUM LOAD CHART. THE MODEL AND SERIAL NUMBERS ARE STAMPED ON THE TRUCK CRANE VIN PLACARD MOUNTED ON THE BACK OF THE TURRET.

MODEL NUMBER	<input style="width: 100%;" type="text"/>
SERIAL NUMBER	<input style="width: 100%;" type="text"/>
MANUFACTURED BY	
SIMON-RO	
OLATHE, KANSAS 66061 913-782-1200	

IMPORTANT

IT IS MANDATORY THAT THE MODEL NUMBER AND UNIT SERIAL NUMBER BE INCLUDED ALONG WITH PART NUMBER(S), DESCRIPTION, AND QUANTITY WITH ANY ORDER

TABLE of CONTENTS


Description	Page No.
PTO INSTALLATION GROUP	1.0
PUMP INSTALLATION	1.1
HYDRAULIC PIPING GROUP - LOWER	1.2
RESERVOIR INSTALLATION	1.3
OIL PREHEAT INSTALLATION	1.4
SUBFRAME INSTALLATION	1.5
OUTRIGGER INSTALLATION	1.8
OUTRIGGER LEG ASSEMBLY	1.8.1
OUTRIGGER CYLINDER - LOWER	1.8.1.1
OUTRIGGER CYLINDER - UPPER	1.8.1.2
OUTRIGGER CONTROL BOX SUBASSEMBLY	1.8.1.3
OUTRIGGER CONTROL VALVE SUBASSEMBLY	1.8.1.4
OUTRIGGER CONTROL VALVE	1.8.1.4.1
WIRING DIAGRAM - LOWER ELECTRICAL	1.9
ELECTRICAL BOX SUBASSEMBLY TRUCK CAB	1.9.1
ELECTRICAL BOX - PTO GOVERNOR	1.9.2
ELECTRICAL BOX SUBASSEMBLY LOWER JUNCTION	1.9.3
BOOM REST INSTALLATION	1.10
BOOM REST LIMIT SWITCH SUBASSEMBLY	1.10.1
FENDER INSTALLATION	1.11
CENTERPOST INSTALLATION	2.0
CENTERPOST SUBASSEMBLY	2.0.1
CENTERPOST ASSEMBLY	2.0.2
TURRET INSTALLATION	2.1
TURRET ASSEMBLY	2.1.1
MAIN CONTROL VALVE SUBASSEMBLY	2.1.2
MAIN CONTROL VALVE ASSEMBLY	2.1.2.1
BOOM REGEN VALVE SUBASSEMBLY	2.1.2.2
OPERATOR'S CAB INSTALLATION	2.2
OPERATOR'S CAB - DUAL WINCH	2.2.1
CONTROL BOX MODIFICATION	2.2.1.1
CONTROL BOX - CRANE CAB	2.2.1.2
WIRING DIAGRAM - UPPER ELECTRICAL	2.3
ROTATING BEACON INSTALLATION	2.4
CAB RADIO INSTALLATION	2.5
CAB HEATER INSTALLATION	2.6
CAB AIR CONDITIONER INSTALLATION	2.7
SWING GEARBOX INSTALLATION	2.10
ROTATION GEARBOX ASSEMBLY	2.10.1
ROTATION GEARBOX SUBASSEMBLY	2.10.1.1
SWING VALVE SUBASSEMBLY	2.10.1.1.2
SWING BOX	2.10.1.1.3
TOPPING CYLINDER INSTALLATION	2.11
TOPPING CYLINDER ASSEMBLY	2.11.1
BOOM INSTALLATION	3.0
BOOM ANGLE SWITCH SUBASSEMBLY	3.0.1
BOOM SUBASSEMBLY	3.1
EXTENSION CYLINDER ASSEMBLY	3.1.5
EXTENSION CYLINDER	3.1.5.1
EXTENSION CYLINDER HOSE TRACK	3.1.5.1.2.3

Description	Page No.
BOOM ATB/LMI INSTALLATION	3.2
ATB SWITCH ASSEMBLY - MAIN BOOM	3.2.1
ATB/LMI CABLE REEL ASSEMBLY	3.2.2
WINCH INSTALLATION	4.0
WINCH GEARBOX ASSEMBLY	4.0.1
AUXILIARY SHEAVE HEAD INSTALLATION	4.1
ATB SWITCH ASSEMBLY - AUXILIARY SHEAVE	4.1.1
AUXILIARY SHEAVE INSTALLATION	4.2
LATTICE JIB INSTALLATION	5.0
BASE JIB ASSEMBLY - LATTICE	5.1
ATB SWITCH ASSEMBLY - JIB BASE	5.1.1
FLY JIB ASSEMBLY - LATTICE	5.2
ATB SWITCH ASSEMBLY - JIB FLY	5.2.1
PLACARD INSTALLATION	6.0
MAXIMUM LOAD CHART	6.1
WIRE ROPE REEVING	7.0


P-2608

PTO INSTALL GROUP - FULLER 7608LL

1.0

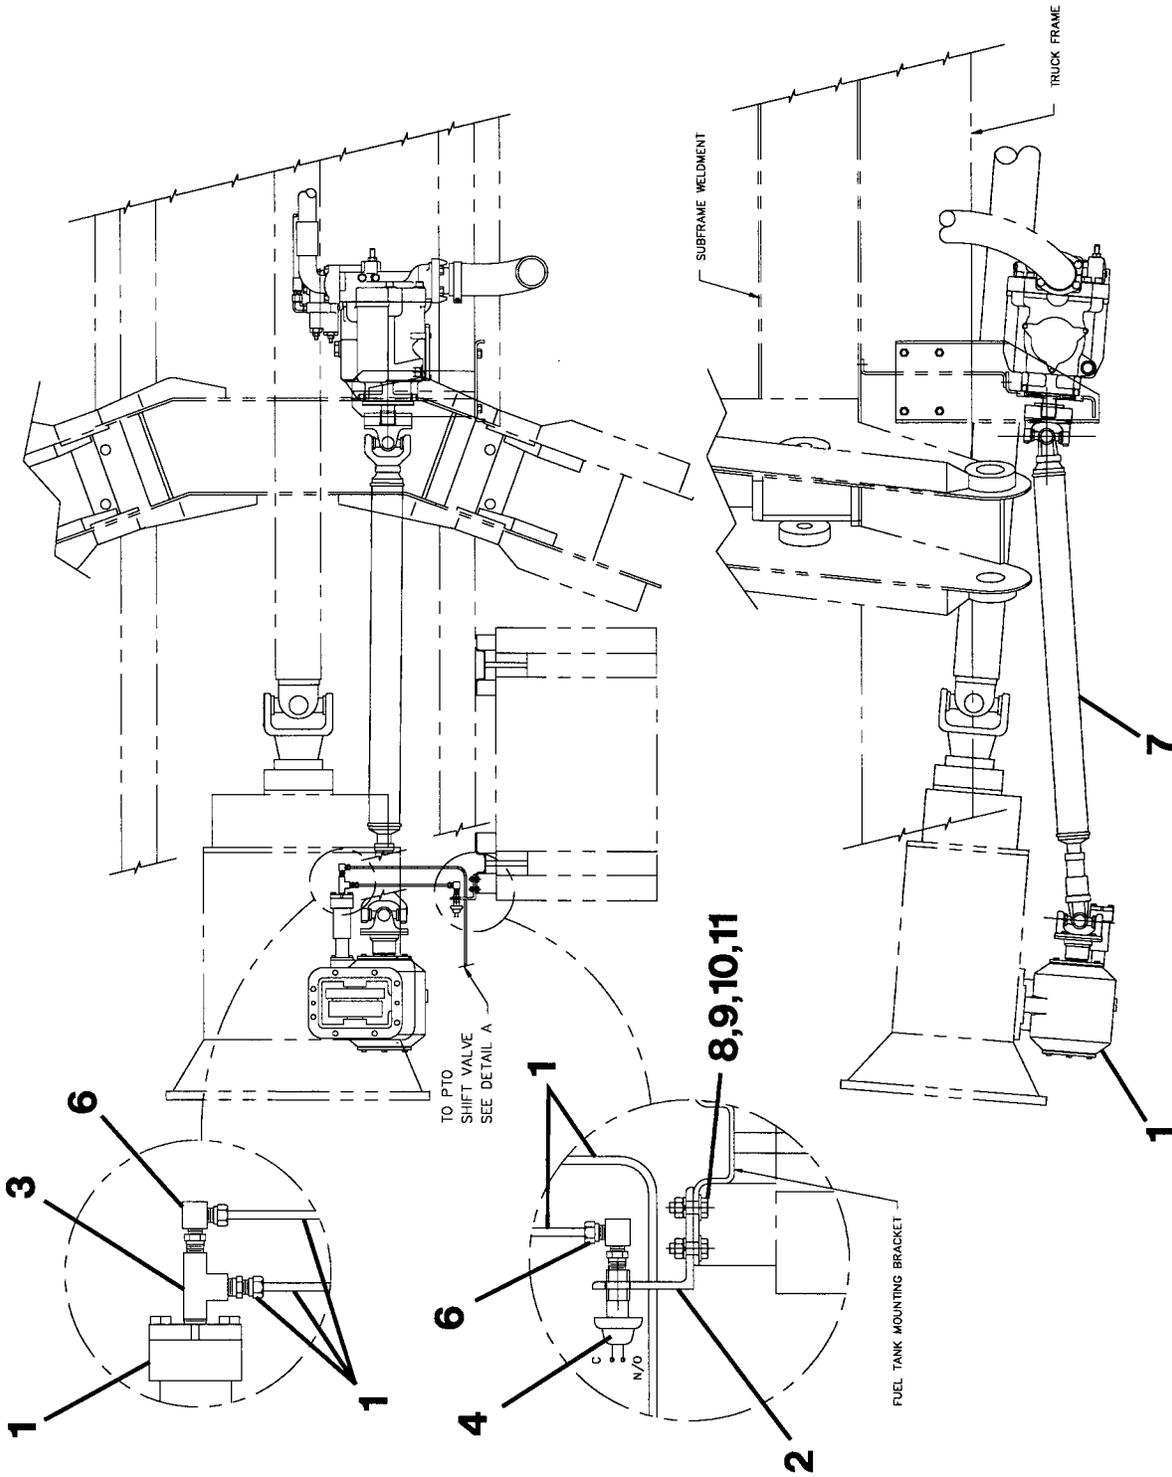

350-00179

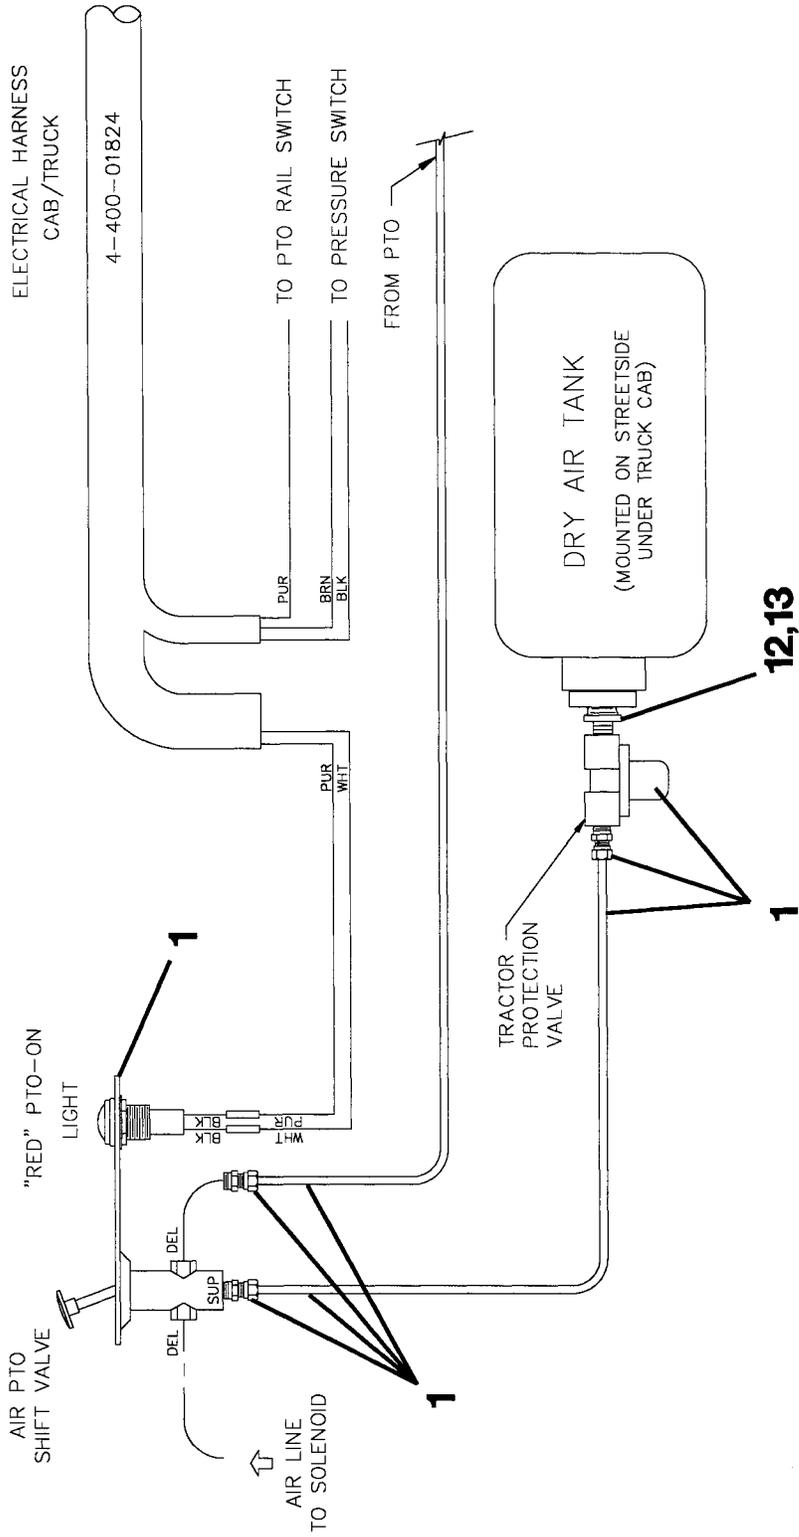

DETAIL A

TRUCK PREP P/N	DRIVELINE P/N (#7)	LENGTH
690-00398	333-10082	48.0
690-00400	333-10083	49.5
690-00401	333-10084	64.12
690-00405	333-10086	59.25

P-2709A.DWG

350-00179


ITEM	PART NUMBER	DESCRIPTION	QTY.
1	350-00172	.PTO KIT - MUNCIE - RTO7608LL	1
2	770-01642	.BRACKET - PRESSURE SWITCH MOUNTING	1
3	570-50027	.STREET TEE - 1/4NPT BRASS	1
4	400-04994	.PRESSURE SWITCH - NASON #SM-2A-60F	1
5	400-04990	.BOOT - PRESSURE SWITCH	1
6	300-32013	.ELBOW - 1/4 TUBE x 1/8 MPT	2
7	SEE TABLE	.DRIVELINE - HYDRAULIC PUMP	1
8	220-00001	.BOLT 1/4NC x 1" LONG	2
9	221-00001	.HEX NUT - 1/4NC	2
10	222-10005	.LOCKWASHER - 1/4 MED	2
11	222-00006	.FLATWASHER - 1/4 MED	2
12	570-01040	.NIPPLE - 1/4 NPT BRASS	1
13	570-42002 P-2709.D	.REDUCER BUSHING - 1/2 NPT x 1/4 NPT	1

PTO INSTALL GROUP - FULLER 7608LL


350-00179

PTO INSTALL GROUP - FULLER 14708LL

1.0

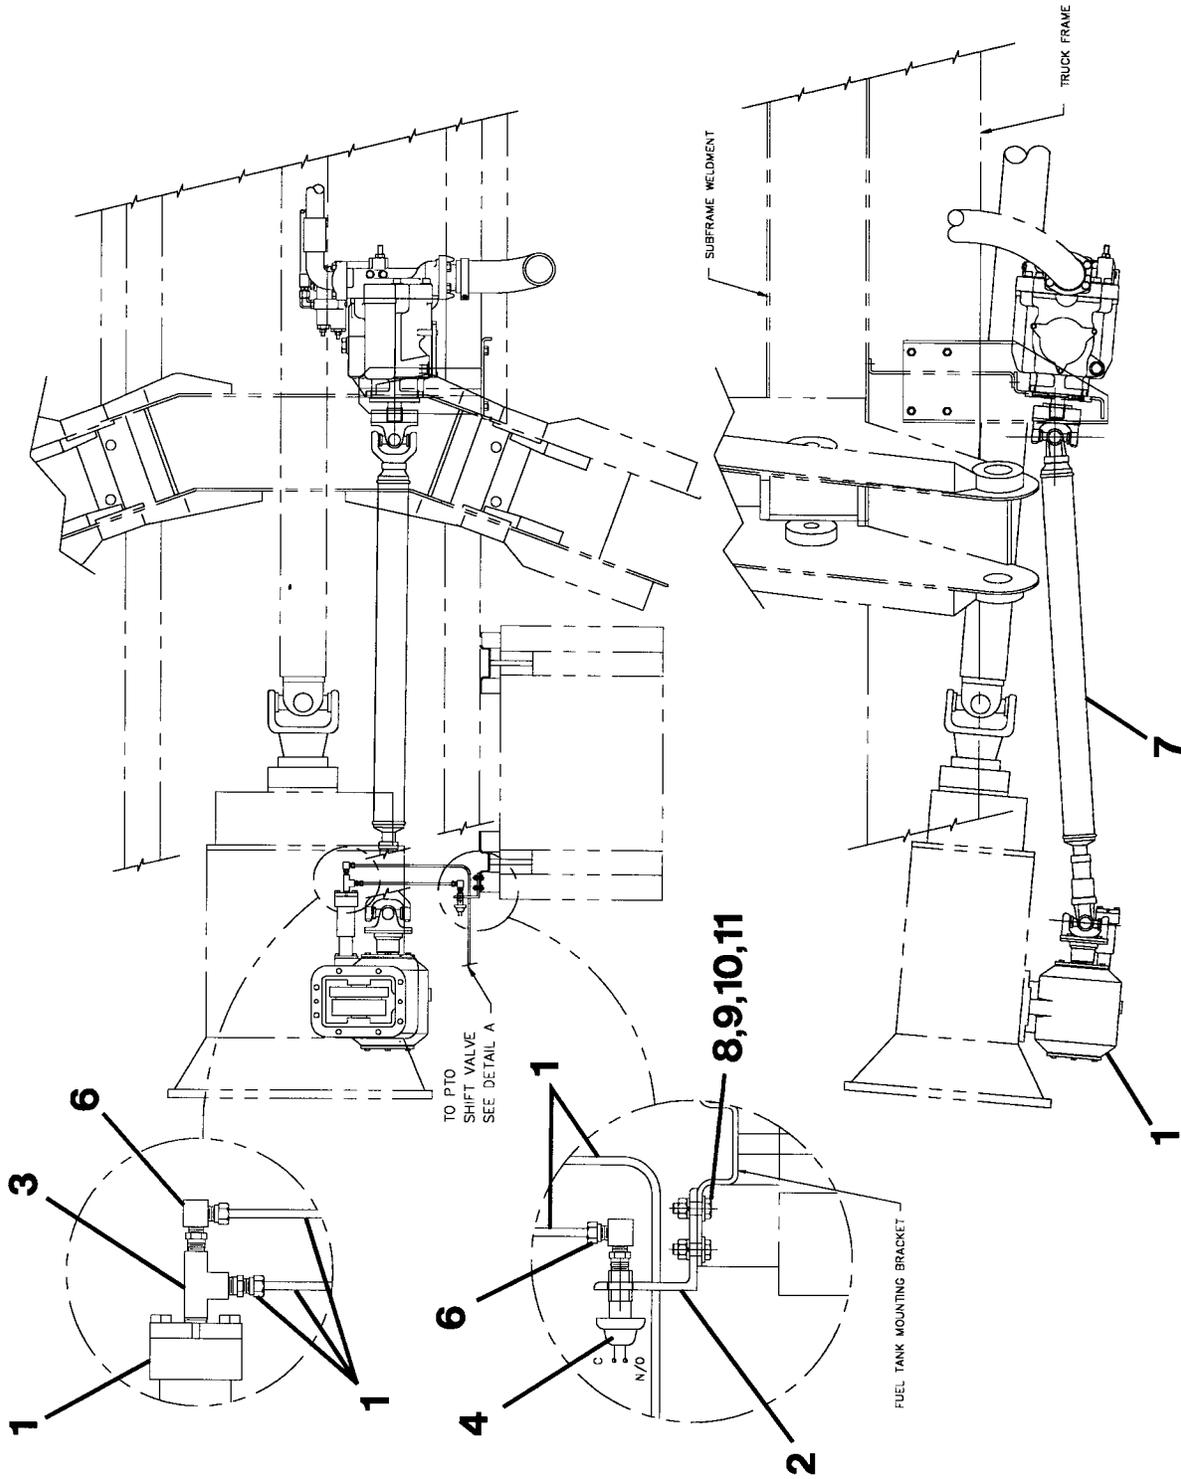

350-00169

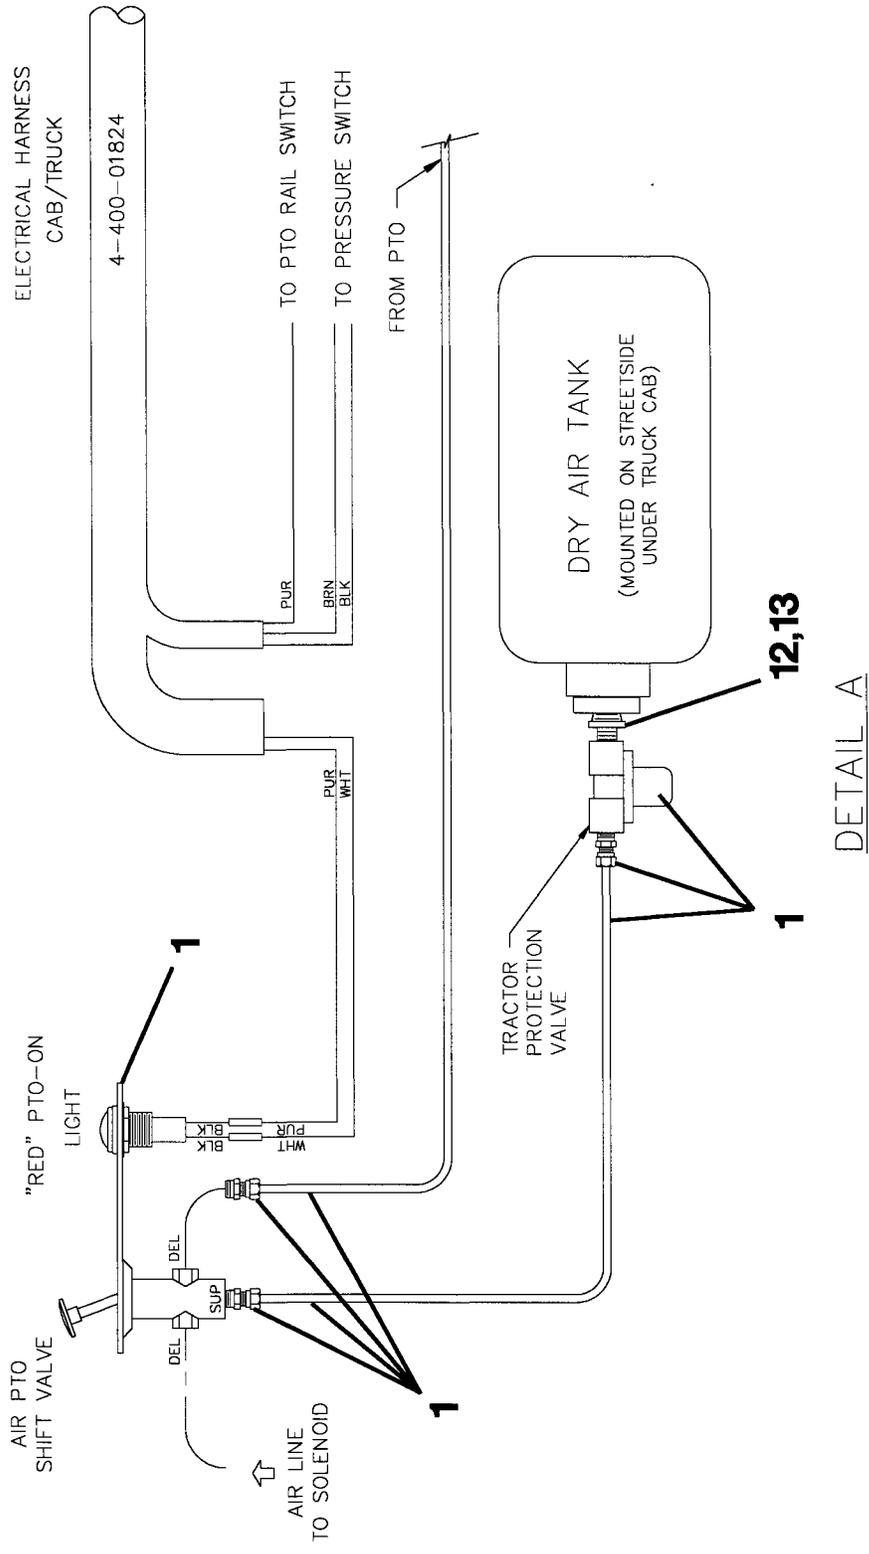

DETAIL A

TRUCK PREP P/N	DRIVELINE P/N (#7)	LENGTH
690-00398	333-10082	48.0
690-00400	333-10083	49.5
690-00401	333-10084	64.12
690-00405	333-10086	59.25

350-00169

P-2708A.DWG

PTO INSTALL GROUP - FULLER 14708LL


ITEM	PART NUMBER	DESCRIPTION	QTY.
1	350-00163	.PTO KIT - MUNCIE - RTO 14708LL	1
2	770-01642	.BRACKET - PRESSURE SWITCH MOUNTING	1
3	570-50027	.STREET TEE - 1/4NPT BRASS	1
4	400-04994	.PRESSURE SWITCH - NASON #SM-2A-60F	1
5	400-04990	.BOOT - PRESSURE SWITCH	1
6	300-32013	.ELBOW - 1/4 TUBE x 1/8 MPT	2
7	SEE TABLE	.DRIVELINE - HYDRAULIC PUMP	1
8	220-00001	.BOLT 1/4NC x 1" LONG	2
9	221-00001	.HEX NUT - 1/4NC	2
10	222-10005	.LOCKWASHER - 1/4 MED	2
11	222-00006	.FLATWASHER - 1/4 MED	2
12	570-01040	.NIPPLE - 1/4 NPT BRASS	1
13	570-42002 P-2708.D	.REDUCER BUSHING - 1/2 NPT x 1/4 NPT	1

PTO INSTALL GROUP - FULLER 14708LL

350-00169

PUMP INSTALLATION

1.1

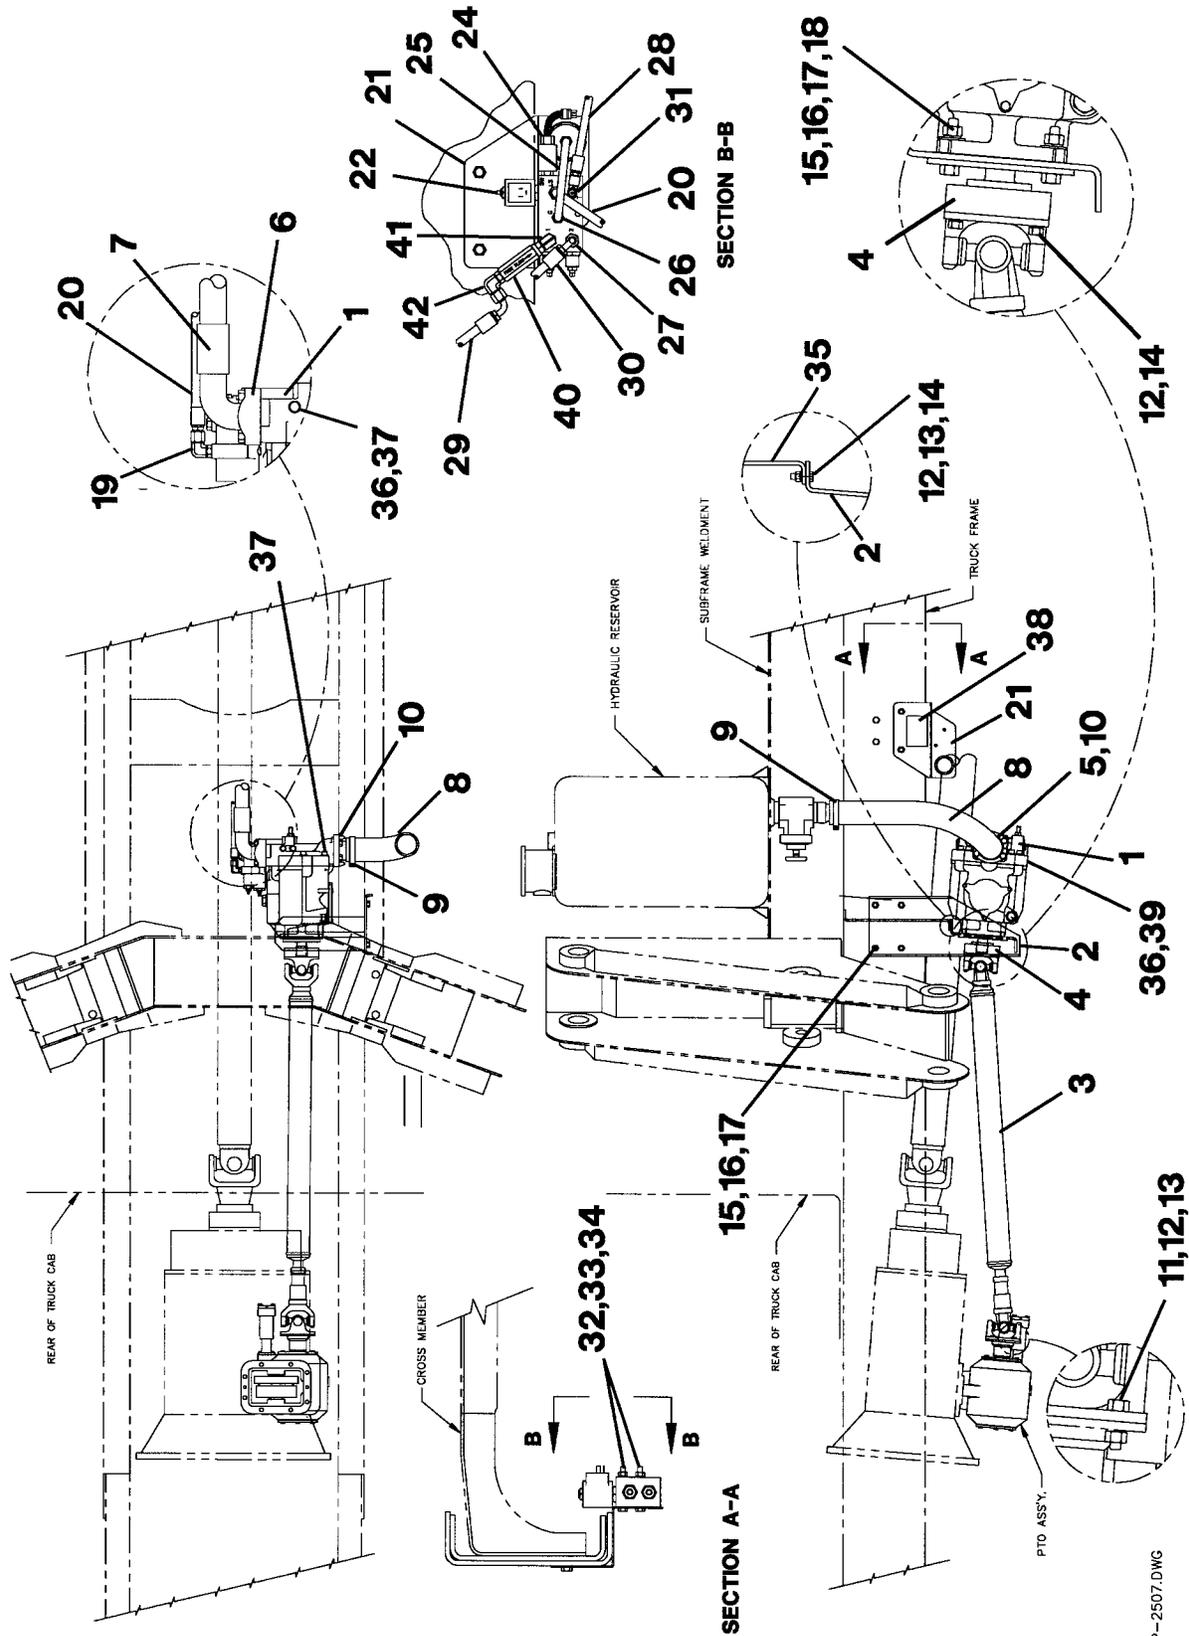

521-00046

ITEM	PART NUMBER	DESCRIPTION	QTY.
1	520-30030	.PUMP - HYDRAULIC	1
2	771-00190	.PUMP - SUPPORT	1
3	333-10082	.PUMP - DRIVELINE	1
4	333-30025	.ADAPTER - DRIVELINE	1
5	519-90121	.ADAPTER - 4-BOLT FLANGE 2 1/2	1
6	505-03005	.KIT - FLANGE 4-BOLT 1 1/4	1
7	502-60119	.HOSE ASSEMBLY - PUMP/MANIFOLD	1
8	503-06006	.HOSE SUCTION - TANK/PUMP	1
9	201-00140	.CLAMP - T-BOLT	2
10	505-06004	.KIT - FLANGE 4-BOLT 2 1/2	1
11	220-02004	.BOLT - HEX HD, 3/8-16NC x 1" LONG	4
12	222-02004	.LOCKWASHER - 3/8 DIA	10
13	221-02001	.NUT - HEX 3/8	6
14	220-02002	.BOLT - HEX HD, 3/8 x 1 1/4" LONG	6
15	220-04005	.BOLT - HEX HD, 1/2 x 1 1/2" LONG	8
16	222-14003	.LOCKWASHER - 1/2 DIA	8
17	221-04001	.NUT - HEX 1/2	8
18	222-04001	.FLATWASHER - 1/2 DIA	4
19	514-54004	.ELBOW - 90°, #6 OFS x #6 ORB	1
20	502-20865	.HOSE ASSEMBLY - LOAD SENSE (PUMP/VALVE)	1
21	770-02111	.BRACKET - VALVE SUPPORT	1
22	559-00196	.VALVE - UNLOAD	1
	551-10126	..COIL - SOLENOID	1
23	600-40385	.GAUGE - 0-6000 PSI	1
24	400-05337	.SWITCH - PRESS	1
25	502-11171	.HOSE - GAUGE ASSEMBLY	1
26	513-20017	.CONNECTOR - STRAIGHT #4	1
27	513-40014	.CONNECTOR - STRAIGHT #6	3
28	502-11173	.HOSE ASSEMBLY - DRAIN	1
29	502-20867	.HOSE ASSEMBLY - LOAD SENSE (VALVE/CENTERPOST)	1
30	502-20863	.HOSE ASSEMBLY - LOAD SENSE (VALVE/OUTRIGGER)	1
31	514-52003	.ELBOW - 90°, #4 OFS	1
32	220-01002	.BOLT - HEX HD, 5/16 x 2 3/4" LONG	2
33	222-11002	.LOCKWASHER - 5/16 DIA	2
34	221-01001	.NUT - HEX 5/16	2
35	783-03321	.BAR - PUMP SUPPORT (FRONT)	1
36	513-00006	.ADAPTER - METRIC CONNECTOR	1
37	785-01887	.BAR - PUMP SUPPORT (REAR)	1
38	519-20002	.CAP - TUBE #4 OFS	1
39	221-01001	.NUT - HEX 5/16	2
40	552-10262	.CHECK VALVE - LINE MOUNT	1
41	514-54005	.ELBOW - S.N. #6 OFS	1
42	514-54004	.ELBOW - #6 OFS	1


* NOTE:

DRIVETRAIN LENGTH AND PART NUMBER DEPENDS ON TRUCK SERIAL NUMBER AND CHASSIS USED.

521-00046

HYDRAULIC PIPING GROUP - LWR

1.2

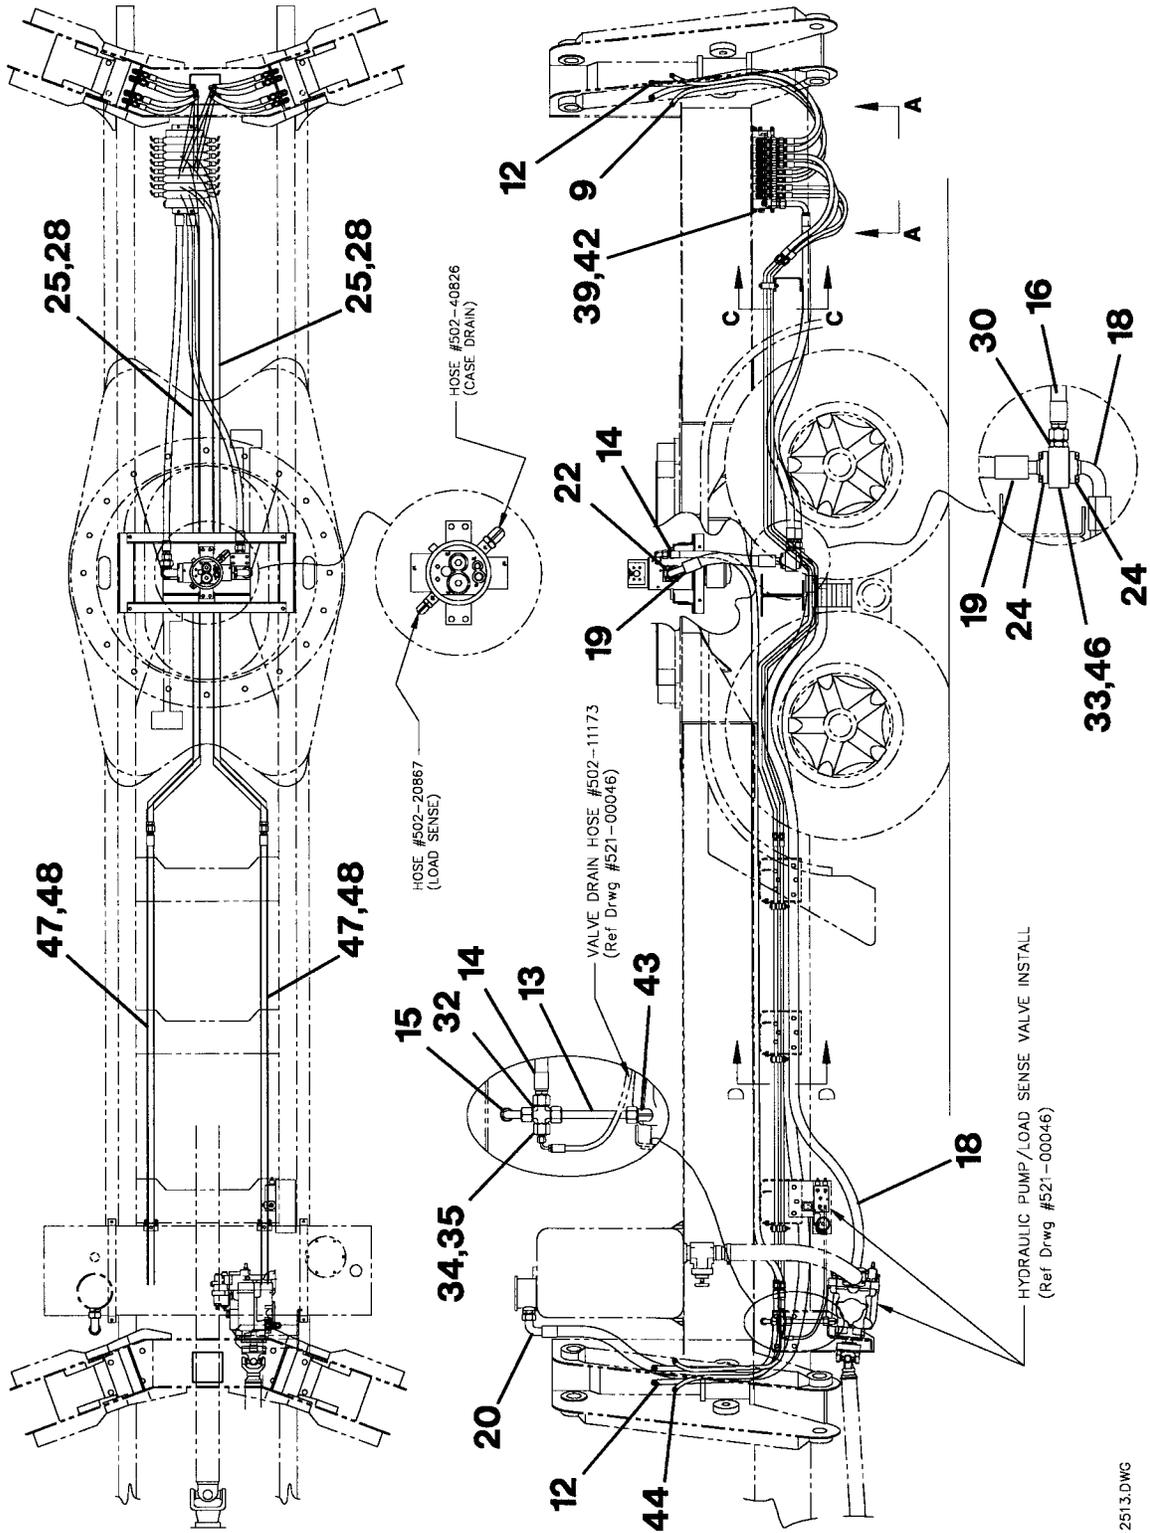

500-01651





ITEM	PART NUMBER	DESCRIPTION	QTY.
1	201-00194	.PLATE - COVER-CLAMP BLOCK	8
2	201-00225	.BLOCK - CLAMP-DOUBLE TUBE	8
3	201-00226	.BLOCK - CLAMP-DOUBLE TUBE	8
4	260-00003	.O-RING	8
5	260-00017	.O-RING	8
6	500-01642	.VALVE SUBASSY - OUTRIGGER CONTROL (SEE 1.8.1.4)	1
7	502-30632	.HOSE ASSEMBLY, CYLINDER	2
8	502-30633	.HOSE ASSEMBLY, OUTRIGGER CYLINDER	2
9	502-30634	.HOSE ASSEMBLY, OUTRIGGER CYLINDER	4
10	502-35046	.HOSE ASSEMBLY, OUTRIGGER CYLINDER	2
11	502-35047	.HOSE ASSEMBLY, OUTRIGGER CYLINDER	2
12	502-35048	.HOSE ASSEMBLY, OUTRIGGER CYLINDER	8
13	510-70834	.TUBE ASSEMBLY, CASE DRAIN	1
14	502-40826	.HOSE ASSEMBLY, RETURN	1
15	502-40827	.HOSE ASSEMBLY, DRAIN	1
16	502-50437	.HOSE ASSEMBLY, SUPPLY	1
17	502-50438	.HOSE ASSEMBLY, RETURN	1
18	502-60119	.HOSE ASSEMBLY, SUPPLY	1
19	502-60120	.HOSE ASSEMBLY, SUPPLY	1
20	502-70033	.HOSE ASSEMBLY, RETURN	1
21	502-70034	.HOSE ASSEMBLY, RETURN	1
22	505-03001	.FLANGE KIT, SPLIT	1
23	505-03003	.FLANGE KIT, SPLIT	1
24	505-03005	.FLANGE KIT, SPLIT	2
25	510-60018	.TUBE ASSEMBLY - FRONT SS CYLINDER	2
26	510-60019	.TUBE ASSEMBLY - FRONT CS CYLINDER	2
27	510-70832	.TUBE ASSEMBLY - FRONT CS CYLINDER	2
28	510-70833	.TUBE ASSEMBLY - FRONT SS CYLINDER	2
29	785-01846	.SUPPORT ANGLE - TUBE CLAMP	6
30	513-90032	.CONNECTOR - #16 OFS x #16 ORB	1
31	516-49005	.CONNECTOR - TUBE TEE, #24 OFS	1
32	517-40008	.CONNECTOR - CROSS TUBE, #12 OFS	1
33	559-00192	.MANIFOLD - HIGH PRESSURE	1
34	519-70034	.REDUCER - TUBE, #12 OFS x #4 OFS	1
35	511-70004	.NUT - #12 OFS	1
36	519-90123	.REDUCER - TUBE, #24 OFS x #16 OFS	1
37	511-90009	.NUT - #24 OFS	1
38	220-01011	.BOLT - HEX HD, 5/16 x 3 1/2 LONG	8
39	222-11002	.LOCKWASHER - 5/16 DIA	24
40	221-01001	.HEX NUT - 5/16	20
41	220-01005	.BOLT - HEX HD, 5/16 x 1 LONG	12
42	220-01004	.BOLT - HEX HD, 5/16 x 3/4 LONG	4
43	514-57011	.ELBOW - 90°, #12 OFS x #10 ORB	1
44	502-30641	.HOSE ASSY - OUTRIGGER (TUBE\BULKHEAD)	4
45	209-00470	.EDGING - SEAL TRIM	5'
46	517-30005	.PLUG - HEX HD, #4 ORB	1
47	510-60020	.TUBE ASSY - 5/8 DIA, O/R EXTEND	4
48	510-70835	.TUBE ASSY - 3/4 DIA, O/R EXTEND	4

P-2513

500-01651

HYDRAULIC PIPING GROUP - LWR

1.2

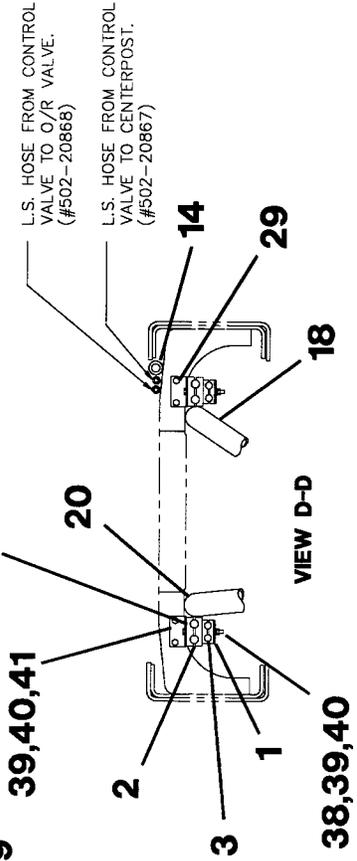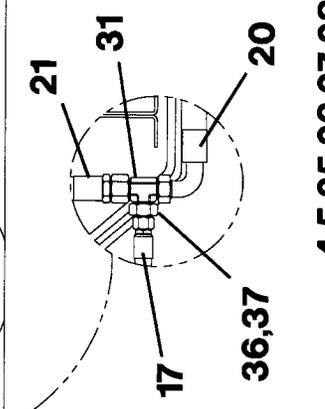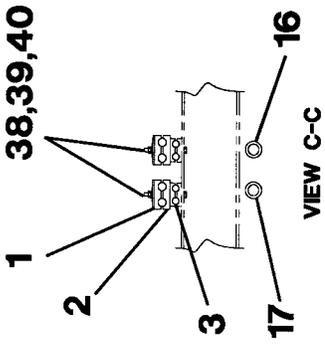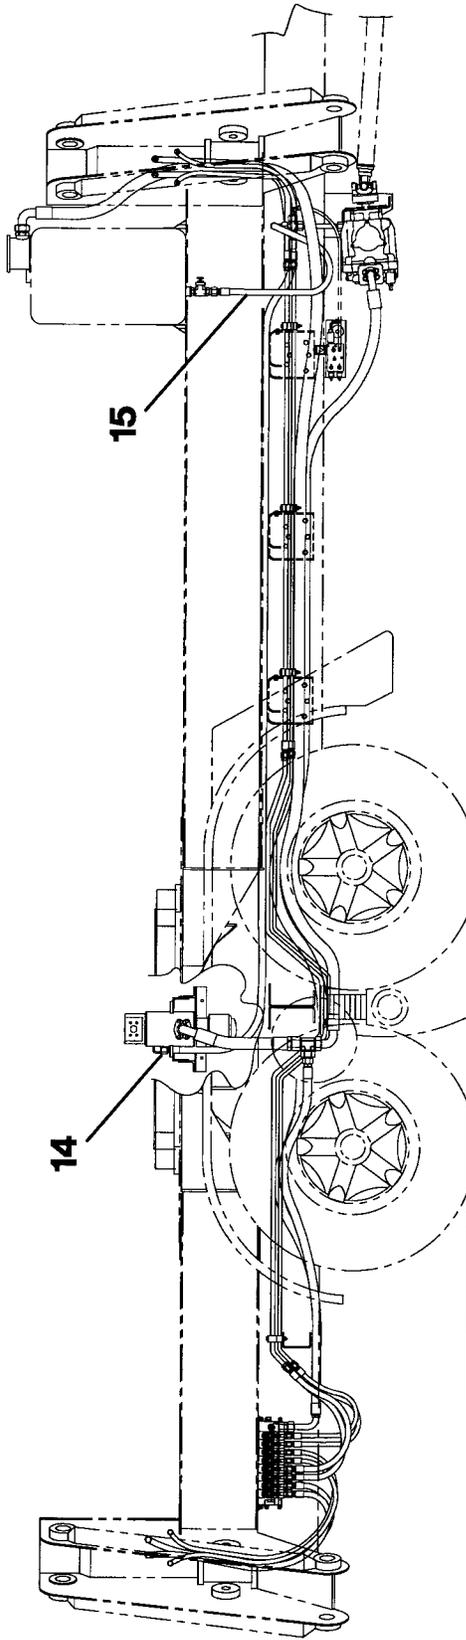


L.S. HOSE FROM CONTROL VALVE TO O/R VALVE. (#502-20868)
 L.S. HOSE FROM CONTROL VALVE TO CENTERPOST. (#502-20867)

500-01651

RESERVOIR INSTALLATION



1.3

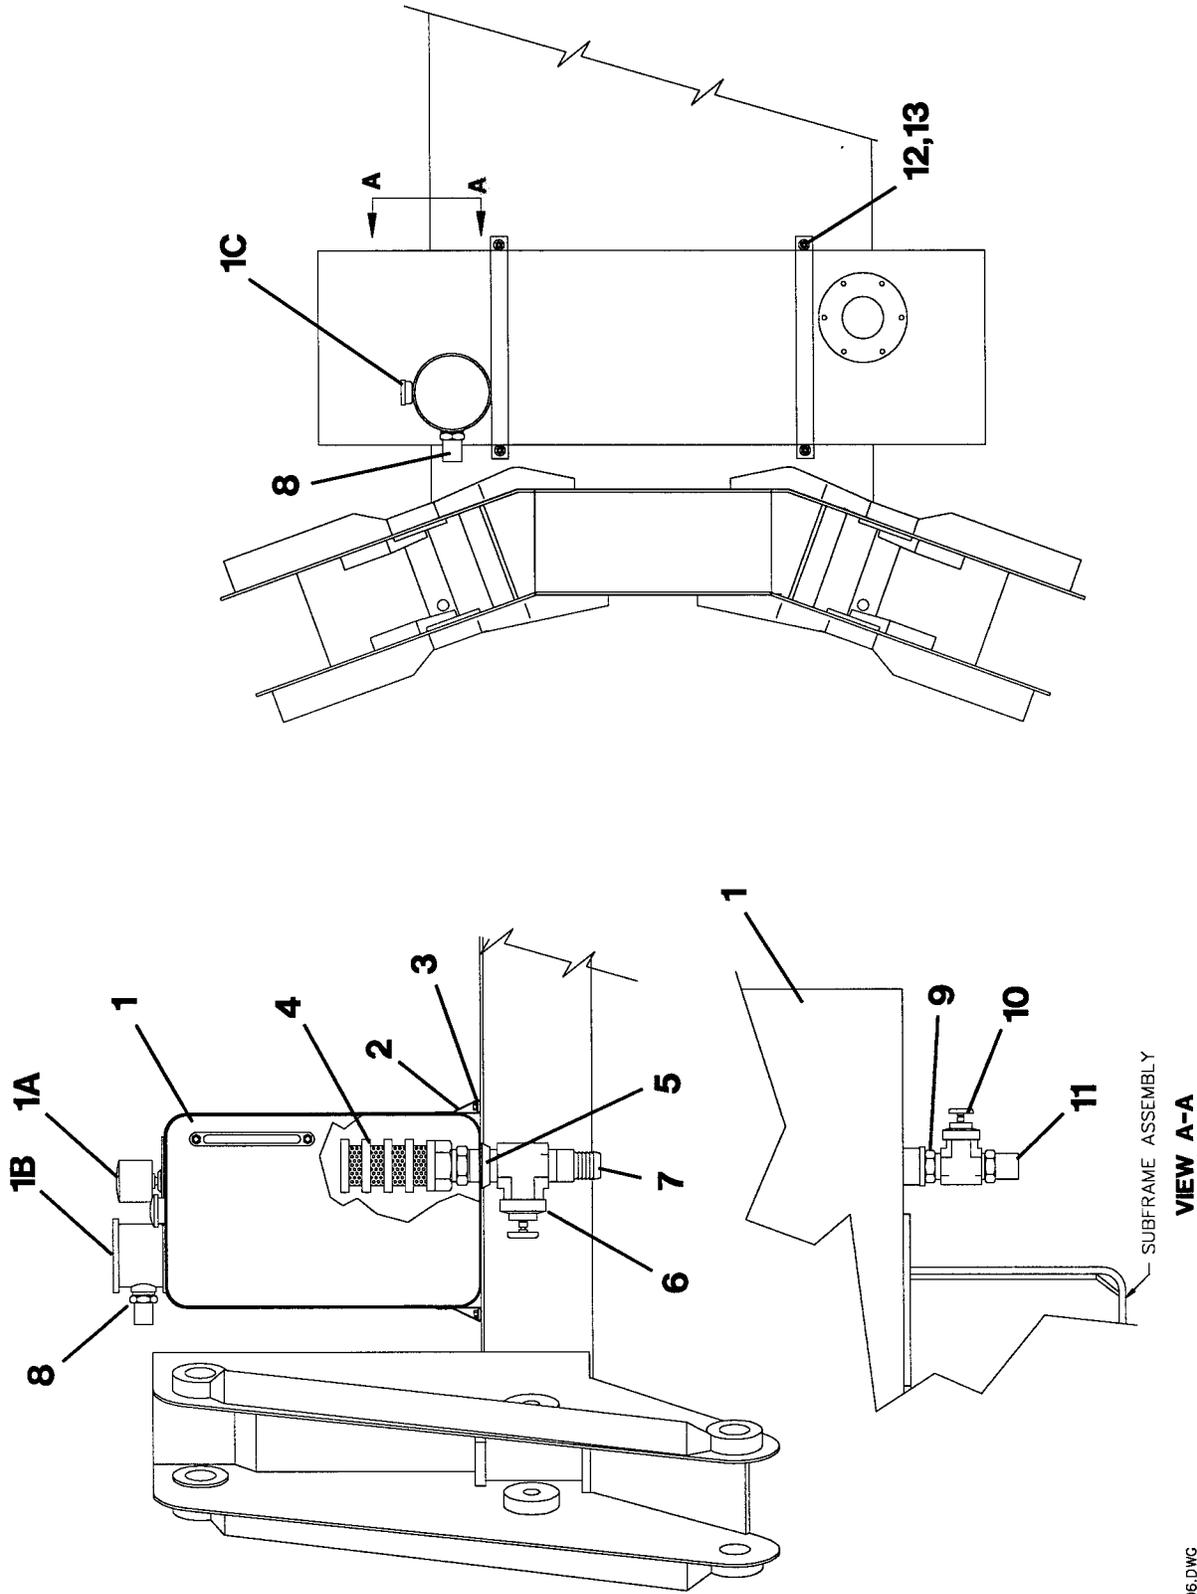

ITEM	PART NUMBER	DESCRIPTION	QTY.
1	875-10207	.RESERVOIR ASSEMBLY	1
1A	875-90138	..FILTER - TANK BREATHER	1
1B	501-01031	..ELEMENT - HYDRAULIC RETURN FILTER	1
1C	935-00113	..GAUGE - FILTER BYPASS	1
2	875-90269	.STRAP - SUPPORT RESERVOIR	2
3	873-03023	.BAR - STRAP SUPPORT	4
4	552-00122	.STRAINER - SUCTION-MAGNETIC	1
5	570-09005	.NIPPLE - CLOSE 2 1/2	1
6	570-90055	.VALVE ASSY - 2 1/2 GATE	1
7	504-00902	.NIPPLE - COMBINATION 2 1/2 NPT	1
8	513-90055	.CONNECTOR - #24 OFS x #24 ORB	1
9	513-70034	.CONNECTOR - 3/4 MPT x #12 ORB	1
10	570-90042	.VALVE ASSY - 3/4 GATE	1
11	513-70032	.CONNECTOR - #12 OFS x 3/4 MPT	1
12	220-02004	.BOLT - HEX HD, 3/8 x 1" LONG	4
13	222-12001	.LOCKWASHER - 3/8 DIA	4
	P-2506.D		

RESERVOIR INSTALLATION


876-00037

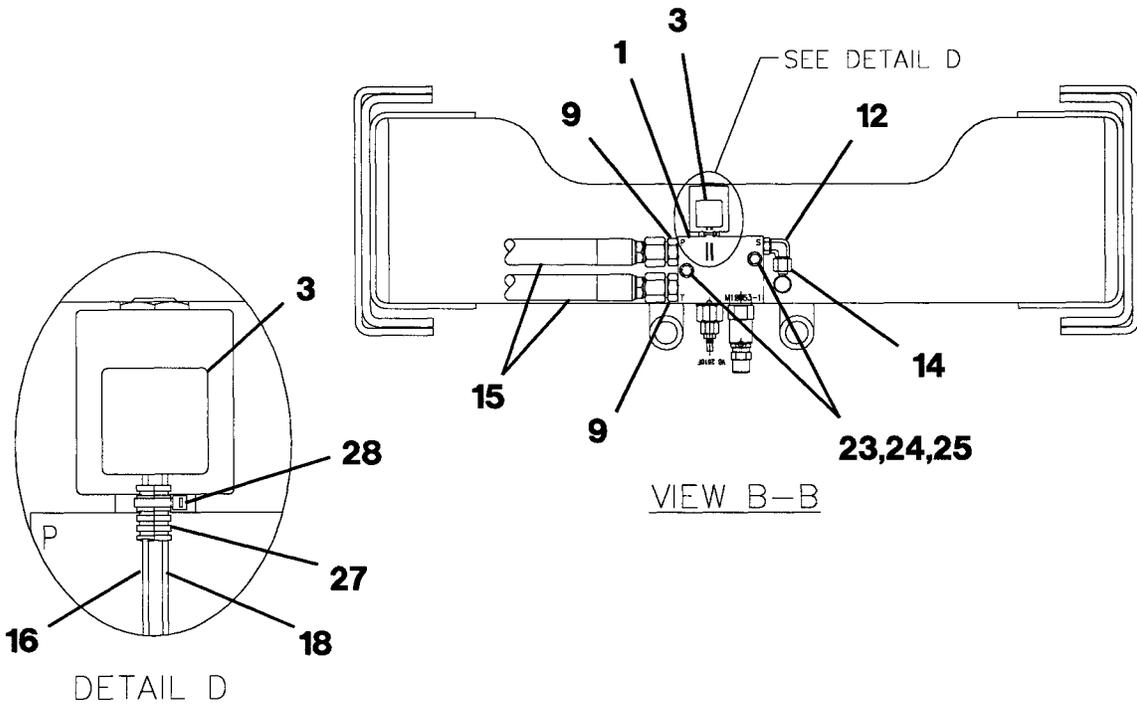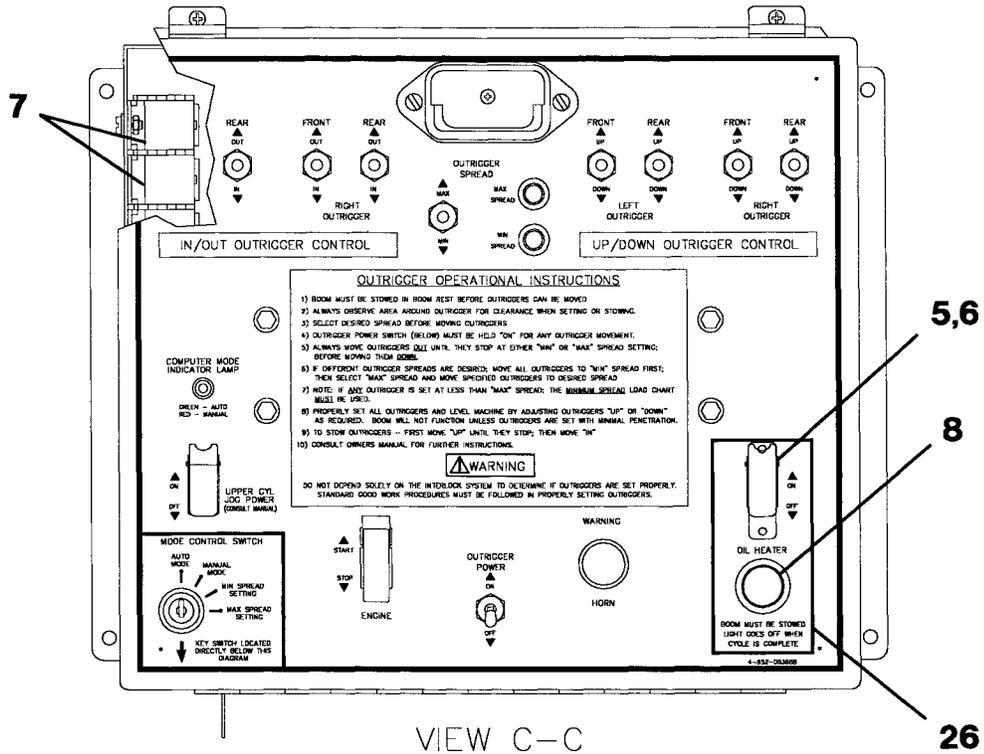

P-2714

500-80001

P-2714A

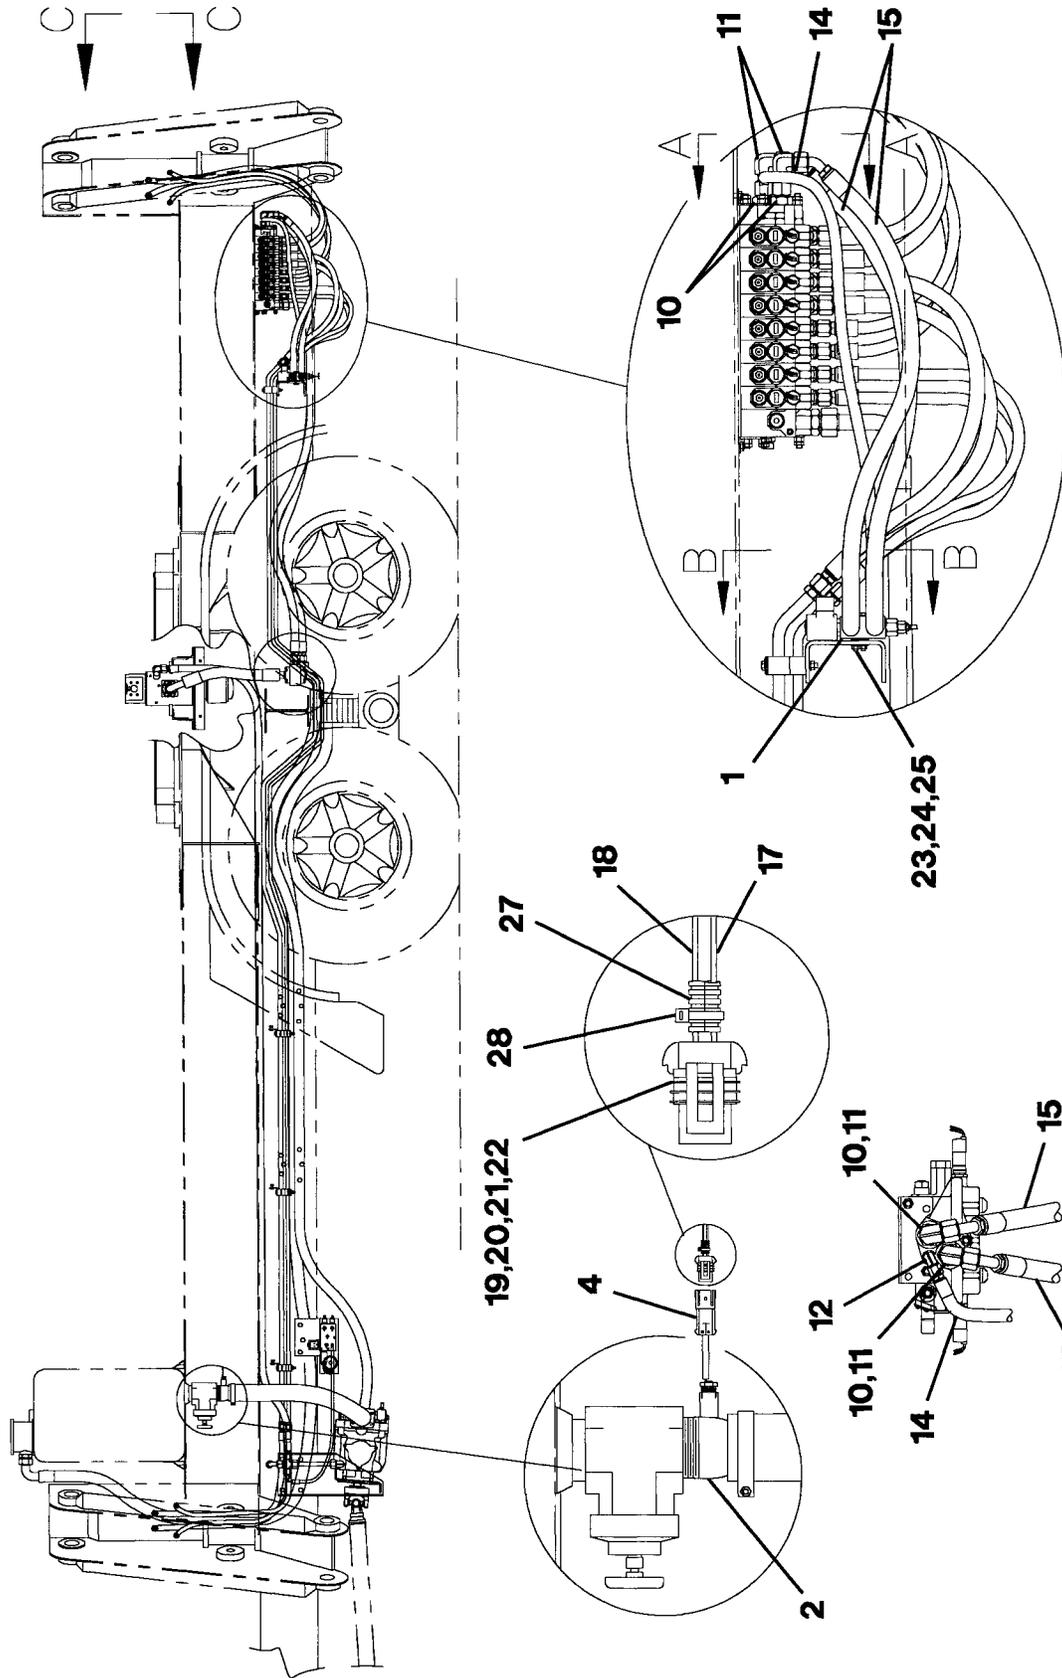

VIEW A-A

500-80001

ITEM	PART NUMBER	DESCRIPTION	QTY.
1	559-00206	.VALVE - OIL PREHEAT ASSEMBLY	1
	551-10126	..COIL - SOLENOID	1
2	519-90129	.NIPPLE - 3/8 TO 2 1/2 WELDMENT	1
3	400-23221	.CONNECTOR - DIN	1
4	400-24003	.SWITCH - OIL PREHEAT TEMPERATURE SUBASSEMBLY	1
5	400-04034	.SWITCH - TOGGLE	1
6	400-04036	.GUARD - SWITCH	1
7	400-05459	.RELAY	2
8	400-09255	.LIGHT - PILOT RED	1
9	513-60012	.CONNECTOR	2
10	513-60009	.CONNECTOR	2
11	514-66003	.ELBOW - 90°	2
12	514-52006	.ELBOW - 90° LONG	1
13	514-53003	.ELBOW - 90°	1
14	502-11172	.HOSE - TRANSDUCER ASSEMBLY	1
15	502-35045	.HOSE - UPPER CYLINDER ASSEMBLY	2
16	400-01379	.WIRE - WHITE	8'
17	400-01376	.WIRE - RED	25'
18	400-01378	.WIRE - BLACK	4'
19	400-23193	.CONNECTOR - 2 WAY	1
20	400-23188	.LOCK - SECONDARY 2 WAY	1
21	400-23197	.TERMINAL - FEMALE	2
22	400-23199	.SEAL - CABLE	2
23	220-00005	.BOLT - 1/4 x 2 1/2"	2
24	222-00006	.WASHER - FLAT 1/4	8
25	221-90001	.NUT - TOPLOCK 1/4	2
26	652-00416	.PLACARD - OIL HEATER	1
27	400-01411	.LOOM - SPLIT	35'
28	400-15086	.TIE - CABLE	4
29	400-24000	.BOX - ELECTRICAL OUTRIGGER CONTROLS	REF
30	400-02243	.RING - TERMINAL	4
31	400-15086	.RING - TERMINAL	2
32	400-02277	.RING - TERMINAL	2
33	400-02202	.CONNECTOR - BUTT	2

P-2714

OIL PREHEAT INSTALLATION

500-80001

ITEM	PART NUMBER	DESCRIPTION	QTY.
1	700-00580	.SUBFRAME WELDMENT	REF
2	709-01460	.PLATE - MAIN SHEAR	2
3	709-01519	.PLATE - AUXILIARY SHEAR	4
4	709-01251	.PLATE - SHEAR	2
5	783-03274	.BAR - SUBFRAME TIEDOWN	4
6	220-09094	.STUD - TIEDOWN (SHORT)	8
7	220-09095	.STUD - TIEDOWN (LONG)	8
8	222-09004	.FLATWASHER - 1" DIA	32
9	221-99013	.HEX NUT - LOCK 1"	16
10	221-29007	.HEX NUT - 1"	16
11	220-06032	.BOLT - HEX HD, 5/8 x 2 1/2" LONG	46
12	222-06010	.FLATWASHER - 5/8 DIA	92
13	221-96002	.HEX NUT - TOPLOCK 5/8	46
14	600-22074	.GUARD - UNDERRIDE WELDMENT	1
15	789-04524	.PLATE - REAR FRAME COVER	1
16	400-09094	.LAMP - RED MARKER	3
17	400-09095	.GROMMET - LAMP MOUNTING	3
18	209-00577	.LEVEL INDICATOR	1
19	209-00444	.GRAB HANDLE	1
20	220-02047	.BOLT - HEX HD, 3/8 x 1" LONG	2
21	221-92001	.NUT - TOPLOCK #8	2
22	223-00102	.SCREW - MACHINE #8 x 3/4" LONG	3
23	221-00003	.NUT #8	3
24	222-10004	.LOCKWASHER - #8 DIA	3
25	698-00040	.BOOM REST INSTALLATION (SEE 1.10)	REF
26	021-40043	.CHANNEL - FRAME REINFORCEMENT	8
27	220-01005	.BOLT - HEX HD, 5/16 x 1" LONG	4
28	222-01001	.FLATWASHER - 5/16 DIA	8
29	221-91001	.HEX NUT - 5/16, TOPLOCK	4
30	221-29005	.HEX NUT - 1-14UNF, JAM	16


P-2536.D

SUBFRAME INSTALLATION LT9000

691-00013

SUBFRAME INSTALLATION LTS8000

1.5

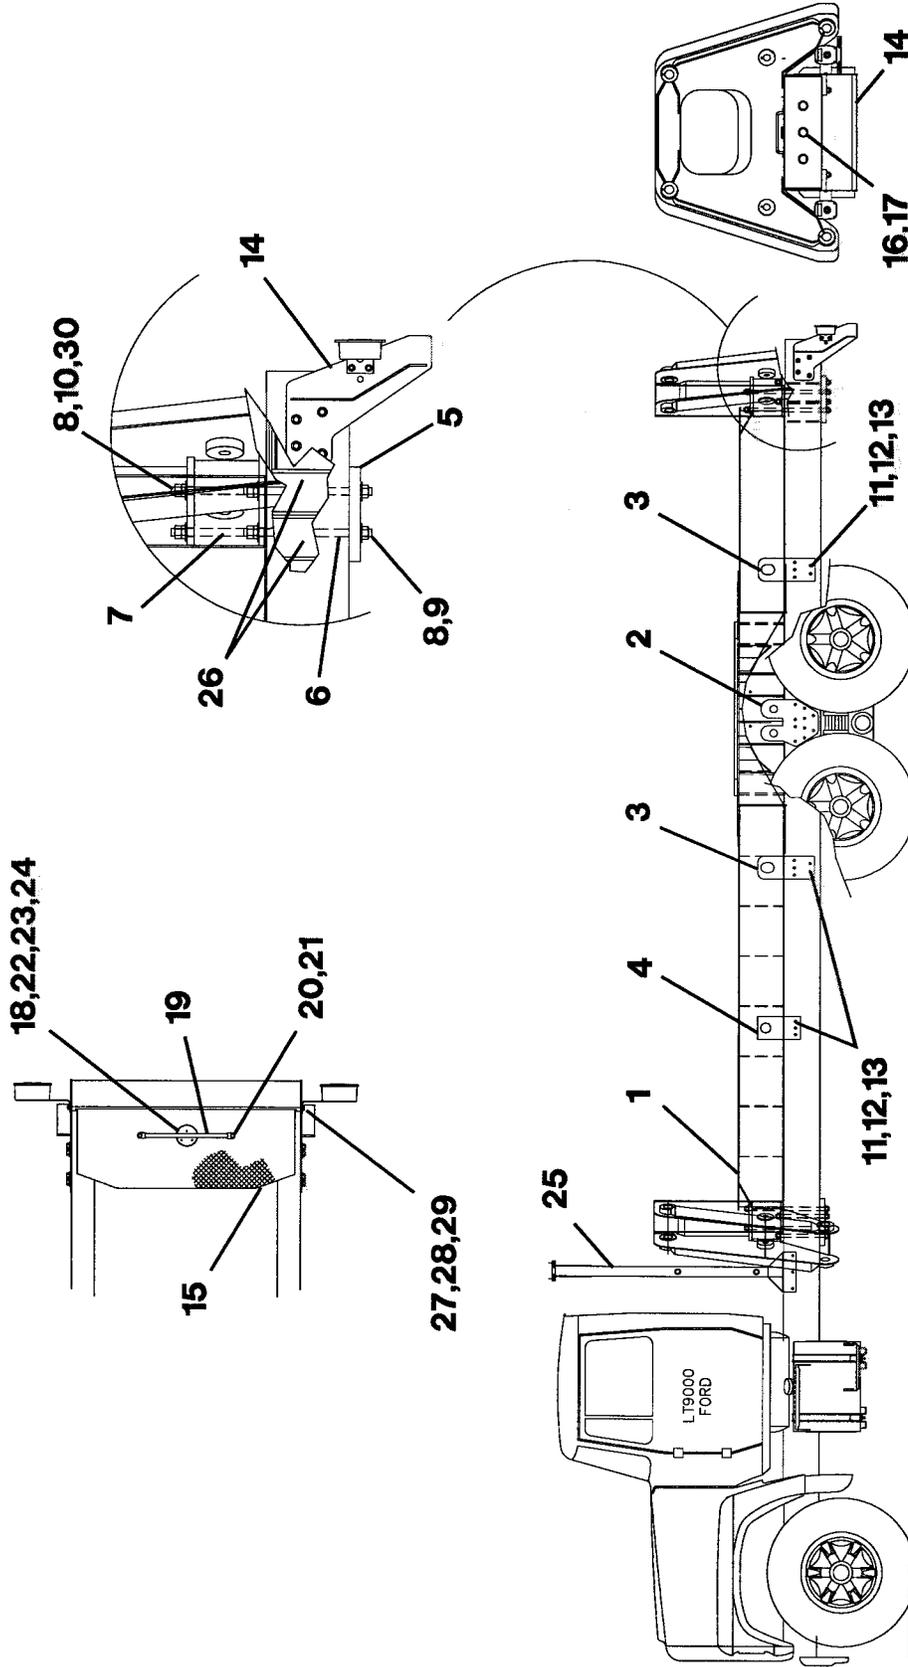


691-00015

ITEM	PART NUMBER	DESCRIPTION	QTY.
1	700-00580	.SUBFRAME WELDMENT	REF
2	709-01542	.PLATE - MAIN SHEAR	2
3	709-01519	.PLATE - AUXILIARY SHEAR	4
4	709-01251	.PLATE - SHEAR	2
5	783-03274	.BAR - SUBFRAME TIEDOWN	4
6	220-09094	.STUD - TIEDOWN (SHORT)	8
7	220-09095	.STUD - TIEDOWN (LONG)	8
8	222-09004	.FLATWASHER - 1" DIA	32
9	221-99013	.HEX NUT - LOCK 1"	16
10	221-29007	.HEX NUT - 1"	16
11	220-06032	.BOLT - HEX HD, 5/8 x 2 1/2" LONG	46
12	222-06010	.FLATWASHER - 5/8 DIA	92
13	221-96002	.HEX NUT - TOPLOCK 5/8	46
14	600-22074	.GUARD - UNDERRIDE WELDMENT	1
15	789-04639	.PLATE - REAR FRAME COVER	1
16	400-09094	.LAMP - RED MARKER	3
17	400-09095	.GROMMET - LAMP MOUNTING	3
18	209-00577	.LEVEL INDICATOR	1
19	209-00444	.GRAB HANDLE	1
20	220-02047	.BOLT - HEX HD, 3/8 x 1" LONG	2
21	221-92001	.NUT - TOPLOCK #8	2
22	223-00102	.SCREW - MACHINE #8 x 3/4" LONG	3
23	221-00003	.NUT #8	3
24	222-10004	.LOCKWASHER - #8 DIA	3
25	698-00040	.BOOM REST INSTALLATION (SEE 1.10)	REF
26	021-40042	.CHANNEL - FRAME REINFORCEMENT	8
27	220-01005	.BOLT - HEX HD, 5/16 x 1" LONG	4
28	222-01001	.FLATWASHER - 5/16 DIA	8
29	221-91001	.HEX NUT - 5/16, TOPLOCK	4
30	221-29005	.HEX NUT - 1-14UNF, JAM	16

P-2537.D

SUBFRAME INSTALLATION LTS8000

AIR THROTTLE INSTALLATION

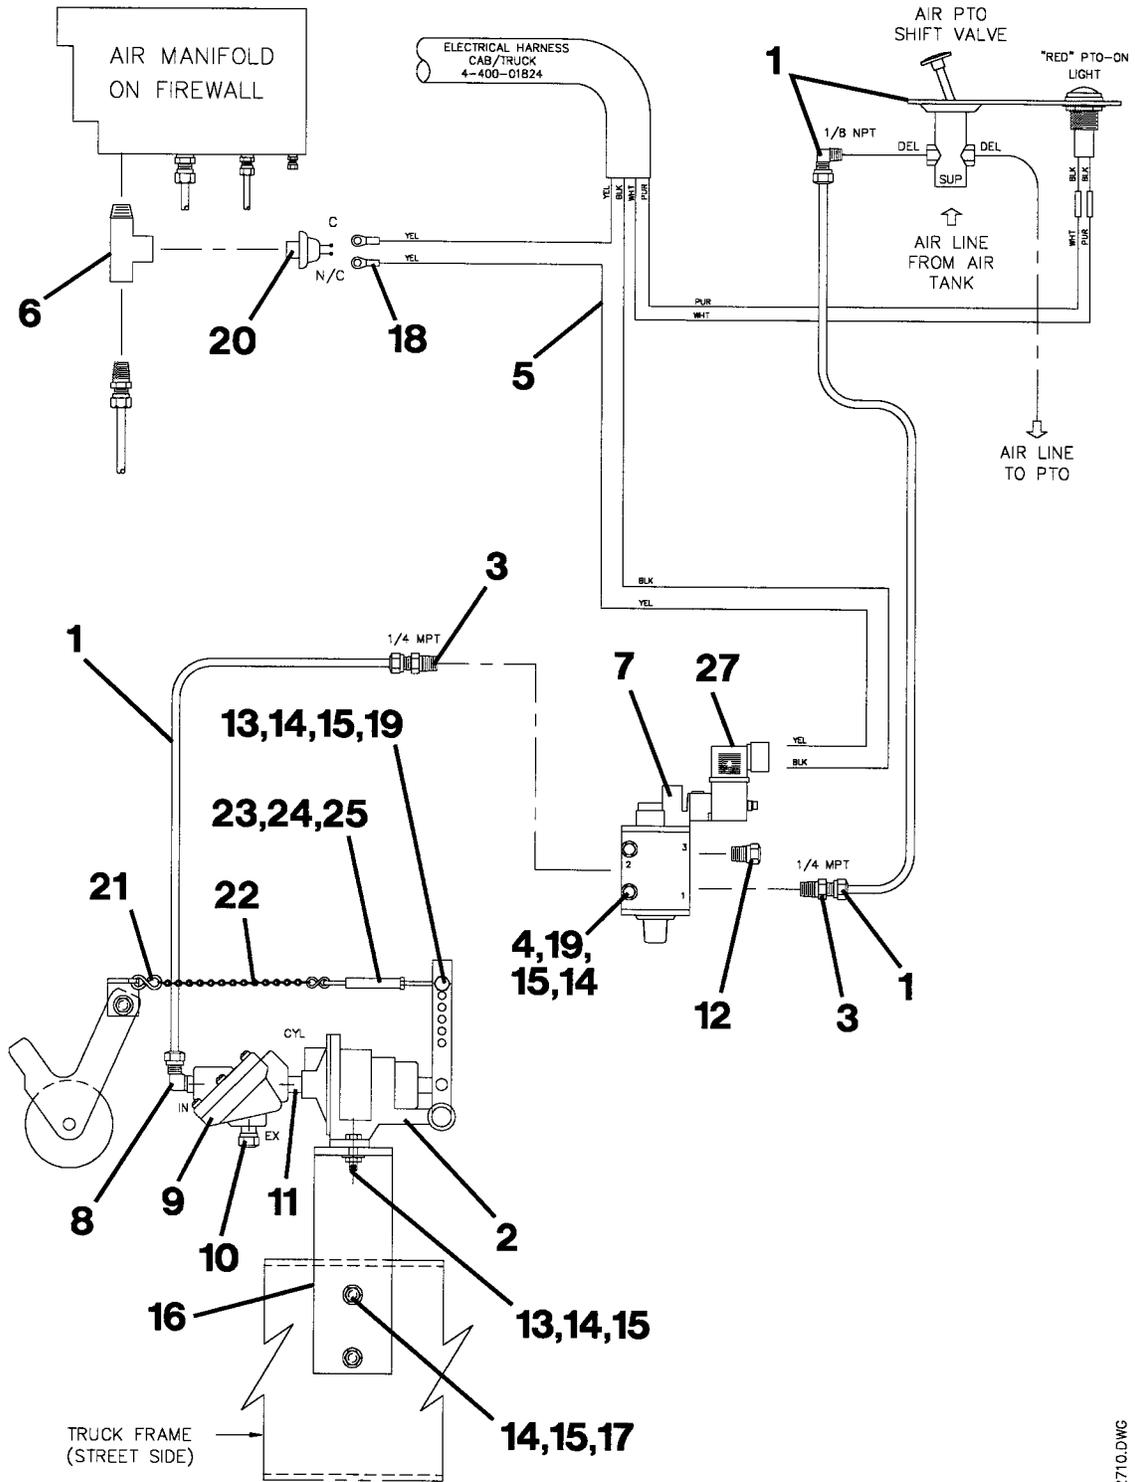

300-30091


ITEM	PART NUMBER	DESCRIPTION	QTY.
1	350-00163	.PTO KIT - MUNCIE	REF
2	300-00332	.THROTTLE AIR CYLINDER POSITIONER	1
3	300-32002	.CONNECTOR - 1/4 MPT x 1/4 TUBE	2
4	220-00006	.BOLT 1/4-20NC x 1 3/4" LONG	2
5	400-01377	.WIRE - YELLOW 16GA	1FT
6	570-50027	.STREET TEE - 1/4 NPT, BRASS	1
7	300-00309	.AIR SOLENOID VALVE - 12V 2POS 3WAY	1
8	300-32015	.90° ELBOW - 1/4 MPT x 1/4 TUBE	1
9	300-00464	.QUICK RELEASE AIR VALVE	1
10	300-00435	.AIR VENT BREATHER - 3/8 NPT	1
11	570-01017	.BRASS CLOSE NIPPLE - 1/4 NPT	1
12	300-00418	.BREATHER VENT - 1/4 OD	1
13	220-00001	.BOLT 1/4-20NC x 1" LONG	3
14	222-00006	.FLATWASHER - 1/4 DIA	10
15	221-90001	.LOCKNUT 1/4-20NC	7
16	785-01679	.AIR THROTTLE POSITIONER BRACKET	1
17	220-00008	.BOLT 1/4-20NC x 1 1/2" LONG	2
18	400-02243	.RING EYELET - 14/16 GA #10	2
19	222-10005	.LOCKWASHER 1/4 DIA	3
20	400-05381	.SWITCH - PRESSURE 0-60PSI	1
21	209-00359	.S-HOOK - #812	1
22	205-00005	.CHAIN - #16 JACK	1FT
23	209-00360	.S-HOOK - #813	1
24	209-00402	.TURNBUCKLE	1
25	221-00003	.HEX NUT #8-32NC	1
26	400-01411	.WIRE SPLIT LOOM - 1/4 DIA	12FT
27	400-23300	.RECTIFIER - SCHOITKY	1

P-2710

AIR THROTTLE INSTALLATION

GOVERNOR INSTALLATION

1.7

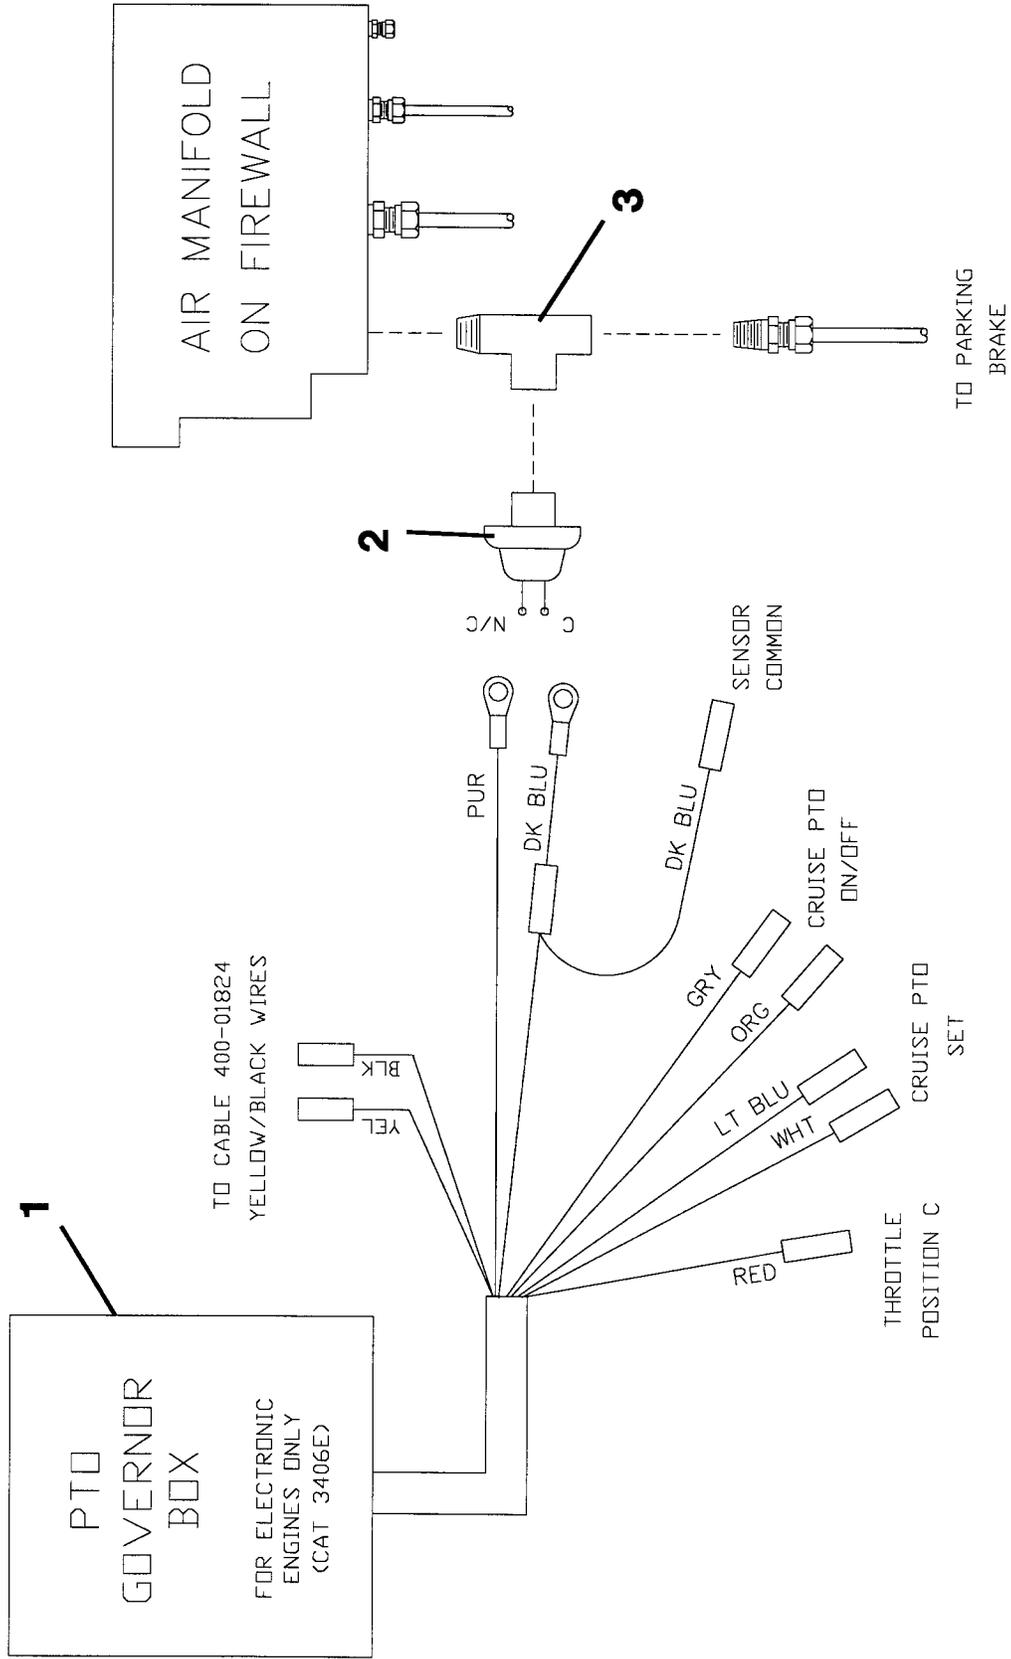


600-40390

ITEM	PART NUMBER	DESCRIPTION	QTY.
1	400-00947	.ELECTRICAL BOX - PTO GOVERNOR	1
2	400-05381	.SWITCH - PRESSURE 0-60PSI	1
3	570-50027	.STREET TEE - 1/4 NPT BRASS	1
*4	502-30640	.HOSE ASSY - FUEL COOLER SUPPLY	2
*5	514-65001	.ELBOW - 90° , 1/4 TUBE SWIVEL NUT	2
*6	785-01851	.ANGLE - FUEL COOLER SUPPORT, UPPER	1
*7	785-01853	.ANGLE - FUEL COOLER SUPPORT, LOWER	1
	P-2711		
	* NOT SHOWN		

TC-75105 TRUCK CRANE

Product: 1995 Terex TC75105 Series Truck Crane Workshop Parts Manual
Full Download: <https://www.arepairmanual.com/downloads/1995-terex-tc75105-series-truck-crane-workshop-parts-manual/>

OUTRIGGER INSTALLATION

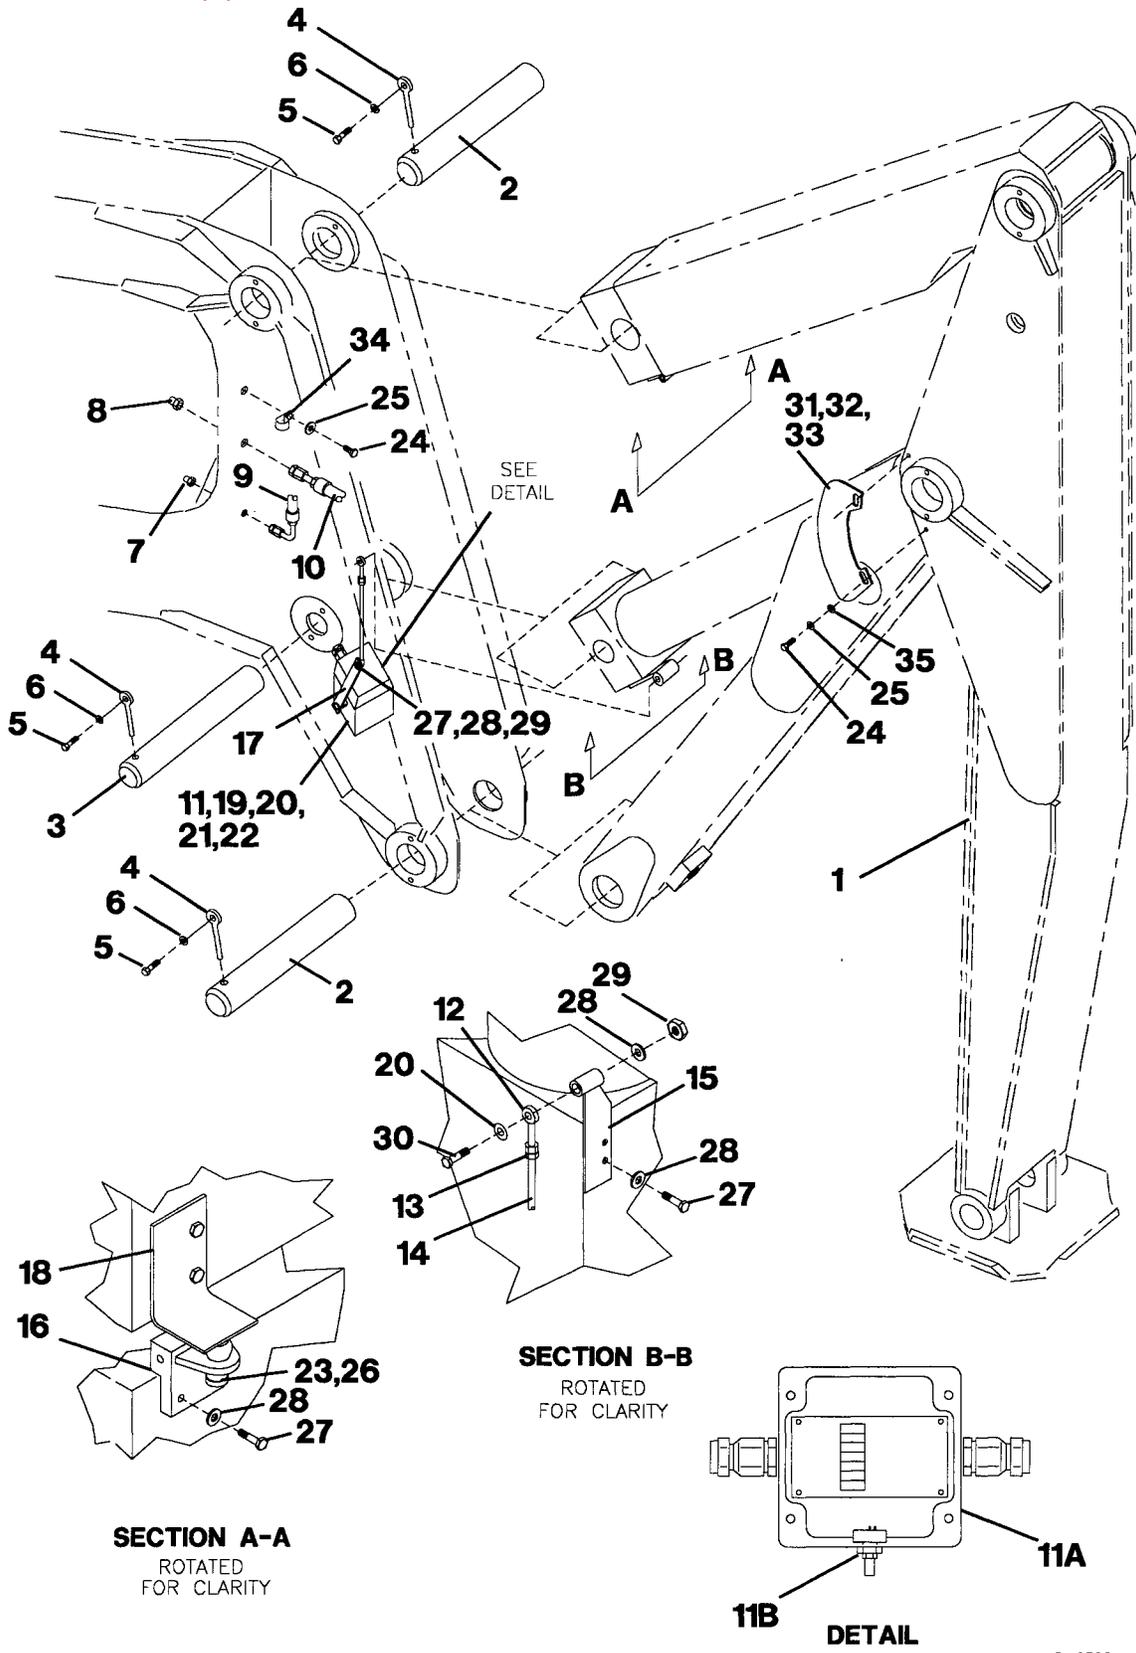

P-2508

765-00023