

Product: 2006 TEREX TA30RS Articulated Truck Workshop Parts Manual[PN15503101]

Full Download: <https://www.arepairmanual.com/downloads/2006-terex-ta30rs-articulated-truck-workshop-parts-manualpn15503101/>



TEREX

Publication Part Number: **15503101**

PARTS BOOK

CLICK HERE FOR
TRACTOR
TABLE OF CONTENTS


CLICK HERE FOR
TRACTOR OPTIONAL
TABLE OF CONTENTS

CLICK HERE FOR
TRAILER
TABLE OF CONTENTS

CLICK HERE FOR
TRAILER OPTIONAL
TABLE OF CONTENTS

CLICK HERE
TO RETURN TO MAIN
LIBRARY INDEX

P11890

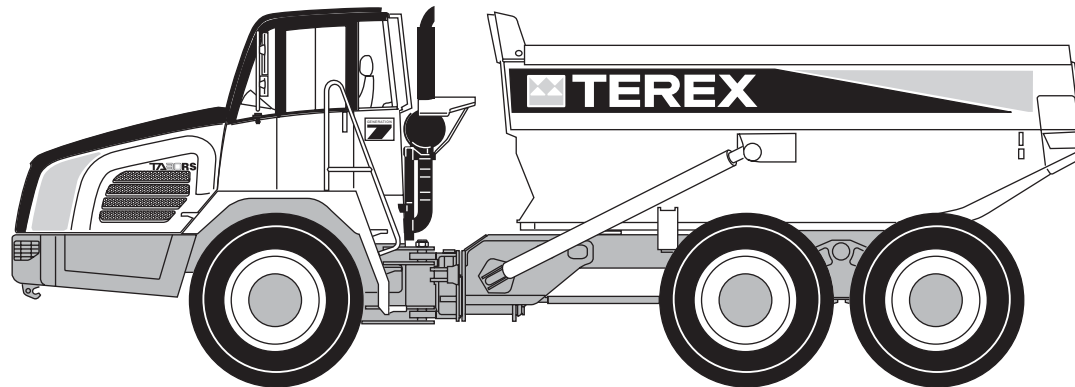

TA30RS Articulated Truck

(Cum QSM11 T3-335 HP Engine, ZF 6WG-260 Trans & NAF Axles)

Serial Nos. A9081011 and above

Date: June 2006

Sample of manual. Download All 500 pages at:

<https://www.arepairmanual.com/downloads/2006-terex-ta30rs-articulated-truck-workshop-parts-manualpn15503101/>

Revised: 15th March 2010

Product: 2006 TEREX TA30RS Articulated Truck Workshop Parts Manual[PN15503101]

Full Download: <https://www.arepairmanual.com/downloads/2006-terex-ta30rs-articulated-truck-workshop-parts-manualpn15503101/>

<https://www.arepairmanual.com/downloads/2006-terex-ta30rs-articulated-truck-workshop-parts-manualpn15503101/>

THIS PAGE IS INTENTIONALLY LEFT BLANK

Sample of manual. Download All 500 pages at:

<https://www.arepairmanual.com/downloads/2006-terex-ta30rs-articulated-truck-workshop-parts-manualpn15503101/>



WARRANTY ON PARTS AND ATTACHMENTS

Terex Equipment Limited warrants that for a period of six months or 1000 hours, whichever comes first, after the sale of new Terex replacement parts or attachments by an authorised Terex dealer it will repair, or at its option, replace any defective or malfunctioning part or attachment. This warranty covers only malfunctions resulting from defects in material or workmanship.

This warranty does not cover malfunctions resulting from negligence, alteration, accident or overloading; use for a purpose for which the part or attachment is not designed or approved by Terex; loss of time, inconvenience, loss of use of the vehicle or other consequential damages; or labour for removal or reinstallation of defective or malfunctioning parts or attachments.

Repairs or replacements qualifying under this warranty will be performed by any authorised Terex dealer within a reasonable time following delivery of the malfunctioning part or attachment to the dealer's place of business.

Defective or malfunctioning parts or attachments must be delivered to an authorised Terex dealer's place of business during regular business hours for warranty repairs or replacements. The dealer must be furnished with the purchaser's copy of the sales slip or repair order to validate date of purchase.

* * * * *

SOLE WARRANTY

This is the only express warranty applicable to new Terex parts and attachments sold by Terex dealers and Terex neither assumes nor authorises anyone to assume for it any other obligation or liability in connection with such parts or attachments.

THIS PAGE IS INTENTIONALLY LEFT BLANK

INSTRUCTIONS FOR USE OF TEREX PARTS BOOK

This Parts Book is divided into Major Sections which cover components corresponding to specific areas of the machine.

Printed at the top left hand corner of each Parts Page is an Index Code which includes three numbers - the first of these relates to a Major Section, the second indicates a Sub-section within a Major Section and the last the model PLI number. Certain Major Sections may not apply to the particular model covered in this Parts Book and, consequently, will be omitted.

An illustrated Index page shows all the Major Component Section numbers included in the book. For example -

SECTION 100 - CHASSIS

SECTION 140 - FRONT AXLE GROUP

SECTION 230 - BODY HOIST SYSTEM etc.

Major Component Sections are listed in the 'Table Of Contents' pages together with Sub-section headings.
For example to locate the serviceable items of a Steering Cylinder -

1. The Table of Contents shows the steering components to be in Major Section 220.
2. The steering cylinder is listed in Major Section 220, Sub-section 0120
3. Select the Parts Page Code that applies to the unit Serial number for which parts are needed and locate the Page with reference number.

EXAMPLE - 220-0120.

SERIAL NUMBERS - Each Parts Book covers a particular range of unit Serial Numbers.

It is important that unit Serial Numbers are quoted on all orders for Parts.

PARTS LISTS - Parts Forms usually consist of detailed parts information listed on one page together with a parts illustration on the opposite page. The parts list is printed in the order of the reference numbers shown on the parts illustration. The first column lists Note Letters; the second lists the reference numbers; the third shows quantity required and the fourth gives the parts descriptions. Parts which are part of an assembly have their descriptions indented beneath the assembly description.

ILLUSTRATIONS - These show typical assemblies and individual piece parts. They are intended for general reference only and may not always show exact details of parts. Parts are identified on each illustration with an item number. Note the item number of the part required and locate it in the parts list. The part number opposite the item number is the part to order.

INDENTATIONS - Parts which are indented under another part are Sub-groups of a Major Assembly or Sub-assembly. Parts which are not indented are major assemblies or individual component parts which do not belong to a major assembly.

EXAMPLE - 1 9052564 Pump Assy.
 2 9058512 . Shaft
 3 9024169 . Ring
 4 9058132 . Control Assy.
 5 9058135 . . Spring
 6 9072162 Gasket

- If you order Item 1, you will receive Items 1 - 5.
- If you order Item 4, you will receive Items 4 and 5.
- If you order Item 6, you will receive only Item 6.

NOTES - Whenever there is an alphabetical symbol to the left of the item number, refer to the corresponding note at the bottom of the form for information regarding ordering or application of the particular part number(s) noted.

ABBREVIATIONS - The abbreviations in this book have the following meanings -

Amps Amperes
As R As Required
Assy Assembly
Brkt Bracket
Cad-Pltd Cadmium Plated
Comm Commencement of production
E.S.N Elastic Stop Nut
Ftgs Fittings

Hsg Housing
I.D Inside Diameter
L.H Left Hand
L.W Lockwasher
Lg Long
Lkg Linkage
Mtg Mounting
N.C Note Code

N.I Not Illustrated
N.L.A No Longer Available
N.S.S Not Sold Separately
O.D Outside Diameter
Pr Pair
P.T.O Power-Take-Off
R.H Right Hand
Std Standard



Articulated Truck



TEREX

TRACTOR SECTIONS



CHASSIS

100



ENGINE

110



TRANSMISSION

120



DRIVELINE

130



FRONT AXLE

140



BRAKE PARTS

165



SUSPENSION SYSTEM

180



ELECTRICAL SYSTEM

190



FUEL SYSTEM

200



COOLING SYSTEM

210



MAIN HYDRAULIC VALVE

215



STEERING SYSTEM

220



BODY HOIST SYSTEM

230



BRAKING SYSTEM

250



CAB

260



DECALS

290



MISCELLANEOUS

300




TABLE OF CONTENTS FOR MODEL TA30RS T3 TRACTOR

FROM SERIAL NO A9081011

REVISED 03/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<u>SECTION 100</u>	<u>CHASSIS</u>		
100-0010-9091	CHASSIS		
100-0030-9091	SOUND INSULATION		R1 11/08
100-0040-9091	HOOD AND MOUNTING		R2 06/08
100-0070-9091	FENDERS AND MOUNTING	A9081011 TO A9801058	R1 09/07
100-0070-9091	FENDERS AND MOUNTING	A9081059	R1 03/10
100-0135-9091	ROCK AND SUMP GUARDS		
<u>SECTION 110</u>	<u>ENGINE</u>		
110-0020-9091	ENGINE ORDERING INSTRUCTIONS		
110-0030-9091	ENGINE AND MOUNTING		R1 11/08
110-0050-9091	AIR CLEANER		
110-0060-9091	AIR CLEANER PIPES AND HOSES		
110-0070-9091	EXHAUST AND MOUNTING		R4 03/09
<u>SECTION 120</u>	<u>TRANSMISSION</u>		
120-0010-9091	TRANSMISSION MOUNTING		R1 10/07
120-0020-9091	TRANSMISSION BREAKDOWN		
120-0070-9091	SHIFT CONTROL	A9081011 TO A9801058	R1 10/06
120-0070-9091	SHIFT CONTROL	A9081059	R1 03/10
120-0100-9091	FILTER		
120-0110-9091	OIL LINES-TRANSMISSION		R1 10/06
120-0220-9091	OIL PUMP		
120-0390-9091	TORQUE CONVERTER		
120-0400-9091	LUBRICATION PIPES		
120-0410-9091	INDUCTIVE TRANSMITTER		
120-0430-9091	ELECTRIC SHIFT CONTROL VALVE		
120-0440-9091	GEARSHIFT		
120-0450-9091	GEARBOX HOUSING		
120-0460-9091	CLUTCH ASSEMBLY KV+K1		
120-0470-9091	CLUTCH ASSEMBLY KR+K2		
120-0480-9091	CLUTCH ASSEMBLY K3+K4		
120-0500-9091	PTO MAIN HYDRAULIC PUMP		
120-0515-9091	EMERGENCY STEERING PUMP		
120-0520-9091	INPUT-DRIVE ASSEMBLY		
120-0530-9091	LAYSHAFT GEARING		
120-0540-9091	DIFFERENTIAL		R1 12/09
120-0625-9091	TEMPERATURE SENSOR		
120-0900-9091	LOOSE PARTS-TRANSMISSION		R1 10/06

TABLE OF CONTENTS FOR MODEL TA30RS T3 TRACTOR		FROM SERIAL NO A9081011	REVISED 03/10
SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<u>SECTION 130</u>	<u>DRIVELINE</u>		
130-0010-9091	FRONT DRIVELINE		R1 01/09
<u>SECTION 140</u>	<u>FRONT AXLE</u>		
140-0010-9091	AXLE COMPLETE-FRONT	A9081011 TO A9081051	
140-0010-9091	AXLE COMPLETE-FRONT	A9081052 TO A9081054	06/08
140-0010-9091	AXLE COMPLETE-FRONT	A9081055	06/08
140-0020-9091	AXLE GROUP-FRONT	A9081011 TO A9081051	
140-0020-9091	AXLE GROUP-FRONT	A9081052 TO A9081054	06/08
140-0020-9091	AXLE GROUP-FRONT	A9081055	06/08
140-0030-9091	PLANETARY GEARING-FRONT	A9081011 TO A9081051	
140-0030-9091	PLANETARY GEARING-FRONT	A9081052 TO A9081054	06/08
140-0030-9091	PLANETARY GEARING-FRONT	A9081055	R1 12/09
140-0040-9091	WHEEL, RIM AND TYRE-FRONT		R1 09/07
140-0060-9091	DIFFERENTIAL-FRONT	A9081011 TO A9081051	R1 02/08
140-0060-9091	DIFFERENTIAL-FRONT	A9081052 TO A9081054	06/08
140-0060-9091	DIFFERENTIAL-FRONT	A9081055	06/08
140-0100-9091	DIFF-LOCK CONTROLS-FRONT		R2 06/08
<u>SECTION 165</u>	<u>BRAKE PARTS</u>		
165-0050-9091	BRAKE GUARDS	A9081017	02/09
<u>SECTION 180</u>	<u>SUSPENSION SYSTEM</u>		
180-0020-9091	FRONT SUSPENSION		R3 01/09
<u>SECTION 190</u>	<u>ELECTRICAL SYSTEM</u>		
190-0010-9091	TERMINALS		
190-0011-9091	CONNECTORS		
190-0030-9091	CABLES/HARNESSES-CAB	A9081011 TO A9081054	
190-0030-9091	CABLES/HARNESSES-CAB	A9081055	R1 03/10
190-0040-9091	CABLES/HARNESSES-CHASS/ENG		R3 04/09
190-0070-9091	BATTERY AND CABLES		
190-0080-9091	BATTERY MOUNTING		R2 12/09
190-0085-9091	ECU-HYD.SYSTEM MONITORING		R1 10/06
190-0100-9091	ELECTRICAL LIGHTING SYSTEM		R1 10/06
190-0110-9091	ALTERNATOR		
190-0120-9091	STARTER		
190-0270-9091	SWITCHES AND SENSORS		
190-0300-9091	RADIO CASSETTE AND SPEAKERS		
190-0310-9091	ELECTRICAL HORN		
190-0330-9091	CCTV REAR VIEW SYSTEM		04/09

TABLE OF CONTENTS FOR MODEL TA30RS T3 TRACTOR

FROM SERIAL NO A9081011

REVISED 03/10


SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<u>SECTION 200</u>	<u>FUEL SYSTEM</u>		
200-0010-9091	FUEL TANK AND MOUNTING	A9081011 TO A9081058	
200-0010-9091	FUEL TANK AND MOUNTING	A9081059	03/10
200-0040-9091	FUEL LINES		
200-0050-9091	ACCELERATOR LINKAGE		R1 06/08
<u>SECTION 210</u>	<u>COOLING SYSTEM</u>		
210-0010-9091	RADIATOR ASSEMBLY	A9081011 TO A9081029	
210-0010-9091	RADIATOR ASSEMBLY	A9081030	
210-0020-9091	RADIATOR MOUNTING		
210-0030-9091	RADIATOR PIPING		R1 09/09
210-0035-9091	CHARGE AIR COOLER & PIPING		R1 08/08
210-0040-9091	RADIATOR HEADER TANK & HOSES	A9081011 TO A9081058	R2 09/09
210-0040-9091	RADIATOR HEADER TANK & HOSES	A9081059	03/10
210-0060-9091	OIL COOLER AND PIPING-TRANS		
210-0061-9091	TRANS OIL COOLER MOUNTING		
210-0065-9091	OIL COOLER-TRANSMISSION		R4 09/09
<u>SECTION 215</u>	<u>MAIN HYDRAULIC VALVE</u>		
215-0050-9091	MAIN HYDRAULIC VALVE ASSEMBLY		
<u>SECTION 220</u>	<u>STEERING SYSTEM</u>		
220-0010-9091	STEERING LINES	A9081011 TO A9081056	R3 03/09
220-0010-9091	STEERING LINES	A9081057	R1 09/09
220-0090-9091	STEERING VALVE		
220-0120-9091	STEERING CYLINDER	A9081011 TO A9081019	
220-0120-9091	STEERING CYLINDER	A9081020	R1 04/07
220-0230-9091	STEERING COLUMN MOUNTING		
<u>SECTION 230</u>	<u>BODY HOIST SYSTEM</u>		
230-0020-9091	LINES AND FITTINGS-BODY HOIST		
230-0040-9091	TANK AND MOUNTING-BODY HOIST		R1 08/08
	230-0050-9091	PUMP-BODY HOIST	
230-0081-9091	JOYSTICK-BODY CONTROL		
<u>SECTION 250</u>	<u>BRAKING SYSTEM</u>		
250-0020-9091	BRAKE LINES-HYDRAULIC	A9081011 TO A9081029	R1 10/06
250-0020-9091	BRAKE LINES-HYDRAULIC	A9081030 TO A9081052	09/07
250-0020-9091	BRAKE LINES-HYDRAULIC	A9081053	03/09
250-0060-9091	BRAKE ACCUMULATOR		
250-0070-9091	TREADLE VALVE	A9081011 TO A9081054	R1 01/08
250-0070-9091	TREADLE VALVE	A9081055	08/08

TABLE OF CONTENTS FOR MODEL TA30RS T3 TRACTOR

FROM SERIAL NO A9081011

REVISED 03/10

SECT-PAGE-PLI	DESCRIPTION	SERIAL NO. EFFECTIVITY	REVISION AND DATE
<u>SECTION 260</u>	<u>CAB</u>		
260-0010-9091	CAB ASSEMBLY		R2 08/08
260-0015-9091	CAB MOUNTING	A9081011 TO A9081054	R1 10/07
260-0015-9091	CAB MOUNTING	A9081055 TO A908 TBA	06/08
260-0015-9091	CAB MOUNTING	A908 TBA	04/09
260-0018-9091	CAB TILT MECHANISM		R1 01/09
260-0030-9091	CAB DOOR-LEFT HAND		R1 09/07
260-0080-9091	SWITCHES AND INSTRUMENTS	A9081011 TO A9081058	R5 04/09
260-0080-9091	SWITCHES AND INSTRUMENTS	A9081059	03/10
260-0090-9091	SEAT-DRIVER	A9081011 TO A9081029	R1 11/08
260-0090-9091	SEAT-DRIVER	A9081030	R1 04/09
260-0110-9091	SEAT-INSTRUCTOR		R1 03/10
260-0130-9091	AIR CONDITIONER/HEATER		
260-0140-9091	HEATER LINES AND WIRING		R1 04/09
260-0145-9091	AIR CONDITIONER LINES	A9081011 TO A9081029	
260-0145-9091	AIR CONDITIONER LINES	A9081030	10/07
260-0190-9091	WINDSCREEN WASHER		
<u>SECTION 290</u>	<u>DECALS</u>		
290-0010-9091	DECALS-ENGLISH	A9081011 TO A9081019	
290-0010-9091	DECALS-ENGLISH (ISO)	A9081020	R3 03/10
290-0100-9091	WALKWAY SURFACES (ANTI-SLIP)		R1 03/10
<u>SECTION 300</u>	<u>MISCELLANEOUS</u>		
300-0040-9091	MULTI-TUBE CLAMPS AND HARDWARE		
300-0045-9091	POLYPROPELENE CLAMPS		
300-0200-9091	FILTERS & ELEMENT KITS		11/08

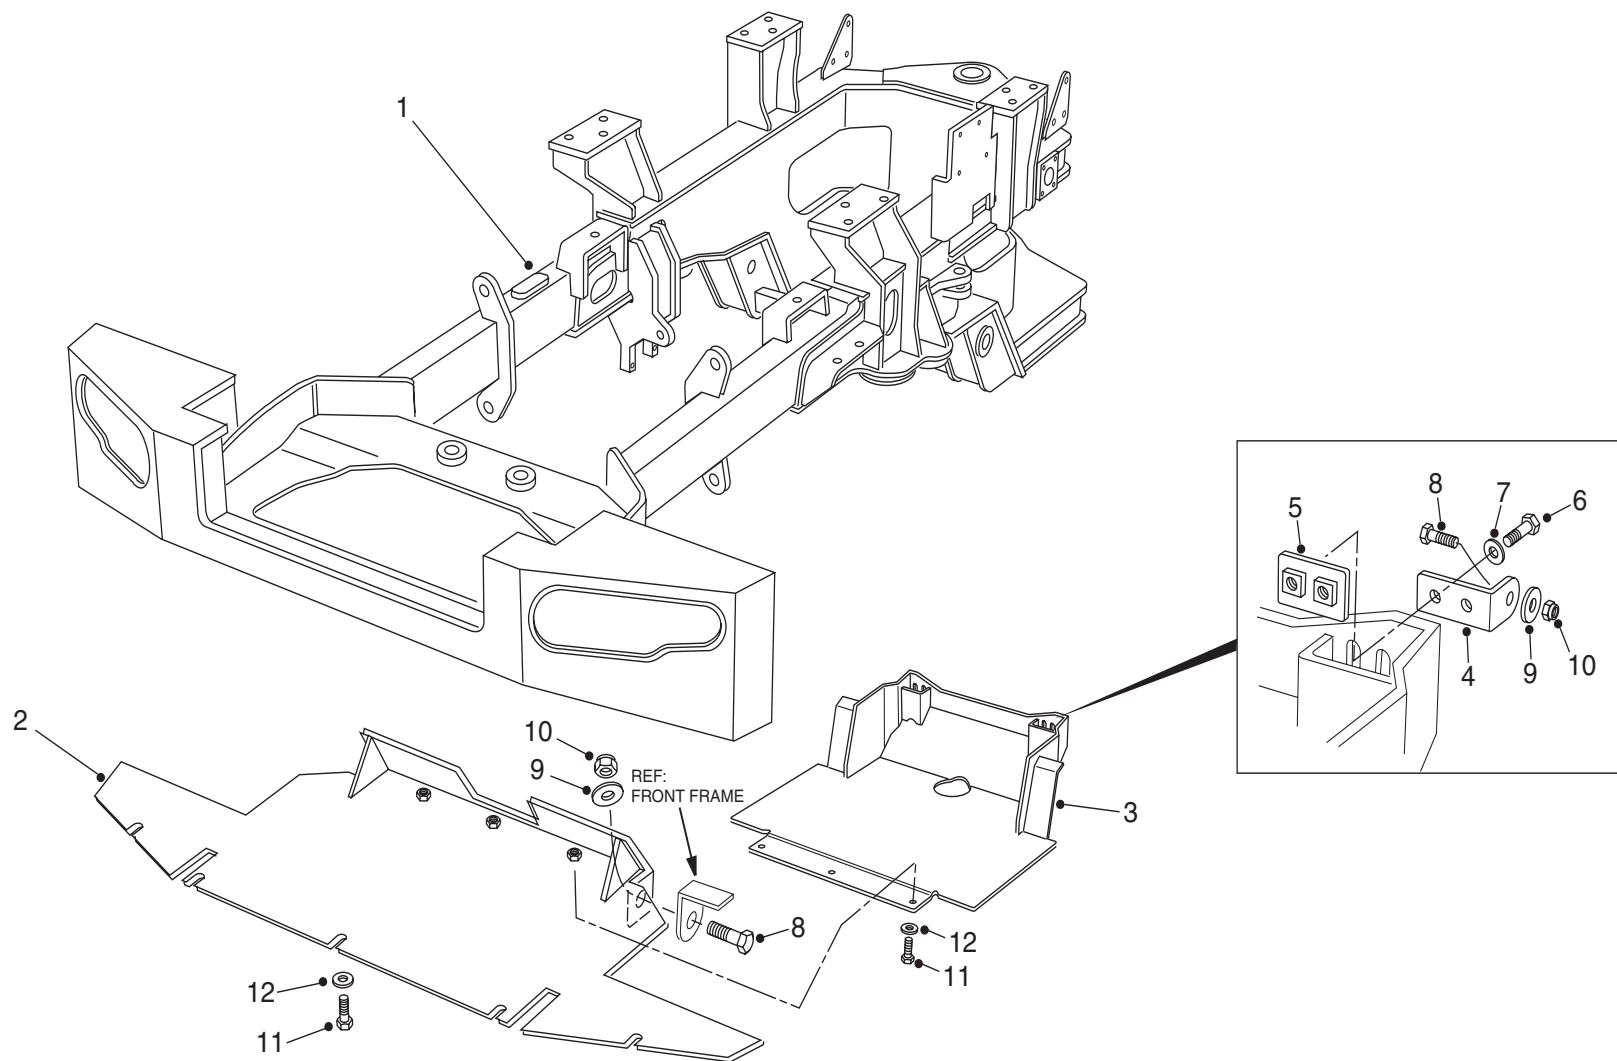

100-0010-9091 CHASSIS
FROM SERIAL NO. A9081011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
----	-----	-----	----------	-------------	-----------------	---------------


001	001		15331825	FRAME ASSY-COMLETE		
002	001		15314756	GUARD ASSY-CHASSIS		
003	001		15317222	GUARD ASSY-SUMP		
004	002		15314724	BRACKET-HINGE		
005	002		15314726	CLAMP PLATE		
006	004		06351655	BOLT		
007	004		09191596	WASHER		
008	004		06351670	BOLT		
009	004		07151630	WASHER		
010	004		06471601	LOCKNUT		
011	008		06351235	BOLT		
012	008		09217321	WASHER		

R1 11/08 (ECN 109535)

100-0030-9091 SOUND INSULATION
FROM SERIAL NO. A9081011

DRAWING NO. P11207

P11207

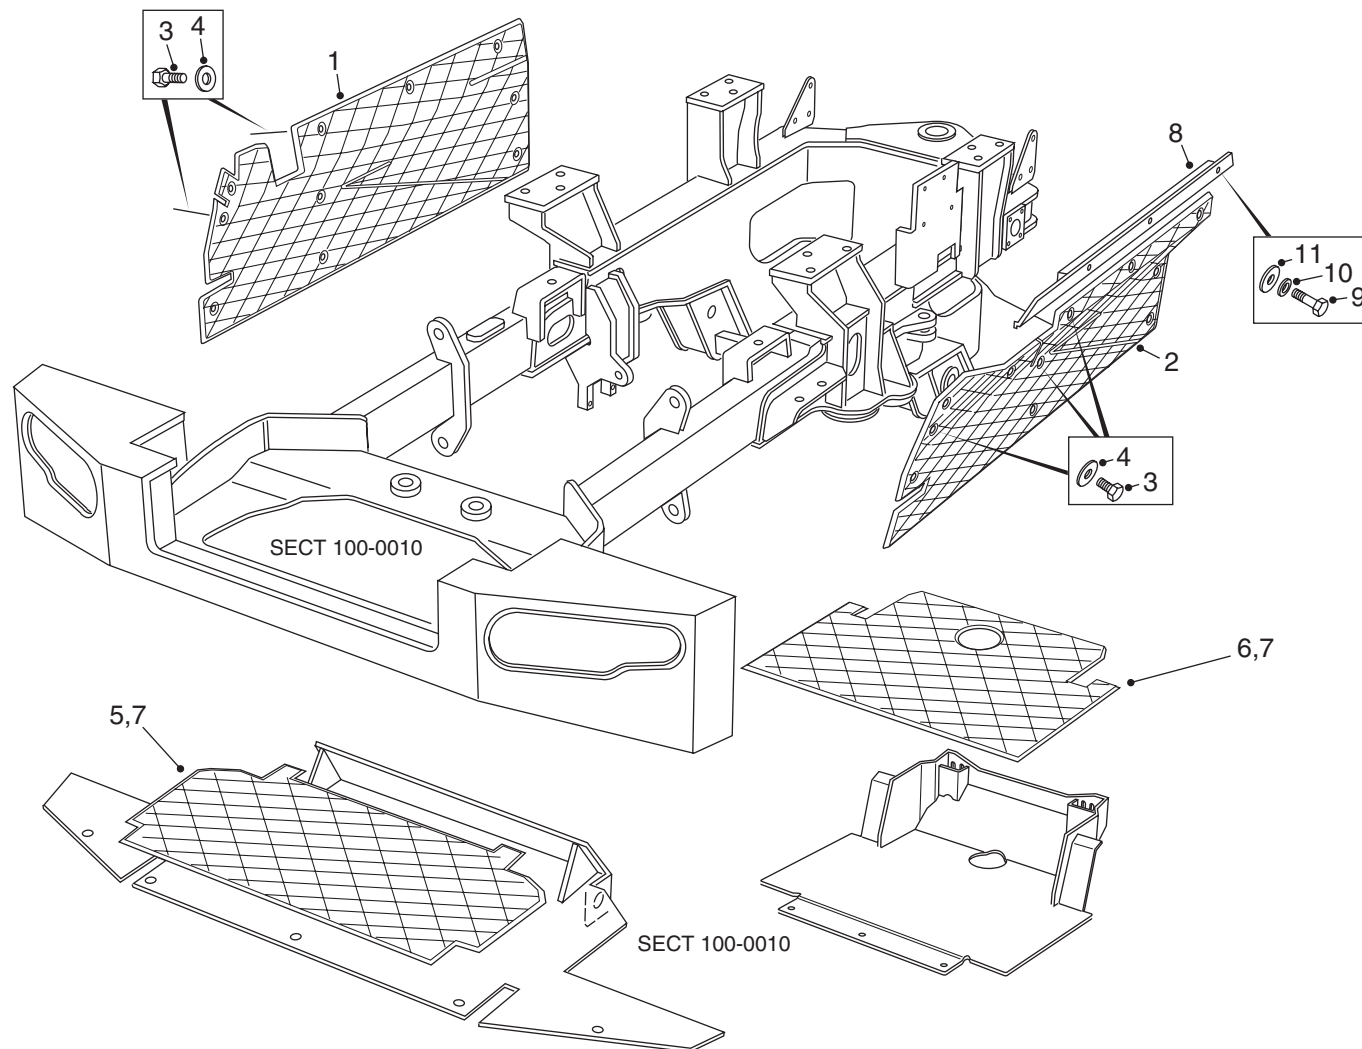


100-0030-9091 SOUND INSULATION
FROM SERIAL NO. A9081011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
A	001	001	15323970	QUILT-WHEEL ARCH-RH		
	002	001	15323971	QUILT-WHEEL ARCH-LH		
	003	015	06351230	BOLT		
	004	015	15234758	WASHER		
	005	001	15316801	QUILT-SUMP GUARD FT		
	006	001	15317825	QUILT-SUMP GUARD REAR		
	007	ASR	09079599	ADHESIVE		
	008	001	15334034	PLATE-QUILT MTG		
	009	003	06351225	BOLT		
	010	003	07161230	LOCKWASHER		
	011	003	07151220	WASHER		

NOTE:A FOR UNITS FITTED WITH HI-INFLATION (WIDE) TYRES,
 REFER TO OPTIONAL SECTION 100-0030

**100-0040-9091 HOOD AND MOUNTING
FROM SERIAL NO. A9081011**

P11667

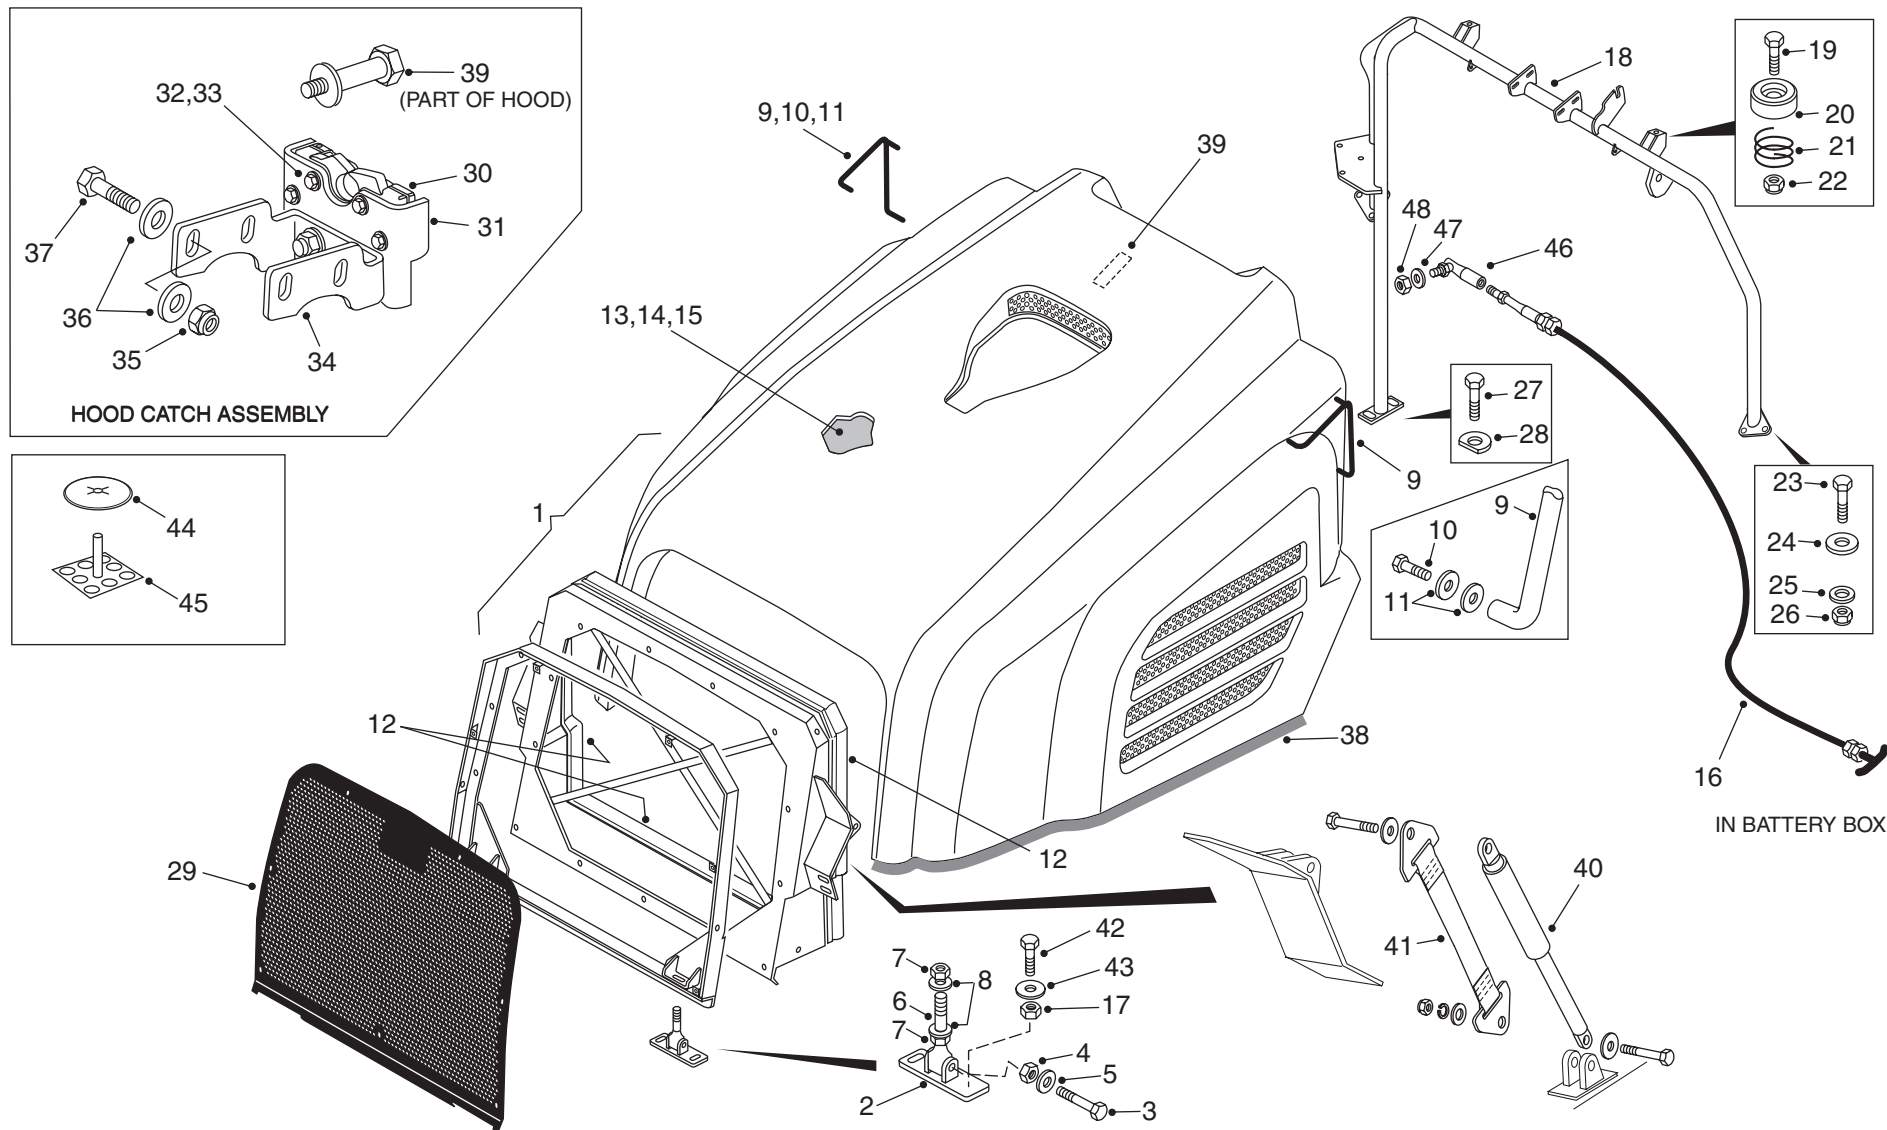


100-0040-9091 HOOD AND MOUNTING FROM SERIAL NO. A9081011						100-0040-8901 HOOD AND MOUNTING FROM SERIAL NO. A9081011							
NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO	NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15331377	HOOD ASSY			040	002		15313446	GAS STRUT		
002	002		15313176	.HINGE ASSY			041	002		15313472	STRAP-HOOD RETAINING		
003	002		06351675	.BOLT			042	004		06351655	BOLT		
004	002		15252584	.NUT			043	004		09191596	WASHER		
005	002		07151630	.WASHER			044	ASR		15501136	CAP		
006	002		15313179	.ROD-ADJUSTMENT			045	ASR		15503211	STUD 25MM LG		
007	004		06432001	.NUT			046	001		15256961	BALLJOINT		
008	004		09250715	.WASHER-HARDENED			047	001		00103319	LOCKWASHER		
009	002		15315116	.HANDLE-HOOD			048	001		00103024	LOCKNUT		
010	006		15309253	.BOLT									
011	012		15307237	.WASHER									
012	ASR		15244364	.SEAL-BULK									
013	001		15324159	HOOD QUILT-LHS									
014	001		15324160	HOOD QUILT-RHS									
015	001		15324161	HOOD QUILT-TOP									
016	001		15314415	CABLE-HOOD CATCH									
017	004		06471601	LOCKNUT									
018	001		15332275	GOALPOST WELDMENT									
019	002		00179828	BOLT									
020	002		15307804	STOP-HOOD									
021	002		05187308	SPRING									
022	002		09414094	LOCKNUT									
023	006		06351250	BOLT									
024	006		09217321	WASHER									
025	006		09267660	WASHER									
026	006		06471201	LOCKNUT									
027	002		06351230	BOLT									
028	002		15309558	WASHER-D SHAPE									
029	001		15313814	GRILLE	A9081011	A9081054							
029	001		15342528	GRILLE	A9081055								
030	001		15320830	HOOD CATCH									
031	001		15320980	BRACKET ASSY									
032	004		06350630	BOLT									
033	004		00147577	WASHER									
034	001		15323699	BRACKET									
035	004		06471201	LOCKNUT									
036	008		00116060	WASHER									
037	004		06351240	BOLT									
038	ASR		15319946	LIP SEAL									
039	001		15320831	STRIKER BOLT									

R1 09/07 (SER CORR)

100-0070-9091 FENDERS AND MOUNTING
FROM SERIAL NO. A9081011 TO A9081058

DRAWING NO. P11921

P11921

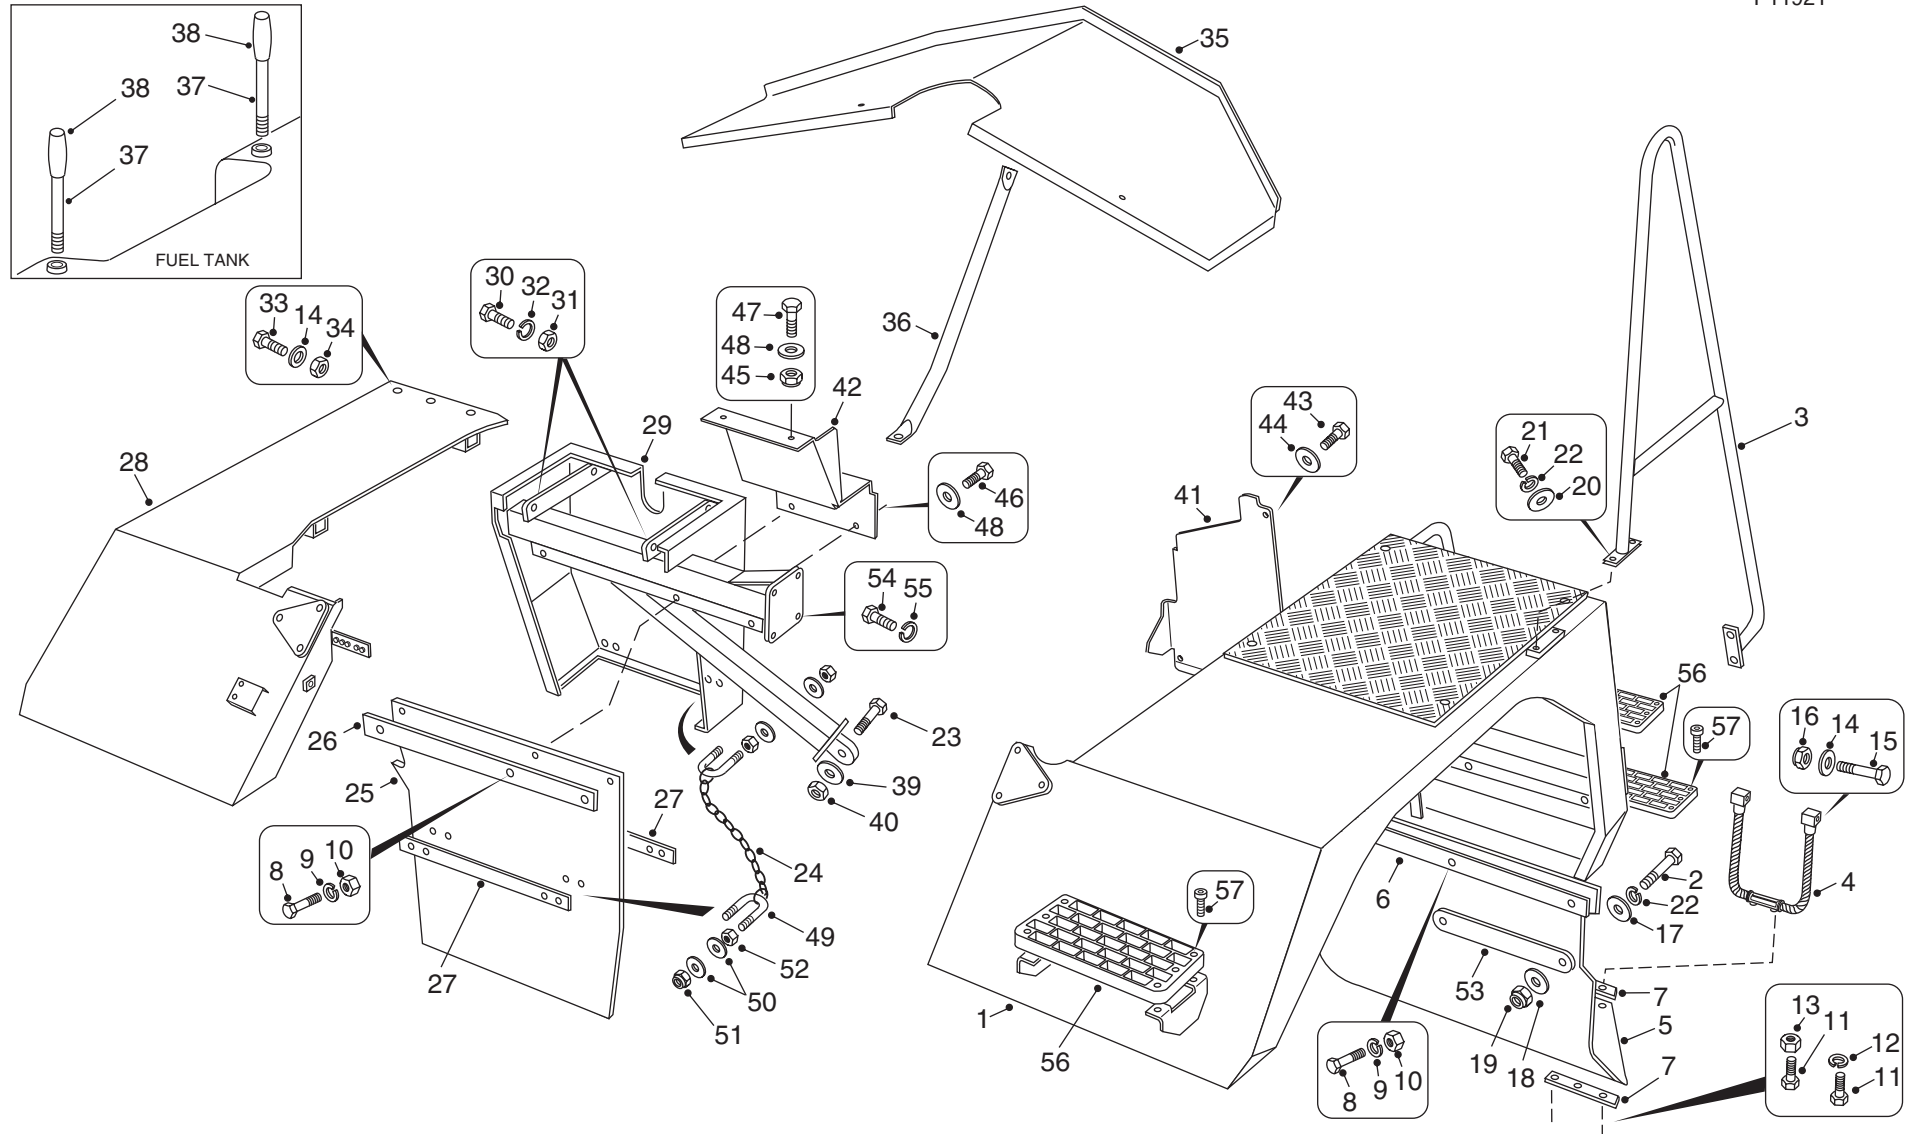

100-0070-9091 FENDERS AND MOUNTING
FROM SERIAL NO. A9081011 TO A9081058

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001	15332703	LH FENDER PLATFORM			
002	002	15240002	BOLT			
003	001	15311946	HANDRAIL			
004	002	15330653	STEP ASSY-WIRE			
005	002	15318085	MUDFLAP-FRONT LH			
006	002	15311949	PLATE			
007	004	15303969	STIFFENER-MUDFLAP			
008	006	00179820	BOLT			
009	006	00103320	LOCKWASHER			
010	006	00102634	NUT			
011	006	06350825	BOLT			
012	004	07160830	LOCKWASHER			
013	002	06470801	NUT			
014	008	09267949	WASHER-HARDENED			
015	004	00179892	BOLT			
016	004	00274209	LOCKNUT			
017	002	07151220	WASHER			
018	002	15234758	WASHER			
019	002	06471201	LOCKNUT			
020	004	09267660	WASHER			
021	004	06351230	BOLT			
022	002	07161230	LOCKWASHER			
023	001	06372070	BOLT			
024	002	15317037	CHAIN-MUDFLAP STAY			
025	001	15318836	MUDFLAP-FRONT RH			
026	001	15318829	PLATE			
027	002	15316708	CLAMP PLATE			
028	001	15317173	PLATFORM-RH			
029	001	15318825	SIDE STEP ASSY-RH			
030	004	06442040	SCREW SET			
031	004	06472001	NUT			
032	004	07162030	LOCKWASHER			
033	003	06351240	BOLT			
034	003	06471201	LOCKNUT			
035	001	15331048	SPILL GUARD			
036	001	15331050	BRACE-SPILL GUARD			
037	002	15228110	TUBE			
038	002	09366021	GRIP			
039	001	09270005	WASHER-HARDENED			
040	001	06432001	NUT			


100-0070-9091 FENDERS AND MOUNTING
FROM SERIAL NO. A9081011 TO A9081058

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
041	001	15332592	PANEL-INFILL LH			
042	001	15332595	PANEL-INFILL RH			
043	003	00179839	BOLT			
044	003	00106263	WASHER			
045	002	00274208	LOCKNUT			
046	002	00179837	BOLT			
047	002	00179839	BOLT			
048	004	00106263	WASHER			
049	004	15317030	U-BOLT			
050	008	07150815	WASHER			
051	008	06470801	NUT			
052	008	06430801	NUT			
053	001	15318086	PLATE-MUDFLAP CLAMPING			
054	004	15311176	BOLT			
055	004	07161630	LOCKWASHER			
056	003	15320662	FOOT-TREADPLATE			
057	012	15320295	CAPSCREW			

100-0070-9091 FENDERS AND MOUNTING
FROM SERIAL NO. A9081059

DRAWING NO. P12443

P12443

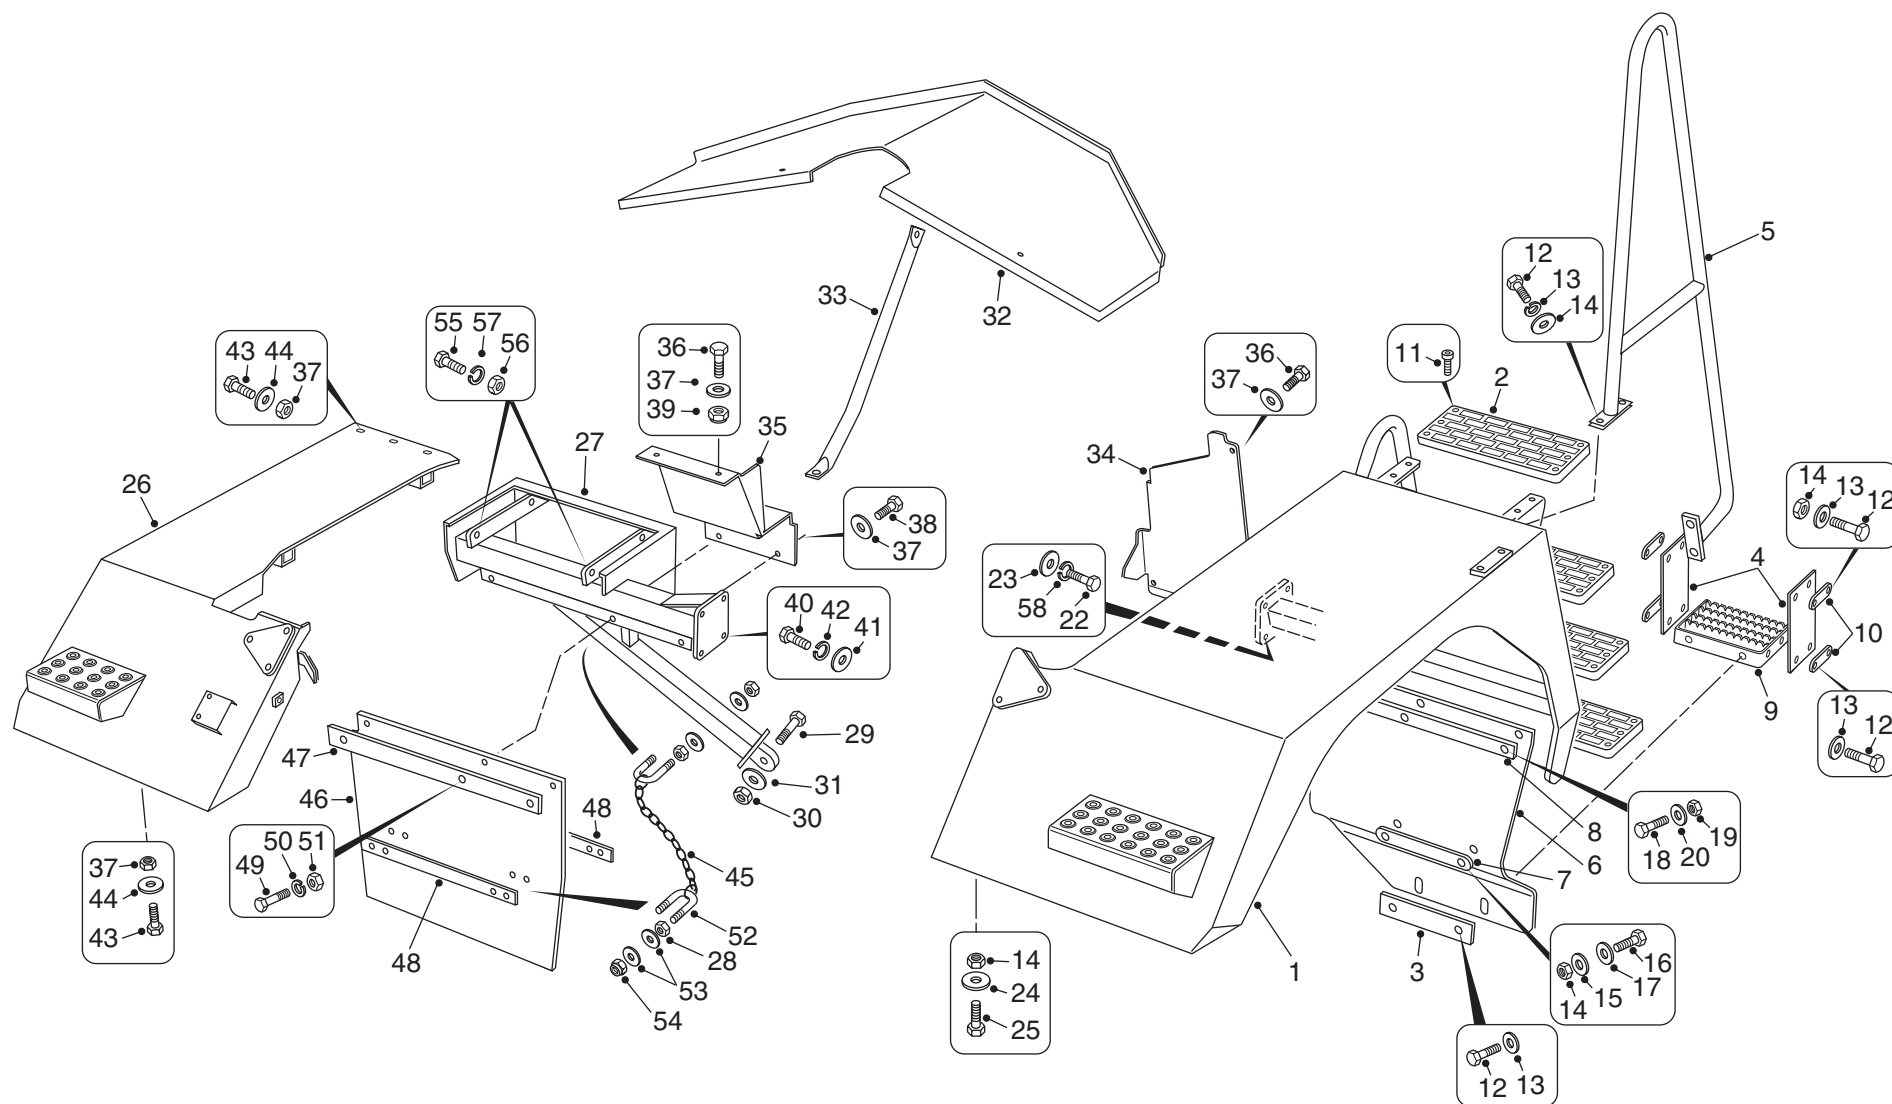

100-0070-9091 FENDERS AND MOUNTING
FROM SERIAL NO. A9081059

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001	15354285	FENDER ASSY-LHS			
002	004	15320662	FOOTSTEP TREADPLATE			
003	001	15353465	PLATE-WASHER			
004	002	15354286	RUBBER STRAP			
005	001	15354287	HANDRAIL-OUTER LHS			
006	001	15354288	MUDFLAP FRONT-LH			
007	001	15318086	CLAMPING PLATE			
008	001	15311949	PLATE			
009	001	15353460	STEP			
010	004	15353464	WASHER-CLAMP			
011	016	15244817	SOCKET SCREW			
012	014	06351230	BOLT			
013	014	07151220	WASHER			
014	009	06471201	LOCKNUT			
015	002	07151220	WASHER			
016	002	15240002	BOLT			
017	002	15234758	WASHER			
018	003	06350830	BOLT			
019	003	06470801	NUT			
020	003	07150815	WASHER			
021	004	07161230	LOCKWASHER			
022	004	15311176	BOLT			
023	008	07151630	WASHER			
024	003	09267949	WASHER-HARDENED			
025	003	06351235	BOLT			
026	001	15354291	PLATFORM-RH			
027	001	15342566	SUPPORT ASSY			
028	008	06430801	NUT			
029	001	06372070	BOLT			
030	001	06432001	NUT			
031	001	09270005	WASHER-HARDENED			
032	001	15331048	SPILLGUARD			
033	001	15331050	BRACE-SPILLGUARD			
034	001	15332592	INFILL PANEL LHS			
035	001	15332595	INFILL PANEL RHS			
036	005	00179839	BOLT			
037	009	00106263	WASHER			
038	002	00179837	BOLT			
039	002	00274208	LOCKNUT			
040	004	15311176	BOLT			



100-0070-9091 FENDERS AND MOUNTING
FROM SERIAL NO. A9081059

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
041	004	07151630	WASHER			
042	004	07161630	LOCKWASHER			
043	006	06351235	BOLT			
044	012	09267949	WASHER-HARDENED			
045	002	15342569	CHAIN-MUDFLAP STAY			
046	001	15342570	MUDFLAP FRONT RHS			
047	001	15318829	PLATE			
048	002	15316708	CLAMP PLATE			
049	003	00179820	BOLT			
050	003	00103320	LOCKWASHER			
051	003	00102634	NUT			
052	004	15317030	U-BOLT			
053	008	07150815	WASHER			
054	008	06470801	NUT			
055	004	06442040	SETSCREW			
056	004	06472001	NUT			
057	004	07162030	LOCKWASHER			
058	004	07161630	LOCKWASHER			

100-0135-9091 ROCK AND SUMP GUARDS
FROM SERIAL NO. A9081011

DRAWING NO. P11039

P11039

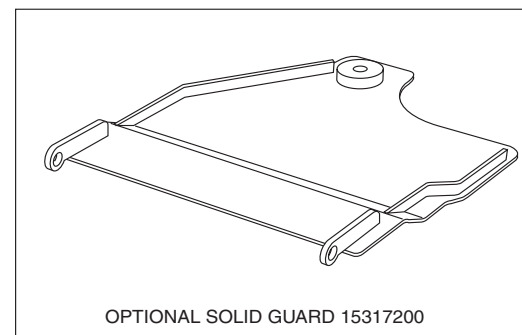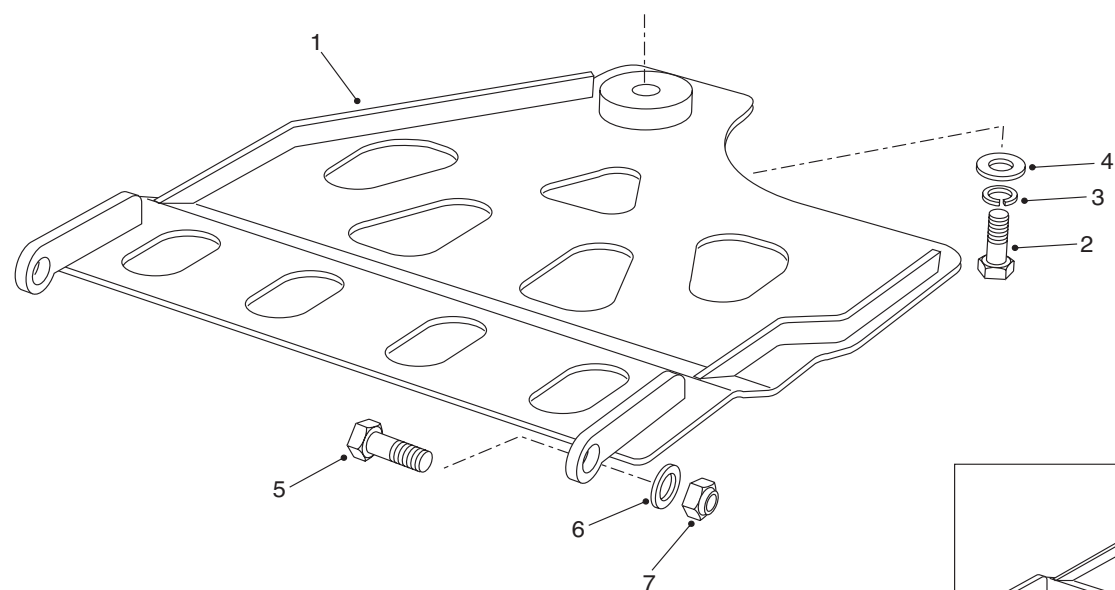

100-0135-9091 ROCK AND SUMP GUARDS
FROM SERIAL NO. A9081011

NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
----	-----	-----	----------	-------------	-----------------	---------------

001	001		15313507	GUARD-TRANS SUMP		
002	001		06351665	BOLT		
003	001		07161630	LOCKWASHER		
004	001		09191596	WASHER		
005	002		06351670	BOLT NSS		
006	002		07151630	WASHER		
007	002		06471601	LOCKNUT		

THIS PAGE IS INTENTIONALLY LEFT BLANK

CUMMINS ENGINE

THIS UNIT IS EQUIPPED WITH A CUMMINS DIESEL ENGINE.

TEREX DOES NOT SELL ENGINES OR ENGINE PARTS. THESE SHOULD BE OBTAINED FROM THE NEAREST ENGINE MANUFACTURER'S SALES AND SERVICE OUTLET.

ILLUSTRATIONS AND PART NUMBERS OF ENGINE PARTS ARE OMITTED FROM THIS TEREX PARTS BOOK.

A SEPARATE CUMMINS ENGINE PARTS BOOK IS SUPPLIED WITH NEW UNITS FOR ENGINE PARTS COVERAGE.


ANY ADDITIONAL REQUESTS FOR THIS CUMMINS ENGINE PARTS BOOK OR ANY QUESTIONS ON ENGINE PARTS AND WARRANTY SHOULD BE DIRECTED TO THE ENGINE MANUFACTURER'S SALES AND SERVICE OUTLET.

R1 11/08 (ECN 109083)


110-0030-9091 ENGINE AND MOUNTING
FROM SERIAL NO. A9081011

DRAWING NO. P11506A

P11506

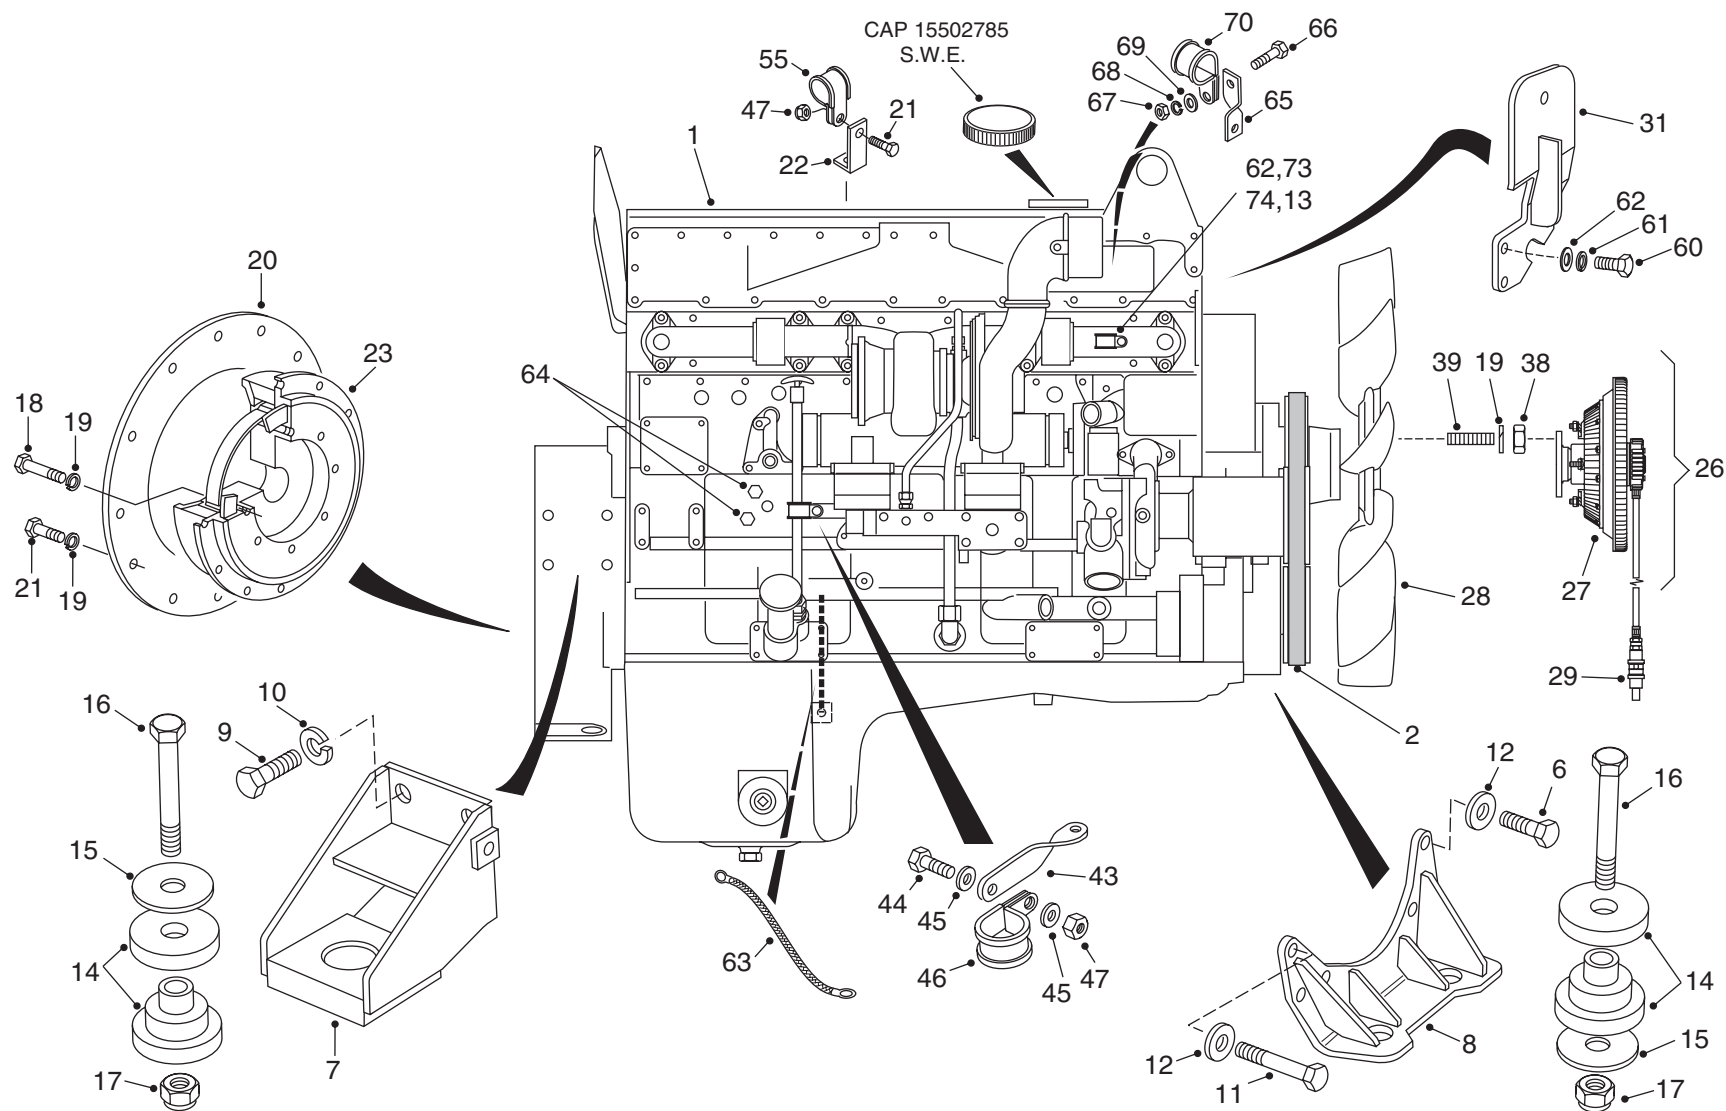

P11506

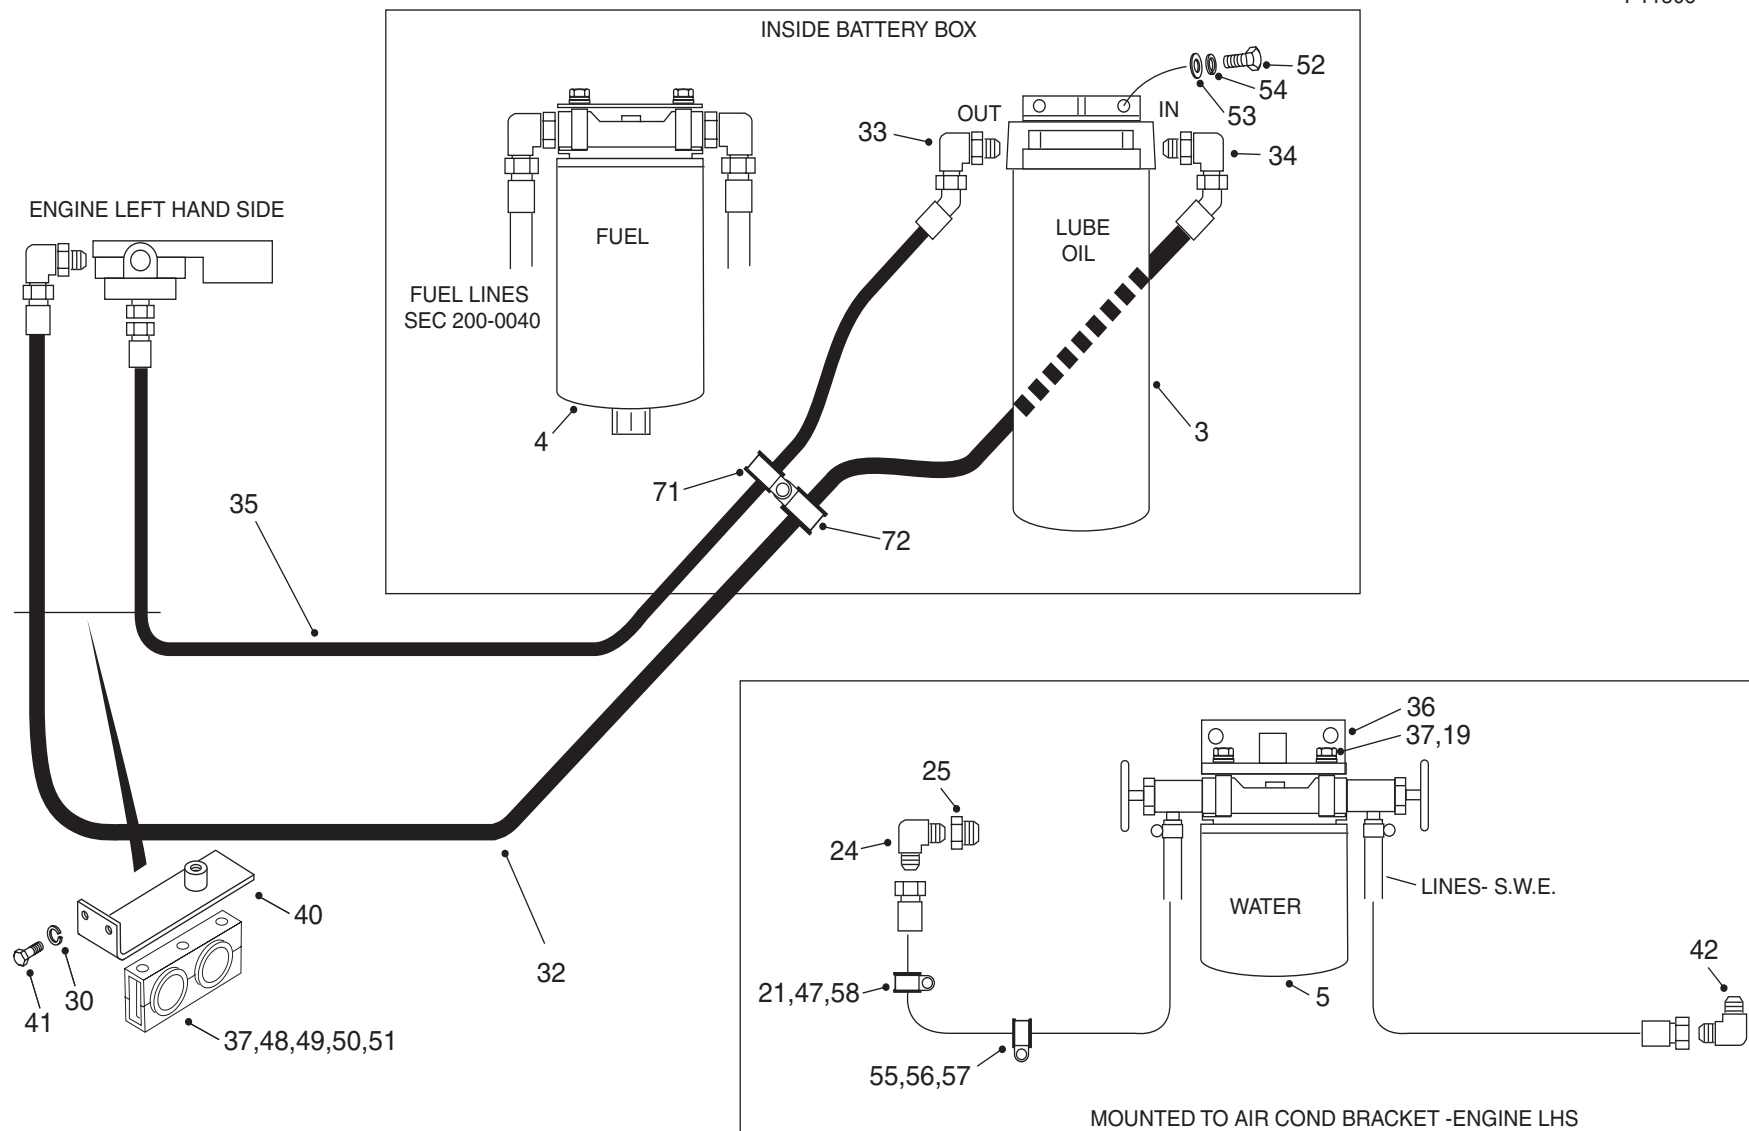

R1 11/08 (ECN 109083)

110-0030-9091 ENGINE AND MOUNTING FROM SERIAL NO. A9081011							110-0030-9091 ENGINE AND MOUNTING FROM SERIAL NO. A9081011						
NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO	NC	REF	QTY	PART NO.	DESCRIPTION	SER.NO. FROM	SER.NO. TO
001	001		15332075	ENG-QSM11 T3-JAKE BRAKE	A9081011	A9081054	040	001		15316963	BRACKET ASSY		
001	001		15341256	ENG-QSM11 T3-JAKE BRAKE	A9081055		041	001		06351025	BOLT		
002	001		15501273	.BELT-FAN & ALTERNATOR			042	001		15314875	ELBOW		
003	001		15501271	.FILTER-LUBE OIL			043	001		15318452	BRACKET		
004	001		15271319	.FILTER-FUEL			044	001		00179839	BOLT		
005	001		15501272	.FILTER-WATER			045	002		07151020	WASHER		
006	001		15273983	.BOLT			046	001		09131861	P-CLIP		
007	002		15237954	.BRACKET-REAR MOUNT			047	003		00274208	LOCKNUT		
008	001		15305925	.BRACKET-FRONT MOUNT			048	002		15001428	NUT-STACKING		
009	008		00223436	.BOLT			049	001		15001435	BUSHING-SPLIT		
010	008		00103331	.LOCKWASHER			050	001		15001436	BUSHING-SPLIT		
011	005		15273982	.BOLT			051	001		15001430	CLAMP		
012	006		15249040	.SPACER			052	004		06350825	BOLT		
013	001		00102635	NUT			053	004		07150815	WASHER		
014	004		15311297	ISOLATION MOUNT			054	004		07160830	LOCKWASHER		
015	004		15235607	WASHER-SNUBBING			055	003		09131865	CLIP		
016	004		00271668	BOLT			056	002		06351020	BOLT		
017	004		00274098	LOCKNUT			057	002		07161030	LOCKWASHER		
018	008		00186285	BOLT			058	002		09152893	CLIP		
019	026		00108580	LOCKWASHER			059	001		06350820	SCREW		
020	001		15317891	GUARD-FLYWHEEL			060	003		06351235	BOLT		
021	012		00179837	BOLT			061	003		07161230	LOCKWASHER		
022	001		15301303	PLATE BENT			062	003		07151220	WASHER		
023	001		15317868	ENGINE COUPLING			063	001		09376795	CABLE-EARTH		
024	001		15314871	ELBOW			064	002		00444613	PLUG		
025	001		15314876	REDUCER			065	001		09254002	BRACKET		
026	001		15319733	FAN CLUTCH ASSY			066	001		00179795	BOLT		
027	001		15319734	.FAN CLUTCH			067	001		00109084	NUT		
028	001		15312179	.FAN-29"			068	001		00103319	LOCKWASHER		
029	001		15501101	.CONNECTOR KIT			069	001		00103339	WASHER		
030	001		07161030	LOCKWASHER			070	001		09153995	CLAMP		
031	001		15314832	BRACKET-RAD STEADY			071	001		09131875	CLIP-RUBBERISED		
032	001		15315697	HOSE ASSY			072	001		09131879	CLIP-RUBBERISED		
033	001		15244830	ELBOW			073	001		09198177	CLAMP		
034	001		15258382	ELBOW			074	001		00179839	BOLT		
035	001		15315696	HOSE ASSY									
036	001		15310189	BRACKET ASSY									
037	004		00179841	BOLT									
038	006		09417713	NUT									
039	006		15319419	STUD									

THIS PAGE IS INTENTIONALLY LEFT BLANK

Product: 2006 TEREX TA30RS Articulated Truck Workshop Parts Manual[PN15503101]

Full Download: <https://www.arepairmanual.com/downloads/2006-terex-ta30rs-articulated-truck-workshop-parts-manualpn15503101/>


Full Download: <https://www.arepairmanual.com/downloads/2006-terex-ta30rs-articulated-truck-workshop-parts-manualpn15503101/>

110-0050-9091 AIR CLEANER

FROM SERIAL NO. A9081011

DRAWING NO. P11006

P11006

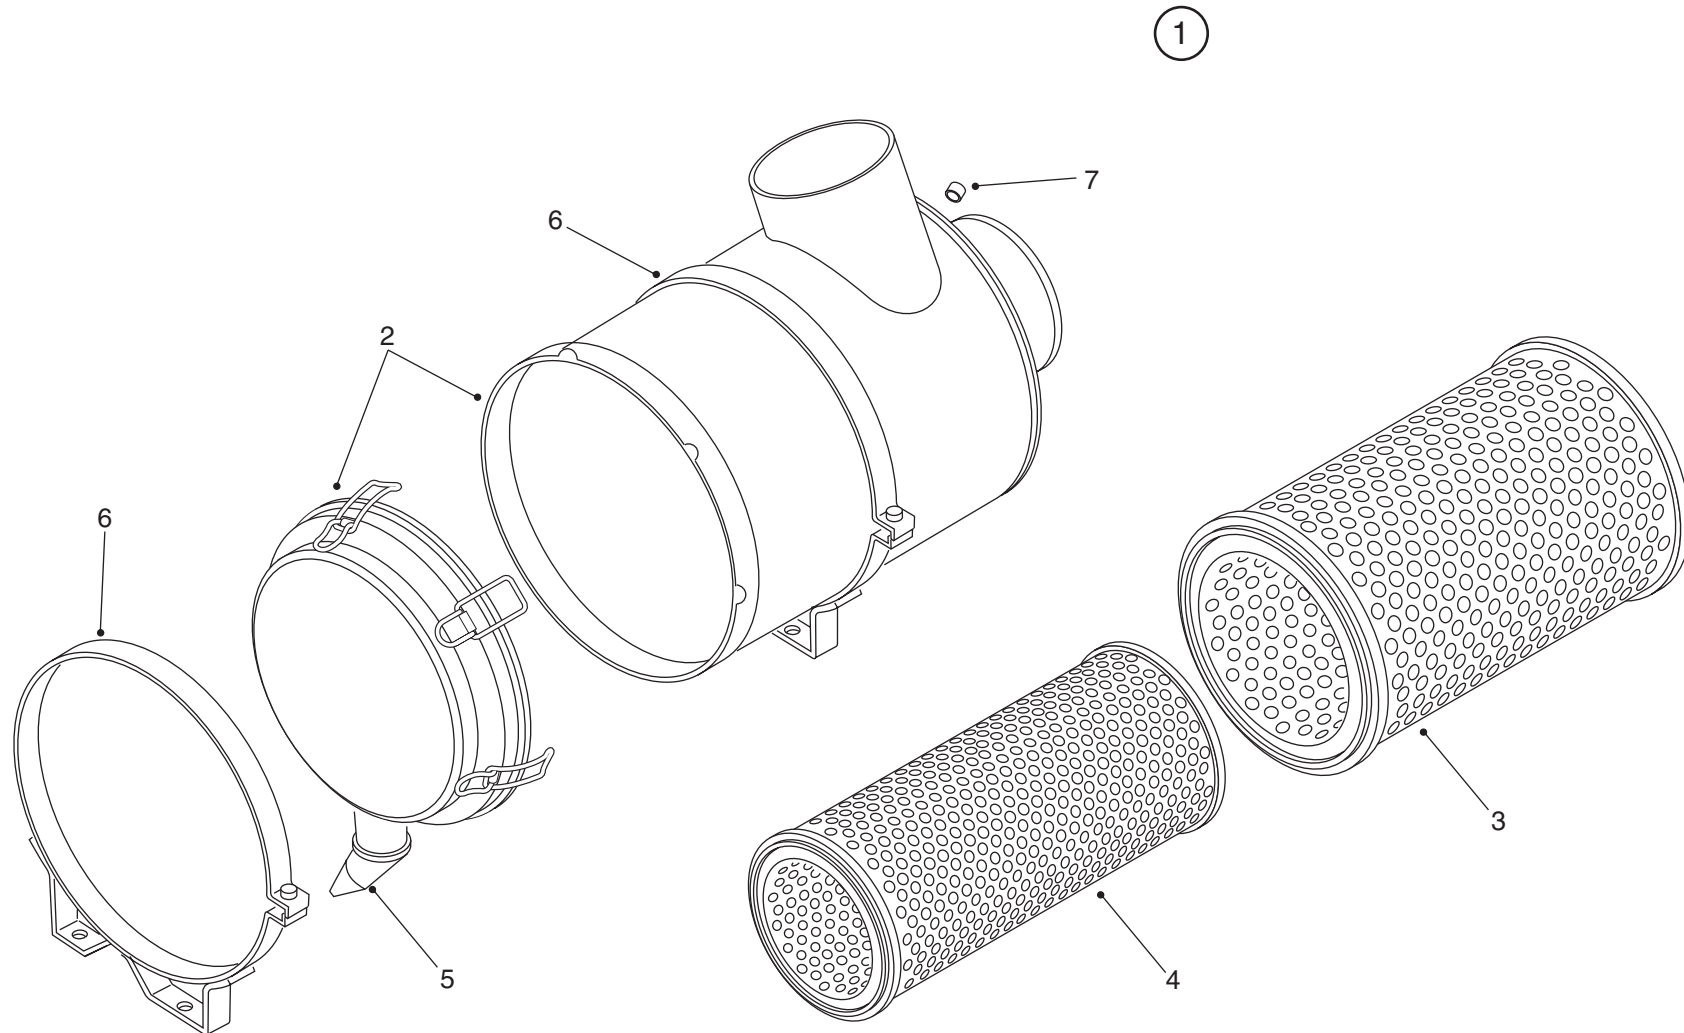

Sample of manual. Download All 500 pages at:

<https://www.arepairmanual.com/downloads/2006-terex-ta30rs-articulated-truck-workshop-parts-manualpn15503101/>