

# 5105 and 5205 Tractors

## TECHNICAL MANUAL 5105 and 5205 Tractors Repair

TM1792 20MAR00 (ENGLISH)

For complete service information also see:

Component Technical Manuals 3029

Engine ..... CTM8

Alternators and Starting Motors ..... CTM77

John Deere Augusta Works

Sample of manual. Download [TM1792 \(20MAR00\)](https://www.arepairmanual.com/downloads/john-deere-5105-and-5205-tractors-service-repair-technical-manual/)

<https://www.arepairmanual.com/downloads/john-deere-5105-and-5205-tractors-service-repair-technical-manual/>

ENGLISH

# Introduction

## Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

# Contents

## SECTION 10—General Information

- Group 05—Safety
- Group 10—General Specifications
- Group 20—Fuel and Lubricants
- Group 25—Serial Number Locations
- Group 30—Features and Accessories

## SECTION 20—Engine Repair

- Group 05—Engine
- Group 10—Cooling System

## SECTION 30—Fuel and Air Repair

- Group 05—Fuel System
- Group 10—Air Intake System
- Group 15—Speed Control Linkage

## SECTION 40—Electrical Repair

- Group 05—Battery, Starter and Alternator
- Group 10—Electrical System Components
- Group 15—Wiring Harness

## SECTION 50—Power Train Repair

- Group 05—Clutch Housing
- Group 10—Clutch Assembly
- Group 15—Transmission
- Group 20—Rear PTO
- Group 25—Differential
- Group 30—Final Drives
- Group 35—Mechanical Front Wheel Drive

## SECTION 60—Steering and Brake Repair

- Group 05—Steering Repair
- Group 10—Brake Repair

## SECTION 70—Hydraulic Repair

- Group 05—Hydraulic Pump and Filter
- Group 10—Rockshaft
- Group 15—Selective Control Valve (SCV)
- Group 20—Hydraulic Mid Mount Coupler

## SECTION 80—Miscellaneous Repair

- Group 05—Front Axle—2WD
- Group 10—Wheels
- Group 15—3-Point Hitch

## SECTION 90—Operator Station Repair

- Group 05—Seat and Support
- Group 10—ROLL-GARD
- Group 15—Operator Platform
- Group 20—Fenders

## SECTION 210—Operational Checkout Procedures

- Group 10—Operational Checkout Procedures

## SECTION 220—Engine Operation, Tests and Adjustments

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests and Adjustments

## SECTION 230—Fuel/Air Operation, Tests and Adjustments

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests and Adjustments

## SECTION 240—Electrical System Operation, Tests & Adjust

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Test and Adjust
- Group 20—Wiring Schematics

## SECTION 250—Power Train Operation, Tests & Adjustments

- Group 05—Component Location—Power Train
- Group 10—Theory of Operation—Transmission
- Group 15—Diagnosis, Tests and Adjustments—Power Train

## SECTION 260—Steering and Brake Operation, Test & Adjust

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests and Adjustments

## SECTION 270—Hydraulic System Operation, Test &

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT © 2000  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION® Manual

**Adjust**

Group 05—Component Location

Group 10—Theory of Operation

Group 15—Diagnosis

Group 16—Hydraulic Tests—Without SCV

Group 17—Hydraulic Tests—With SCV

Group 18—Hydraulic Tests—With Mid Mount  
Control Valve

Group 19—Hydraulic Tests—All

Group 20—Adjustments

Group 21—Hydraulic Schematics

**SECTION 299—Dealer Fabricated Tools**

Group 00—Dealer Fabricated Tools

10

20

30

40

50

60

70

80

90

210

*Contents*

220

230

240

250

260

270

299

INDX

*Contents*

220

230

240

250

260

270

299

INDX

# Section 10

## General Information

### Contents

	Page		Page
<b>Group 05—Safety</b> .....	10-05-1	Standard Features .....	10-30-2
<b>Group 10—General Specifications</b>		Factory Installed Optional Equipment .....	10-30-4
Machine Specifications .....	10-10-1	Field Installed Optional Kits and	
Drain and Refill Capacities .....	10-10-3	Accessories .....	10-30-5
Machine Dimensions .....	10-10-4		
Ground Speed Estimates .....	10-10-9		
Service Recommendations for O-Ring Boss			
Fittings .....	10-10-15		
Service Recommendations for Flat Face			
O-Ring Seal Fittings .....	10-10-17		
Metric Bolt and Cap Screw Torque Values ..	10-10-18		
Unified Inch Bolt and Cap Screw Torque			
Values .....	10-10-19		
<b>Group 20—Fuel and Lubricants</b>			
Diesel Fuel .....	10-20-1		
Fuel Storage .....	10-20-2		
Do Not Use Galvanized Containers .....	10-20-2		
Fill Fuel Tank .....	10-20-3		
Diesel Engine Oil .....	10-20-4		
Engine Coolant .....	10-20-5		
Liquid Coolant Conditioner .....	10-20-5		
Transmission and Hydraulic Oil .....	10-20-6		
MFWD Gear Oil .....	10-20-7		
Grease (Specific Application) .....	10-20-7		
Grease .....	10-20-8		
Alternative and Synthetic Lubricants .....	10-20-8		
Lubricant Storage .....	10-20-9		
<b>Group 25—Serial Number Locations</b>			
Serial Numbers .....	10-25-1		
Product Identification Number Location .....	10-25-1		
Engine Serial Number Location .....	10-25-1		
Fuel Injection Pump Serial Number Location ..	10-25-1		
Alternator Serial Number Location .....	10-25-2		
Power Steering Valve Serial Number			
Location .....	10-25-2		
Starter Serial Number Location .....	10-25-2		
Transmission Serial Number Location .....	10-25-2		
Front Axle (2WD) Serial Number Location .....	10-25-3		
Mechanical Front Wheel Drive (MFWD) Serial			
Number Location .....	10-25-3		
<b>Group 30—Features and Accessories</b>			
Features and Accessories .....	10-30-1		



## Recognize Safety Information

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-29SEP98-1/1

TB1389 -UN-07DEC88

## Understand Signal Words

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93-1/1

TS187 -19-30SEP88

## Follow Safety Instructions

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.



DX,READ -19-03MAR93-1/1

TS201 -UN-23AUG88

10  
05  
2

## Handle Fluids Safely—Avoid Fires

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



TS227 -UN-23AUG88

DX,FLAME -19-29SEP98-1/1

## Prevent Battery Explosions

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



TS204 -UN-23AUG88


DX,SPARKS -19-03MAR93-1/1

## Prepare for Emergencies

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

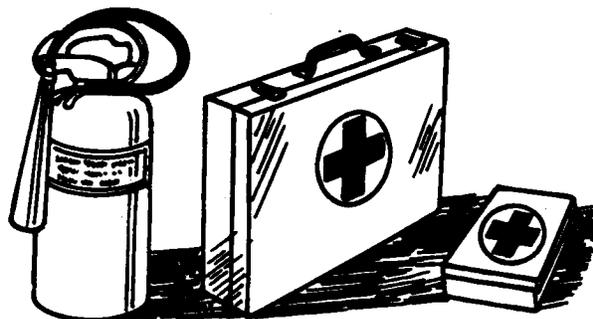

TS291 -UN-23AUG88

DX,FIRE2 -19-03MAR93-1/1

## Prevent Acid Burns

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 quarts).
3. Get medical attention immediately.

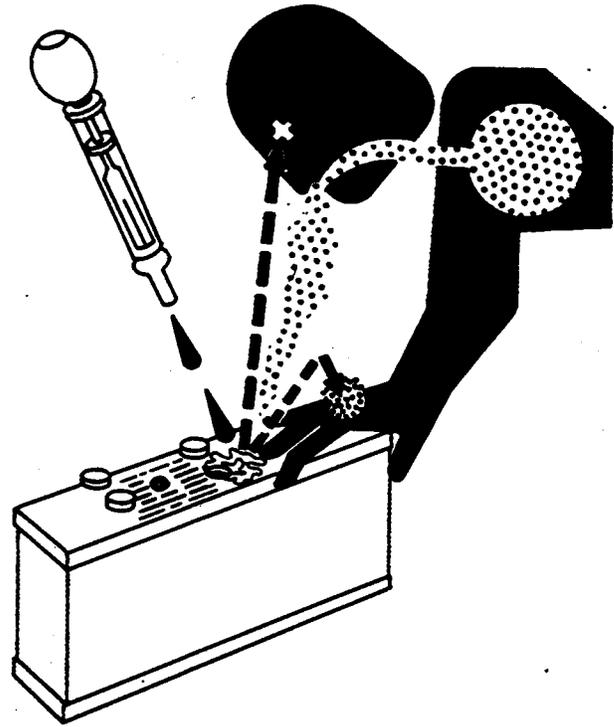

TS203 -UN-23AUG88

DX,POISON -19-21APR93-1/1

## Service Cooling System Safely

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.



TS281 -UN-23AUG88

DX,RCAP -19-04JUN90-1/1

## Handle Chemical Products Safely

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)



TS1132 -UN-26NOV90

DX,MSDS,NA -19-03MAR93-1/1


## Avoid High-Pressure Fluids

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

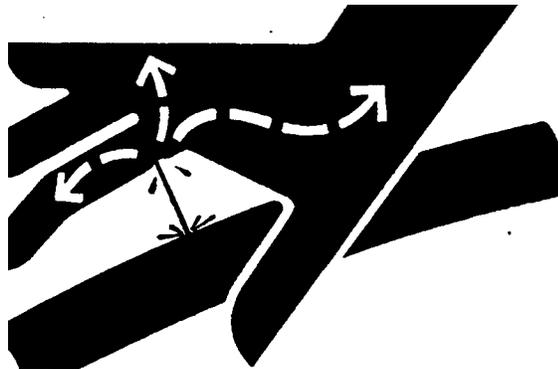


X9811 -UN-23AUG88

DX,FLUID -19-03MAR93-1/1

### Park Machine Safely

Before working on the machine:

- Lower all equipment to the ground.
- Stop the engine and remove the key.
- Disconnect the battery ground strap.
- Hang a "DO NOT OPERATE" tag in operator station.

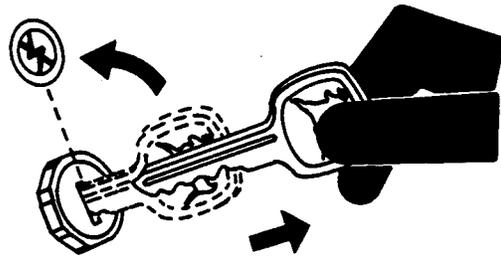

TS230 -JUN-24MAY89


DX,PARK -19-04JUN90-1/1

### Support Machine Properly

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment. If left in a raised position, hydraulically supported devices can settle or leak down.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

When implements or attachments are used with a tractor, always follow safety precautions listed in the implement operator's manual.

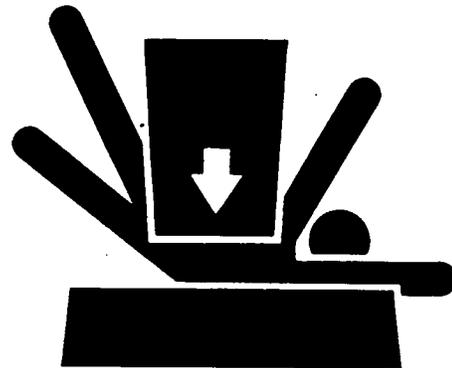

TS229 -JUN-23AUG88

DX,LOWER -19-17FEB99-1/1


### Wear Protective Clothing

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

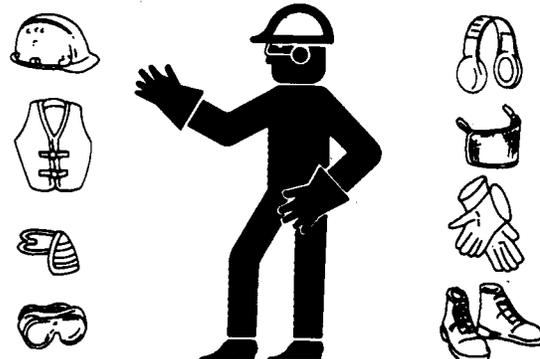


TS206 -JUN-23AUG88

DX,WEAR -19-10SEP90-1/1

### Work in Clean Area

Before starting a job:

- Clean work area and machine.
- Make sure you have all necessary tools to do your job.
- Have the right parts on hand.
- Read all instructions thoroughly; do not attempt shortcuts.

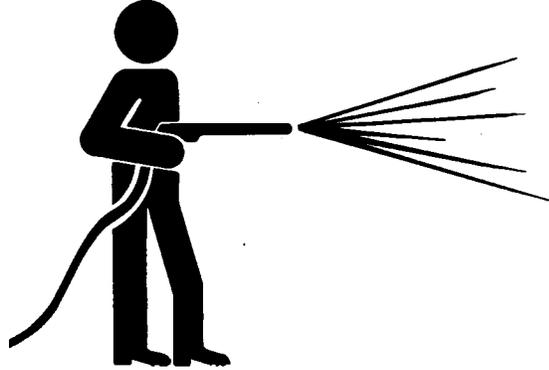


DX,CLEAN -19-04JUN90-1/1

T6642EJ -UN-18OCT88

### Service Machines Safely

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

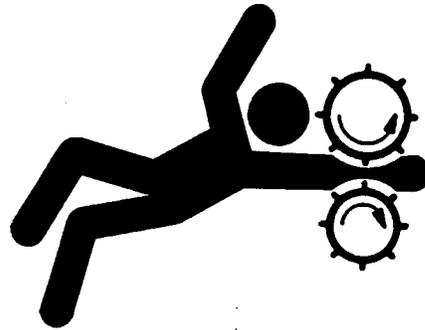

DX,LOOSE -19-04JUN90-1/1

TS228 -UN-23AUG88

### Work in Ventilated Area

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area



DX,AIR -19-17FEB99-1/1

TS220 -UN-23AUG88

### Illuminate Work Area Safely

Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.



DX,LIGHT -19-04JUN90-1/1

TS223 -UN-23AUG88

### Replace Safety Signs

Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.




DX,SIGNS1 -19-04JUN90-1/1

TS201 -UN-23AUG88

### Use Proper Lifting Equipment

Lifting heavy components incorrectly can cause severe injury or machine damage.

Follow recommended procedure for removal and installation of components in the manual.

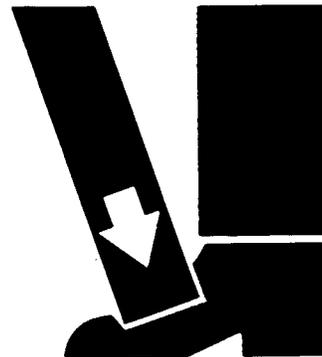


DX,LIFT -19-04JUN90-1/1

TS226 -UN-23AUG88

### Keep ROPS Installed Properly

Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.

The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

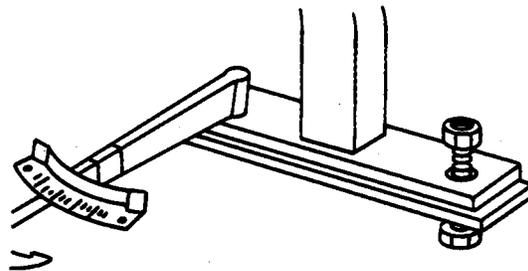

DX,ROPS3 -19-03MAR93-1/1

TS212 -UN-23AUG88

10  
05  
8

## Service Tires Safely


Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.

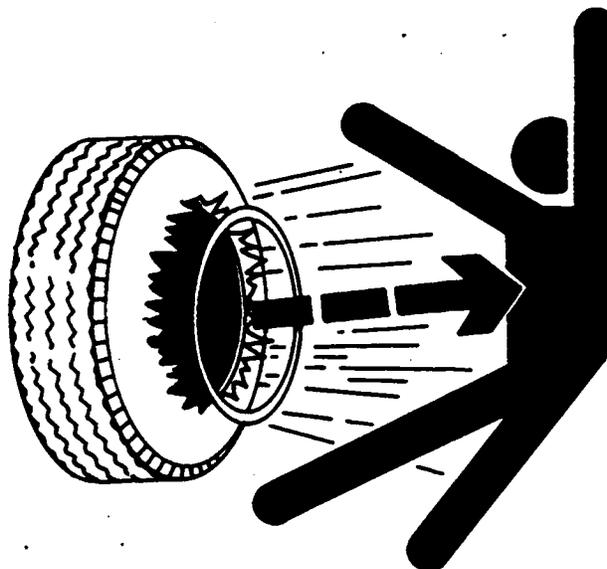

TS211 -UN-23AUG88

DX,RIM -19-24AUG90-1/1


## Avoid Harmful Asbestos Dust

Avoid breathing dust that may be generated when handling components containing asbestos fibers. Inhaled asbestos fibers may cause lung cancer.

Components in products that may contain asbestos fibers are brake pads, brake band and lining assemblies, clutch plates, and some gaskets. The asbestos used in these components is usually found in a resin or sealed in some way. Normal handling is not hazardous as long as airborne dust containing asbestos is not generated.

Avoid creating dust. Never use compressed air for cleaning. Avoid brushing or grinding material containing asbestos. When servicing, wear an approved respirator. A special vacuum cleaner is recommended to clean asbestos. If not available, apply a mist of oil or water on the material containing asbestos.

Keep bystanders away from the area.

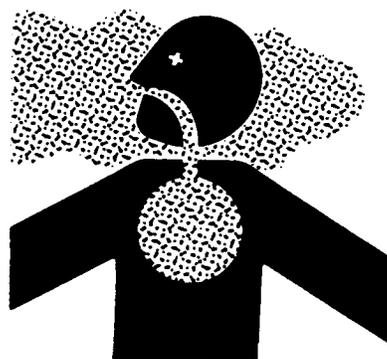

TS220 -UN-23AUG88

DX,DUST -19-15MAR91-1/1

## Avoid Heating Near Pressurized Fluid Lines

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



TS953 -JUN-15MAY90

DX.TORCH -19-03MAR93-1/1

## Remove Paint Before Welding or Heating


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

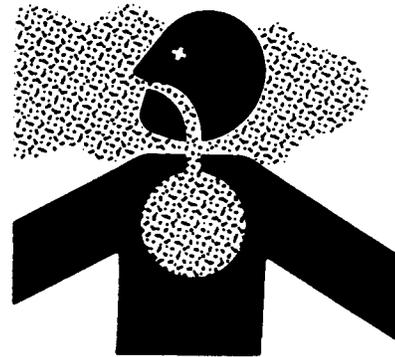

TS220 -JUN-23AUG88

DX.PAINT -19-03MAR93-1/1

10  
05  
10

### Use Proper Tools

Use tools appropriate to the work. Makeshift tools and procedures can create safety hazards.

Use power tools only to loosen threaded parts and fasteners.

For loosening and tightening hardware, use the correct size tools. DO NOT use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches.

Use only service parts meeting John Deere specifications.



TS779 -UN-08NOV89

DX,REPAIR -19-17FEB99-1/1

### Dispose of Waste Properly


Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

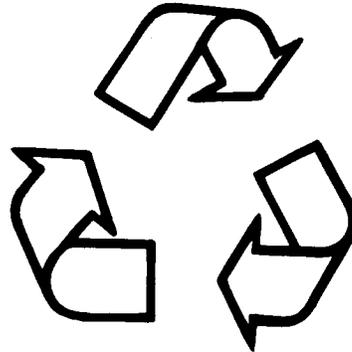

TS1133 -UN-26NOV90

DX,DRAIN -19-03MAR93-1/1

## Live With Safety

Before returning machine to customer, make sure machine is functioning properly, especially the safety systems. Install all guards and shields.



TS231 -19-07OCT88

DX,LIVE -19-25SEP92-1/1

10  
05  
11



## Machine Specifications

*NOTE: (Specifications and design subject to change without notice.)*

Item	Measurement	Specification
5105—3029D <i>POWERTECH</i> ® Engine, Naturally Aspirated		
Factory Observed PTO	Power	29.8 kW (40 hp) at 2300 rpm
Maximum Engine	Torque	170 N•m at 1400 rpm
Cylinders	Quantity	3
Bore	Distance	106 mm (4.17 in.)
Stroke	Distance	110 mm (4.33 in.)
Displacement	Volume	2.9 L (179 cu in.)
Compression	Ratio	17.4:1
Cylinder Firing	Order	1—2—3
Intake Valve	Clearance	0.35 mm (0.014 in.)
Exhaust Valve	Clearance	0.45 mm (0.018 in.)
Slow Idle	Speed	825 ± 25 rpm
Fast Idle	Speed	2500 ± 25 rpm
Operating Range	Speed	1400—2300 rpm
Injection Pump Timing	Position	16.5° BTDC (TimeTrac)
5205—3029D <i>POWERTECH</i> ® Engine, Naturally Aspirated		
Factory Observed PTO	Power	35.8 kW (48 hp) at 2300 rpm
Maximum Engine	Torque	188 N•m at 1400 rpm
Cylinders	Quantity	3

*General Specifications*

10  
10  
2

Item	Measurement	Specification
Bore	Distance	106 mm (4.17 in.)
Stroke	Distance	110 mm (4.33 in.)
Displacement	Volume	2.9 L (179 cu. in.)
Compression	Ratio	17.4:1
Cylinder Firing	Order	1—2—3
Intake Valve	Clearance	0.35 mm (0.014 in.)
Exhaust Valve	Clearance	0.45 mm (0.018 in.)
Slow Idle	Speed	825 ± 25 rpm
Fast Idle	Speed	2500 ± 25 rpm
Operating Range	Speed	1400—2300 rpm
Injection Pump Timing	Position	16.5° BTDC (TimeTrac)

Electrical System—12-Volt, Negative Ground

Battery	Voltage Cold Cranking Amps BCI Group Size	12-volt 700 CCA 28 H
Alternator	Amperage	40 amps
Starting Motor	Voltage	12 volts

Item	Measurement	Specification
Power Take-Off		
Engine—540	Speed	2200 rpm

Item	Measurement	Specification
Hydraulic System		
Pump Displacement—Steering	Displacement	11.9 cu cm (0.73 cu in.)

Continued on next page

AG.OUO1032,2637 -19-15SEP99-2/3

## General Specifications

10  
10  
3

Item	Measurement	Specification
Pump Displacement—Implement	Displacement	20 cu cm (1.22 cu in.)
Steering <sup>1</sup>	Flow Rate	24.6 L/min. (6.5 gpm)
Implement <sup>1</sup>	Flow Rate	41.3 L/min. (10.9 gpm)
Steering (Maximum)	Pressure	13 000—13 500 kPa (130—135 bar) (1885—1955 psi)
Implement (Maximum)	Pressure	19 000—19 700 kPa (190—197 bar) (2755—2855 psi)
Hitch Lift	Capacity	1355 kg (2990 lb)

<sup>1</sup> Flow rate at 90% pump efficiency and engine at rated speed.

AG,OUO1032,2637 -19-15SEP99-3/3

## Drain and Refill Capacities

Item	Measurement	Specification
Fuel Tank	Capacity	85.5 L (22.6 gal) Approximate
Cooling System	Capacity	8.93 L (2.4 gal) Approximate
Crankcase (including filter change)	Capacity	7.5 L (7.9 qt) Approximate
SyncReverser™ Transmission	Capacity	33 L (8.7 gal) Approximate
Mechanical Front Wheel Drive (MFWD)—If Equipped		
Wheel Hubs (Each)	Capacity	0.5 L (0.53 qt) Approximate
Axle Housing	Capacity	4 L (4.2 qt) Approximate

*SyncReverser is a trademark of Deere & Company*

AG,OUO1032,2638 -19-15SEP99-1/1

## Machine Dimensions

*NOTE: (Specifications and design subject to change without notice.)*

*NOTE: All dimensions are of a machine equipped with standard tires.*

Item	Measurement	Specification
5105 with 2-Wheel Drive		
Standard Front Tire	Size	7.5-16
Standard Rear Tire	Size	14.9-28
Overall Width (Outside Edge of Tires)	Width	1753 mm (69.0 in.) minimum
Overall Length (Including Hitch Draft Links)	Length	2766 mm (108.9 in.)
Overall Height from Ground-to-Top of Hood	Height	1303 mm (51.3 in.)
Overall Height from Ground-to-Top of Steering Wheel	Height	1551 mm (61.1 in.)
Overall Height from Ground-to-Top of Roll-Gard ROPS	Height	2296 mm (90.4 in.)
Overall Height from Ground-to-Top of Folded ROPS	Height	1900 mm (74.8 in.)
Overall Height from Ground-to-Top of Drawbar	Height	424 mm (16.7 in.)
Overall Height from Ground-to-Crop Clearance—Front Axle	Height	480 mm (18.9 in.)
Centerline of Rear Axle to Folded ROPS	Distance	1257 mm (49.5 in.)
Wheelbase	Distance	1950 mm (76.8 in.)
Turning Radius with Brakes	Radius	2.44 m (8.8 ft)
Turning Radius without Brakes	Radius	3.29 m (10.8 ft)

Continued on next page

CED.OUO1032,2593 -19-25AUG99-1/5

*General Specifications*

10  
10  
5

Item	Measurement	Specification
Average Shipping Weight, Unballasted	Weight	1848 kg (4075 lb)
5105 with MFWD		
Standard Front Tire	Size	9.5-24
Standard Rear Tire	Size	14.9-28
Overall Width (Outside Edge of Tires)	Width	1753 mm (69.0 in.) Minimum
Overall Length (Including Hitch Draft Links)	Length	3261 mm (128.4 in.)
Overall Height from Ground-to-Top of Hood	Height	1303 mm (51.3 in.)
Overall Height from Ground-to-Top of Steering Wheel	Height	1552 mm (61.1 in.)
Overall Height from Ground-to-Top of Roll-Gard ROPS	Height	2296 mm (90.4 in.)
Overall Height from Ground-to-Top of Folded ROPS	Height	1900 mm (76.8 in.)
Overall Height from Ground-to-Top of Drawbar	Height	424 mm (16.7 in.)
Overall Height from Ground-to-Crop Clearance—Front Axle	Height	368 mm (14.5 in.)
Centerline of Rear Axle to Folded ROPS	Distance	1257 mm (49.5 in.)
Wheelbase	Width	1950 mm (76.8 in.)
Turning Radius with Brakes <sup>1</sup>	Radius	3.02 m (9.9 ft)

<sup>1</sup> With MFWD disengaged.

Continued on next page

CED,OUO1032,2593 -19-25AUG99-2/5

*General Specifications*

10  
10  
6

Item	Measurement	Specification
Turning Radius without Brakes	Radius	3.32 m (10.9 ft)
Average Shipping Weight, Unballasted	Weight	2030 kg (4475 lb)
<b>Item</b>		
<b>Measurement</b>		
<b>Specification</b>		
5205 with 2-Wheel Drive		
Standard Front Tire	Size	7.5-16
Standard Rear Tire	Size	14.9-28
Overall Width (Outside Edge of Tires)	Width	1753 mm (69.0 in.) minimum
Overall Length (Including Hitch Draft Links)	Length	2766 mm (108.9 in.)
Overall Height from Ground-to-Top of Hood	Height	1303 mm (51.3 in.)
Overall Height from Ground-to-Top of Steering Wheel	Height	1551 mm (61.1 in.)
Overall Height from Ground-to-Top of Roll-Gard ROPS	Height	2296 mm (90.4 in.)
Overall Height from Ground-to-Top of Folded ROPS	Height	1900 mm (74.8 in.)
Overall Height from Ground-to-Top of Drawbar	Height	424 mm (16.7 in.)
Overall Height from Ground-to-Crop Clearance—Front Axle	Height	480 mm (18.9 in.)
Centerline of Rear Axle to Folded ROPS	Distance	1257 mm (49.5 in.)
Wheelbase	Distance	1950 mm (76.8 in.)
Turning Radius with Brakes	Radius	2.44 m (8.8 ft)
Turning Radius without Brakes	Radius	3.29 m (10.8 ft)

Continued on next page

CED.OUO1032,2593 -19-25AUG99-3/5

*General Specifications*

10  
10  
7

Item	Measurement	Specification
Average Shipping Weight, Unballasted	Weight	1848 kg (4075 lb)
5205 with MFWD		
Standard Front Tire	Size	9.5-24
Standard Rear Tire	Size	14.9-28
Overall Width (Outside Edge of Tires)	Width	1753 mm (69.0 in.) Minimum
Overall Length (Including Hitch Draft Links)	Length	3261 mm (128.4 in.)
Overall Height from Ground-to-Top of Hood	Height	1303 mm (51.3 in.)
Overall Height from Ground-to-Top of Steering Wheel	Height	1552 mm (61.1 in.)
Overall Height from Ground-to-Top of Roll-Gard ROPS	Height	2296 mm (90.4 in.)
Overall Height from Ground-to-Top of Folded ROPS	Height	1900 mm (76.8 in.)
Overall Height from Ground-to-Top of Drawbar	Height	424 mm (16.7 in.)
Overall Height from Ground-to-Crop Clearance—Front Axle	Height	368 mm (14.5 in.)
Centerline of Rear Axle to Folded ROPS	Distance	1257 mm (49.5 in.)
Wheelbase	Width	1950 mm (76.8 in.)
Turning Radius with Brakes <sup>1</sup>	Radius	3.02 m (9.9 ft)

<sup>1</sup> With MFWD disengaged.

Continued on next page

CED,OUO1032,2593 -19-25AUG99-4/5

*General Specifications*

10  
10  
8

<b>Item</b>	<b>Measurement</b>	<b>Specification</b>
Turning Radius without Brakes	Radius	3.32 m (10.9 ft)
Average Shipping Weight, Unballasted	Weight	2030 kg (4475 lb)

CED,OUO1032,2593 -19-25AUG99-5/5

## Ground Speed Estimates

*NOTE: Ground Speed—km/h (mph) at 2300 rpm engine speed.*

Item	Measurement	Specification
Rear Tires—14.9-28 R1		
Gear A-1	Speed	3.0 km/h (1.86 mph)
Gear A-2	Speed	4.29 km/h (2.67 mph)
Gear A-3	Speed	6.07 km/h (3.77 mph)
Gear A-4	Speed	8.50 km/h (5.28 mph)
Gear B-1	Speed	10.48 km/h (6.51 mph)
Gear B-2	Speed	14.99 km/h (9.32 mph)
Gear B-3	Speed	21.19 km/h (13.17 mph)
Gear B-4	Speed	29.70 km/h (18.46 mph)
Gear R-1	Speed	3.58 km/h (2.23 mph)
Gear R-2	Speed	5.12 km/h (3.18 mph)
Gear R-3	Speed	7.24 km/h (4.50 mph)
Gear R-4	Speed	10.15 km/h (6.31 mph)
Rear Tires—16.9-28 R1		
Gear A-1	Speed	3.14 km/h (1.94 mph)
Gear A-2	Speed	4.48 km/h (2.79 mph)
Gear A-3	Speed	6.34 km/h (3.94 mph)
Gear A-4	Speed	8.88 km/h (5.52 mph)
Gear B-1	Speed	10.95 km/h (6.80 mph)
Gear B-2	Speed	15.66 km/h (9.74 mph)
Gear B-3	Speed	22.14 km/h (13.76 mph)

Continued on next page

AG.OUO1032,2653 -19-23SEP99-1/6

10  
10  
10

Item	Measurement	Specification
Gear B-4	Speed	31.04 km/h (19.29 mph)
Gear R-1	Speed	3.74 km/h (2.33 mph)
Gear R-2	Speed	5.35 km/h (3.32 mph)
Gear R-3	Speed	7.56 km/h (4.70 mph)
Gear R-4	Speed	10.61 km/h (6.59 mph)
Rear Tires—13.6-28 R1		
Gear A-1	Speed	2.87 km/h (1.78 mph)
Gear A-2	Speed	4.11 km/h (2.56 mph)
Gear A-3	Speed	5.82 km/h (3.62 mph)
Gear A-4	Speed	8.15 km/h (5.06 mph)
Gear B-1	Speed	10.05 km/h (6.24 mph)
Gear B-2	Speed	14.38 km/h (8.94 mph)
Gear B-3	Speed	20.32 km/h (12.63 mph)
Gear B-4	Speed	28.48 km/h (17.70 mph)
Gear R-1	Speed	3.43 km/h (2.14 mph)
Gear R-2	Speed	4.16 km/h (3.05 mph)
Gear R-3	Speed	6.94 km/h (4.32 mph)
Gear R-4	Speed	9.73 km/h (6.05 mph)
Rear Tires—16.9-24 R1		
Gear A-1	Speed	2.91 km/h (1.80 mph)
Gear A-2	Speed	4.16 km/h (2.59 mph)
Gear A-3	Speed	5.89 km/h (3.66 mph)
Gear A-4	Speed	8.24 km/h (5.12 mph)

Sample of manual. Download All 894 pages at:

<https://www.arepairmanual.com/downloads/john-deere-5105-and-5205-tractors-service-repair-technical-manual/>

Continued on next page

AG.OUO1032.2653. -19-23SEP99-2/6