

Product: Kubota L4400 Service Manual

Full Download: <https://www.arepairmanual.com/downloads/kubota-l4400-service-manual/>

WSM

WORKSHOP MANUAL TRACTOR

L4400

Kubota

KiSC issued 01, 2014 A

Sample of manual. Download All 378 pages at:

<https://www.arepairmanual.com/downloads/kubota-l4400-service-manual/>

TO THE READER

This Workshop Manual has been prepared to provide servicing personnel with information on the mechanism, service and maintenance of L4400. It is divided into three parts, "General", "Mechanism" and "Servicing".

■ General

Information on the tractor identification, the general precautions, maintenance check list, check and maintenance and special tools are described.

■ Mechanism

Information on the construction and function are included. This part should be understood before proceeding with troubleshooting, disassembling and servicing.

Refer to Diesel Engine / Tractor Mechanism Workshop Manual (Code No. 97897-01872 / 97897-18200) for the one which has not been described to this workshop manual.

■ Servicing

Information on the troubleshooting, servicing specification lists, tightening torque, checking and adjusting, disassembling and assembling, and servicing which cover procedures, precautions, factory specifications and allowable limits.

All information, illustrations and specifications contained in this manual are based on the latest product information available at the time of publication.

The right is reserved to make changes in all information at any time without notice.

October 2005

© KUBOTA Corporation 2005

Record of Revisions

For pdf, use search function {Search word} to find all the revised locations.

Last digit of the Code No.	Issue month	Main Revised Point and Corrective Measures {Search word}	Reference Page
2	2014.01	Added the wiring diagram with third function valve.	G-33, 9-M2



SAFETY FIRST

This symbol, the industry's "Safety Alert Symbol" is used throughout this manual and on labels on the machine itself to warn of the possibility of personal injury. Read these instructions carefully. It is essential that you read the instructions and safety regulations before you attempt to repair or use this unit.



DANGER : Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING : Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.




CAUTION : Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.



IMPORTANT : Indicates that equipment or property damage could result if instructions are not followed.




NOTE : Gives helpful information.

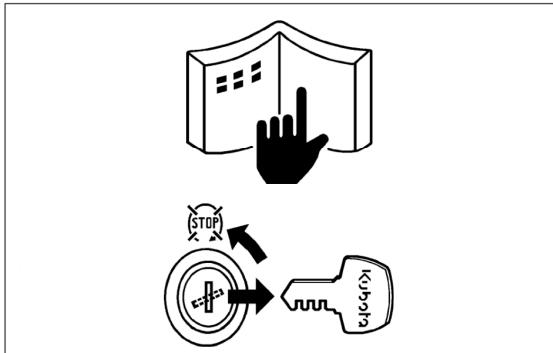


BEFORE SERVICING AND REPAIRING

- Read all instructions and safety instructions in this manual and on your machine safety decals.
- Clean the work area and machine.
- Park the machine on a firm and level ground, and set the parking brake.
- Lower the implement to the ground.
- Stop the engine, and remove the key.
- Disconnect the battery negative cable.
- Hang a "DO NOT OPERATE" tag in operator station.

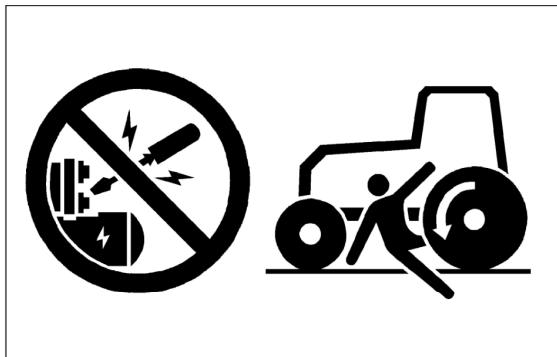


SAFETY STARTING

- Do not start the engine by shorting across starter terminals or bypassing the safety start switch.
- Do not alter or remove any part of machine safety system.
- Before starting the engine, make sure that all shift levers are in neutral positions or in disengaged positions.
- Never start the engine while standing on ground. Start the engine only from operator's seat.

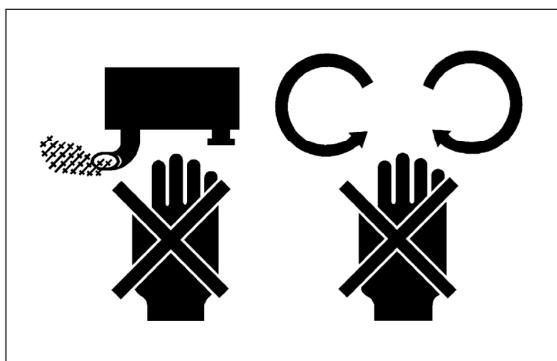


SAFETY WORKING


- Do not work on the machine while under the influence of alcohol, medication, or other substances or while fatigued.
- Wear close fitting clothing and safety equipment appropriate to the job.
- Use tools appropriate to the work. Makeshift tools, parts, and procedures are not recommended.
- When servicing is performed together by two or more persons, take care to perform all work safely.
- Do not work under the machine that is supported solely by a jack. Always support the machine by safety stands.
- Do not touch the rotating or hot parts while the engine is running.
- Never remove the radiator cap while the engine is running, or immediately after stopping. Otherwise, hot water will spout out from radiator. Only remove radiator cap when cool enough to touch with bare hands. Slowly loosen the cap to first stop to relieve pressure before removing completely.
- Escaping fluid (fuel or hydraulic oil) under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic or fuel lines. Tighten all connections before applying pressure.

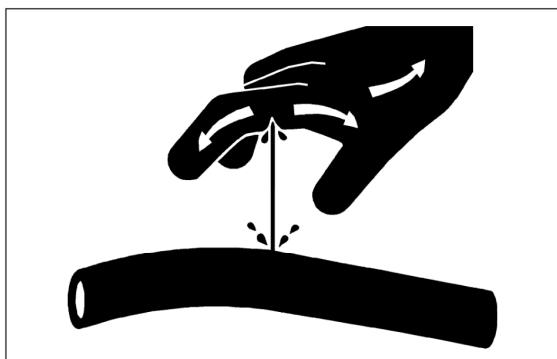

AVOID FIRES


- Fuel is extremely flammable and explosive under certain conditions. Do not smoke or allow flames or sparks in your working area.
- To avoid sparks from an accidental short circuit, always disconnect the battery negative cable first and connect it last.
- Battery gas can explode. Keep sparks and open flame away from the top of battery, especially when charging the battery.
- Make sure that no fuel has been spilled on the engine.

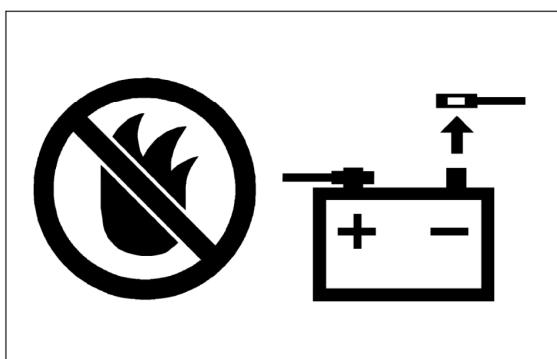

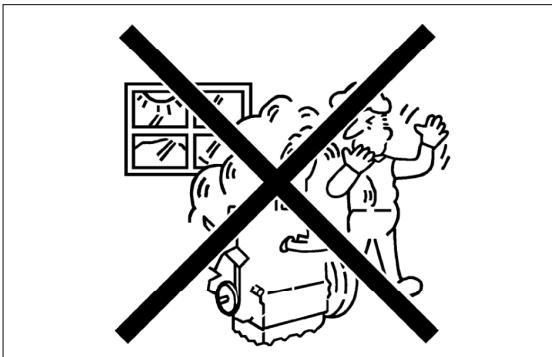

VENTILATE WORK AREA

- If the engine must be running to do some work, make sure the area is well ventilated. Never run the engine in a closed area. The exhaust gas contains poisonous carbon monoxide.

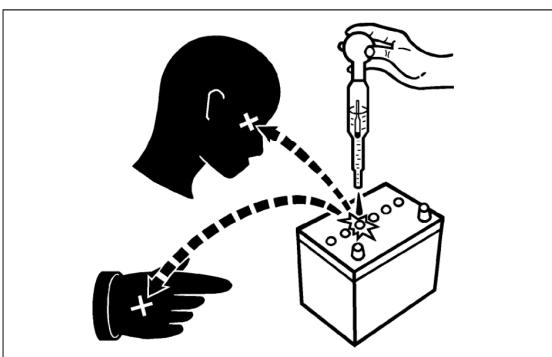


PREVENT ACID BURNS

- Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, clothing and cause blindness if splashed into eyes. Keep electrolyte away from eyes, hands and clothing. If you spill electrolyte on yourself, flush with water, and get medical attention immediately.



DISPOSE OF FLUIDS PROPERLY

- Do not pour fluids into the ground, down a drain, or into a stream, pond, or lake. Observe relevant environmental protection regulations when disposing of oil, fuel, coolant, electrolyte and other harmful waste.

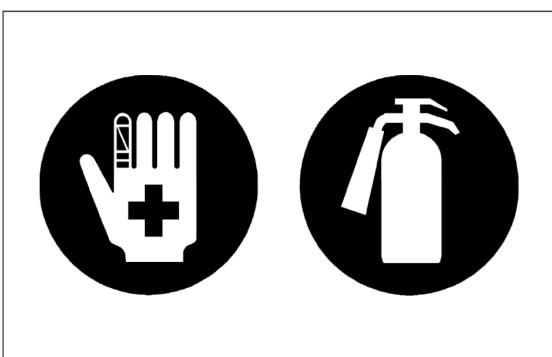

PREPARE FOR EMERGENCIES


- Keep a first aid kit and fire extinguisher handy at all times.
- Keep emergency numbers for doctors, ambulance service, hospital and fire department near your telephone.

SAFETY DECALS

The following safety decals are installed on the machine.

If a decal becomes damaged, illegible or is not on the machine, replace it. The decal part number is listed in the parts list.

(1) Part No. TA140-4933-1 [Manual Transmission type]

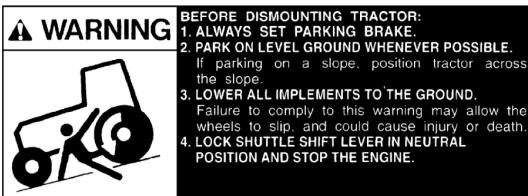


1AGAMAAAP400A

(1) Part No. TD170-4933-1 [HST type]




1AGAMAAAP3720

(2) Part No. TA240-9848-1 [Foldable ROPS Type]

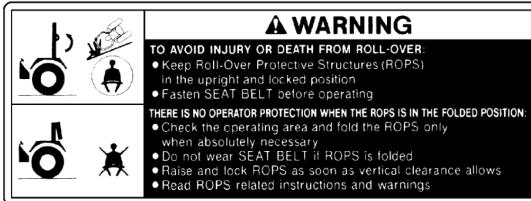



(3) Part No. TC420-4956-1

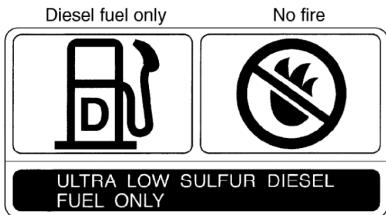

1AGAIDHAP154E

9Y0211350IC1001A

(4) Part No. 3A111-9554-1 [Foldable ROPS type]

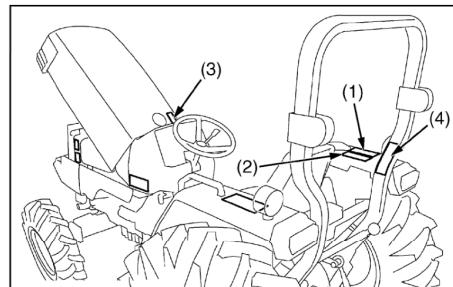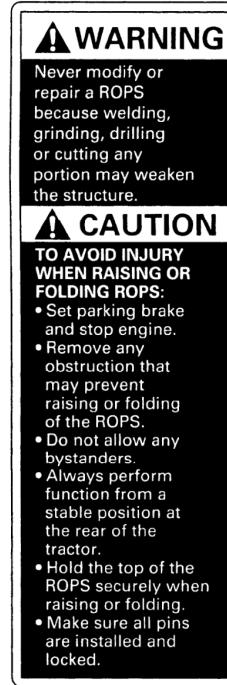

(1) Part No. 35260-3491-4

! CAUTION


TO AVOID PERSONAL INJURY:

1. Read and understand the operator's manual before operation.
2. Before starting the engine, make sure that everyone is at a safe distance from the tractor and that the PTO is OFF.
3. Do not allow passengers on the tractor at any time.
4. Before allowing other people to use the tractor, have them read the operator's manual.
5. Check the tightness of all nuts and bolts regularly.
6. Keep all shields in place and stay away from all moving parts.
7. Lock the two brake pedals together before driving on the road.
8. Slow down for turns, or rough roads, or when applying individual brakes.
9. On public roads use SMV emblem and hazard lights, if required by local traffic and safety regulations.
10. Pull only from the drawbar.
11. Before dismounting, lower the implement to the ground, set the parking brake, stop the engine and remove the key.
12. Securely support tractor and implements before working underneath.



(3) Part No.
32751-4958-1
Stay clear of engine
fan and fan belt.



(2) Part No. TD060-3012-2

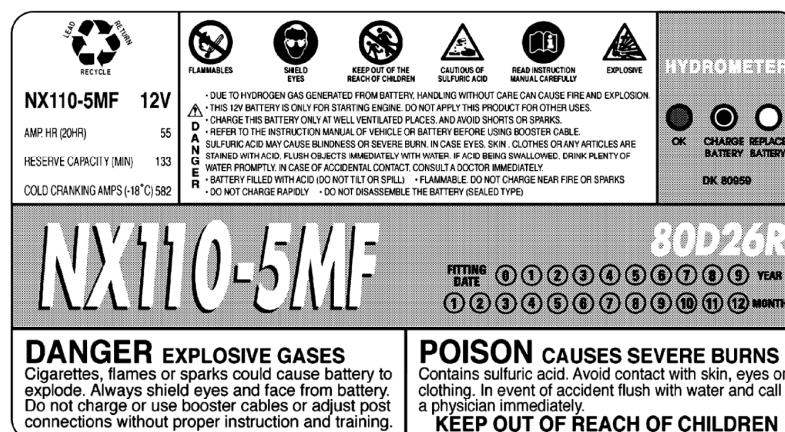

(4) Part No.
TD030-4958-1
Do not touch hot
surface like muffler.
etc.

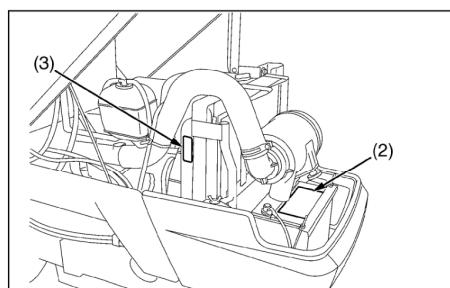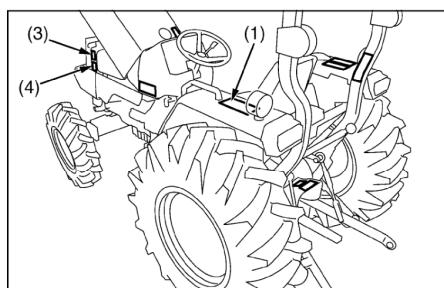


(1) Part No. TA040-4965-2



DANGER
**TO AVOID POSSIBLE INJURY OR DEATH
 FROM A MACHINE RUNAWAY.**

1. Do not start engine by shorting across starter terminals or bypassing the safety start switch. Machine may start in gear and move if normal starting circuitry is bypassed.
 2. Start engine only from operator's seat with transmission and PTO OFF.
 Never start engine while standing on the ground.

(2) Part No. TA040-4959-3

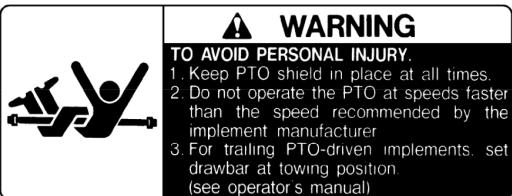

WARNING
TO AVOID PERSONAL INJURY.

1. Keep PTO shield in place at all times.
 2. Do not operate the PTO at speeds faster than the speed recommended by the implement manufacturer.
 3. For trailing PTO-driven implements, set drawbar at towing position (see operator's manual).

(3) Part No. TA040-4935-1





WARNING
TO AVOID PERSONAL INJURY:

1. Attach pulled or towed loads to the drawbar only.
 2. Use the 3-point hitch only with equipment designed for 3-point hitch usage.

(4) Part No. 6C300-4744-1



1AGAIHFAP069A

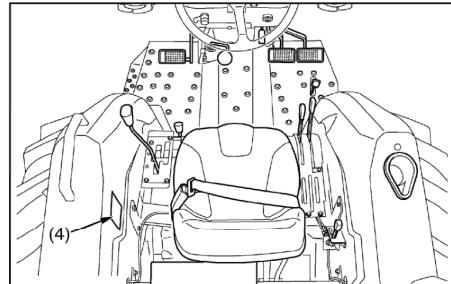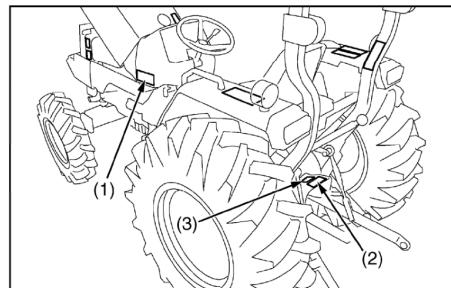

CARE OF DANGER, WARNING AND CAUTION LABELS

1. Keep danger, warning and caution labels clean and free from obstructing material.
2. Clean danger, warning and caution labels with soap and water, dry with a soft cloth.
3. Replace damaged or missing danger, warning and caution labels with new labels.
4. If a component with danger, warning or caution label(s) affixed is replaced with new part, make sure new label(s) is (are) attached in the same location(s) as the replaced component.
5. Mount new danger, warning and caution labels by applying on a clean dry surface and pressing any bubbles to outside edge.

9Y0211350IC1002A

SPECIFICATIONS

Model			L4400 (4WD)
PTO power			28.0 (37.5) / 2600
Engine	Maker		KUBOTA
	Model		V2203-M-E2A
	Type		Indirect injection, vertical, water-cooled 4 cycle diesel
	Number of cylinders		4
	Bore and stroke	mm (in.)	87 × 92.4 (3.4 × 3.6)
	Total displacement	L (cu.in.)	2.197 (134.1)
	Engine net power	kW (HP) / rpm	32.1 (43.0) / 2600
	Rated revolution	rps (rpm)	43.3 (2600)
	Maximum torque	N·m (lbf·ft)	139.5 (102.9)
	Battery		12 V, RC : 133 min, CCA : 582 A
Capacities	Fuel		Diesel fuel No.1 [below -10 °C (14 °F)] Diesel fuel No.2 [above -10 °C (14 °F)]
	Fuel tank	L (U.S.gals)	42 (11.1)
	Engine crankcase (with filter)		7.6 (8.0)
	Engine coolant	L (U.S.qts)	6.5 (6.9)
Dimensions	Transmission case	L (U.S.gals)	40 (10.6)
	Overall length (without 3p)	mm (in.)	3005 (118.3)
	Overall width (min. tread)	mm (in.)	1585 (62.4)
	Overall height (with ROPS)	mm (in.)	2170 (85.4)
	Overall height (Top of steering wheel)	mm (in.)	1495 (58.9)
	Wheel base	mm (in.)	1845 (72.6)
	Min. ground clearance	mm (in.)	385 (15.2)
	Tread	Front	1155 (45.5)
		Rear	1180 (46.5), 1200 (47.2), 1300 (51.2), 1450 (57.1), 1545 (60.8)
	Weight (with ROPS)		1430 (3153)
Traveling system	Clutch		
	Tires	AG Front	8.3 - 16
		AG Rear	14.9 - 24
	Indust. (option)	Front / Rear	10 - 16.5 / 17.5L - 24
	Steering		Hydrostatic power steering
	Transmission		Gear shift, 8 forward and 4 reverse
	Brake		Mechanical, wet disk type
	Min. turning radius (with brake)		2.6 (8.5)

W1028103


Model		L4400 (4WD)
Hydraulic unit	Hydraulic control system	Position control
	Pump capacity (main) L /min (gal/min)	29.4 (7.8)
	Pump capacity (PS) L /min (gal/min)	17.9 (4.7)
	Three point hitch	Category 1
	Max. lift force At lift points kg (lbs)	1300 (2870)
	24 in. behind lift points kg (lbs)	1053 (2310)
	System pressure MPa (kgf/cm ²) [psi]	17.7 (180) [2560]
PTO	Rear PTO	SAE 1-3/8, 6-splines
	PTO / Engine speed rpm	540 / 2475

NOTE: * Manufacturer's estimate

The company reserves the right to change the specifications without notice.

W1029358

DIMENSIONS

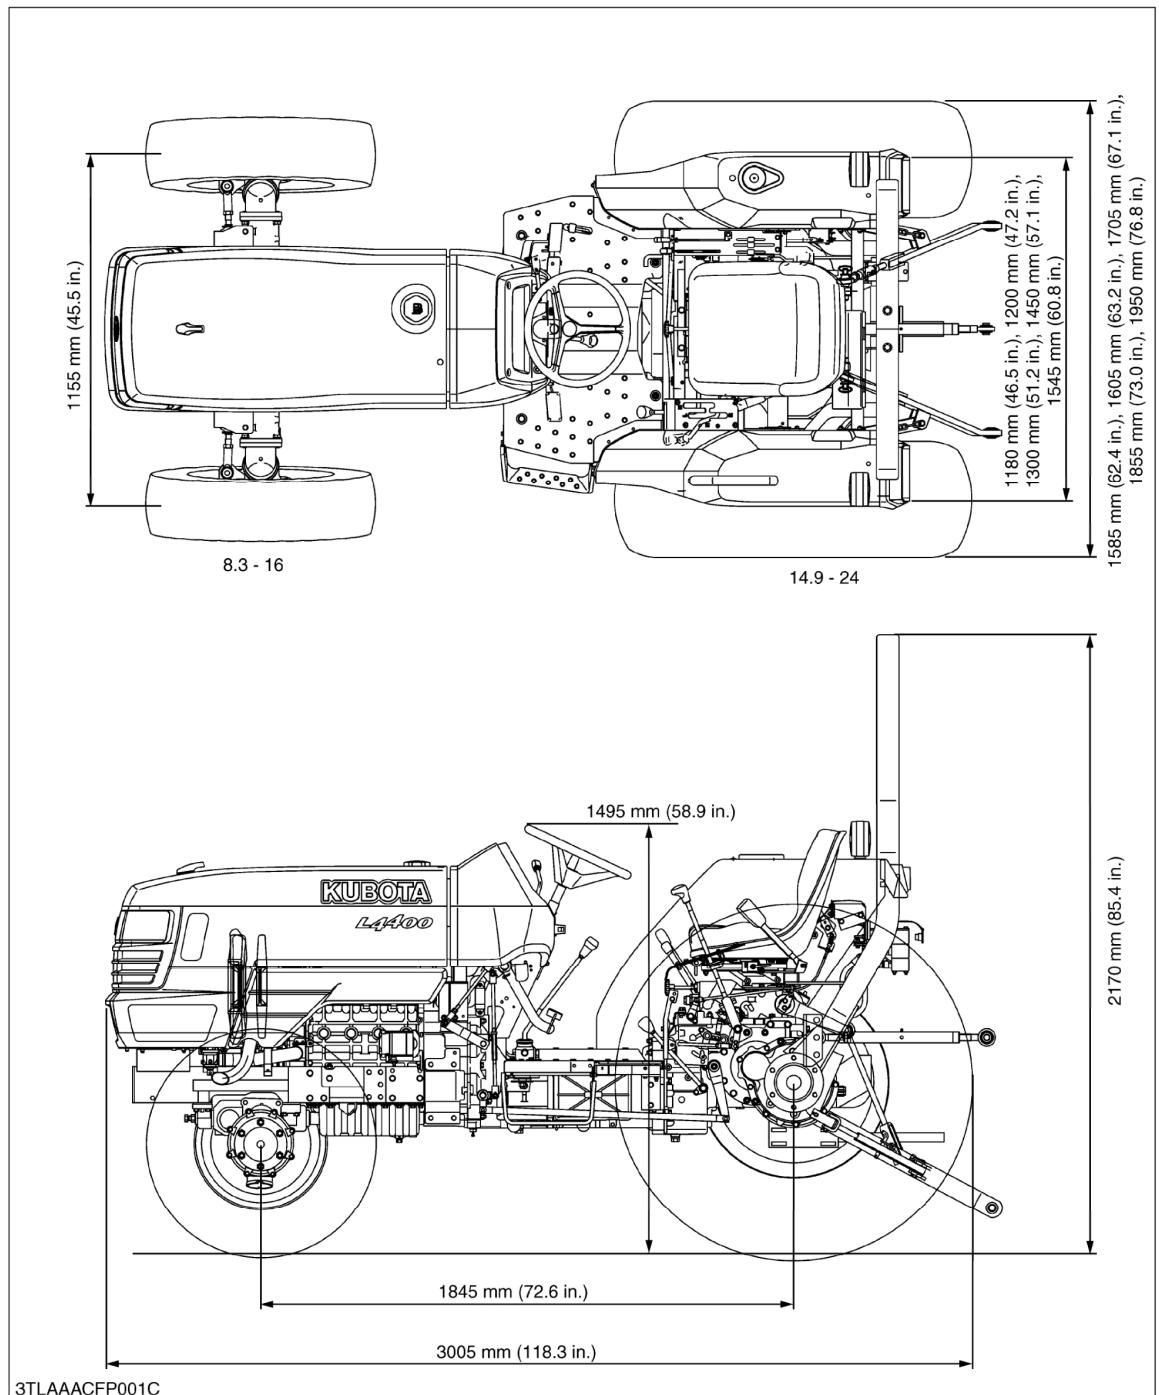


G GENERAL

GENERAL

CONTENTS

1. TRACTOR IDENTIFICATION	G-1
2. GENERAL PRECAUTIONS	G-2
3. HANDLING PRECAUTIONS FOR ELECTRICAL PARTS AND WIRING..	G-3
[1] WIRING.....	G-3
[2] BATTERY.....	G-5
[3] FUSE.....	G-5
[4] CONNECTOR.....	G-5
[5] HANDLING OF CIRCUIT TESTER.....	G-7
4. LUBRICANTS, FUEL AND COOLANT	G-8
5. TIGHTENING TORQUES	G-9
6. MAINTENANCE	G-10
7. CHECK AND MAINTENANCE	G-12
[1] DAILY CHECK	G-12
[2] CHECK POINTS OF INITIAL 50 HOURS	G-13
[3] CHECK POINTS OF EVERY 50 HOURS	G-16
[4] CHECK POINTS OF EVERY 100 HOURS	G-18
[5] CHECK POINTS OF EVERY 200 HOURS.....	G-23
[6] CHECK POINTS OF EVERY 400 HOURS	G-25
[7] CHECK POINT OF EVERY 600 HOURS	G-26
[8] CHECK POINT OF EVERY 800 HOURS	G-26
[9] CHECK POINT OF EVERY 1500 HOURS	G-26
[10]CHECK POINT OF EVERY 3000 HOURS	G-26
[11]CHECK POINT OF EVERY 1 YEAR.....	G-26
[12]CHECK POINTS OF EVERY 2 YEARS.....	G-27
[13]OTHERS	G-30
8. SPECIAL TOOLS	G-32
[1] SPECIAL TOOLS FOR ENGINE	G-32
[2] SPECIAL TOOLS FOR TRACTOR.....	G-38
9. TIRES	G-47
[1] TIRE PRESSURE	G-47
[2] TREADS.....	G-48
(1) Front Wheels.....	G-48
(2) Rear Wheels	G-49
[3] TIRE LIQUID INJECTION	G-50
[4] IMPLEMENT LIMITATIONS.....	G-53




1. TRACTOR IDENTIFICATION

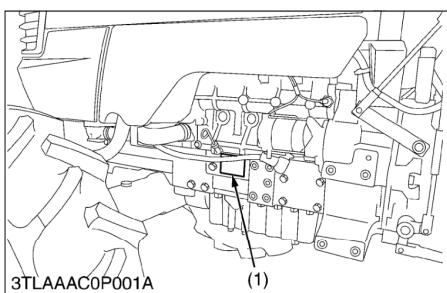


(1) Tractor Identification Plate
(2) Tractor Serial Number

(3) Engine Serial Number
(4) Hour Meter

W1012431

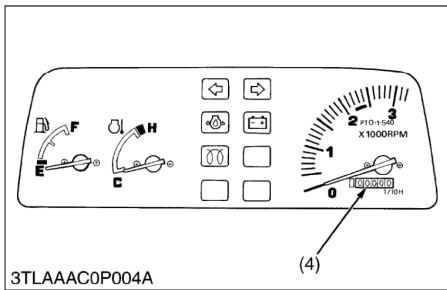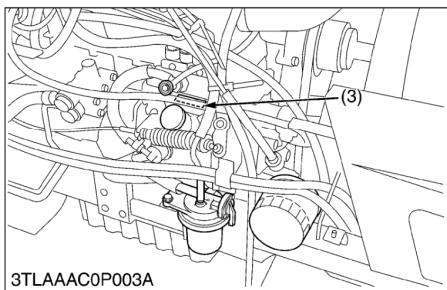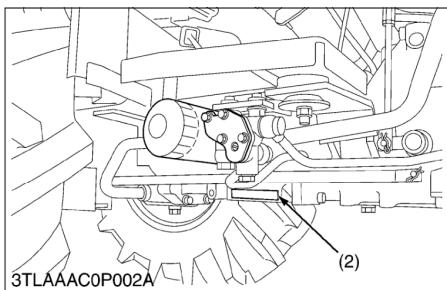

2. GENERAL PRECAUTIONS

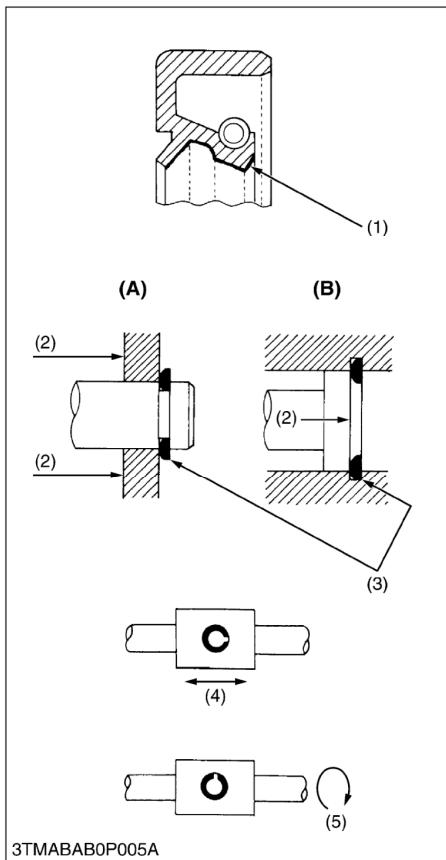

- During disassembly, carefully arrange removed parts in a clean area to prevent confusion later. Screws, bolts and nuts should be installed in their original position to prevent reassembly errors.
- When special tools are required, use KUBOTA genuine special tools. Special tools which are not frequently used should be made according to the drawings provided.
- Before disassembling or servicing electrical wires, always disconnect the ground cable from the battery first.
- Remove oil and dirt from parts before measuring.
- Use only KUBOTA genuine parts for parts replacement to maintain machine performance and to assure safety.
- Gaskets and O-rings must be replaced during reassembly. Apply grease to new O-rings or oil seals before assembling. See the figure left side.
- When reassembling external snap rings or internal snap rings, they must be positioned so that sharp edge faces against the direction from which a force is applied. See the figure left side.
- When inserting spring pins, their splits must face the direction from which a force is applied. See the figure left side.
- To prevent damage to the hydraulic system, use only specified fluid or equivalent.

(1) Grease

(2) Force

(3) Sharp Edge

(4) Axial Force


(5) Rotating Movement

(A) External Snap Ring

(B) Internal Snap Ring

W1012578

3. HANDLING PRECAUTIONS FOR ELECTRICAL PARTS AND WIRING

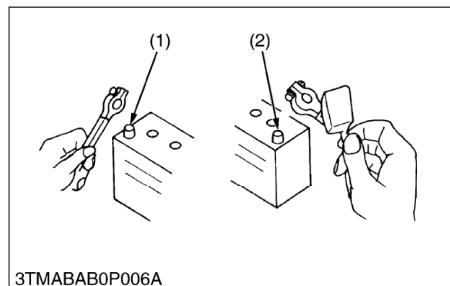

To ensure safety and prevent damage to the machine and surrounding equipment, heed the following precautions in handling electrical parts and wiring.

■ IMPORTANT


- Check electrical wiring for damage and loosened connection every year. To this end, educate the customer to do his or her own check and at the same time recommend the dealer to perform periodic check for a fee.
- Do not attempt to modify or remodel any electrical parts and wiring.
- When removing the battery cables, disconnect the negative cable first. When installing the battery cables, connect the positive cable first.

(1) Negative Terminal

(2) Positive Terminal

W1012864

[1] WIRING

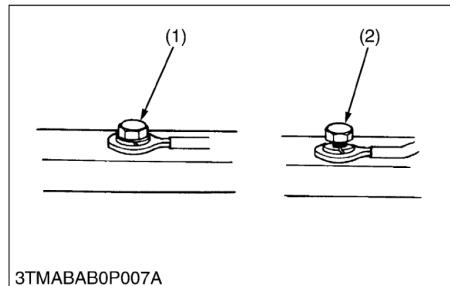


- Securely tighten wiring terminals.

(1) Correct
(Securely Tighten)

(2) Incorrect
(Loosening Leads to Faulty Contact)

W1013361

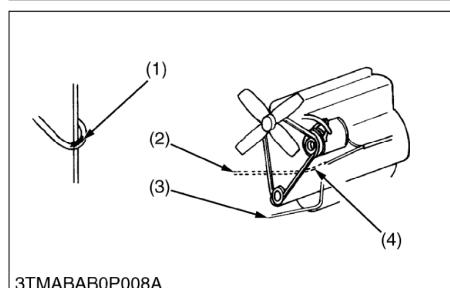


- Do not let wiring contact dangerous part.

(1) Dangerous Part
(2) Wiring (Incorrect)

(3) Wiring (Correct)
(4) Dangerous Part

W1013489

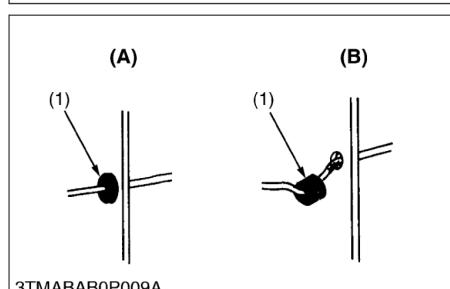


- Securely insert grommet.

(1) Grommet

(A) Correct
(B) Incorrect

W1013601

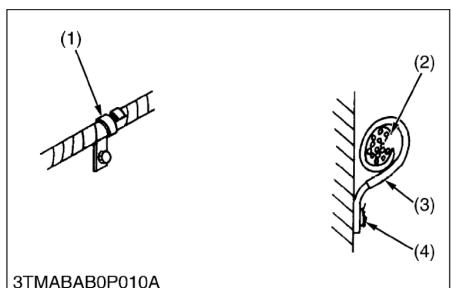


- Securely clamp, being careful not to damage wiring.

(1) Clamp
*Wind Clamp Spirally
(2) Wire Harness

(3) Clamp
(4) Welding Dent

W1013712

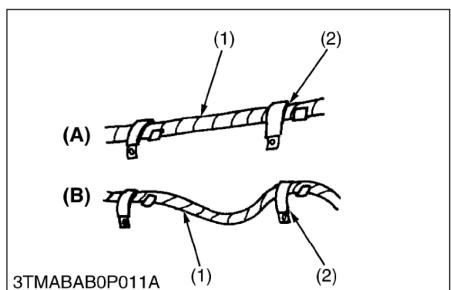


- Clamp wiring so that there is no twist, unnecessary sag, or excessive tension, except for movable part, where sag be required.

(1) Wiring
(2) Clamp

(A) Correct
(B) Incorrect

W1013840

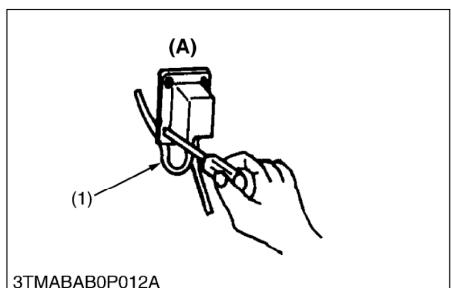


- In installing a part, take care not to get wiring caught by it.

(1) Wiring

(A) Incorrect

W1013977

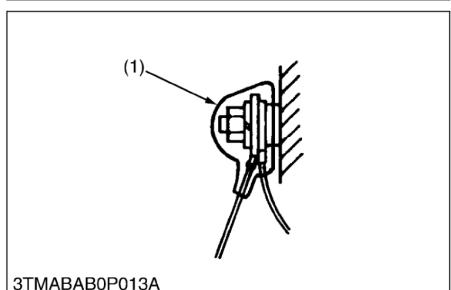


- After installing wiring, check protection of terminals and clamped condition of wiring, only connect battery.

(1) Cover
*Securely Install Cover

W1014071

[2] BATTERY

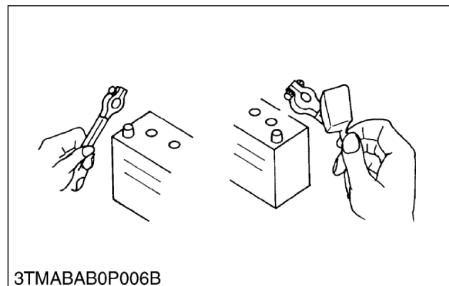


- Take care not to confuse positive and negative terminal posts.
- When removing battery cables, disconnect negative cable first. When installing battery cables, check for polarity and connect positive cable first.
- Do not install any battery with capacity other than is specified (Ah).
- After connecting cables to battery terminal posts, apply high temperature grease to them and securely install terminal covers on them.
- Do not allow dirt and dust to collect on battery.

▲ CAUTION

- Take care not to let battery liquid spill on your skin and clothes. If contaminated, wash it off with water immediately.
- Before recharging the battery, remove it from the machine.
- Before recharging, remove cell caps.
- Do recharging in a well-ventilated place where there is no open flame nearby, as hydrogen gas and oxygen are formed.

W1014256

[3] FUSE

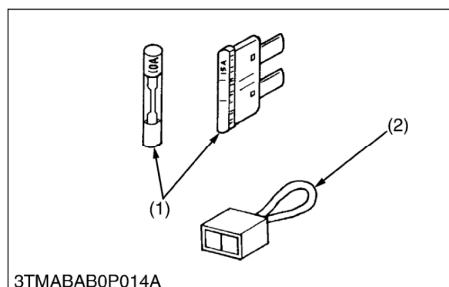


- Use fuses with specified capacity. Neither too large or small capacity fuse is acceptable.
- Never use steel or copper wire in place of fuse.
- Do not install working light, radio set, etc. on machine which is not provided with reserve power supply.
- Do not install accessories if fuse capacity of reserve power supply is exceeded.

(1) Fuse

(2) Fusible Link

W1014481


[4] CONNECTOR

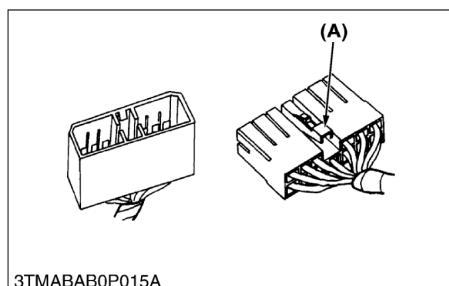

- For connector with lock, push lock to separate.

(A) Push

W1014760

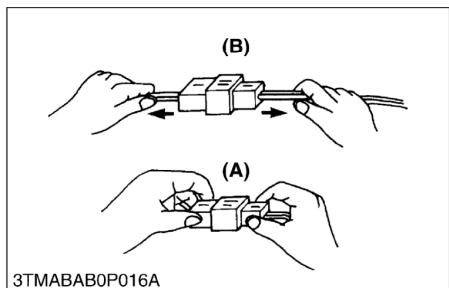


3TMABAB0P016A

- In separating connectors, do not pull wire harnesses.
- Hold connector bodies to separate.

(A) Correct

(B) Incorrect

W1014888

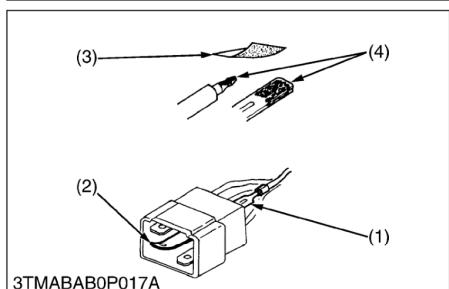


3TMABAB0P017A

- Use sandpaper to remove rust from terminals.
- Repair deformed terminal. Make certain there is no terminal being exposed or displaced.

(1) Exposed Terminal
(2) Deformed Terminal(3) Sandpaper
(4) Rust

W1015004

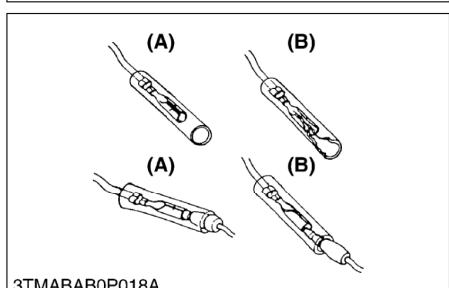


3TMABAB0P018A

- Make certain that there is no female connector being too open.

(A) Correct

(B) Incorrect

W1015151

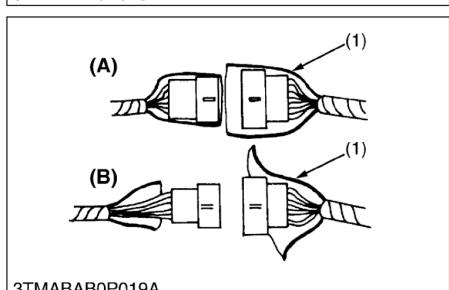

3TMABAB0P019A


- Make certain plastic cover is large enough to cover whole connector.

(1) Cover

(A) Correct
(B) Incorrect

W1015244

[5] HANDLING OF CIRCUIT TESTER

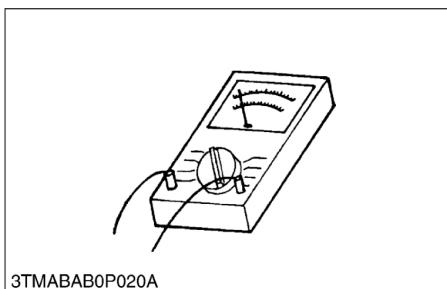

3TMABAB0P020A

- Use tester correctly following manual provided with tester.
- Check for polarity and range.

W1015374

4. LUBRICANTS, FUEL AND COOLANT

No.	Place	Capacity	Lubricants, fuel and coolant
		L4400	
1	Fuel	42 L 11.1 U.S.gals 9.2 Imp.gals	No. 2-D diesel fuel No. 1-D diesel fuel if temperature is below -10 °C (14 °F)
2	Coolant	6.5 L 6.9 U.S.qts 5.7 Imp.qts	Fresh clean water with anti-freeze
3	Engine crankcase (with filter)	7.6 L 8.0 U.S.qts 6.7 Imp.qts	Engine oil : API service classification CD, CE or CF Below 0 °C (32 °F) : SAE10W, 10W-30 or 10W-40 0 to 25 °C (32 to 77 °F) : SAE20, 10W-30 or 10W- 40 Above 25 °C (77 °F) : SAE30, 10W-30 or 10W-40
4	Transmission case	40 L 10.6 U.S.gals 8.8 Imp.gals	KUBOTA UDT or SUPER UDT fluid*
5	Front axle case	6.5 L 6.9 U.S.qts 1.4 Imp.qts	KUBOTA UDT or SUPER UDT fluid or SAE 80 -SAE 90 gear oil
6	Greasing	No. of greasing points	Capacity
	Front wheel hub	2 [2WD only]	Until grease overflows
	Knuckle shaft	2 [2WD only]	
	Front axle support	2	
	Top link	2	
	Top link bracket	2 [with draft control (if equipped)]	
	Battery terminals	2	
	Lift rod	1	

* KUBOTA original transmission hydraulic fluid.

■ NOTE

- Engine Oil :
Oil used in the engine should have an American Petroleum Institute (API) service classification and Proper SAE Engine Oil according to the ambient temperatures as shown above :
- With the emission control now in effect, the CF-4 and CG-4 lubricating oils have been developed for use of a low-sulfur fuel on on-road vehicle engines. When an off-road vehicle engine runs on a high-sulfur fuel, it is advisable to employ the CF, CD or CE lubricating oil with a high total base number. **If the CF-4 or CG-4 lubricating oil is used with a high-sulfur fuel, change the lubricating oil at shorter intervals.**
- Lubricating oil recommended when a low-sulfur or high-sulfur fuel employed.

5. TIGHTENING TORQUES

Screws, bolt and nuts whose tightening torque are not specified in this Workshop Manual should be tightened according to the table below.

Indication on top of bolt	No-grade or 4T			7T			9T					
Material of bolt	SS400, S20C			S43C, S48C			SCr435, SCM435					
Material of opponent part	Ordinariness		Aluminum		Ordinariness		Aluminum		Ordinariness			
Unit	N·m	kgf·m	Ibf·ft									
M6 (6 mm, 0.24 in.)	7.85 to 9.31	0.80 to 0.95	5.79 to 6.87	7.85 to 8.82	0.80 to 0.90	5.79 to 6.50	9.81 to 11.2	1.00 to 1.15	7.24 to 8.31	7.85 to 8.82	0.80 to 0.90	5.79 to 6.50
M8 (8 mm, 0.31 in.)	17.7 to 20.5	1.8 to 2.1	13.1 to 15.1	16.7 to 19.6	1.7 to 2.0	12.3 to 14.4	23.6 to 27.4	2.4 to 2.8	17.4 to 20.2	17.7 to 20.5	1.8 to 2.1	13.1 to 15.1
M10 (10 mm, 0.39 in.)	39.3 to 45.1	4.0 to 4.6	29.0 to 33.2	31.4 to 34.3	3.2 to 3.5	23.2 to 25.3	48.1 to 55.8	4.9 to 5.7	35.5 to 41.2	39.3 to 44.1	4.0 to 4.5	29.0 to 32.5
M12 (12 mm, 0.47 in.)	62.8 to 72.5	6.4 to 7.4	46.3 to 53.5	—	—	—	77.5 to 90.2	7.9 to 9.2	57.2 to 66.5	62.8 to 72.5	6.4 to 7.4	46.3 to 53.5
M14 (14 mm, 0.55 in.)	108 to 125	11.0 to 12.8	79.6 to 92.5	—	—	—	124 to 147	12.6 to 15.0	91.2 to 108	—	—	—
M16 (16 mm, 0.63 in.)	167 to 191	17.0 to 19.5	123 to 141	—	—	—	197 to 225	20.0 to 23.0	145 to 166	—	—	—
M18 (18 mm, 0.71 in.)	246 to 284	25.0 to 29.0	181 to 209	—	—	—	275 to 318	28.0 to 32.5	203 to 235	—	—	—
M20 (20 mm, 0.79 in.)	334 to 392	34.0 to 40.0	246 to 289	—	—	—	368 to 431	37.5 to 44.0	272 to 318	—	—	—

W1034542

6. MAINTENANCE

No.	Period		Indication on hour meter												After since	Refer- ence page		
	Item	50	100	150	200	250	300	350	400	450	500	550	600	650	700			
1	Engine oil	Change	★			☆			☆				☆			every 200Hr	G-13	
2	Engine oil filter	Replace	★			☆			☆				☆			every 200Hr	G-14	
3	Hydraulic oil filter	Replace	★						☆							every 400Hr	G-15	
4	Transmission fluid	Change							☆							every 400Hr	G-27	
5	Front axle case oil	Change							☆							every 400Hr	G-15	
6	Front axle pivot	Adjust											☆			every 600Hr	G-27	
7	Greasing	-	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	every 50Hr	G-16, 17	
8	Engine start system	Check	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	every 50Hr	G-18	
9	Wheel bolt torque	Check	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	every 50Hr	G-19	
10	Battery condition	Check		☆		☆		☆		☆		☆		☆		every 100Hr	G-23	*4
11	Air cleaner element [Double element type] Primary element	Clean		☆		☆		☆		☆		☆		☆		every 100Hr	G-20	*1
		Replace														every 1 year	G-20	@ *2
12	Air cleaner element [Double element type] Secondary element	Replace														every 1 year	G-20	
13	Fuel filter element	Clean	☆		☆		☆		☆		☆		☆		☆	every 100Hr	G-20	@
		Replace							☆							every 400Hr	G-20	
14	Fan belt	Adjust	☆		☆		☆		☆		☆		☆		☆	every 100Hr	G-21	
15	Clutch	Adjust	★	☆		☆		☆		☆		☆		☆		every 100Hr	G-16	
16	Brake	Adjust	☆		☆		☆		☆		☆		☆		☆	every 100Hr	G-22	
17	Radiator hose and clamp	Check				☆			☆				☆			every 200Hr	G-25	
		Replace														every 2 years	G-25	

W1035769

No.	Item	Period	Indication on hour meter														After since	Refer- ence page	
			50	100	150	200	250	300	350	400	450	500	550	600	650	700			
18	Power steering oil line	Check				☆				☆				☆			every 200Hr	G-25	
		Replace															every 2 years	G-25	
19	Fuel line	Check	☆		☆		☆		☆		☆		☆		☆	every 100Hr	G-21	@	
		Replace														every 2 years	G-21	*3	
20	Toe-in	Adjust		☆				☆					☆			every 200Hr	G-26		
21	Intake air line	Check			☆				☆				☆			every 200Hr	G-26	@	
		Replace														every 2 years	G-26	*3	
22	Engine valve clearance	Adjust														every 800Hr	1-S13		
23	Fuel injection nozzle Injection pressure	Check														every 1500Hr	1-S19, S20	@	
24	Injection pump	Check														every 3000Hr	1-S18, S19	@	
25	Cooling system	Flush														every 2 years	G-29		
26	Coolant	Change														every 2 years	G-29		
27	Fuel system	Bleed															G-32		
28	Clutch housing water	Drain														Service as required	G-32		
29	Fuse	Replace															G-33		
30	Light bulb	Replace															G-33		

W1025035

■ IMPORTANT

- The jobs indicated by ★ must be done after the first 50 hours of operation.
- *1 : Air cleaner should be cleaned more often in dusty conditions than in normal conditions.
- *2 : Every year or every 6 times of cleaning.
- *3 : Replace only if necessary.
- *4 : When the battery is used for less than 100 hours per year, check the battery condition by reading the indication annually.
- The items listed above (@ marked) are registered as emission related critical parts by KUBOTA in the U.S.EPA nonroad emission regulation.

7. CHECK AND MAINTENANCE

CAUTION

- Be sure to check and service the tractor on a flat place with engine shut off, the parking brake on and chock the wheels.

[1] DAILY CHECK

To prevent trouble from occurring, it is important to know the condition of the tractor. Check the following items before starting.

Checking

- Check areas where previous trouble was experienced.
- Walk around the machine.

1. Check the tire pressure, and check for wear and damage.
2. Check for oil and water leak.
3. Check the engine oil level.
4. Check the transmission fluid level.
5. Check the coolant level.
6. Check the condition of seat belt and ROPS attaching hardware.
7. Check and clean the radiator screen and grill.
8. Check the nuts of tires are tight.
9. Care of danger, warning and caution labels.
10. Clean around the exhaust manifold and the muffler of the engine.

- While sitting in the operator's seat.

1. Check the brake pedals and clutch pedal.
2. Check the parking brake.
3. Check the steering wheel.


 - Turning the key switch.

 1. Check the performance of the easy checker lights.
 2. Check the lights, turn signal lights, hazard lights and other light equipment. Clean if necessary.
 3. Check the performance of the meters and gauges.

 - Starting the engine.

 1. Check to see that the lights on the easy checker go off.
 2. Check the color of the exhaust gas.
 3. Check the brakes for proper operation.

[2] CHECK POINTS OF INITIAL 50 HOURS

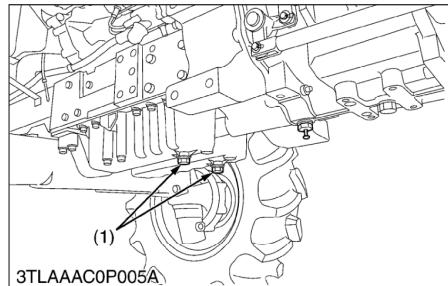



Changing Engine Oil

CAUTION

- Before changing oil, be sure to stop the engine.
- 1. Start and warm up the engine for approx. 5 minutes.
- 2. Place an oil pan underneath the engine.
- 3. To drain the used oil, remove the drain plug (1) at the bottom of the engine and drain the oil completely.
- 4. Screw in the drain plug (1).
- 5. Fill new oil up to upper line on the dipstick (3).

IMPORTANT

- When using an oil of different manufacture or viscosity from the previous one, remove all of the old oil.
- Never mix two different types of oil.
- Use the proper SAE Engine Oil according to ambient temperatures.
- Refer to "LUBRICANTS, FUEL AND COOLANT". (See page G-8.)

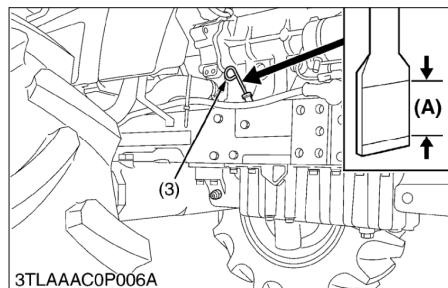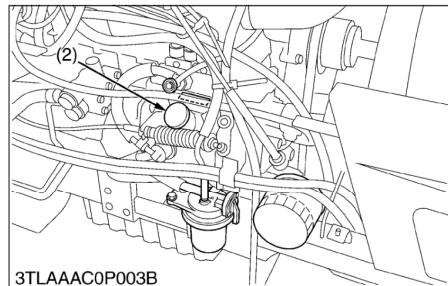


Engine oil	Capacity (with filter)	7.6 L 8.0 U.S.qts 6.7 Imp.qts
------------	------------------------	-------------------------------------

(1) Drain Plug
(2) Oil Inlet Plug
(3) Dipstick

A : Oil level is acceptable within this range.

W1028070

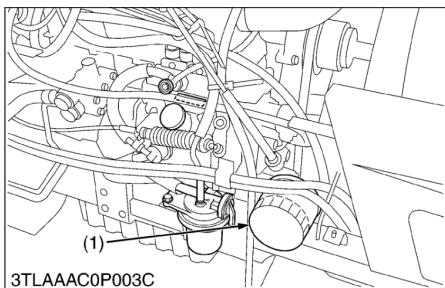

Changing Engine Oil Filter

⚠ CAUTION

- Be sure to stop the engine before changing oil filter cartridge (1).
- Allow engine to cool down sufficiently, oil can be hot and can burn.




1. Remove the engine oil filter cartridge (1).
2. Put a film of clean engine oil on rubber seal of new filter.
3. Tighten the filter quickly until it contacts the mounting surface. Tighten filter by hand an additional 1/2 turn only.
4. After the new filter has been replaced, the engine oil normally decreases a little. Make sure that the engine oil does not leak through the seal and be sure to check the oil level on the dipstick. Then, replenish the engine oil up to the prescribed level.

■ IMPORTANT

- To prevent serious damage to the engine, replacement element must be highly efficient. Use only a KUBOTA genuine filter.

(1) Engine Oil Filter Cartridge

W1028675

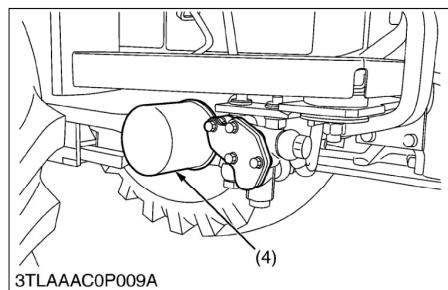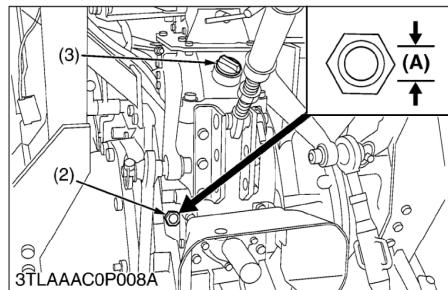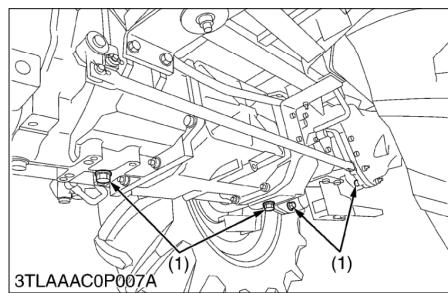

Replacing Hydraulic Oil Filter

CAUTION

- Be sure to stop the engine before changing the oil filters.
- Allow engine to cool down sufficiently, oil can be hot and can burn.

1. Place an oil pan under the tractor.
2. Remove the drain plugs (1) at the bottom of the transmission case.
3. Drain the transmission fluid.
4. After draining, reinstall the drain plugs.
5. Remove the oil filter cartridge (4) by using a filter wrench.
6. Make sure the mounting surface is clean. Put a film of clean transmission fluid on the rubber seal of the new filter.
7. Install the new filter cartridge.
8. Quickly tighten the filter until it contacts the mounting surface, then tighten it by hand an additional 1/2 turn only.
9. After the new filter have been replaced, fill with oil up to the upper line of the gauge (2).
10. After running the engine for a few minutes, stop it and recheck the oil level, add oil to the prescribed level.
11. Make sure that the transmission fluid doesn't leak through the seal of the filter.

IMPORTANT

- To prevent serious damage to the hydraulic system. Use only a genuine KUBOTA filter or its equivalents.

(1) Drain Plug

(2) Gauge

(3) Filling Plug

(4) Hydraulic Oil Filter

A : Oil level is acceptable within this range.

W1030059



Adjusting Clutch Pedal Free Play

1. Slightly depress the clutch pedal (5) and measure free travel on top of clutch pedal.
2. If the measurement is not within the factory specifications, loosen the lock nut (2), remove the cotter pin (3) and the clevis pin (4), then adjust the length of rod (1) within acceptable limits.
3. Retighten the lock nut, reinstall the clevis pin, the cotter pin and split the cotter pin.

Clutch pedal free travel on top of clutch pedal	Factory spec.	20 to 30 mm 0.8 to 1.2 in.
---	---------------	-------------------------------

(1) Clutch Pedal Rod

(2) Lock Nut

(3) Cotter Pin


(4) Clevis Pin

(5) Clutch Pedal

L : Clutch Pedal Free Travel

W1031973

[3] CHECK POINTS OF EVERY 50 HOURS

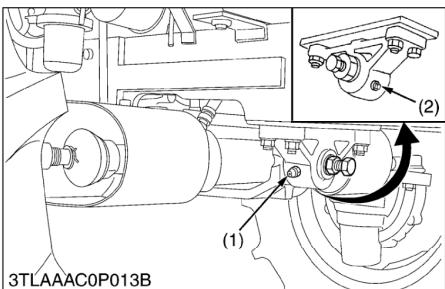

Greasing

1. Apply a grease to the following position as figures.

■ NOTE

- Apply a small amount of multipurpose grease to the following points every 50 hours.
If you operated the machine in extremely wet and muddy conditions, lubricate grease fittings more often.
- When apply a grease to the front axle support, remove the breather plug and apply a grease until grease overflows from breather plug. After greasing reinstall the plug.

(1) Grease Fitting (Front Axle Support) (5) Grease Fitting (Top Link Bracket with Draft Control, if Equipped)
 (2) Breather Plug (6) Battery Terminal
 (3) Grease Fitting (Top Link)
 (4) Grease Fitting (Lifting Rod RH)

W1032655

