

1840 SKID STEER

Service Manual

8-11093

Table of Contents

Description	Section No.	Publication Form No.
General		Tab 1
Section Index - General		8-11280
Torque Specifications	1001	8-71600
Fluids and Lubricants	1002	8-11292
Engines		Tab 2
Section Index - Engine		8-11300
Engine and Radiator Removal and Installation	2001	8-11310
Specification Details	2402	8-24163
Cylinder Head and Valve Train	2415	8-24173
Cylinder Block, Crankshaft, Pistons, Rods, Camshaft, Main Bearings, Oil Seals and Flywheel	2425	8-24183
Lubrication System	2445	8-24193
Cooling System	2455	8-24203
Fuel System		Tab 3
Section Index - Fuel System		8-11321
Fuel System and Filters	3410	8-24212
Fuel Injectors	3413	8-24233
CAV Injection Pump (4-390)1	3414	7-37131
Electrical		Tab 4
Section Index - Electrical		8-11331
Electrical "How it Works"	4000	7-14020
Removal and Installation of Electrical Components	4001	8-11340
Electrical Specifications and Troubleshooting and Schematics	4002	8-17753
Battery	4003	8-11360
Starter	4004	8-11370
65 Ampere Alternator A187873	4007	8-15670
65 Ampere Alternator A186125	4019	8-11381
Power Train		Tab 6
Section Index - Power Train		8-11391
Hydrostatic How It Works	6000	7-14030
Removal and Installation of Power Train Components	6001	8-11401

CASE CORPORATION
700 State Street
Racine, WI 53404, U.S.A.

Sample of manual. Download All 856 pages at:
<https://www.arepairmanual.com/downloads/case-1840-skid-steer-loader-service-repair-manual-8-11093/>

CASE CANADA CORPORATION
3355 Southgate Road
Burlington, ON L7N 3M6 CANADA

Bur 8-11653

Reprinted

Copyright © 2001 Case Corporation
Printed in U.S.A.
Issued May, 1992 (Revised February, 2001)

Table of Contents

Description	Section No.	Publication Form No.
Hydrostatic Drive System Troubleshooting	6002	8-11413
Controls	6003	7-44300
Piston Pump	6004	8-44180
Motor	6005	8-68601
Pump Drive Coupling	6006	8-11450
Sprockets, Chains and Axles	6007	8-11441
Wheels and Tires	6008	8-11461

Hydraulics

Tab 8

Section index - Hydraulics		8-11491
How It Works	8000	7-14040
Removal and Installation of Hydraulic Components	8001	8-11500
Hydraulic System Specifications and Troubleshooting and Schematics	8002	8-11513
Cleaning the Hydraulic System and Hydrostatic System	8003	8-11520
Pump	8004	8-11530
Loader Control Valve	8005	8-11541
Auxiliary Control Valve	8006	8-11550
Backhoe Control Valve - D100 Backhoe	8007	8-11561
Backhoe Control Valve - D125 Backhoe	8007	7-44240
Cylinders	8009	8-11582

Mounted Equipment

Tab 9

Section index - Mounted Equipment		8-11591
Control Linkages, Pedals and Levers "How it Works"	9000	7-14050
Pedals and Levers	9001	8-11603
Loader	9002	8-11611
ROPS Canopy, Seat, Seat Belts, and Operators Compartment	9003	8-11621
Auxiliary Hydraulic Installation	9004	8-11630
Backhoe (D100 Backhoe)	9005	8-11640
Backhoe (D125 Backhoe)	9005	7-44270

Rear Pocket

Hydraulic and Electrical Schematic Foldout	In Rear Pocket	7-11951
--	----------------	---------

NOTE: Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

Sample of manual. Download All 856 pages at:

<https://www.arepairmanual.com/downloads/case-1840-skid-steer-loader-service-repair-manual-8-11093/>
 Bur 8-11653 Revised 2-01 Printed in U.S.A.

SECTION INDEX - GENERAL

Section Title	Section Number
Standard Torque Specifications.....	1001
Fluids and Lubricants	1002
Detailed Engine Specifications	1024

1001

STANDARD TORQUE SPECIFICATIONS

TABLE OF CONTENTS

Torque Specifications - Decimal Hardware	1001-2
Torque Specifications - Metric Hardware	1001-3
Torque Specifications - Steel Hydraulic Fittings	1001-4
Torque Specifications - O-ring Face Seal Fittings	1001-5

TORQUE SPECIFICATIONS - DECIMAL HARDWARE

Use the torques in this chart when special torques are not given. These torques apply to fasteners with both UNC and UNF threads as received from suppliers, dry, or when lubricated with engine oil. Not applicable if special graphites, molydisulfide greases, or other extreme pressure lubricants are used.

Grade 5 Bolts, Nuts, and Studs		
  		
Size	Pound-Feet	Newton metres
1/4 in	9-11	12-15
5/16 in	17-21	23-28
3/8 in	35-42	48-57
7/16 in	54-64	73-87
1/2 in	80-96	109-130
9/16 in	110-132	149-179
5/8 in	150-180	203-244
3/4 in	270-324	366-439
7/8 in	400-480	542-651
1.0 in	580-696	787-944
1-1/8 in	800-880	1085-1193
1-1/4 in	1120-1240	1519-1681
1-3/8 in	1460-1680	1980-2278
1-1/2 in	1940-2200	2631-2983

Grade 8 Bolts, Nuts, and Studs		
  		
Size	Pound-Feet	Newton metres
1/4 in	12-15	16-20
5/16 in	24-29	33-39
3/8 in	45-54	61-73
7/16 in	70-84	95-114
1/2 in	110-132	149-179
9/16 in	160-192	217-260
5/8 in	220-264	298-358
3/4 in	380-456	515-618
7/8 in	600-720	814-976
1.0 in	900-1080	1220-1465
1-1/8 in	1280-1440	1736-1953
1-1/4 in	1820-2000	2468-2712
1-3/8 in	2380-2720	3227-3688
1-1/2 in	3160-3560	4285-4827

NOTE: Use thick nuts with Grade 8 bolts.

TORQUE SPECIFICATIONS - METRIC HARDWARE

Use the following torques when special torques are not given.

These values apply to fasteners with coarse threads as received from supplier, plated or unplated, or when lubricated with engine oil. These values do not apply if graphite or molydisulfide grease or oil is used.

Grade 8.8 Bolts, Nuts, and Studs



Size	Pound-Feet	Newton metres
M4	2-3	3-4
M5	5-6	6.5-8
M6	8-9	10.5-12
M8	19-23	26-31
M10	38-45	52-61
M12	66-79	90-107
M14	106-127	144-172
M16	160-200	217-271
M20	320-380	434-515
M24	500-600	675-815
M30	920-1100	1250-1500
M36	1600-1950	2175-2600

Grade 10.9 Bolts, Nuts, and Studs



Size	Pound-Feet	Newton metres
M4	3-4	4-5
M5	7-8	9.5-11
M6	11-13	15-17.5
M8	27-32	37-43
M10	54-64	73-87
M12	93-112	125-15
M14	149-179	200-245
M16	230-280	310-380
M20	450-540	610-730
M24	780-940	1050-1275
M30	1470-1770	2000-2400
M36	2580-3090	3500-4200

Grade 12.9 Bolts, Nuts, and Studs



Usually the torque values specified for grade 10.9 fasteners can be used satisfactorily on grade 12.9 fasteners.

TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS

Tube OD Hose ID	Thread Size	Pound- Feet	Newton metres
37 Degree Flare Fittings			
1/4 in 6.4 mm	7/16-20	6-12	8-16
5/16 in 7.9 mm	1/2-20	8-16	11-21
3/8 in 9.5 mm	9/16-18	10-25	14-33
1/2 in 12.7 mm	3/4-16	15-42	20-56
5/8 in 15.9 mm	7/8-14	25-58	34-78
3/4 in 19.0 mm	1-1/16-12	40-80	54-108
7/8 in 22.2 mm	1-3/16-12	60-100	81-135
1.0 in 25.4 mm	1-5/16-12	75-117	102-158
1-1/4 in 31.8 mm	1-5/8-12	125-165	169-223
1-1/2 in 38.1 mm	1-7/8-12	210-250	285-338

Tube OD Hose ID	Thread Size	Pound- Feet	Newton metres
Straight Threads with O-ring			
1/4 in 6.4 mm	7/16-20	12-19	16-25
5/16 in 7.9 mm	1/2-20	16-25	22-23
3/8 in 9.5 mm	9/16-18	25-40	34-54
1/2 in 12.7 mm	3/4-16	42-67	57-90
5/8 in 15.9 mm	7/8-14	58-92	79-124
3/4 in 19.0 mm	1-1/16-12	80-128	108-174
7/8 in 22.2 mm	1-3/16-12	100-160	136-216
1.0 in 25.4 mm	1-5/16-12	117-187	159-253
1-1/4 in 31.8 mm	1-5/8-12	165-264	224-357
1-1/2 in 38.1 mm	1-7/8-12	250-400	339-542

Split Flange Mounting Bolts		
Size	Pound- Feet	Newton metres
5/16-18	15-20	20-27
3/8-16	20-25	26-33
7/16-14	35-45	47-61
1/2-13	55-65	74-88
5/8-11	140-150	190-203

TORQUE SPECIFICATIONS - O-RING FACE SEAL FITTING

Nom. SAE Dash Size	Tube OD	Thread Size	Pound- Feet	Newton Metres	Thread Size	Pound- Feet	Newton Metres
O-ring Face Seal End						O-ring Boss End Fitting or Locknut	
-4	1/4 in 6.4 mm	9/16-18	10-12	14-16	7/16-20	17-20	23-27
-6	3/8 in 9.5 mm	11/16-16	18-20	24-27	9/16-18	25-30	33-40
-8	1/2 in 12.7 mm	13/16-16	32-40	43-54	3/4-16	45-50	61-68
-10	5/8 in 15.9 mm	1-14	46-56	60-75	7/8-14	60-65	81-88
-12	3/4 in 19.0 mm	1-3/16-12	65-80	90-110	1-1/16-12	85-90	115-122
-14	7/8 in 22.2 mm	1-3/16-12	65-80	90-110	1-3/16-12	95-100	129-136
-16	1.0 in 25.4 mm	1-7/16-12	92-105	125-140	1-5/16-12	115-125	156-169
-20	1-1/4 in 31.8 mm	1-11/16-12	125-140	170-190	1-5/8-12	150-160	203-217
-24	1-1/2 in 38.1 mm	2-12	150-180	200-254	1-7/8-12	190-200	258-271

B871553

Section

1002

FLUIDS AND LUBRICANTS

1840 Skid Steer

CASE CORPORATION
700 State Street
Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION
3350 SOUTH SERVICE ROAD
BURLINGTON, ON L7N 3M6 CANADA

Bur 8-11292

© 1998 Case Corporation
Printed in U.S.A.
August, 1998

TABLE OF CONTENTS

CAPACITIES AND LUBRICANTS	2
ENGINE LUBRICATION	3
Engine Oil Selection	3
Oil Viscosity / Temperature Usage Recommendation.....	3
MAINTENANCE SCHEDULE	4, 6
MAINTENANCE LOCATIONS	5, 7
DX100 - DX100XR BACKHOE PIVOTS.....	8 - 9

CAPACITIES AND LUBRICANTS

ENGINE OIL

Capacity with filter change	10.4 litres (11 U.S. quarts)
Type of oil.....	See Engine Oil Recommendations on Page 3
Oil Level Check Interval	Every 10 Hours of Operation or One Time Each Day
Oil Change and Filter Replacement Interval.....	Every 250 Hours of Operation

ENGINE COOLING SYSTEM

Capacity	17 litres (18 U.S. quarts)
Type of coolant	Ethylene glycol and water mixed for lowest ambient temperature at least 50/50 mix

FUEL TANK

Capacity	73.8 litres (19.5 U.S. gallons)
----------------	---------------------------------

HYDRAULIC SYSTEM

System capacity.....	39.7 litres (10.5 U.S. gallons)
Reservoir capacity with filter change.....	23.7 litres (6.25 U.S. gallons)
Reservoir capacity without filter change	22.7 litres (6 U.S. gallons)
Type of oil (Specifications).....	Case No. 1 engine oil SAE 10W30 (API Service CE, CD, CC/SG) mixed with Case HTO additive

NOTE: Machines prior to PIN JAF0067438 do not need the Case HTO additive. All machines PIN JAF0067438 and after must have the Case HTO additive mixed as instructed.

WHEN CHANGING OIL: When you change the hydraulic oil, you must add 1.4 litres (1.5 U.S. quarts) of Case HTO additive (Case part number B17508).

WHEN ADDING OIL: When you add oil to the hydraulic reservoir between oil changes, you must use a mixture of Case HTO additive and SAE 10W-30 engine oil. Completely mix one U.S. quart of Case HTO additive to 19 litres (5 U.S. gallons) of 10W-30 engine oil (20 to 1 ratio).

DRIVE CHAIN COMPARTMENTS

Capacity (each)	5.7 litres (6 U.S. quarts)
Type of oil (Specifications).....	Case No. 1 engine oil - SAE 10W30

PLANETARIES (Only Before PIN JAF0067438)

Capacity (each side)	0.5 litres (1 U.S. pint)
Type of oil (Specifications).....	Case No. 1 engine oil - SAE 10W30

GREASE FITTINGS

Quantity	As required
Specifications	Case molydisulfide grease

BATTERY

Quantity	As required
Specifications	Drinking or distilled water

ENGINE LUBRICATION

Engine Oil Selection

Case No. 1 Engine Oil is recommended for use in your Case Uni-Loader Engine. Case Engine Oil will lubricate your engine correctly under all operating conditions.

If Case No. 1 Multi-Viscosity or Single Viscosity Engine Oil is not available, use only oil meeting API engine oil service category CE.



ts98h007




tr98h001

See the chart below for recommended viscosity at ambient air temperature ranges.

NOTE: Do not put Performance Additives or other oil additive products in the engine crank-case. The oil change intervals given in this manual are according to tests with Case Lubricants.

Oil Viscosity / Temperature Usage Recommendation

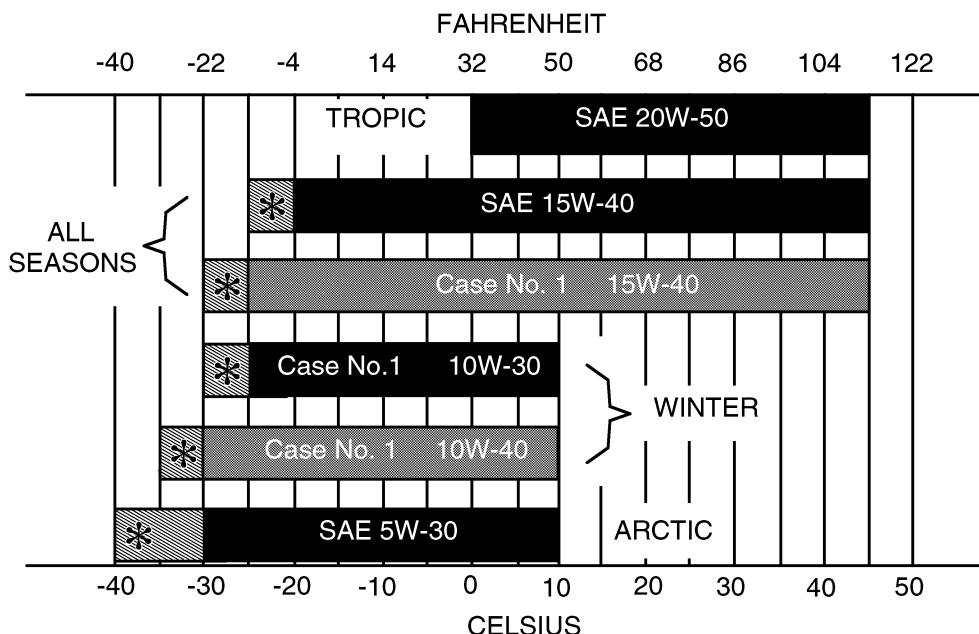


* Use of an engine oil heater, or an engine coolant heater, is required in crosshatched area.

ts98h006

MAINTENANCE SCHEDULE		AS REQUIRED	EVERY 10 HOURS OF OPERATION OR DAILY	EVERY 50 HOURS OF OPERATION	EVERY 100 HOURS OF OPERATION	EVERY 250 HOURS OF OPERATION	EVERY 500 HOURS OF OPERATION	EVERY 1000 HOURS OF OPERATION	EVERY 2000 HOURS OF OPERATION
SERVICE ITEM									
1.	Lubricate the Loader Pivot Points (16 Grease Fittings) Case Molydisulfide Grease.		●						
2.	Service the Air Cleaner if the Air Cleaner Warning Lamps On. See Operators Manual.	●							
2.	Clean and Check the Air Cleaner Dust Valve. See Operators Manual.			●					
2.	Replace the Air Cleaner Elements. Use Case Filter.								●
3.	Inspect the Rops. See Operators Manual.					●			
4.	Check the Wheel Nut Torque, 115 to 125 lb ft (156 To 170 Nm). See Section 6008	●							
5.	Clean the Battery and Check the Battery Fluid Level. Add drinking or distilled water.					●			
6.	Check the Drive Chain Tension (Each Side). See Section 9001.				●				
7.	Change the Chain Compartment Oil (Each Side). Case No. 1 Engine Oil (SAE 10W30).					●			
8.	Drain Water from the Fuel Filter. See Operators Manual.			●					
9.	Change Engine Oil and Replace the Engine Oil Filter. Case No. 1 Engine Oil, Use Case Filters.					●			
10.	Replace the Fuel Filter(s). See Operators Manual.					●			
11.	Check Engine Oil Level Case No. 1 Engine Oil.		●						
12.	Clean Dirt and Debris from the Engine Area.	●							
13.	Check the Fan Belt for Wear Replace if Damaged.	●							
14.	Drain, Flush and Refill the Engine Cooling System (See Note 3). Ethylene Glycol and Water.								●
15.	Check and Clean the Hydraulic Oil Cooler. See Operators Manual.		●						
NOTE 1: When adding oil to the hydraulic reservoir between oil changes, use a mixture of Case HTO additive and SAE 10W30 engine oil. Completely mix one U.S. quart of Case HTO additive to 19 litres (5 U.S. gallons) of SAE 10W30 oil (20 to 1 ratio).									
NOTE 2: When changing the hydraulic oil in the reservoir, add 1.7 litres (1.6 U.S. gallons) of Case HTO additive (Case Part No. B17508).									
NOTE 3: Use Ethylene Glycol and water that is mixed 50/50. When adding to the engine, use this mixture.									

MAINTENANCE LOCATIONS

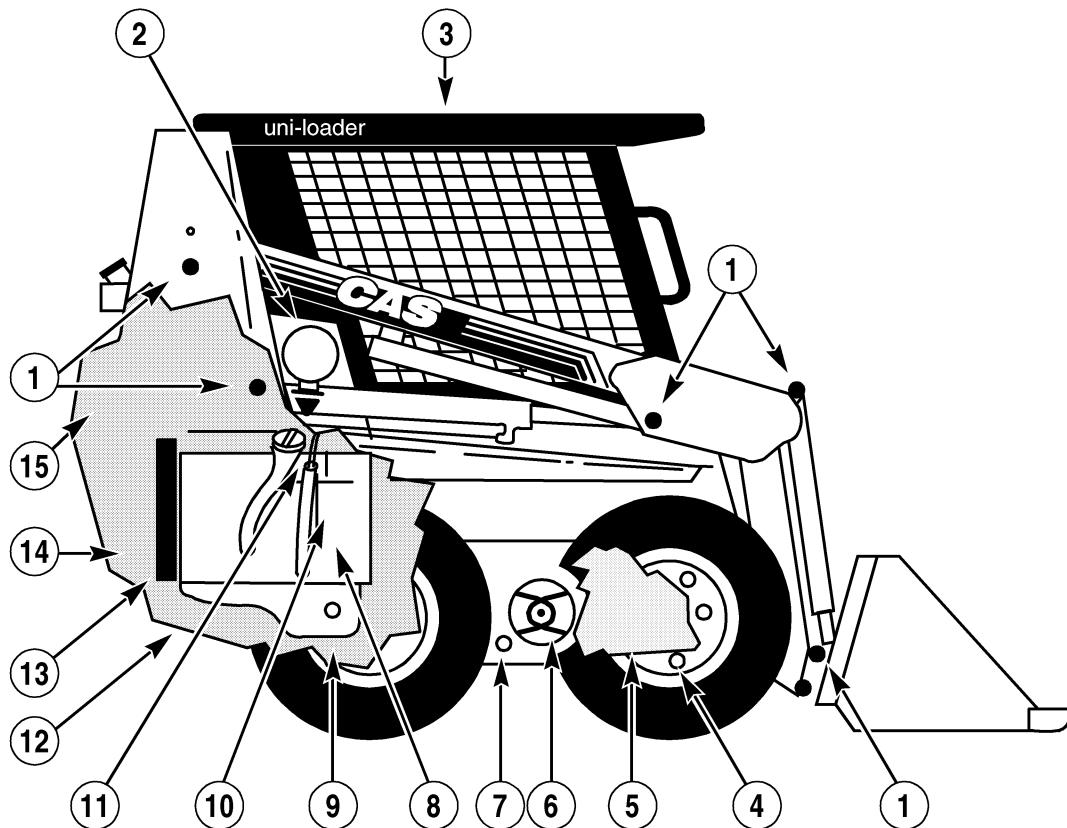

ts98h002


IF YOU OPERATE THE MACHINE IN SEVERE CONDITIONS, LUBRICATE AND SERVICE THE MACHINE MORE FREQUENTLY. IT IS RECOMMENDED THAT YOU SEE YOUR **CASE** DEALER FOR INFORMATION ON THE SYSTEMGARD LUBRICATION SYSTEM.

SEE YOUR OPERATORS MANUAL FOR MAINTENANCE OF SAFETY RELATED ITEMS AND FOR DETAILED INFORMATION OF THE SERVICE ITEMS ON THIS CHART. OPERATORS AND SERVICE MANUALS ARE AVAILABLE FOR THIS MACHINE FROM YOUR **CASE** DEALER.

MAINTENANCE SCHEDULE

SERVICE ITEM		AS REQUIRED	EVERY 10 HOURS OF OPERATION OR DAILY	EVERY 50 HOURS OF OPERATION	EVERY 100 HOURS OF OPERATION	EVERY 250 HOURS OF OPERATION	EVERY 500 HOURS OF OPERATION	EVERY 1000 HOURS OF OPERATION	EVERY 2000 HOURS OF OPERATION
16.	Drain Water from the Fuel Tank. See Operators Manual.							●	
17.	Change Engine Oil and Replace the Engine Oil Filter. Case No. 1. Engine Oil, Use Case Filters.					●			
18.	Change the Chain Compartment Oil (Each Side) Case No. 1 Engine Oil (SAE 10W30).					●			
19.	Clean the Spark Arrester Muffler. See Operators Manual.				●				
20.	Check the Engine Valve Clearance. See Service Manual.							●	
21.	Lubricate the Coupler Wedges (2 Grease Fittings) if Equipped. Case Molydisulfide Grease.	●							
22.	Lubricate the Case Coupler Latch Pivots (2 Grease Fittings. Case Molydisulfide Grease.					●			
23.	Check the Tire Air Pressure and Tire Condition. See Section 6008.			●					
24.	Lubricate Each Axle Bearing (4 Grease Fittings). Case Molydisulfide Grease.					●			
25.	Lubricate the Loader Cross Shaft Pivot (2 Grease Fittings). Case Molydisulfide Grease.					●			
26.	Replace the Hydraulic Oil Filter. Use Case Filters.						●		
26.	Replace the Hydraulic Filter if the Hydraulic Filter Warning Lamp Is On. Use Case Filters.	●							
27.	Change the Hydraulic Oil (See Note 2). Case No.1 Engine Oil.							●	
28.	Check the Hydraulic Reservoir Oil Level. (See Note 1). Case No. 1 Engine Oil.		●						
29.	Check the Radiator Coolant Level (See Note 3). Ethylene Glycol and Water.					●			
30.	Check the Engine Coolant Reservoir Fluid Level (See Note 3). Ethylene Glycol And Water.		●						

MAINTENANCE LOCATIONS

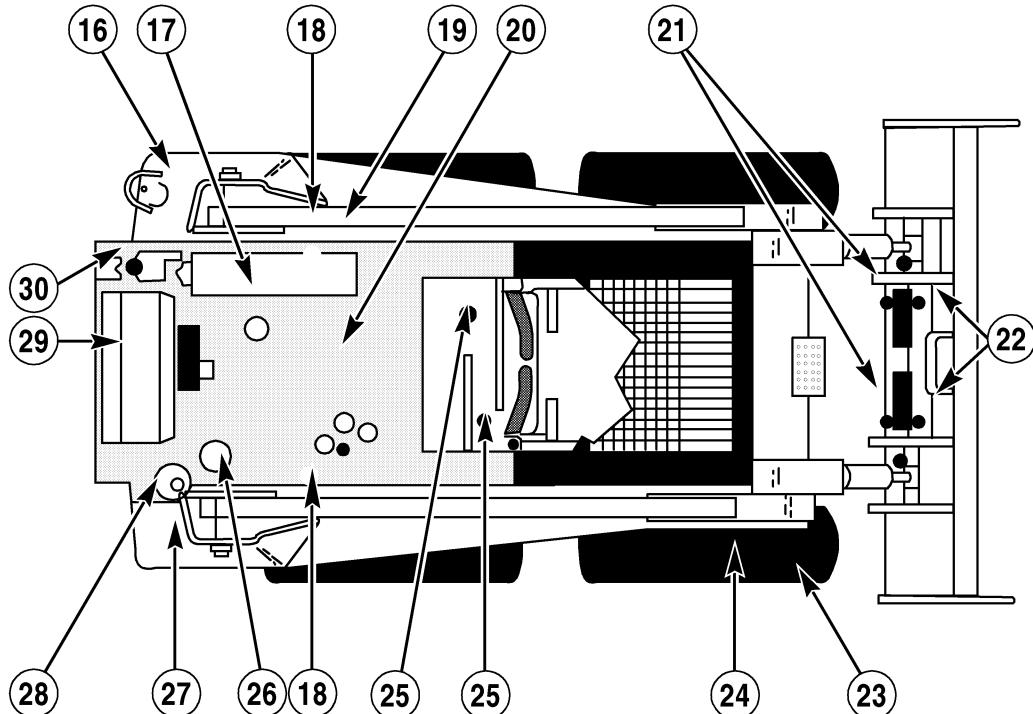

ts98h003


IF YOU OPERATE THE MACHINE IN SEVERE CONDITIONS, LUBRICATE AND SERVICE THE MACHINE MORE FREQUENTLY. IT IS RECOMMENDED THAT YOU SEE YOUR **CASE** DEALER FOR INFORMATION ON THE SYSTEMGARD LUBRICATION SYSTEM.

SEE YOUR OPERATORS MANUAL FOR MAINTENANCE OF SAFETY RELATED ITEMS AND FOR DETAILED INFORMATION OF THE SERVICE ITEMS ON THIS CHART. OPERATORS AND SERVICE MANUALS ARE AVAILABLE FOR THIS MACHINE FROM YOUR **CASE** DEALER.

D100 - D100XR BACKHOE PIVOTS (IF EQUIPPED)
Use Case Molydisulfide Grease

SERVICE ITEM		AS REQUIRED	EVERY 10 HOURS OF OPERATION OR DAILY	EVERY 50 HOURS OF OPERATION	EVERY 100 HOURS OF OPERATION	EVERY 250 HOURS OF OPERATION	EVERY 500 HOURS OF OPERATION	EVERY 1000 HOURS OF OPERATION	EVERY 2000 HOURS OF OPERATION
	Lubricate the Backhoe Pivot Points (8 Fittings D100 Backhoe and 12 Fittings D100XR Backhoe). Case Molydisulfide Grease.		●						
	Lubricate the Manure Fork Grapple (2 Grease Fittings) if Equipped. Not Shown. Case Molydisulfide Grease.		●						
	Check the Control Linkages and Test Seat Bar Operation. See Section 9001.		●						
1.	Upper Swing Pivot - 1 Fitting		●						
2.	Dipper Cylinder, Closed End - 1 Fitting		●						
3.	Boom Cylinder, Closed End - 1 Fitting		●						
4.	Dipper Pivot - 1 Fitting		●						
5.	Dipper Cylinder, Rod End - 1 Fitting		●						
6.	Bucket Cylinder, Closed End - 1 Fitting		●						
7.	Bucket Cylinder, Rod End - 1 Fitting		●						
8.	Boom Cylinder, Rod End - 1 Fitting		●						
9.	Boom Pivot		●						
10.	Lower Swing Pivot - 1 Fitting		●						
11.	Stabilizer Pivot - 2 Fittings (One Each Side)		●						

D100 - D100XR BACKHOE PIVOTS (IF EQUIPPED)
Use Case Molydisulfide Grease

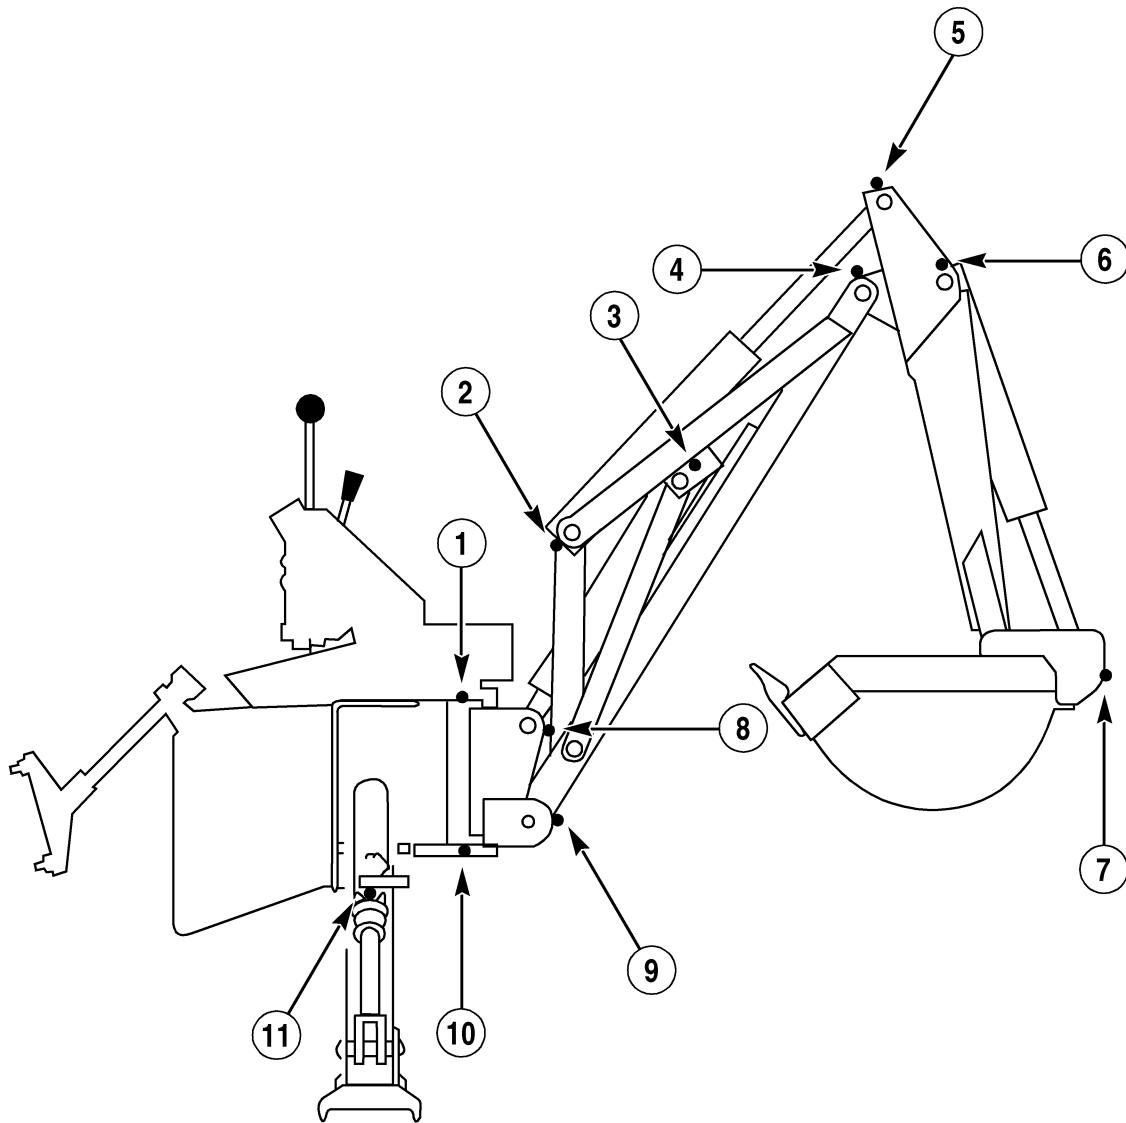

ts98h008

IF YOU OPERATE THE MACHINE IN SEVERE CONDITIONS, LUBRICATE AND SERVICE THE MACHINE MORE FREQUENTLY. IT IS RECOMMENDED THAT YOU SEE YOUR **CASE** DEALER FOR INFORMATION ON THE SYSTEMGARD LUBRICATION SYSTEM.

SEE YOUR OPERATORS MANUAL FOR MAINTENANCE OF SAFETY RELATED ITEMS AND FOR DETAILED INFORMATION OF THE SERVICE ITEMS ON THIS CHART. OPERATORS AND SERVICE MANUALS ARE AVAILABLE FOR THIS MACHINE FROM YOUR **CASE** DEALER.

SECTION INDEX - ENGINE

Section Title	Section Number
Engine Removal and Installation and Radiator Removal and Installation	2001
Cylinder Head and Valve Train	2415
Cylinder Block	2425
Lubrication System.....	2445
Cooling System	2455

2001

ENGINE REMOVAL AND INSTALLATION AND RADIATOR REMOVAL AND INSTALLATION

TABLE OF CONTENTS

Specifications	2001-2	Engine Installation	2001-11
Special Tools.....	2001-2	Radiator Removal.....	2001-20
Engine Removal	2001-3	Radiator Installation.....	2001-23

SPECIFICATIONS

Cooling system capacity.....18 U.S. quarts (17 litres)

Special torques

Self-locking nuts that fasten the front and rear engine mounts to the frame.135 to 165 pound-feet (183 to 224 Nm)

Cap screws that fasten the fan to the engine276 to 324 pound-inches (31 to 37 Nm)

Cap screws that fasten the tandem pump to the pump
mounting plate.....Apply 271 Loctite on the threads and tighten
to 85 to 95 pound-feet (115 to 129 Nm)

Cap screws that fasten the pump mounting bracket to the pump
mounting plate.....Apply 271 Loctite on the threads and tighten
to 85 to 95 pound-feet (115 to 129 Nm)

Cap screws that fasten the radiator to the radiator mounting brackets ..15 to 20 pound-inches (1.68 to 2.25 Nm)

SPECIAL TOOLS

Order special tools from one of the following ad-
dresses:

In the U.S.A.

Service Tools
P.O. Box 314
Owatonna, Minnesota 55060

In Canada

Jobborn Manufacturing Company
97 Frid Street
Hamilton, Ontario L8P 4M3

In Europe

VL Church Ltd.
P.O. Box 3, Daventry
Northants, NN11 4NF
England



The lifting sling is used to remove and install the engine.
The part number of the tool is CAS-10119. This tool is
first used on page 2001-9.


ENGINE REMOVAL

STEP 1




Open the rear door.

STEP 2

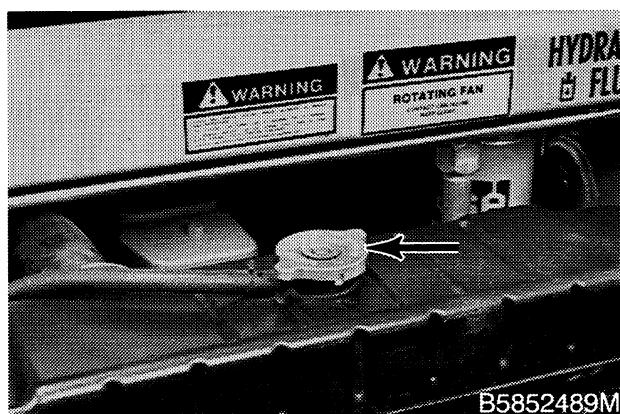

Remove the radiator cap.

STEP 3

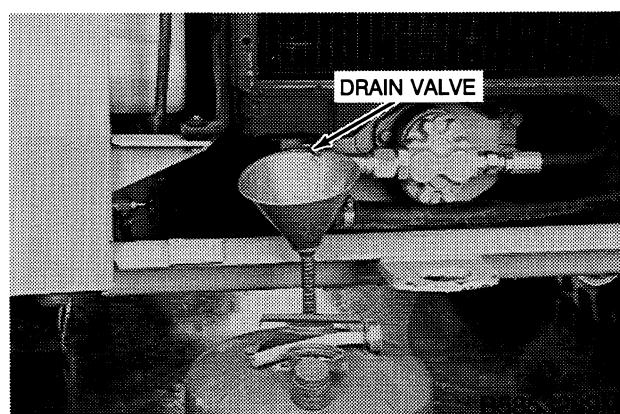


Open the drain valve and drain the cooling system. The cooling system capacity is approximately 18 U.S. quarts (17 litres) of coolant.

STEP 4




Loosen the clamp and disconnect the top hose from the radiator. Disconnect the hose for the coolant reservoir from the radiator. Install a plug in the coolant reservoir hose.

STEP 5

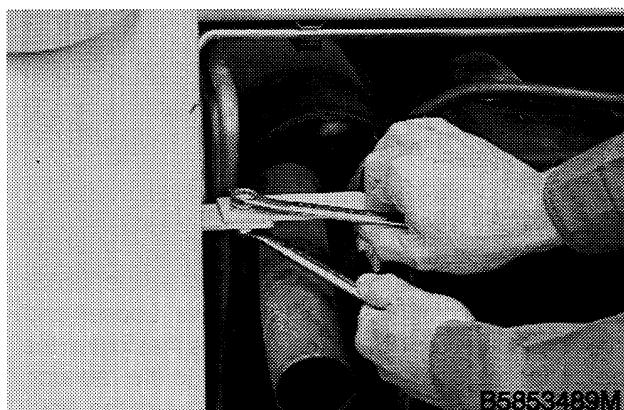


Loosen and remove the self-locking nut, flat washer, and bolt that fasten the top left radiator support to the frame.

STEP 6

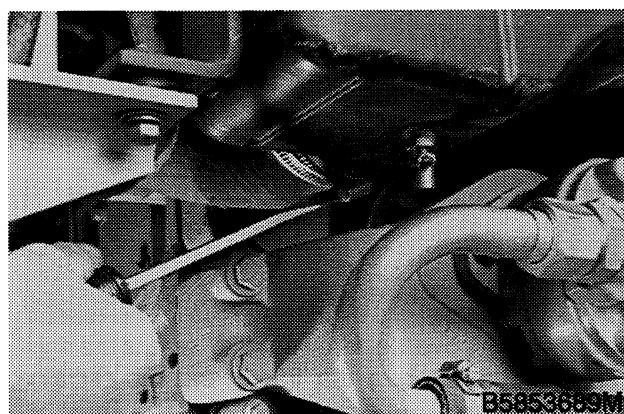


Loosen the clamp and disconnect the bottom hose from the radiator.

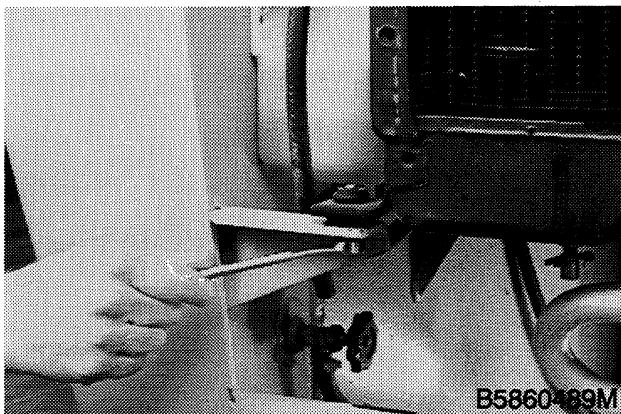STEP 7

Loosen and remove the cap screw and flat washers that fasten the radiator to the left radiator mounting bracket.

STEP 8

Pull the left side of the radiator to the rear. Loosen and remove the cap screws and flat washers that fasten the clamps for the coolant reservoir hose to the radiator. Put the hose for the coolant reservoir out of the way.

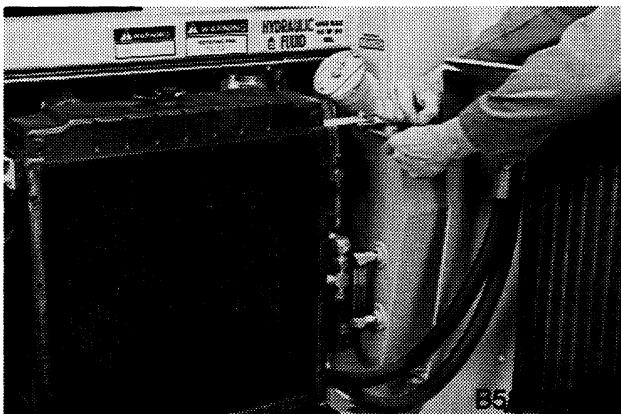STEP 9

Loosen and remove the hardware that fastens the right side of the radiator to the frame and the radiator mounting bracket.

STEP 10


Remove the radiator from the machine.

STEP 11


Remove the floor plate. Disconnect the ground cable from the negative post on the battery.

STEP 12

Move the operators compartment forward according to the instructions in Section 9003.

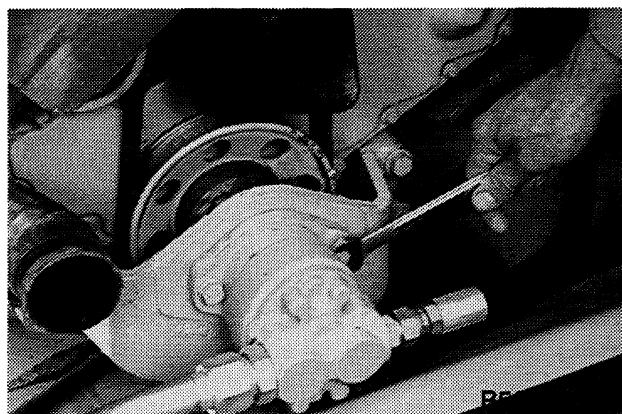
STEP 13

Loosen and remove the cap screws and flat washers that fasten the equipment pump to the rear engine mount.

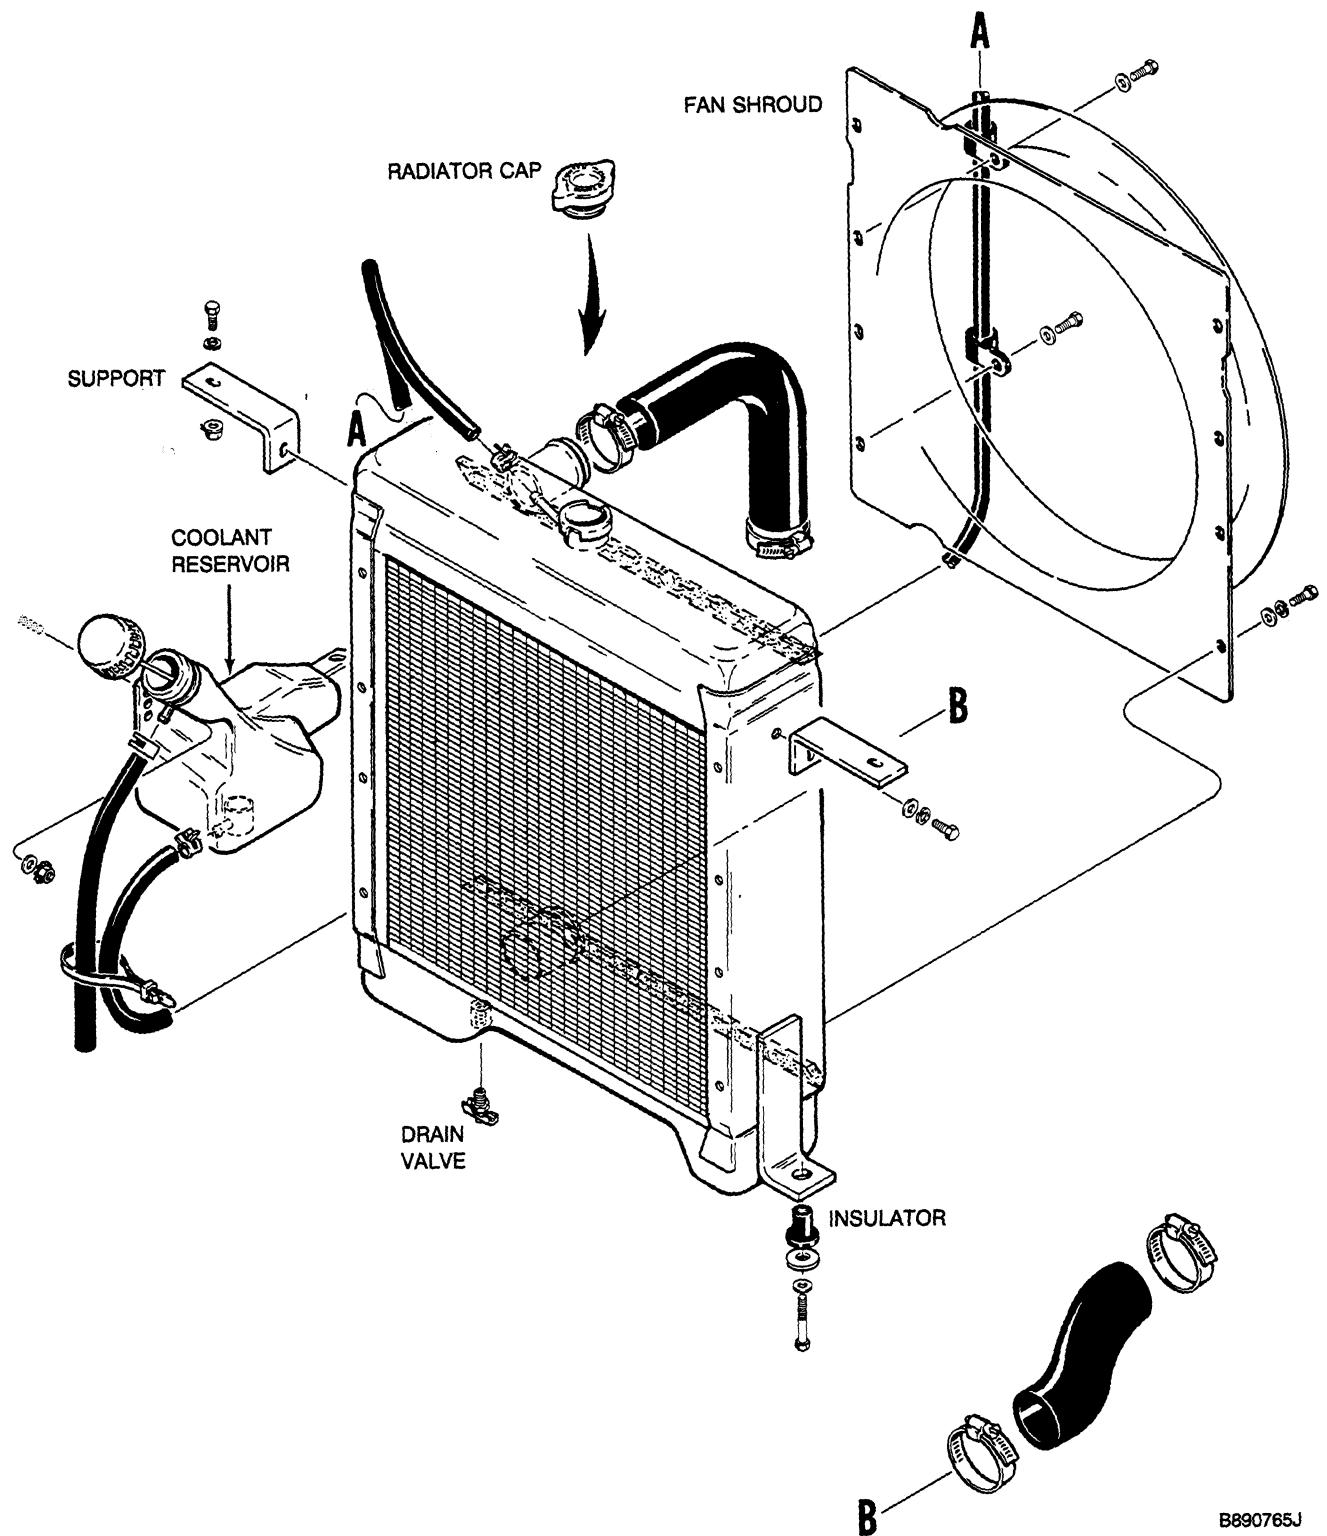


Radiator Installation


B890765J

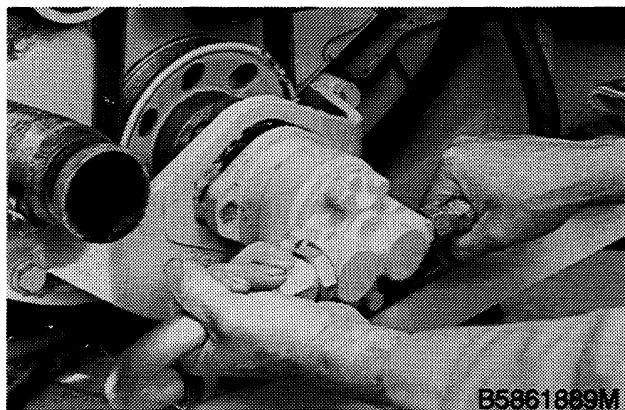STEP 14


Pull the equipment pump away from the rear engine mount to disengage the drive shaft of the equipment pump from the coupling on the crankshaft pulley.

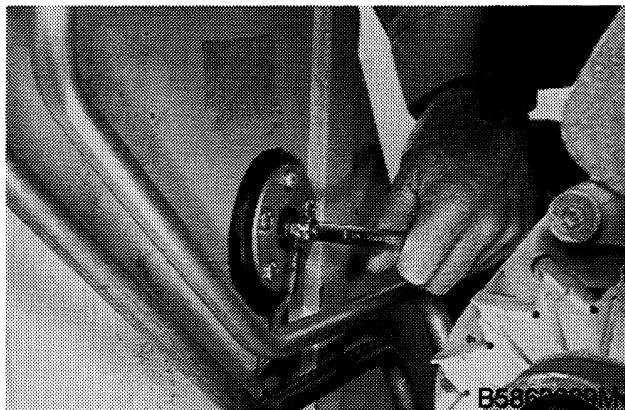STEP 15


Disconnect the wire from the fuel level sender.

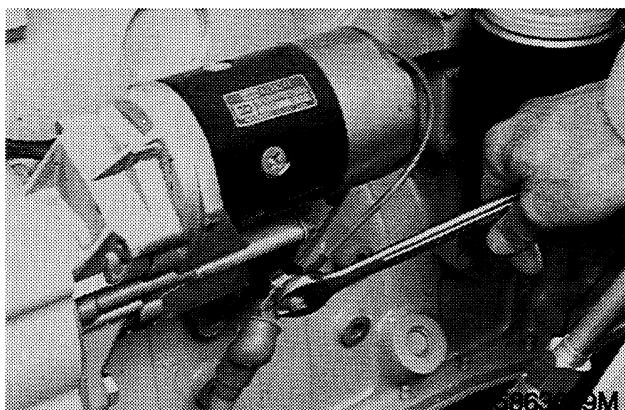STEP 16



Disconnect the positive cable from the battery terminal on the starter solenoid.

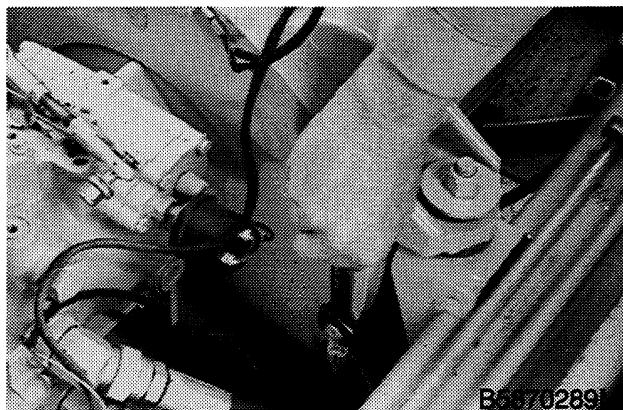STEP 17

Loosen and remove the cap screw and lock washer that fasten the ground cable to the pump mounting plate. Remove the ground cable.

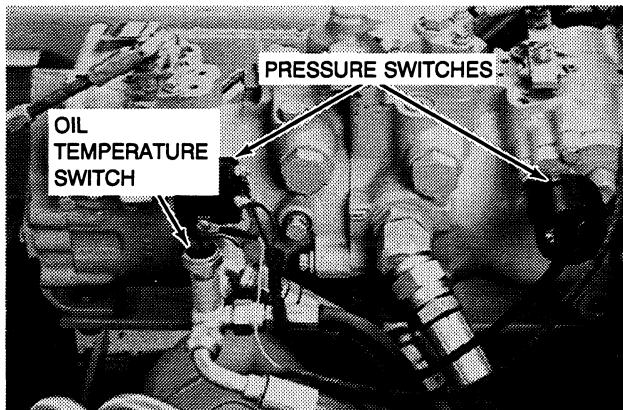
STEP 18

Disconnect the wire from the oil temperature switch. If the machine is equipped with a backup alarm, disconnect the wires from the pressure switches.

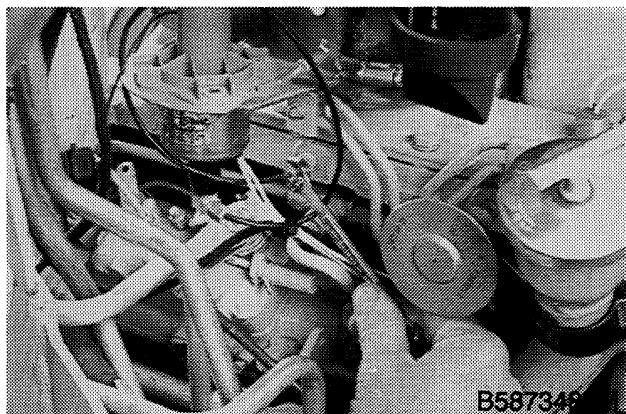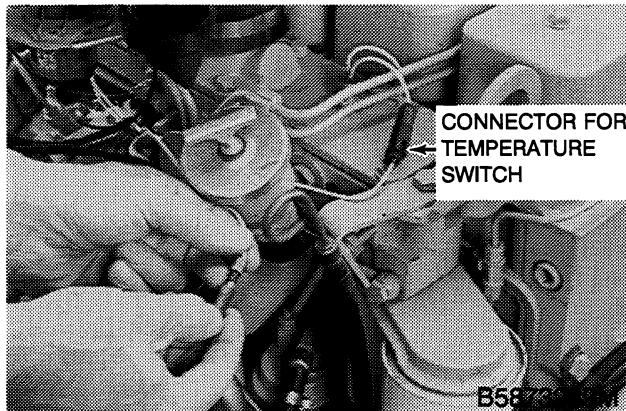
STEP 19

If the machine is equipped with ether injection:


1. Disconnect the wire to the valve assembly.
2. Disconnect the wire for the temperature switch.
3. Disconnect the tube from the intake manifold.

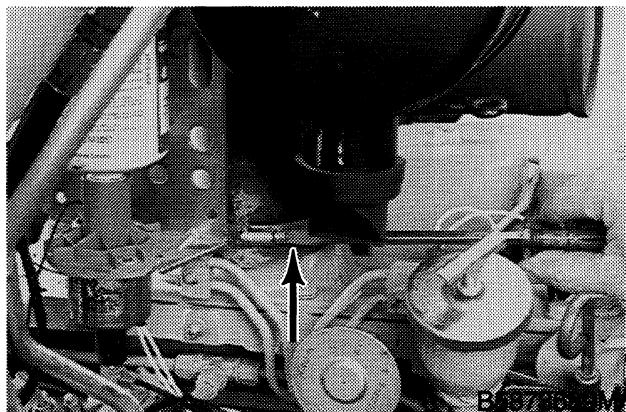STEP 20

Loosen the clamp on the hose at the intake manifold.

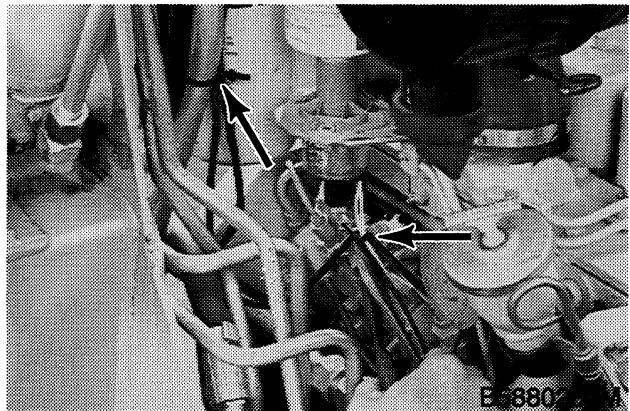
STEP 21

Cut the tie straps shown.

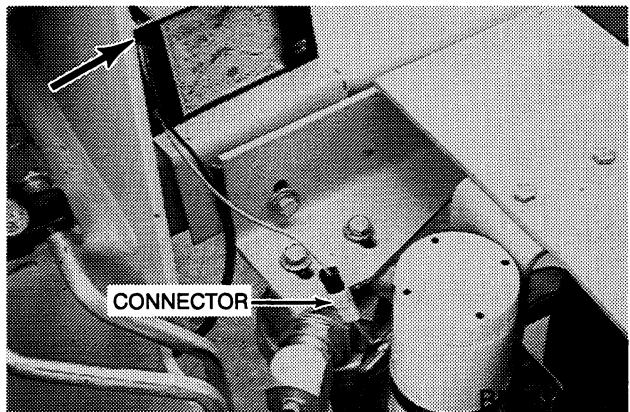STEP 22


If the machine is equipped with a backup alarm:

1. Disconnect the connector for the backup alarm.
2. Disconnect the black wire from the side of the backup alarm.

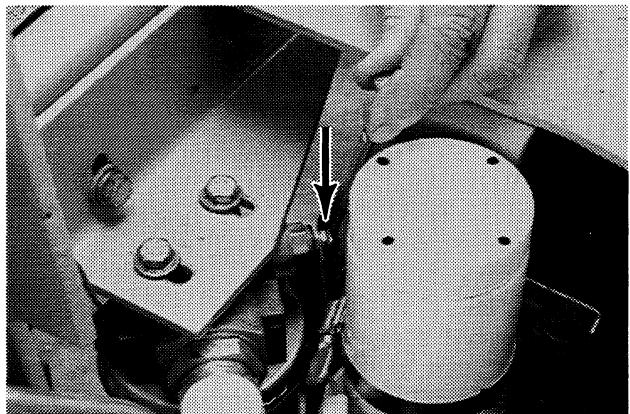STEP 23


Disconnect the wire from the hydraulic oil filter.

STEP 24

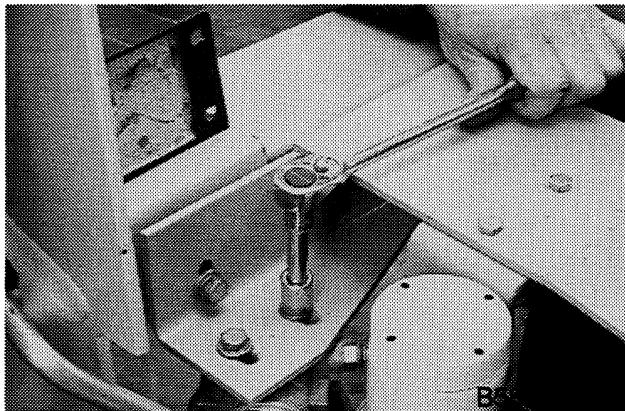


Loosen and remove the cap screws and hardened washers that fasten the hydraulic oil filter to the bracket.

STEP 25

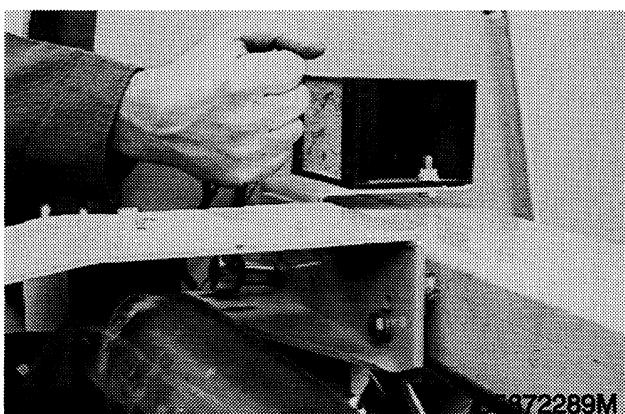

Loosen the cap screws, lock washers, and hardened washers that fasten the bracket for the air cleaner, and the bracket for the backup alarm, if equipped.

STEP 26

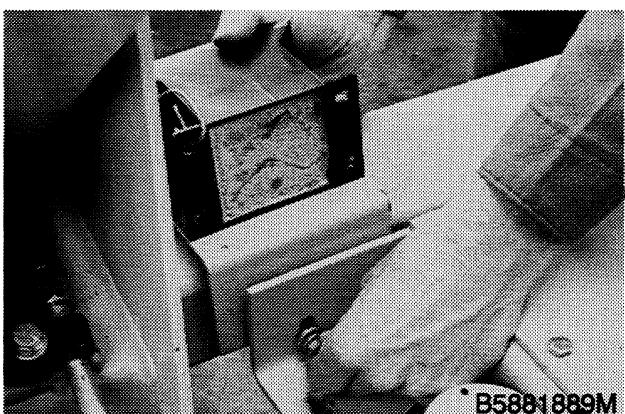


If the machine is equipped with a backup alarm, hold the backup alarm and remove the cap screw, lock washer, and hardened washer. Remove the bracket for the backup alarm.

[Sample of manual. Download All 856 pages at:](https://www.arepairmanual.com/downloads/case-1840-skid-steer-loader-service-repair-manual-8-11093/)

<https://www.arepairmanual.com/downloads/case-1840-skid-steer-loader-service-repair-manual-8-11093/>

Bur 8-11310

STEP 27

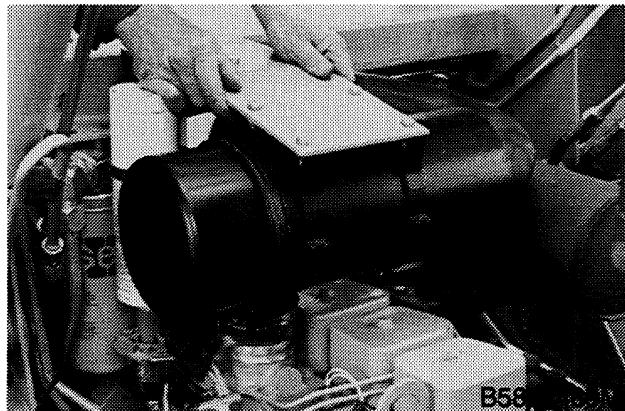


Remove the hardware for the bracket for the air cleaner, disconnect the hose from the intake manifold, and remove the air cleaner.

STEP 28

Cover or close the opening in the intake manifold.

STEP 29

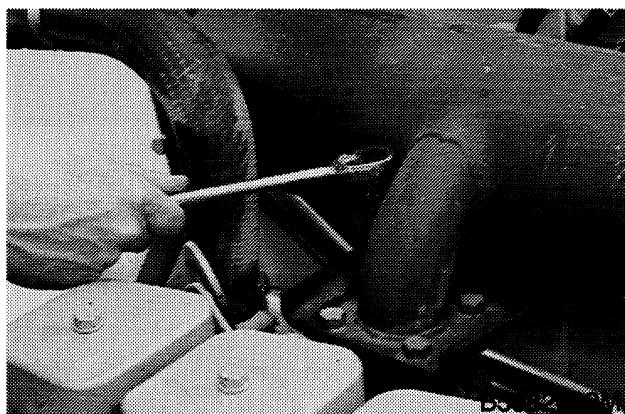

Loosen and remove the cap screws and lock washers that fasten the muffler to the exhaust manifold.

STEP 30



Remove the muffler.