

INDEX

65-B MOTOR GRADER SERVICE MANUAL SET

FORM NO. 73125943

Service manual set is arranged in the following order		Individual manuals are also available in translation in form numbers listed below		
Service Manuals	ENGLISH Form No.	ESPAÑOL (Spanish)	FRANÇAIS (French)	PORTUGUES (Portuguese)
Engine Related Components.	73125173	73121430	73121429	
Transmission	73122741	73123606	73123605	
Rear Axle, Tandems and Brakes	73123076	73123597	73123596	
Service Specifications	73119389	73121434	71321433	
Hydraulics, Front end & Implements	73123077	73123603	73123602	
Electrical System	73146366			
Engine	73121213	73121432	73121431	

Cut along the dotted lines and insert in spline of binder



65-B

MOTOR GRADER

SERVICE

MANUAL

SET

FORM 73125943

Product: Fiat-Allis 65-B Motor Grader Service Repair Manual
Full Download: <https://www.arepairmanual.com/downloads/flat-allis-65-b-motor-grader-service-repair-manual/>


Sample of manual. Download All 663 pages at:
<https://www.arepairmanual.com/downloads/flat-allis-65-b-motor-grader-service-repair-manual/>



65-B

motor grader

service manual ENGINE RELATED COMPONENTS

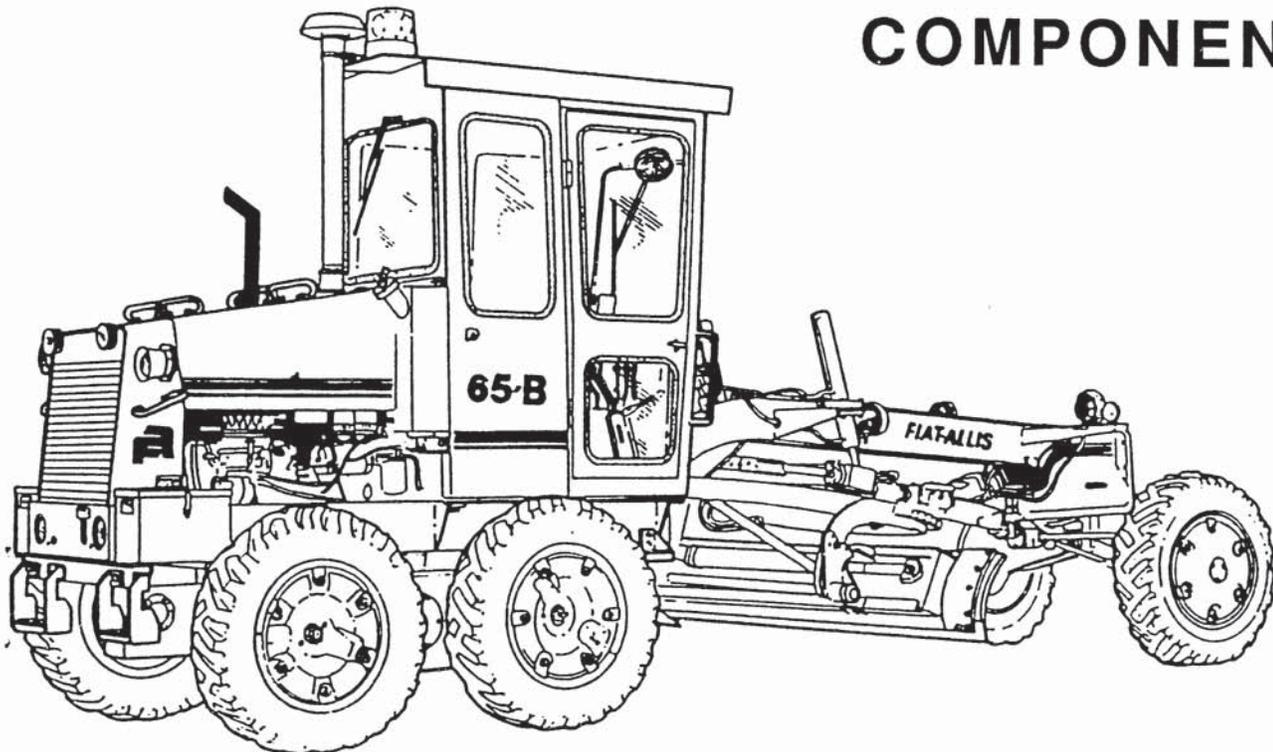

AVOID ACCIDENTS

Most accidents, whether they occur in industry, on the farm, at home or on the highway, are caused by the failure of some individual to follow simple and fundamental safety rules or precautions. For this reason MOST ACCIDENTS CAN BE PREVENTED by recognizing the real cause and doing something about it before the accident occurs.

Regardless of the care used in the design and construction of any type of equipment there are conditions that cannot be completely safeguarded against without interfering with reasonable accessibility and efficient operation.

A careful operator is the best insurance against an accident.

The complete observance of one simple rule would prevent many thousand serious injuries each year.

That rule is:

Never attempt to clean, oil or adjust a machine while it is in motion.

WARNING

On machines having hydraulically, mechanically, and/or cable controlled equipment (such as shovels, loaders, dozers, scrapers, etc.) be certain the equipment is lowered to the ground before servicing, adjusting and/or repairing. If it is necessary to have the hydraulically, mechanically, and/or cable controlled equipment partially or fully raised to gain access to certain items, be sure the equipment is suitably supported by means other than the hydraulic lift cylinders, cable and/or mechanical devices used for controlling the equipment.

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

COPYRIGHT BY FIATALLIS



All rights reserved. Reproduction of text and illustrations in whole or in part, is strictly prohibited.

65-B

motor grader

ENGINE RELATED COMPONENTS

service manual

S/N 62S 02401 - UP

S/N 75A 02801 - UP

S/N 68C 04000 - UP

Form 73125173 English



WARNING

STUDY THE OPERATION AND MAINTENANCE INSTRUCTION MANUAL THROUGH BEFORE STARTING, OPERATING, MAINTAINING, FUELING OR SERVICING THIS MACHINE.



The Operation and Maintenance Instruction Manual provides the instructions and procedures for starting, operating, maintaining, fueling, shutdown and servicing that are necessary for properly conducting the procedures for overhaul of the related components outlined in this Service Manual.



This symbol is your safety alert sign. It MEANS ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED.



Read and heed all safety instructions carrying the signal words WARNING and DANGER.



Machine mounted safety signs have been color coded yellow with black borders and lettering for warning and red with white borders and lettering for danger points.



Supplemental No. 1
73125173
Engine Related Components
65B Motor Grader

5/89

ATTENTION:

Insert this sheet in the front of publication as record or receipt.
Replace or add pages in the publication according to instructions below.

Additional copies of this supplement are available. Please direct your request to:

FIATALLIS NORTH AMERICA - Publications Services Dept.,
701 Stevenson Drive - Springfield, IL 62703 U.S.A.

NOTICE
THESE CHANGES ARE
INCLUDED IN THIS COPY

Replace or add the following like pages:

Flysheet (Revised)
Table of Contents (no change)

Page 7 (Revised)
Page 8 (Revised)

Page 9 (Revised)
Page 10 (no change)

Page 17 (Revised)
Page 18 (no change)

Page 31 (no change)
Page 32 (Revised)

Reason: To include information on 8061.105 Engines.

Any product change described in this publication is part of the continuing effort of Fiatallis to make its product responsive to customer need and is not to be construed as a field campaign. A product change may be incorporated with or without prior notice and without obligation to Fiatallis or its affiliates.

TABLE OF CONTENTS

TOPIC	TITLE	PAGE
	SAFETY RULES - - - - -	1
	FOREWARD - - - - -	1
1	GENERAL DESCRIPTION - - - - -	2
2	MUFFLER AND AIR CLEANER - - - - -	2
	2.1 Muffler Removal - - - - -	2
	2.2 Muffler Installation - - - - -	3
	2.3 Air Cleaner Removal - - - - -	3
	2.4 Air Cleaner Installation - - - - -	5
3	TRANSMISSION AND FUEL FILTERS - - - - -	6
	3.1 Transmission Filter Removal - - - - -	6
	3.2 Transmission Filter Installation - - - - -	6
	3.3 Fuel Filters Removal - - - - -	7
	3.4 Fuel Filters Installation - - - - -	7
4	RADIATOR AND FAN - - - - -	10
	4.1 Radiator Removal - - - - -	10
	4.2 Radiator Installation - - - - -	11
	4.3 Coolant Fan Removal - - - - -	13
	4.4 Coolant Fan Installation - - - - -	13
5	FAN AND ALTERNATOR BELTS - - - - -	14
	5.1 Fan And Alternator Belt Removal - - - - -	14
	5.2 Fan And Alternator Belt Installation - - - - -	14
6	STARTER AND ALTERNATOR - - - - -	15
	6.1 Starter Removal - - - - -	15
	6.2 Starter Installation - - - - -	15
	6.3 Alternator Removal - - - - -	16
	6.4 Alternator Installation - - - - -	16
7	TRANSMISSION HEAT EXCHANGER - - - - -	18
	7.1 Heat Exchanger Removal - - - - -	18
	7.2 Heat Exchanger Installation - - - - -	18
8	ENGINE - - - - -	21
	8.1 Engine Removal - - - - -	21
	8.2 Engine Installation - - - - -	28
9	TORQUE VALUES - - - - -	32

SAFETY RULES

GENERAL

Study the Operation and Maintenance Instruction Manual before starting, operating, maintaining, fueling, or servicing machine.

Read and heed all machine-mounted safety signs before starting, operating, maintaining, fueling or servicing machine.

Machine-mounted safety signs have been color coded yellow with black border and lettering for **WARNING** and red with white border and lettering for **DANGER** points.

Never attempt to operate the machine or its tools from any position other than seated in the operator's seat. Keep head, body, limbs, hands and feet inside operator's compartment at all times to reduce exposure to hazards outside the operator's compartment.

Do not allow unauthorized personnel to operate service or maintain this machine.

Always check work area for dangerous features. The following are examples of dangerous work areas: slopes, over hangs, timber, demolitions, fire, high walls, drop off, back fills, rough terrain, ditches, ridges, excavations, heavy traffic, crowded parking, crowded maintenance and closed areas. Use extreme care when in areas such as these.

An operator must know the machine's capabilities. When working on slopes or near drop offs be alert to avoid loose or soft conditions that could cause sudden tipping or loss of control.

Do not jump on or off machine. Keep two hands and one foot, or two feet and one hand, in contact with steps grab rails and handles at all times.

Do not use controls or hoses as hand holds when climbing on or off machine. Hoses and controls are movable and do not provide a solid support. Controls also may be inadvertently moved causing accidental machine or equipment movement.

Keep operator's compartment, stepping points, grab-rails and handles clear of foreign objects, oil, grease, mud or snow accumulation to minimize the danger of slipping or stumbling. Clean mud or grease from shoes before attempting to mount or operate the machine.

Be careful of slippery conditions on stepping points, hand rails, and on the ground. Wear safety boots or shoes that have a high slip resistant sole material.

For your personal protection. Do not attempt to climb on or off machine while machine is in motion.

Never leave the machine unattended with the engine running.

Always lock up machine when leaving it unattended. Return keys to authorized security. Heed all shut down procedures of the Operation and Maintenance Instruction Manual. Always set the parking brake when leaving the machine for any reason.

Do not wear rings, wrist watches, jewelry, loose or hanging apparel, such as ties, torn clothing, scarves, unbuttoned or unzipped jackets that can catch on moving parts. Wear proper safety equipment as authorized for the job. Examples: hard hats, safety shoes, heavy gloves, ear protectors, safety glasses or goggles, reflector vests, or respirators. Consult your employer for specific safety equipment requirements.

Do not carry loose objects in pockets that might fall unnoticed into open compartments. Do not use machine to carry loose objects by means other than attachments for carrying such objects.

DO NOT CARRY RIDERS unless the machine is equipped for carrying people to reduce personal exposure to being thrown off.

Do not operate machinery in a condition of extreme fatigue or illness. Be especially careful towards the end of the shift.

Roll Over Protective Structures are required on wheel loaders, dozer tractors, track type loaders, graders and scrapers by local or national requirements. **DO NOT** operate this machine without a Roll Over Protective Structure.

Do not operate a machine without a falling object protective structure (FOPS).

Do not operate this machine without a rear canopy screen when machine is equipped with rear mounted towing winch.

Seat belts are required to be provided with roll over protective structures or roll protection cabs by local or national regulations. Keep the safety belt fastened around you during operation.

Where noise exposure exceeds 90 dBA for 8 hours, wear authorized ear protective equipment per local or national requirements that apply.

Keep clutches and brakes on machine and attachments such as power control units, winches and master clutches adjusted according to Operation and Maintenance Instruction Manuals of the manufacturers at all times. **DO NOT** adjust machine with engine running except as specified.

Do not operate a machine with brakes out of adjustment. See the Operation and Maintenance Instruction Manual.

Move carefully when under, in or near machine or implements. Wear required protective equipment, such as hard hat, safety glasses, safety shoes, ear protectors.

To move a disabled machine, use a trailer or low boy truck if available. If towing is necessary, provide warning signals as required by local rules and regulations and follow Operation and Maintenance Instruction Manual recommendations. Load and unload on a level area that gives full support to the trailer wheels. Use ramps of adequate strength, low angle and proper height. Keep trailer bed clean of clay, oil and all materials that become slippery. Tie machine down securely to truck or trailer bed and block tracks (or wheels) as required by the carrier.

SAFETY RULES

To prevent entrapment in cabs or mounted enclosures, observe and know the mechanics of alternate exit routes.

On machines equipped with suction radiator fans, be sure to periodically check all engine exhaust parts for leaks as exhaust gases are dangerous to the operator. Keep a vent open to outside air at all times when operating within a closed cab.

STARTING FLUID IS FLAMMABLE. Follow the recommendations as outlined in the Operation and Maintenance Instruction Manual and as marked on the containers. Store containers in cool, well-ventilated place secure from unauthorized personnel. **DO NOT PUNCTURE OR BURN CONTAINERS.**

Follow the recommendations of the manufacturer for storage and disposal.

Wire rope develops steel slivers. Use authorized protective equipment such as heavy gloves, safety glasses when handling.

OPERATION

Before starting machine, check, adjust and lock the operator's seat for maximum comfort and control of the machine.

DO NOT START OR OPERATE AN UNSAFE MACHINE. Before working the machine, be sure that any unsafe condition has been satisfactorily remedied. Check brakes, steering and attachment controls before moving. Advise the proper maintenance authority of any malfunctioning part or system. Be sure all protective guards or panels are in place, and all safety devices provided are in place and in good operating condition.

Check instruments at start-up and frequently during operation.

Do not run the engine of this machine in closed areas without proper ventilation to remove deadly exhaust gases.

Be sure exposed personnel in the area of operation are clear of the machine before moving the machine or its attachments. **WALK COMPLETELY AROUND** the machine before mounting. Sound horn. Obey flag man, safety signals and signs.

Know the principles of cross steering of crawler tractors. Read section in Operation and Maintenance Instruction Manual on cross steering.

Keep engine exhaust system and exhaust manifolds clear of combustible material. Equip machine with screens and guards when working under conditions of flying combustible material.

If engine has a tendency to stall for any reason under load or idle, report this for adjustment to a proper maintenance authority immediately. Do not continue to operate machine until condition has been corrected.

Never use bucket as a man-lift.

Use recommended bucket for machine and material load ability and heaping characteristics of material, terrain, and other pertinent job conditions.

Avoid abrupt starts and stops when transporting a loaded bucket.

Inspect your seat belt webbing and hardware at least twice a year for signs of fraying, wear or other weakness that could lead to failure.

Use only designated towing or pulling attachment points. Use care in making attachment. Be sure pins and locks as provided are secure before pulling. Stay clear of draw bars, cables or chains under load.

When pulling or towing through a cable or chain, do not start suddenly at full throttle. Take up slack carefully. Guard against kinking chains or cables. Inspect carefully for flaws before using. Do not pull through a kinked chain or cable due to the high stresses and possibility of failure of the kinked area. Always wear heavy gloves when handling chain or cable.

Be sure cables are anchored and the anchor point is strong enough to handle the expected load. Keep exposed personnel clear of anchor point and cable or chain. **DO NOT PULL OR TOW UNLESS OPERATOR'S COMPARTMENT OF MACHINES INVOLVED ARE PROPERLY GUARDED AGAINST POTENTIAL CABLE OR CHAIN BACKLASH.**

During operation always carry ripper in full raised position when not in use and lowered to ground when parked.

When counterweights have been provided, do not work machine if they have been removed unless their equivalent weight has been replaced. See the Operation and Maintenance Instruction Manual.

When operating a machine know what clearances will be encountered, overhead doors, wires, pipes, aisles, roadways; also the weight limitations of ground, floor, and ramps.

Know bridge and culvert load limits and do not exceed them. Know machine's height, width, and weight. Use a signal person when clearance is close.

Be sure that the exact location of gas lines, utility lines, sewers, overhead and buried power lines, and other obstructions or hazards are known. Such locations should be precisely marked by the proper authorities to reduce the risk of accidents. Obtain shut-down or relocation of any such facilities before starting work, if necessary.

Be certain to comply with all local, state, and federal regulations regarding working in the vicinity of power lines.

When roading find out what conditions are likely to be met - clearances, congestion, type of surface, etc. Be aware of fog, smoke or dust element that obscure visibility.

When backing, always look to where the machine is to be moved. Be alert to the position of exposed personnel. **DO NOT OPERATE** if exposed personnel enter the immediate work area.

SAFETY RULES

Never travel a machine on a job site, in a congested area, or around people without a signal person to guide the operator.

In darkness, check area of operation carefully before moving in with machine. Use all lights provided. Do not move into area of restricted visibility.

Maintain clear vision of all areas of travel or work. Keep cab windows clean and repaired. Carry blade low for maximum visibility while traveling. Obtain and use fan blast deflectors where tractors are used a pusher tractors in tandem.

Transport a loaded bucket with the bucket as far tipped back and in as low a position as possible for maximum visibility, stability, and safest transport of the machine. Carry it at a proper speed for the load and ground conditions.

Carry the bucket low when traveling with a load.

Maintain a safe distance from other machines. Provide sufficient clearance for ground and visibility conditions. Yield right-of-way to loaded machines.

Avoid going over obstacles such as rough terrain, rocks, logs, curbs, ditches ridges, and railroad tracks whenever possible. When obstructions must be crossed, do so with extreme care at an angle if possible. Reduce speed - down-shift. Ease up to the break over point - pass the balance point slowly on the obstruction and ease down on the other side.

Cross gullies or ditches at an angle with reduced speed after insuring ground conditions will permit a safe traverse.

Be alert to soft ground conditions close to newly constructed walls. The fill material and weight of machine may cause the wall to collapse under the machine.

Operate at speeds slow enough to insure complete control at all times. Travel slowly over rough ground, on slopes or near drop offs, in congested areas or on ice or slippery surfaces.

Be alert to avoid changes in traction conditions that could cause loss of control. *DO NOT* drive on ice or frozen ground conditions when working the machine on steep slopes or near drop offs.

Keep the machine well back from the edge of an excavation.

Be especially careful when traveling up or down slopes. Position the bucket in such a way as to provide a possible anchorage on the ground in case of a slide.

When proceeding across a hill side proceed slowly. Never turn sharply up hill or down hill.

Avoid side hill travel whenever possible. Drive up and down the slope. Should the machine start slipping sideways on a grade, turn it immediately downhill.

In steep down hill operation, do not allow engine to over speed. Select proper gear before starting down grade.

There is no substitute for good judgement when working on slopes.

The grade of slope you should attempt will be limited by such factors as condition of the ground, load being handled, the type of machine, speed of machine and visibility.

NEVER COAST the machine down grades and slopes with the transmission in neutral on power shift machines, or clutch disengaged on manually shifted machines.

To reduce the danger of uncontrolled machine, choose a gear speed before proceeding down grade that will hold machine to proper speeds for conditions.

Operating in virgin rough terrain that includes previously mentioned hazards is called pioneering. Be sure you know how this is done. Danger from falling branches and upturning roots is acute in these areas.

When pushing over trees, the machine must be equipped with proper over head guarding. Never allow a machine to climb up on the root structure particularly while the tree is being felled. Use extreme care when pushing over any tree with dead branches.

Avoid brush piles, logs or rocks. *DO NOT DRIVE THE MACHINE ONTO BRUSH PILES, LOGS, LARGE ROCKS* or other surface irregularities that break traction with the ground especially when on slopes or near drop offs.

Avoid operating equipment too close to an over hang or high wall either above or below the machine. Be on the look out for caving edges, falling objects and slides. Beware of concealment by brush and under growth of these dangers.

Park in a non-operating and non-traffic area or as instructed. Park on firm level ground if possible. Where not possible, position machine at a right angle to the slope, making sure there is no danger of uncontrolled sliding movement. Set the parking brake.

Never park on an incline without carefully blocking the machine to prevent movement.

If parking in traffic lanes cannot be avoided, provide appropriate flags, barriers, flares and warning signals as required. Also provide advance warning signals in the traffic lane of approaching traffic.

Move the machine away from pits, trenches, overhangs and over head power lines before shutting down for the day.

When stopping operation of the machine for any reason, always return the transmission or hydrostatic drive control to neutral and engage the control lock to secure the machine for a safe start up. Set parking brake, if so equipped.

Never lower attachments or tools from any position other than seated in operator's seat. Sound the horn. Make sure the area near the attachment is clear. Lower the attachment slowly. *DO NOT USE* float position to lower hydraulic equipment.

SAFETY RULES

Always before leaving the operator's seat and after making certain all people are clear of the machine, slowly lower the attachments or tools flat to the ground in a positive ground support position. Move any multi purpose tool to positive closed position. Return the controls to hold. Place transmission control in neutral and move engine controls to off position. Engage all control locks, set parking brake, and open and lock the master (key, if so equipped) switch. Consult Operation and Maintenance Instruction Manual.

Always follow the shut down instructions as outlined in the Operation and Maintenance Instruction Manual.

MAINTENANCE

Do not perform any work on equipment that is not authorized. Follow the Maintenance or Service Manual procedures.

Machine should not be serviced with anyone in the operator's seat unless they are qualified to operate the machine and are assisting in the servicing.

Shut off engine and disengage the Power Take Off lever if so equipped before attempting adjustments or service.

Always turn the master switch (key switch if so equipped) to the *OFF* position before cleaning, repairing, or servicing and when parking machine to forestall unintended or unauthorized starting.

Disconnect batteries and *TAG* all controls according to local or national requirements to warn that work is in progress. Block the machine and all attachments that must be raised per local or national requirements.

Never lubricate, service or adjust a machine with the engine running, except as called for in the Operation and Maintenance Instruction Manual. Do not wear loose clothing or jewelry near moving parts.

Do not run engine when refueling and use care if engine is hot due to the increased possibility of a fire if fuel is spilled.

Do not smoke or permit any open flame or spark near when refueling, or handling highly flammable materials.

Always place the fuel nozzle against the side of the filler opening before starting and during fuel flow. To reduce the chance of a static electricity spark, keep contact until after fuel flow is shut off.

Do not adjust engine fuel pump when the machine is in motion.

Never attempt to check or adjust fan belts when engine is running.

When making equipment checks that require running of the engine, have an operator in the operator's seat at all times with the mechanic in sight. Place the transmission in neutral and set the brakes and lock. **KEEP HANDS AND CLOTHING AWAY FROM MOVING PARTS.**

Avoid running engine with open unprotected air inlets. If such running is unavoidable for service reasons, place protective screens over all inlet openings before servicing engine.

Do not place head, body, limbs, feet, fingers, or hands near rotating fan or belts. Be especially alert around a pusher fan.

Keep head, body, limbs, feet, fingers, or hands away from bucket, blade or ripper when in raised position.

If movement of an attachment by means of machine's hydraulic system or winches is required for service or maintenance, do not raise or lower attachments from any position other than when seated in the operator's seat. Before starting machine or moving attachments or tools, set brakes, sound horn and call for an all clear. Raise attachments slowly.

Never place head, body, limbs, feet, fingers, or hands into an exposed portion between uncontrolled or unguarded scissor points of machine without first providing secure blocking.

Never align holes with fingers or hands - Use the proper aligning tool.

Disconnect batteries before working on electrical system or repair work of any kind.

Check for fuel or battery electrolyte leaks before starting service or maintenance work. Eliminate leaks before proceeding.

BATTERY GAS IS HIGHLY FLAMMABLE. Leave battery box open to improve ventilation when charging batteries. Never check charge by placing metal objects across the posts. Keep sparks or open flame away from batteries. Do not smoke near battery to guard against the possibility of an accidental explosion.

Do not charge batteries in a closed area. Provide proper ventilation to guard against an accidental explosion from an accumulation of explosive gases given off in the charging process.

Be sure to connect the booster cables to the proper terminals (+ to +) and (- to -) at both ends. Avoid shorting clamps. Follow the Operation and Maintenance Instruction Manual procedure.

Due to the presence of flammable fluid, never check or fill fuel tanks, storage batteries or use starter fluid near lighted smoking materials or open flame or sparks.

Rust inhibitors are volatile and flammable. Prepare parts in well ventilated place. Keep open flame away - **DO NOT SMOKE.** Store containers in a cool well ventilated place secured against unauthorized personnel.

Do not use an open flame as a light source to look for leaks or for inspection anywhere on the machine.

DO NOT pile oily or greasy rags - they are a fire hazard. Store in a closed metal container.

SAFETY RULES

Never use gasoline or solvent or other flammable fluid to clean parts. Use authorized commercial, non-flammable, non-toxic solvents.

Never place gasoline or diesel fuel in an open pan.

Shut off engine and be sure all pressure in system has been relieved before removing panels, housings, covers, and caps. See Operation and Maintenance Instruction Manual.

Do not remove hoses or check valves in the hydraulic system without first removing load and relieving pressure on the supporting cylinders. Turn radiator cap slowly to relieve pressure before removing. Add coolant only with engine stopped or idling if hot. See Operation and Maintenance Instruction Manual.

Fluid escaping under pressure from a very small hole can almost be invisible and can have sufficient force to penetrate the skin. Use a piece of card board or wood to search for suspected pressure leaks. **DO NOT USE HANDS.** If injured by escaping fluid, see a doctor at once. Serious infection or reaction can develop if proper medical treatment is not administered immediately.

Never use any gas other than dry nitrogen to charge accumulators. See Operation and Maintenance Instruction Manual.

When making pressure checks use the correct gauge for expected pressure. See the Operation and Maintenance Instruction Manual or Service Manual for guidance.

For field service, move machine to level ground if possible and block machine. If work is absolutely necessary on an incline, block machine and its attachments securely. Move the machine to level ground as soon as possible.

Brakes are inoperative when manually released for servicing. Provision must be made to maintain control of the machine by blocking or other means.

Block all wheels before bleeding or disconnecting any brake system lines and cylinders.

Never use make shift jacks when adjusting track tension. Follow the Undercarriage Service Manual.

Know your jacking equipment and its capacity. Be sure the jacking point used on the machine is appropriate for the load to be applied. Be sure the support of the jack at the machine and under the jack is appropriate and stable. Any equipment up on a jack is dangerous. Transfer load to appropriate blocking as a safety measure before proceeding with service or maintenance work according to local or national requirements.

Always block with external support any linkage or part on machine that requires work under the raised linkage, parts, or machine per local or national requirements. Never allow anyone to walk under or be near unblocked raised equipment. Avoid working or walking under raised blocked equipment unless you are assured of your safety.

When servicing or maintenance requires access to areas that cannot be reached from the ground, use a ladder or step platform that meets local or national requirements to reach the service point. If such ladders or platforms are not available, use the machine hand holds and steps as provided. Perform all service or maintenance carefully.

Shop or field service platforms and ladders used to maintain or service machinery should be constructed and maintained according to local or national requirements.

Lift and handle all heavy parts with a lifting device of proper capacity. Be sure parts are supported by proper slings and hooks. Use lifting eyes if provided. Watch out for people in the vicinity.

In lifting and handling heavy parts, slings must be of adequate strength for the purpose intended and must be in good condition.

Handle all parts with extreme care. Keep hands and fingers from between parts. Wear authorized protective equipment such as safety glasses, heavy gloves, safety shoes.

When using compressed air for cleaning parts use safety glasses with side shields or goggles. Limit the pressure to 207 kPa (30 psi) according to local or national requirements.

Wear welders protective equipment such as dark safety glasses, helmets, protective clothing, gloves and safety shoes when welding or burning. Wear dark safety glasses near welding. **DO NOT LOOK AT ARC WITHOUT PROPER EYE PROTECTION.**

Replace seat belts every two years on open canopy units and every three years on machines with cabs or at change of ownership.

Wear proper protective equipment such as safety goggles or safety glasses with side shields, hard hat, safety shoes, heavy gloves when metal or other particles are apt to fly or fall.

Use only grounded auxiliary power source for heaters, chargers, pumps and similar equipment to reduce the hazards of electrical shock.

Keep maintenance area **CLEAN** and **DRY**. Remove water or oil slicks immediately.

Remove sharp edges and burrs from reworked parts.

Be sure all mechanics tools are in good condition. **DO NOT** use tools with mushroomed heads. Always wear safety glasses with side shields.

Do not strike hardened steel parts with anything other than a soft iron or non-ferrous hammer.

Do not rush. Walk, do not run.

Know and use the hand signals used on particular jobs and know who has the responsibility for signaling.

SAFETY RULES

Face the access system when climbing up and down.

Apply the parking device and place the transmission in neutral before starting the machine.

Do not bypass the starter safety switch. Repair the starter safety controls if they malfunction.

Fasten seat belt before operating.

Steering should be checked to both right and left. Brakes should be tested against engine power. Clutch and transmission controls should be moved through or to neutral positions to assure disengagement. Operate all controls to insure proper operation. If any malfunctions are found, park machine, shut off engine, report and repair before using machine.

If the power steering or the engine ceases operating, stop the machine motion as quickly as possible. Lower equipment, set parking device and keep machine securely parked until the malfunction is corrected or the machine can be safely towed. Never lift loads in excess of capacity.

Should the machine become stuck or frozen to the ground, back out to avoid roll over.

Know and understand the job site traffic flow patterns.

Keep the machine in the same gear going down hill as used for going up hill.

When roading a machine, know and use the signaling devices required on the machine. Provide an escort for roading where required.

Always use the recommended transport devices when roading the machine.

Do not attempt repairs unless proper training has been provided.

Use extreme caution when removing radiator caps, drain plugs, grease fittings or pressure taps. Park the machine and let it cool down before opening a pressurized compartment.

Release all pressure before working on systems which have an accumulator.

When necessary to tow the machine, do not exceed the recommended towing speed, be sure the towing machine has sufficient braking capacity to stop the towed load. If the towed machine cannot be braked, a tow bar must be used or two towing machines must be used - one in front pulling and one in the rear to retard. Avoid towing over long distances.

Observe proper maintenance and repair of all pivot pins, hydraulic cylinders, hoses, snap rings and main attaching bolts.

Always keep the brakes and steering systems in good operating condition.

Replace all missing, illegible or damaged safety signs. Keep all safety signs clean.

Do not fill the fuel tank to capacity. Allow room for expansion.

Wipe up spilled fuel immediately.

Always tighten the fuel tank cap securely. Should the fuel cap be lost, replace it only with the original manufacturer's approved cap. Use of a non-approved cap may result in over-pressurization of the tank.

Never drive the machine near open fires.

Use the correct fuel grade for the operating season.

FOREWORD

Always furnish serial number if making an inquiry to dealer or factory about this machine.

Many equipment owners employ the Dealer Service Department for all work other than routine lubrication and minor service. This practice is encouraged, as our Dealers are well informed and equipped to render efficient service by factory trained mechanics.

This manual may not be reprinted or reproduced, either in whole or in part, without written permission of Fiatallis ®.

Illustrations show standard and optional items.

IMPORTANT

The information in this manual was current at the time of publication. It is our policy to constantly improve our product and to make available additional items. These changes may affect procedures outlined in this manual. If variances are observed, verify the information through your Dealer.

Fiatallis is not responsible for any liability arising from any damage resulting from defects caused by parts and/or components not approved by Fiatallis for use in maintaining and/or repairing products manufactured or merchandized by Fiatallis.

In any case, no warranty of any kind is made or shall be imposed with respect to products manufactured or merchandized by Fiatallis when failures are caused by the use of parts and/or components not approved by Fiatallis.

TOPIC 1 GENERAL DESCRIPTION

1.1

This manual is designed to aid in the maintenance of the 65-B Motor Grader. Instructions in this manual will cover removal of the FIAT engine and its accessories as applicable to the motor grader. The engine is a FIAT Model 8065. For any internal service to the

engine or fuel injection pump, refer to Engine Service Manual #73121213. Accessories that are peculiar to the FIAT engine are also removed in this manual; these include the transmission oil filter, fuel system and lines, air intake, exhaust system, cooling system, starter and alternator.

TOPIC 2 MUFFLER AND AIR CLEANER



WARNING



Do not work under or near an unblocked or unsupported linkage, parts or machine.



When any supporting machine component must be removed or installed and jacks are used, be sure the support for the jack at the machine and on the ground are appropriate to the load to be applied. Transfer the load to authorized blocking or jack stands immediately. Do not work on or under the machine or its components while supported only on a jack to other lifting device according to LOCAL OR NATIONAL requirements.



Use proper tools to bring holes into alignment. DO NOT USE FINGERS OR HANDS.



WARNING



Never use gasoline, solvent or other flammable fluids to clean parts.



It is unsafe to strike hardened steel parts with anything other than a soft iron or non-ferrous hammer. When installing or removing such parts wear safety glasses with side shields and heavy gloves, etc., to reduce the possibility of injury.



Wear welders protective equipment such as dark safety glasses, helmets, protective clothing, gloves and safety shoes when welding or burning. Wear dark safety glasses near welding. DO NOT LOOK AT THE ARC WITHOUT PROPER EYE PROTECTION.

2.1 MUFFLER REMOVAL

2.1.1

Turn the master switch to "OFF" position. The switch is located under the cover on the front side of the battery box on the right side of the grader.

2.1.2

Loosen the clamp securing the air in-

take extension, Fig. 1 (3) and remove from grader.

2.1.3

Loosen the clamp securing the exhaust stack, Fig. 1 (2) and remove exhaust stack from grader.

2.1.4

Loosen the hood latch bolts and remove the hood.

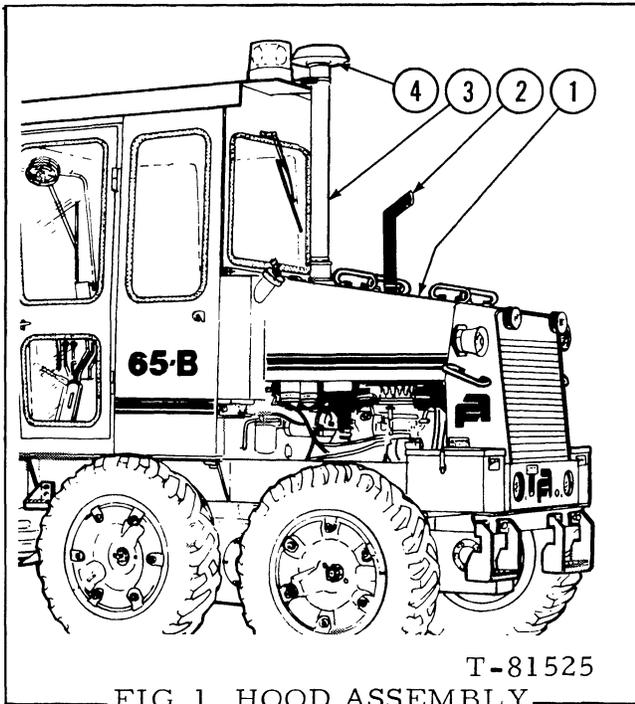


FIG. 1 HOOD ASSEMBLY

- | | |
|------------------|--------------|
| 1. Hood | 3. Extension |
| 2. Exhaust stack | 4. Rain cap |

2.1.5

Loosen clamp, Fig. 2 (3) and remove capscrew securing muffler (1) to angle (2) and remove muffler from grader.

2.1.6

Remove nuts from studs securing tube (4) to exhaust manifold and remove tube.

2.2 MUFFLER INSTALLATION

2.2.1

Using new gasket, Fig. 2 (5) install tube (4) to exhaust manifold. Torque nuts to 2.17 -- 2.58 daNm (2.21 -- 2.62 kgm)(16 -- 19 lbs. ft.).

2.2.2

Install muffler (1) to tube (4) with clamp (3) and to angle (2) with capscrew, nut and lockwasher. Torque capscrews to 4.74 -- 5.29 daNm (4.84 -- 5.39 kgm) (35 -- 39 lbs. ft.).

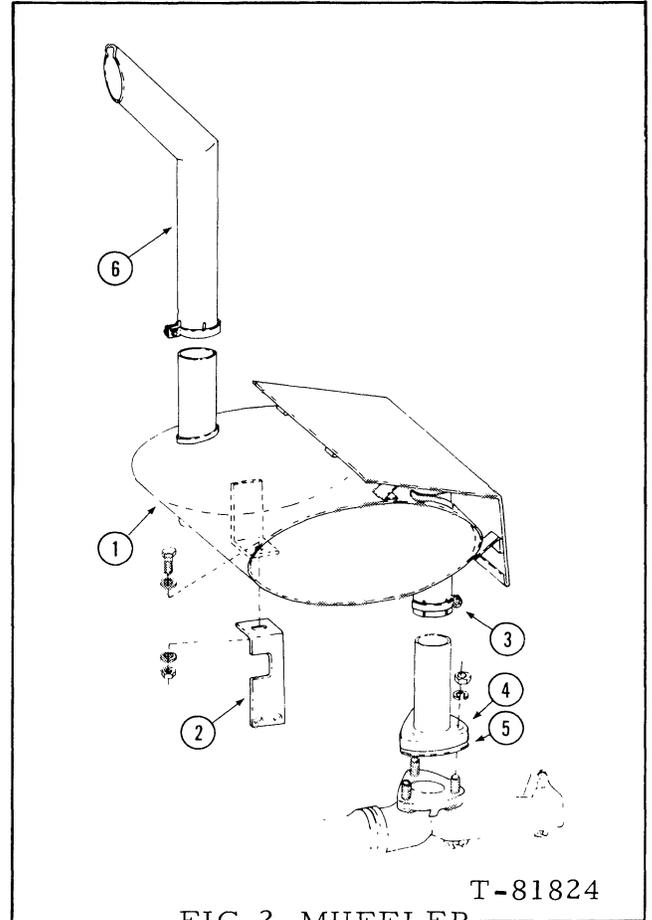


FIG. 2 MUFFLER

- | | |
|------------|-----------|
| 1. Muffler | 4. Tube |
| 2. Angle | 5. Gasket |
| 3. Clamp | 6. Stack |

2.2.3

Install hood on grader and secure with latch bolts.


2.2.4

Install exhaust stack, Fig. 2 (6) and secure with clamp. Install air intake extension and rain cap. Secure with clamp.


2.3 AIR CLEANER REMOVAL

2.3.1


Remove the clamps securing the air intake extension, Fig. 1 (3) and remove from grader.

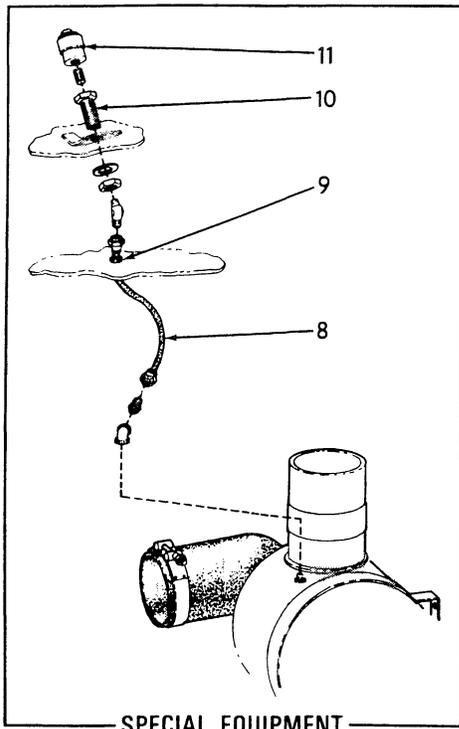

SPECIAL EQUIPMENT

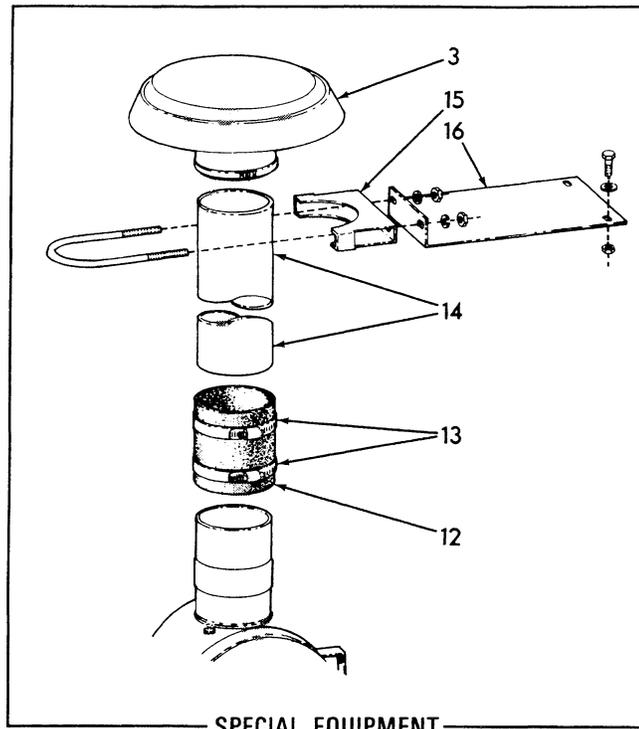

SPECIAL EQUIPMENT

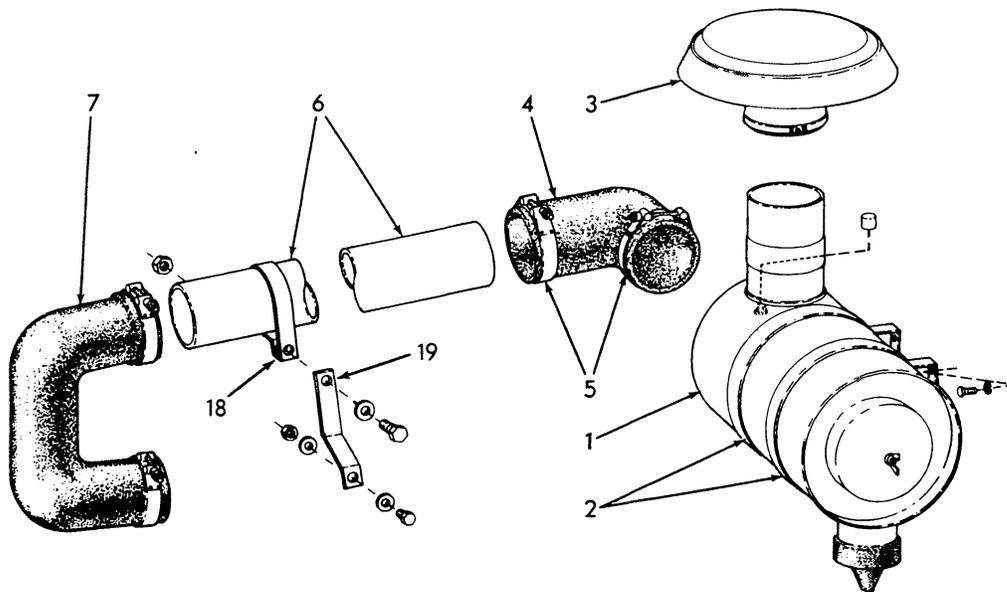

T-81610

FIG. 3 AIR CLEANER MOUNTING

- | | | |
|------------------|---------------|-----------|
| 1. Air cleaner | 8. Hose | 14. Tube |
| 2. Band assembly | 9. Grommet | 15. Clamp |
| 3. Rain cap | 10. Adapter | 16. Angle |
| 4. Elbow | 11. Indicator | 17. Hose |
| 5. Clamp | 12. Hose | 18. Clamp |
| 6. Tube | 13. Clamp | 19. Strap |
| 7. Elbow | | |

Study SAFETY RULES in the front of this manual thoroughly for the protection of machine and safety of personnel.

2.3.2

Loosen the clamp securing the exhaust stack, Fig. 1 (2) and remove exhaust stack from grader.

2.3.3

Loosen the hood latch bolts and remove the hood.



WARNING

Place protection over air inlet openings before operating engine.

2.3.4

Loosen clamps securing elbow, Fig. 3 (7) and remove elbow from air intake manifold.

2.3.5

Remove capscrew securing clamp (18) and remove tube (6) from air intake manifold.

2.3.6

Loosen clamp on elbow, Fig. 3 (4) and remove elbow from air cleaner.

2.3.7

Remove capscrews securing air cleaner (1) to plate on fuel tank, and remove the air cleaner.

NOTE: Refer to the Operation and Maintenance Instruction Manual #73114342 for service of the air cleaner assembly.

2.4 AIR CLEANER INSTALLATION

2.4.1

Install capscrews securing air cleaner assembly, Fig. 3 (1) to plate on fuel tank. Torque capscrews to 4.74 -- 5.29 daNm (4.84 -- 5.39 kgm)(35 -- 39 lbs. ft.).

2.4.2

Slide clamps, Fig. 3 (5) on elbow (4) and install elbow on air cleaner.

2.4.3


Slide tube (6) into elbow (4). Install clamp (18) onto tube (6) and fasten clamp to strap (19) with capscrew, nut and washer. Torque capscrews to 2.58 -- 2.85 daNm (2.62 -- 2.91 kgm) (19 -- 21 lbs. ft.).

2.4.4

Slide clamps onto elbow (7) and install elbow onto tube (6) and air intake manifold. Tighten all clamps and torque to 6.78 -- 7.91 NM (69.13 -- 80.65 kgcm) (60 -- 90 lbs. in.).

NOTE: Be certain all capscrews, hoses, clamps, etc. are tight. Be certain all gaskets are in good condition to avoid air leaks.

TOPIC 3 TRANSMISSION AND FUEL FILTERS

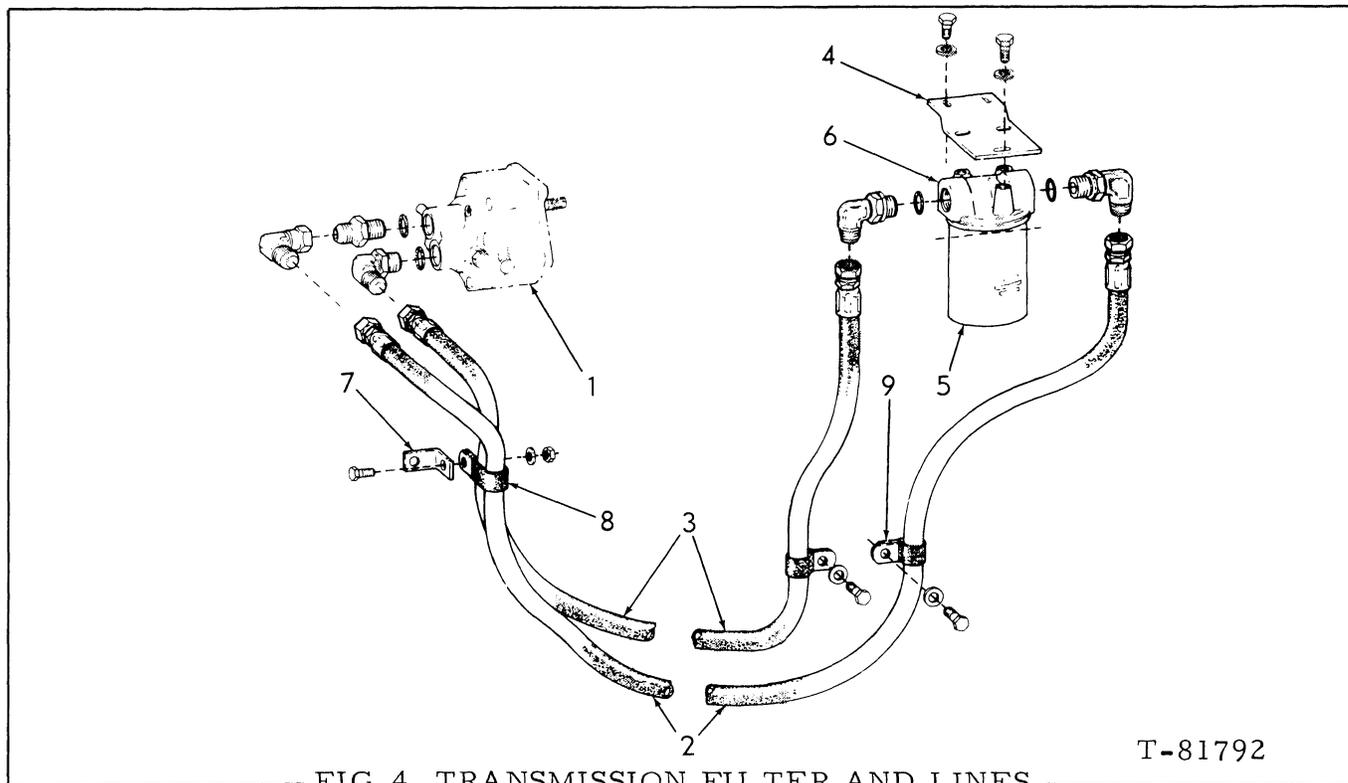

- | | |
|------------------|------------|
| 1. Pump assembly | 6. Adapter |
| 2. Hose | 7. Bracket |
| 3. Hose | 8. Clip |
| 4. Bracket | 9. Clip |
| 5. Filter | |

3.1 TRANSMISSION FILTER REMOVAL

3.1.1
Remove hoses, Fig. 4 (2) (3) from transmission filter assembly (8).

3.1.2
Remove capscrews securing filter assembly (5) to bracket (4).

NOTE: Refer to Operations and Maintenance Instruction Manual 73114342 for element replacement.

3.2 TRANSMISSION FILTER INSTALLATION

3.2.1
Install filter assembly, Fig. 4 (5) to bracket (4) and torque capscrews to 4.74 -- 5.29 daNm (4.84 -- 5.39 kgm)

(35 -- 39 lbs. ft.).

3.2.2
Install hoses (2) (3) to filter assembly. Torque hose clamps to 6.8-7.9 Nm (69-81 kgcm)(60-70 lbs.in.).



WARNING



Do not run the engine of this machine in closed areas without proper ventilation to remove deadly exhaust gases.




Warn all people who may be servicing or working around machine before starting engine.



Never leave machine unattended with the engine running.

Study SAFETY RULES in the front of this manual thoroughly for the protection of machine and safety of personnel.

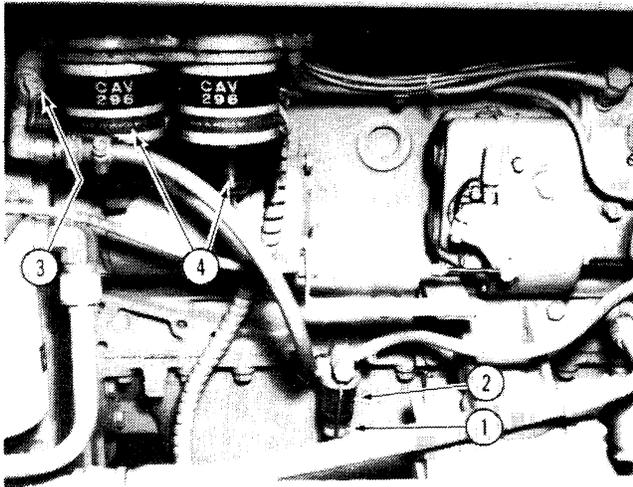

T-81608

FIG. 5 FUEL FILTERS

1. Bail clamp screw
2. Sediment bowl (w/screen)
3. Fuel tank shut-off valve
4. Fuel filters

3.2.3

Start the engine and run for several minutes until the transmission and converter system is charged. Stop the engine and add oil if necessary.

3.3 FUEL FILTERS REMOVAL

3.3.1

To remove the fuel filters, shut-off fuel tank shut-off, Fig. 5 (3). Disconnect the fuel lines, Fig. 7 (22,23) from filters (24) to injection pump (1).

! WARNING

Extinguish all smoking materials or open flames before checking and filling fuel tanks, changing filters and before opening sediment drain due to the presence of flammable fluid.

3.3.2

Remove capscrews securing filters (24) to bracket (26) and remove filters.

NOTE: Refer to Operation and Maintenance Instruction Manual for element replacement.

3.4 FUEL FILTERS INSTALLATION

3.4.1

Install filters, Fig. 7 (24) to filter bracket (26). Torque capscrews to 5.15 daNm (38 lbs.ft.).


3.4.2

Connect fuel lines (22,23) from injection pump (1) to filters (24) and tighten bleed screw.

NOTE: Always use new gaskets on fuel line fittings; also, use care when tightening fittings to prevent breaking the hollow, drilled unions.

3.4.3


To prime fuel filters, open fuel tank shut-off valve, Fig. 5 (3). Turn primer pump knob, Fig. 6 (3) counterclockwise to free the plunger, then pump primer until fuel comes out of vent screw hole at top of filter. Loosen bleed screw, Fig. 6 (2) several turns. Operate hand primer until fuel, free of air, leaves bleed screw. Push primer plunger all the way down and turn clockwise to secure plunger.

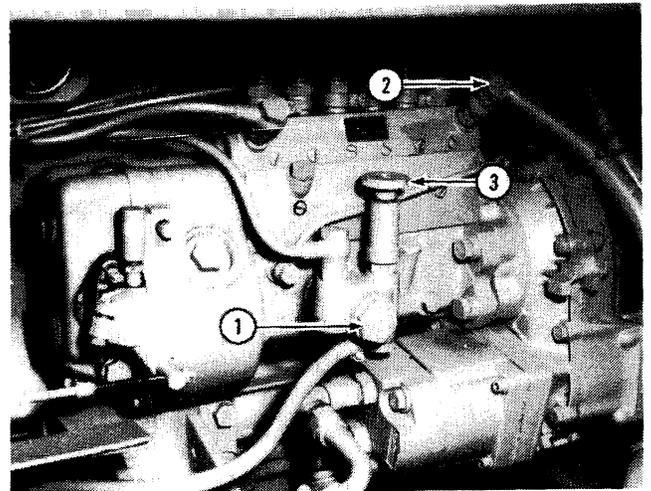

T-81522

FIG. 6 PRIMER PUMP

1. Hand primer pump
2. Bleed screw
3. Pump knob

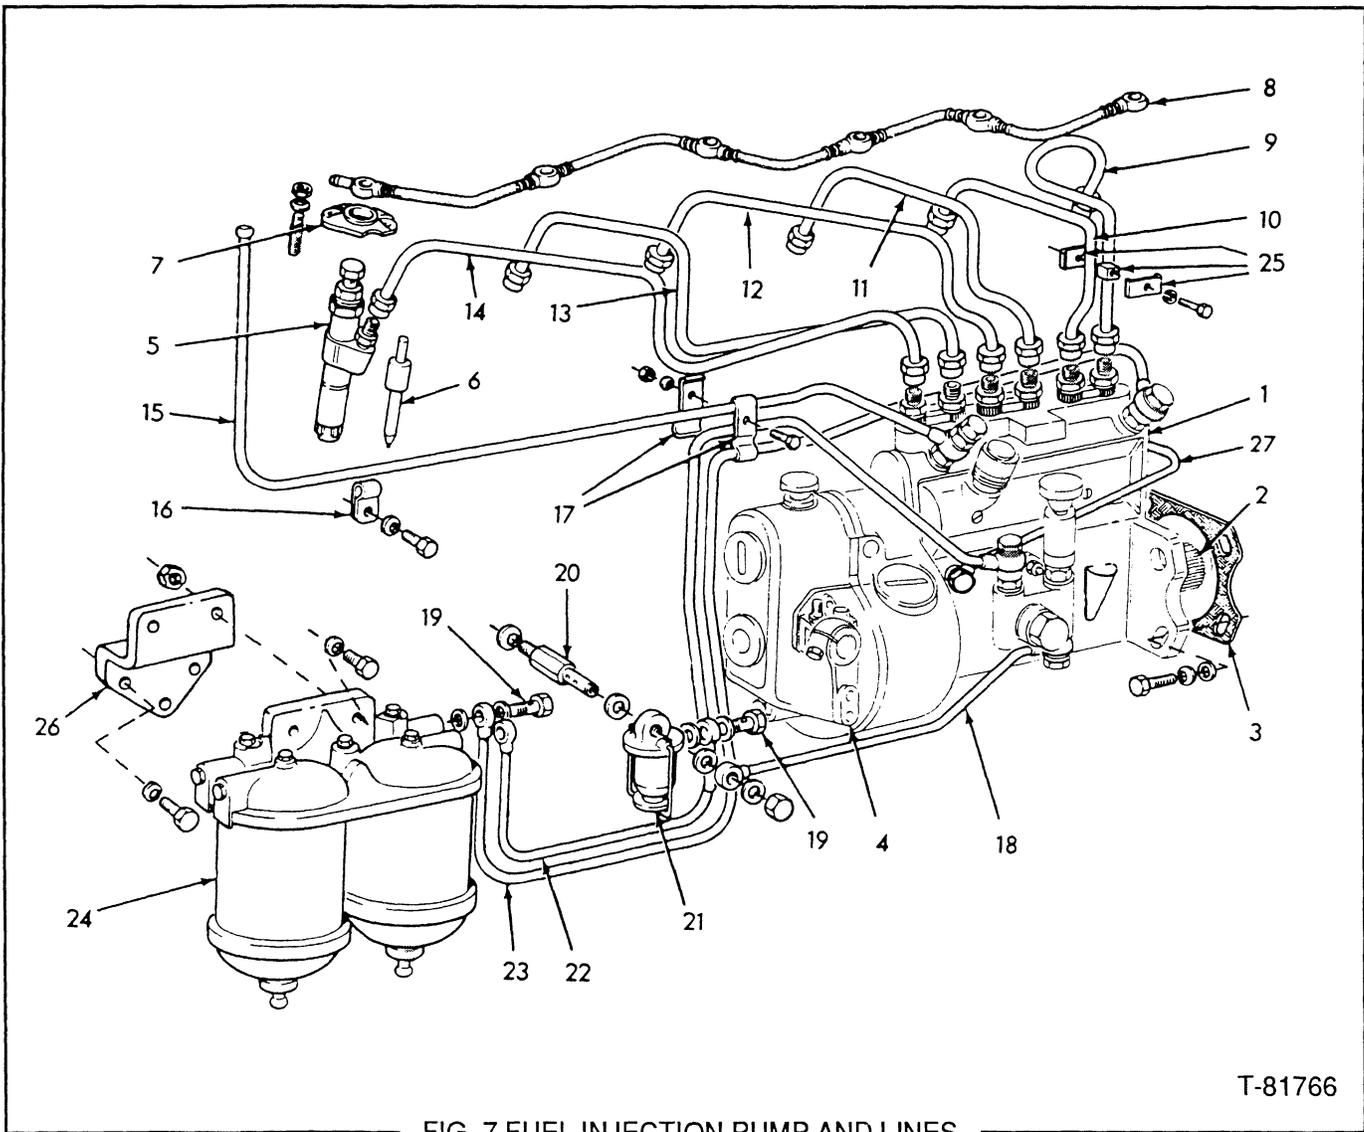


T-81766

FIG. 7 FUEL INJECTION PUMP AND LINES
(Model 8065 engines only)

- | | |
|-------------------|--------------------------------|
| 1. Injection pump | 15. Tube |
| 2. Bushing | 16. Retainer |
| 3. Gasket | 17. Clamp |
| 4. Lever | 18. Tube |
| 5. Holder | 19. Union |
| 6. Nozzle | 20. Connector |
| 7. Bracket | 21. Filter (fuel sediment) |
| 8. Tube | 22. Tube |
| 9. Tube | 23. Tube |
| 10. Tube | 24. Filter assembly |
| 11. Tube | 25. Clamp |
| 12. Tube | 26. Support |
| 13. Tube | 27. Tube, pump lubricating oil |
| 14. Tube | |

Study SAFETY RULES in the front of this manual thoroughly for the protection of machine and safety of personnel.

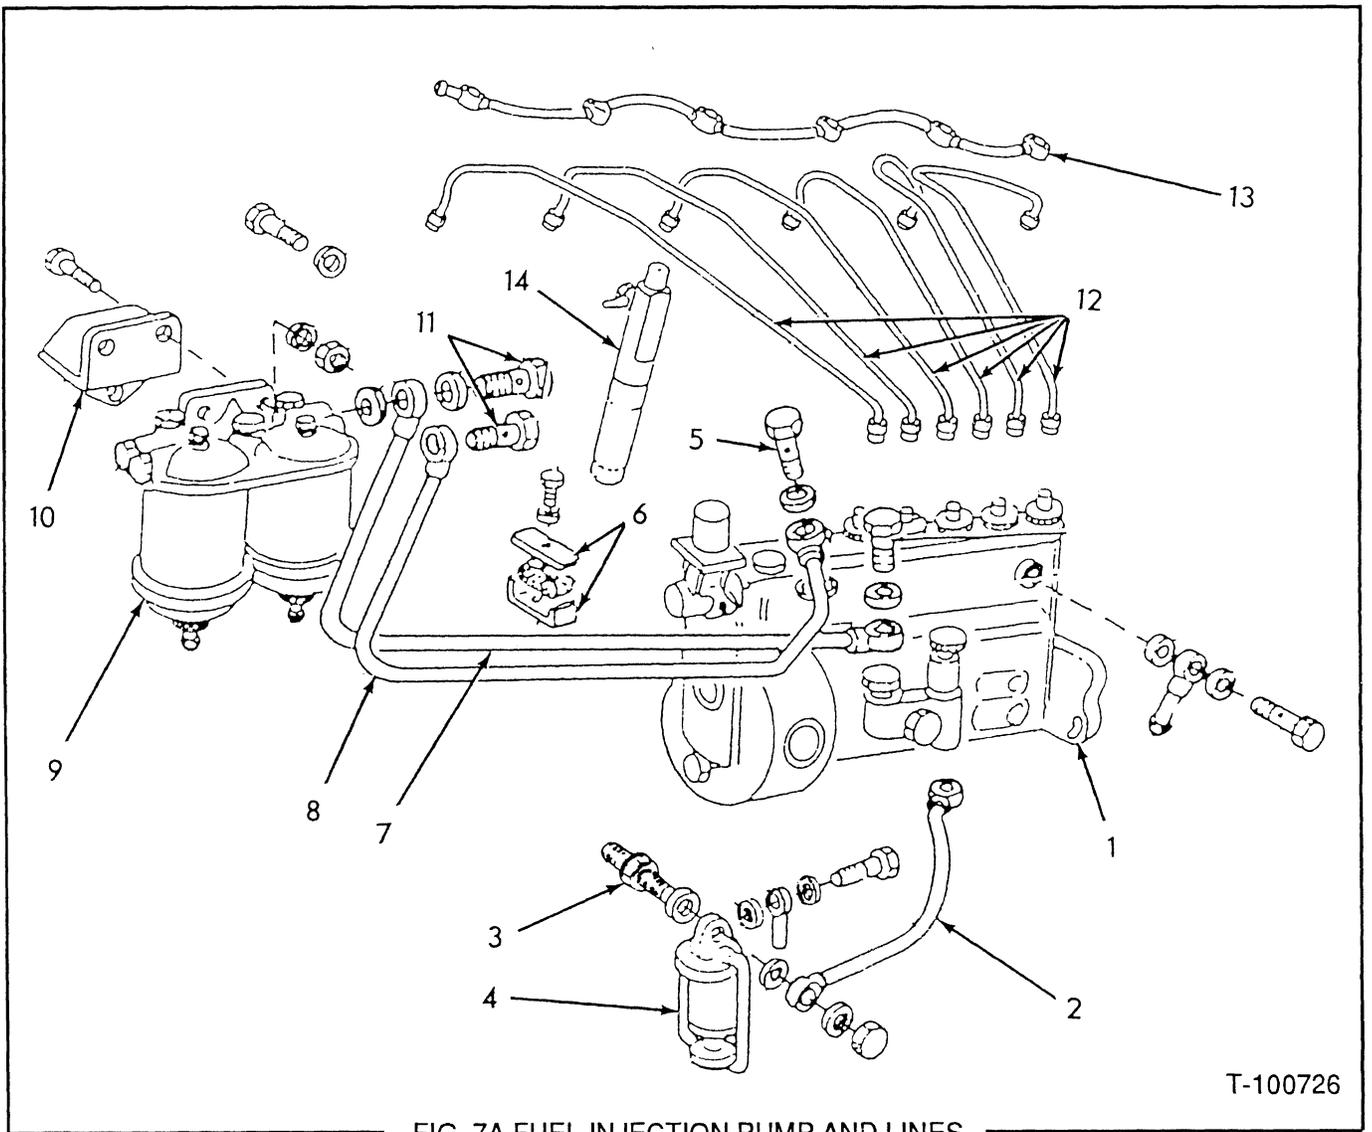

T-100726

FIG. 7A FUEL INJECTION PUMP AND LINES
(Model 8061. I 05 engines only)

- | | |
|---------------------------|---------------------------|
| 1. Injection pump | 8. Tube |
| 2. Tube | 9. Filter assembly |
| 3. Connector | 10. Bracket |
| 4. Filter (fuel sediment) | 11. Union |
| 5. Union | 12. Tubes, fuel injection |
| 6. Clamp assembly | 13. Line, fuel return |
| 7. Tube | 14. Nozzle assembly |

Study SAFETY RULES in the front of this manual thoroughly for the protection of machine and safety of personnel.

TOPIC 4 RADIATOR AND FAN

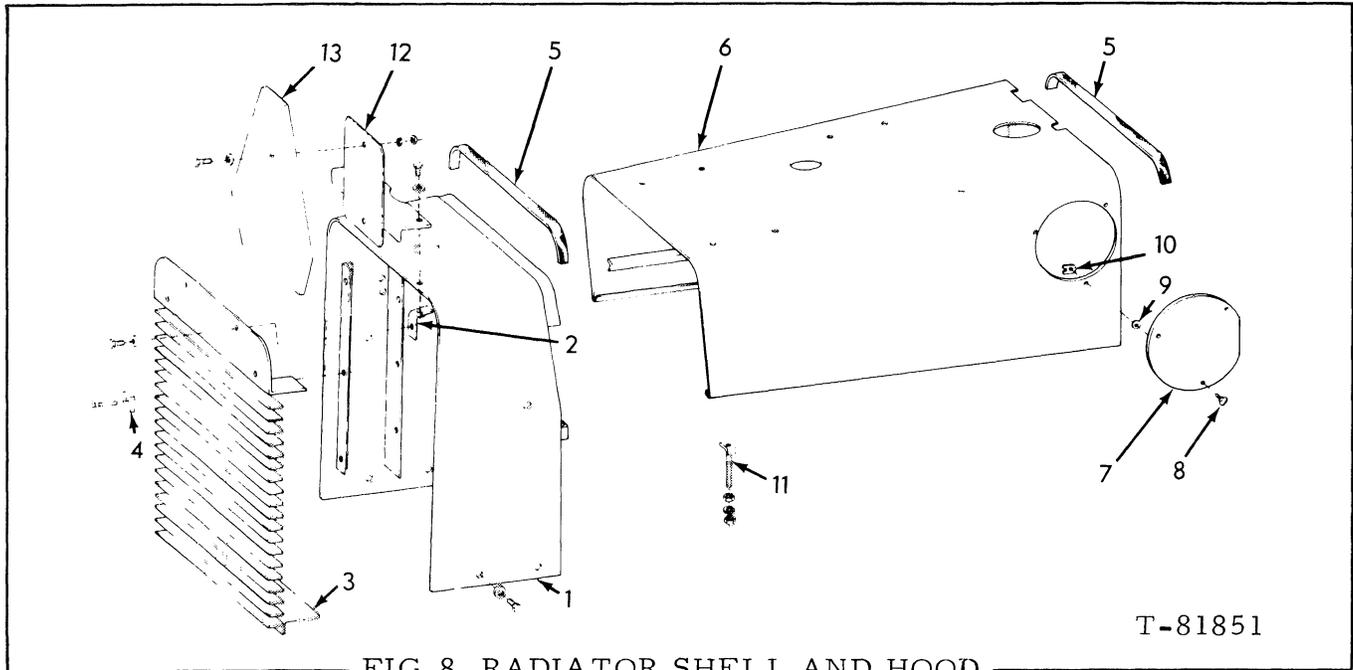


FIG. 8 RADIATOR SHELL AND HOOD

1. Radiator shell
2. Angle
3. Grill
4. Block
5. Cushion
6. Hood
7. Cover

8. Screw
9. Retainer
10. Receptacle
11. Latch bolt
12. Bracket
13. Emblem

4.1 RADIATOR REMOVAL



WARNING

Always turn the master switch to the off position before cleaning, repairing, or servicing or parking the machine to prevent injury.

4.1.1

Turn the master electrical switch to "OFF" position. The switch is located under the cover of the front side of the battery box on the right side of the grader.

4.1.2

Loosen the clamp securing the rain cap, Fig. 1 (4) and remove from grader.

4.1.3

Loosen the clamp securing the exhaust stack, Fig. 1 (2) and remove exhaust stack from grader.

4.1.4


Loosen the hood latch bolts and remove the hood from the grader.

4.1.5

Remove the capscrews securing the radiator grill, Fig. 8 (3) to the radiator shell (1) and remove grill from grader.

4.1.6

Remove the capscrews securing the radiator fan guard, Fig. 10 (6) (7) to the radiator. Push the fan guard toward the engine and let it rest on the

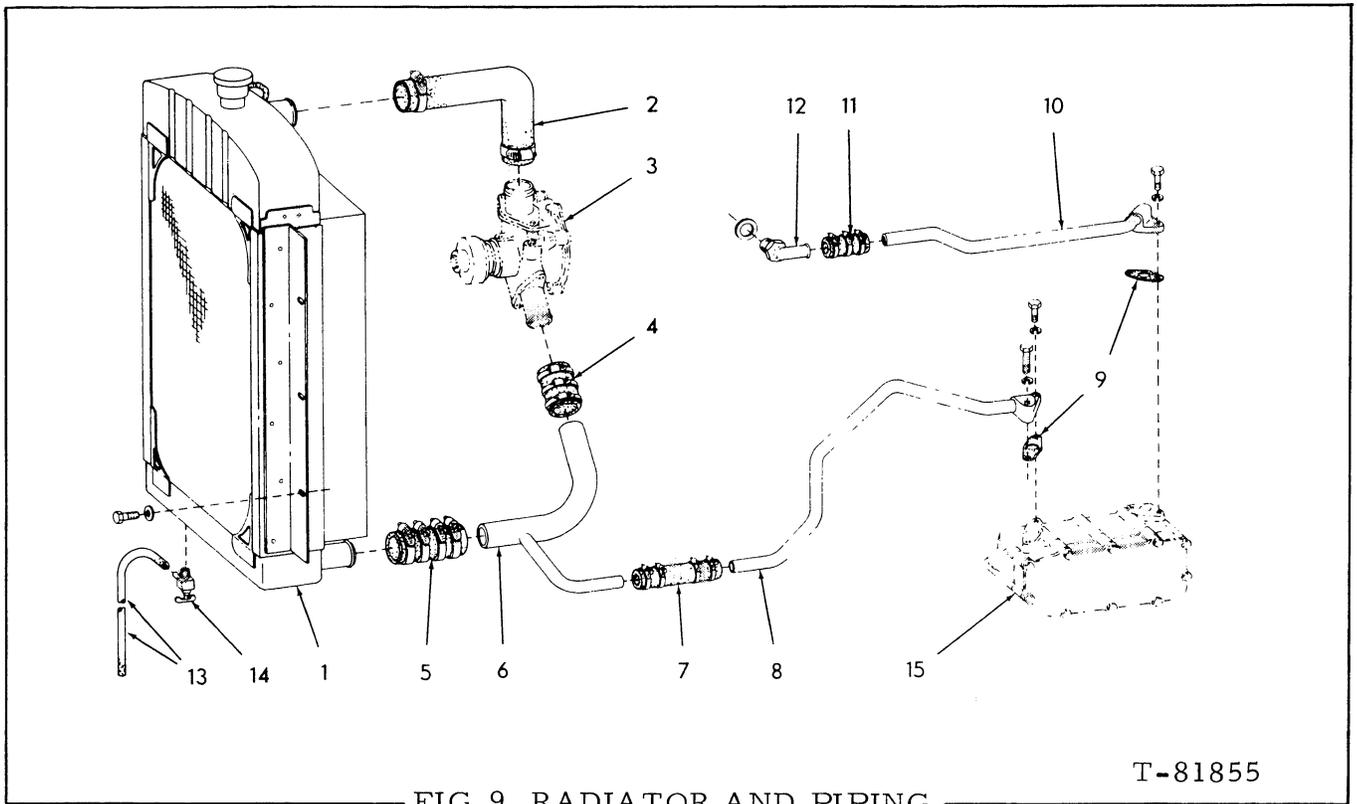

- | | |
|----------------------|----------------|
| 1. Radiator assembly | 9. Gasket |
| 2. Hose | 10. Tube |
| 3. Water pump | 11. Hose |
| 4. Hose | 12. Elbow |
| 5. Hose | 13. Hose |
| 6. Tube | 14. Drain cock |
| 7. Hose | 15. Oil cooler |
| 8. Tube | |

hub of the fan.

⚠ DANGER

Fluid under pressure - turn cap or cover slowly to relieve pressure before removing or until pressure has been relieved as coolant may boil over and cause personal injury.

4.1.7

Turn radiator cap slowly to relieve pressure and remove the cap. Open the drain cock on the lower left of the radiator, Fig. 11, and drain the anti-freeze into a clean container.

4.1.8

Loosen the clamps on the upper and lower radiator hoses, Fig. 9 (2) (5) and remove the hoses from the radiator.

4.1.9

Remove the capscrews securing the radiator, Fig. 9 (1) to the radiator shell, and remove the radiator from the unit. Radiator weighs 22.7 kg (50 lbs.).

4.2 RADIATOR INSTALLATION

4.2.1

Install radiator, Fig. 9 (1) to the


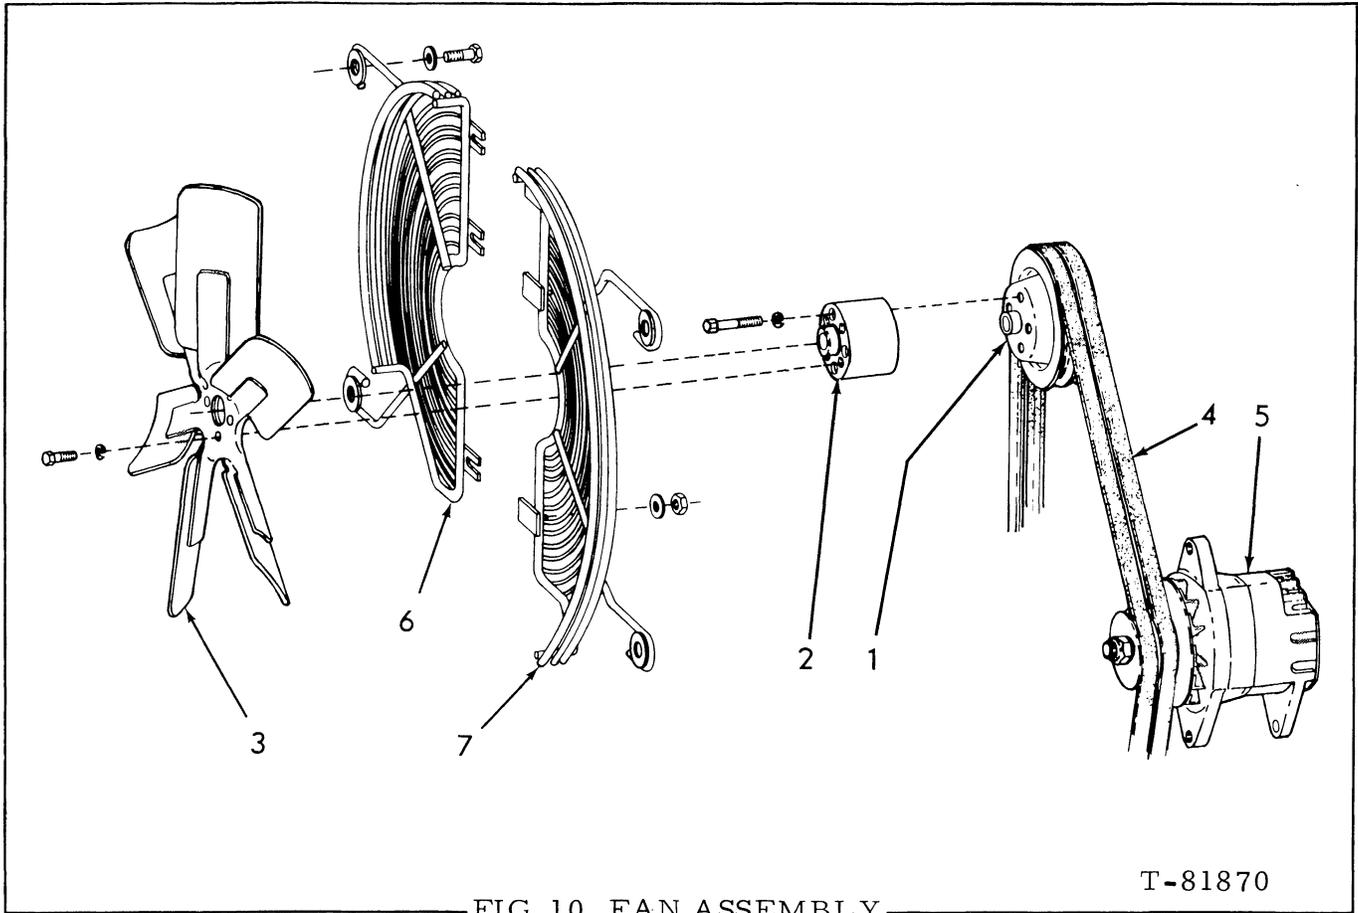


FIG. 10 FAN ASSEMBLY

T-81870

- | | | |
|-----------|---------------|----------|
| 1. Pulley | 4. Belt set | 6. Guard |
| 2. Spacer | 5. Alternator | 7. Guard |
| 3. Fan | | |

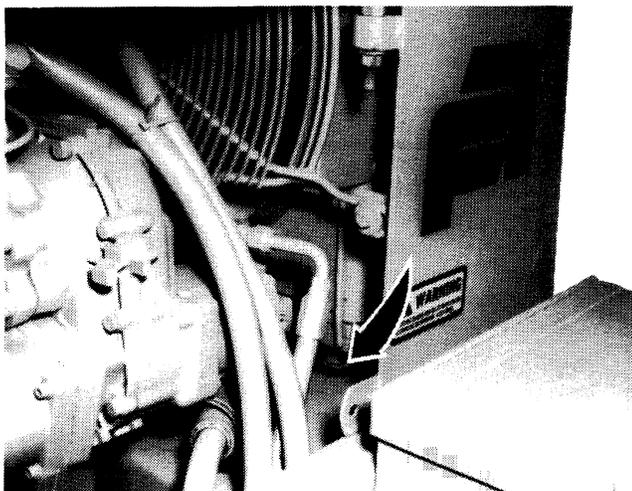

T-81617

FIG. 11 COOLANT DRAIN

radiator shell, Fig. 8 (6). Secure with capscrews and torque to 4.74 -- 5.29 daNm (4.84 -- 5.39 kgm)(35 -- 39 -- lbs. ft.).

4.2.2

Install upper and lower radiator hoses, Fig. 9 (2) (5) and secure with clamps.

4.2.3

Install radiator fan guards, Fig. 10 (6) (7) to radiator shell, Torque cap-screws to 4.74 -- 5.42 daNm (4.84 -- 5.53 kgm)(35 -- 40 lbs. ft.).

4.2.4

Be certain that radiator drain cock, Fig. 11 is closed. Fill the radiator with anti-freeze solution to within

25.4 mm (1.0") below filler neck of radiator. Install radiator cap,



WARNING



Sound horn before starting or operating machine.



Do not run the engine of this machine in closed areas without proper ventilation to remove deadly exhaust gases.



Warn all people who may be servicing or working around machine before starting engine.



Never leave machine unattended with engine running.

Start the engine and run until the coolant reaches normal operating temperature. Stop engine, and check coolant level. Check for leaks. Add coolant if necessary.



DANGER

Fluid under pressure - turn cap or cover slowly to relieve pressure before removing or until pressure has been relieved as coolant may boil over and cause personal injury.

4.2.5

Secure the radiator grill, Fig. 8 (3) to the radiator shell (1) with capscrews. Torque capscrews to 4.74 -- 5.29 daNm (4.84 -- 5.39 kgm)(35 -- 39 lbs. ft.).

4.2.6

Install the hood on grader and secure with hood latches.

4.2.7

Install exhaust stack, Fig. 1 (2) and secure with clamp.

4.2.8

Install rain cap, Fig. 1 (4) and secure with clamps.

4.3 COOLANT FAN REMOVAL

4.3.1

Turn the master electrical switch to "OFF" position. The switch is located under the cover on the front side of the battery box, on the right side of the grader.

4.3.2

Refer to paragraph 4.1, and remove the radiator.

4.3.3

Remove the capscrews securing the coolant fan, Fig. 10 (3) to spacer (2).

4.4 COOLANT FAN INSTALLATION


4.4.1

Install the coolant fan, Fig. 10 (3) to spacer (2). Torque capscrews to 4.74 -- 5.29 daNm (4.84 -- 5.39 kgm)(35 -- 39 lbs. ft.).

4.4.2

Refer to paragraph 4.2, and install the radiator group.

TOPIC 5 FAN AND ALTERNATOR BELTS

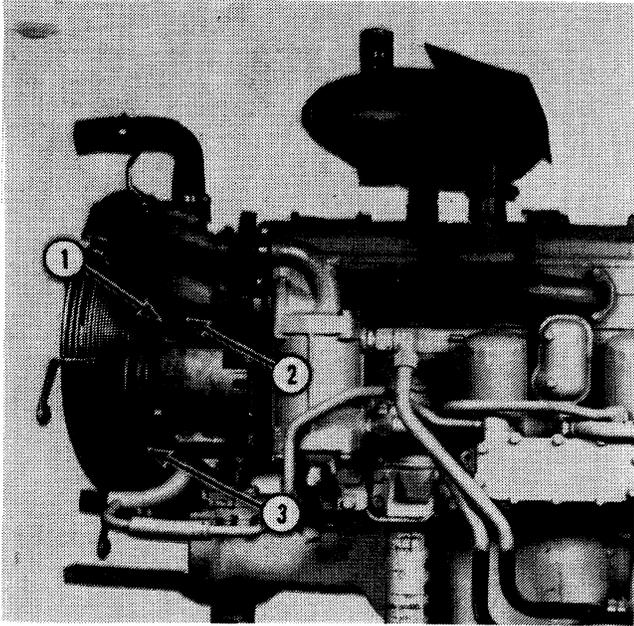

T-82223

FIG. 12 FAN AND ALTERNATOR
BELT ADJUSTMENT

1. Adjustment bracket
2. Locking capscrew
3. Belt tension check point

5.1 FAN AND ALTERNATOR BELT REMOVAL

5.1.1

Remove the clamp securing the air intake extension, Fig. 1 (3) and remove from grader.

5.1.2

Loosen the clamp securing the exhaust stack, Fig. 1 (2) and remove exhaust stack from grader.

5.1.3

Loosen the hood latch bolts and remove the hood from the grader.

5.1.4

Remove the capscrews securing the fan guards, Fig. 10 (6) (7) and remove the fan guards.

5.1.5

Loosen alternator locking capscrew, Fig. 12 (2) and move the alternator to loosen tension on belts.

5.1.6

Work the belts off the pulleys and over the fan, and remove the belts.

NOTE: If belts show wear or fraying, replace them. Belts should be replaced in a set. Never roll a belt over the pulleys, and never pry a belt on with a tool such as a screwdriver.

5.2 FAN AND ALTERNATOR BELT INSTALLATION

5.2.1

Work each belt over fan and into position on pulleys.

5.2.2

Using a belt tension gauge, adjust new belts to a tension of 22.7 -- 28.6 kg (50 -- 60 lbs.). Adjust used belts to a tension of 18.1 -- 22.7 kg (40 -- 50 lbs.). Tighten capscrew (2).


5.2.3

Install hood and secure with hood latches.

5.2.4

Install exhaust stack and secure with clamp. Install intake extension and secure with clamp.

TOPIC 6 STARTER AND ALTERNATOR

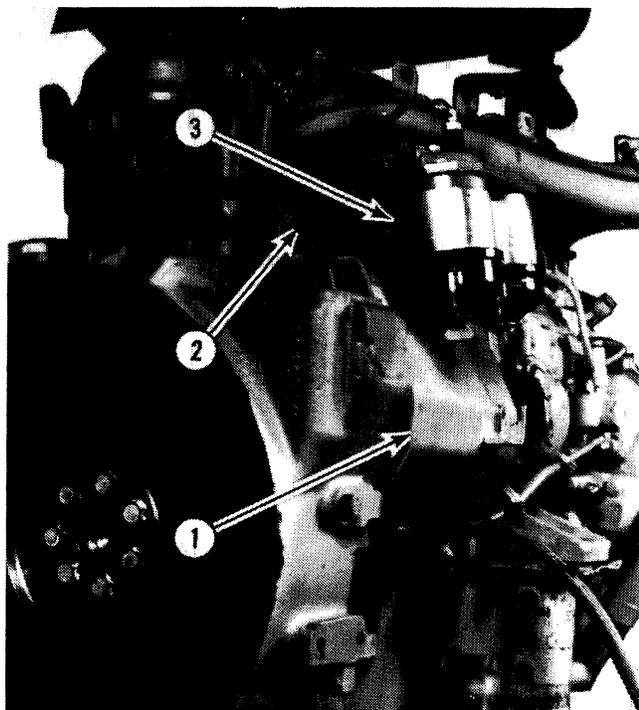

T-82221

FIG. 13 STARTER COVER

1. Cover
2. Capscrews
3. Fuel filters

6.1 STARTER REMOVAL



WARNING

Always turn the master switch to the off position before cleaning, repairing, or servicing or parking the machine to prevent injury.

6.1.1


Turn the master switch to the "OFF" position. The switch is located under the cover on the front of the battery box on the right side of the grader.

6.1.2

Remove the capscrews securing the fuel filters, Fig. 6 (24) from filter bracket. Move the filters away from the starter.

6.1.3

Remove the filter bracket, Fig. 6 (26) and guard, Fig. 13 (1) from unit.

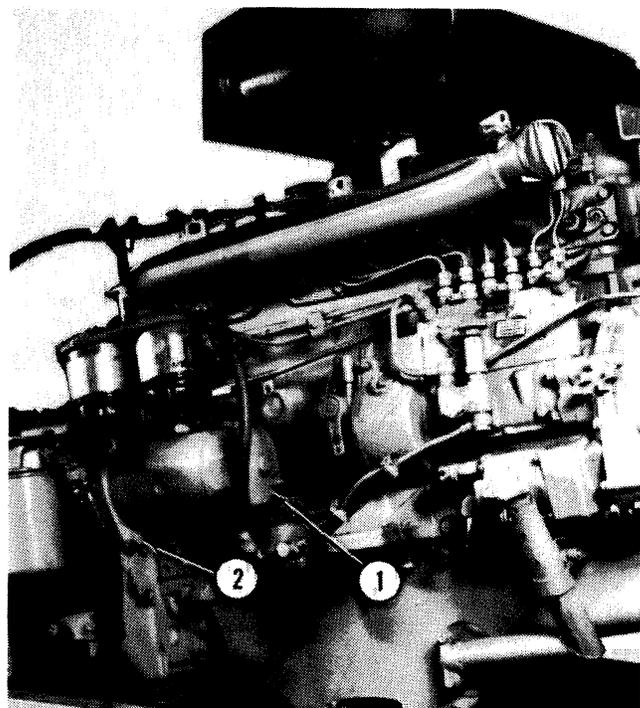

T-82222

FIG. 14 STARTER

1. Starter
2. Capscrew

6.1.4

Disconnect and tag all wire leads from the starter.

6.1.5

Remove the capscrews securing the starter to the flywheel housing and remove the starter.

6.2 STARTER INSTALLATION

6.2.1

Position the starter, Fig. 14 (1) to flywheel housing. Secure with capscrews (2). Torque capscrews to 13.8 -- 15.1 daNm (14.1 -- 15.5 kgm) (102 -- 112 lbs. ft.).


6.2.2

Connect wire leads to starter.

6.2.3

Install the filter bracket, Fig. 12 (26) and the guard, Fig. 13 (1) covering the starter. Torque capscrews to 5.15 daNm (5.25 kgm)(38 lbs. ft.).

Study SAFETY RULES in the front of this manual thoroughly for the protection of machine and safety of personnel.

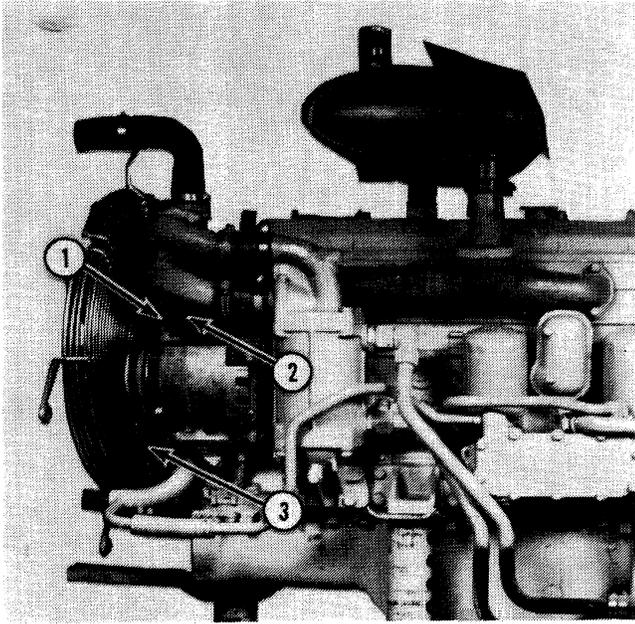

T-82223

FIG. 15 ALTERNATOR

1. Adjustment bracket
2. Locking capscrew
3. Belt tension check point

6.2.4

Install the filters, Fig. 6 (24) to filter bracket and torque capscrews to 5.15 daNm (5.25 kgm)(38 lbs. ft.).

6.3 ALTERNATOR REMOVAL



WARNING



Do not place head, body, limbs, feet, fingers or hands near a rotating fan or belts.



DO NOT check or adjust belts when engine is running. Be especially alert around a pusher fan.

6.3.1

Remove the locking capscrew, Fig. 15 (2) and push alternator in to relieve tension on alternator belts. Remove belts from alternator pulley.

6.3.2

Remove mounting capscrew, Fig. 16 (7) from support (5) and remove the alternator.

6.4 ALTERNATOR INSTALLATION

6.4.1

Install alternator in position on alternator bracket, Fig. 16 (5) and secure with capscrew (7).

6.4.2

Install locking capscrew, Fig. 15 (2) but do not tighten at this time.

6.4.3

Work each belt into position on alternator pulley.


NOTE: If belts show wear or fraying, replace them. Belts should be replaced in a set.

6.4.4

Move alternator up in adjusting bracket, Fig. 15 (1) to tighten belts.


6.4.5

Refer to Fig. 15. Using a belt tension gauge, adjust new belts to a tension of 22.7 -- 28.6 kg (50 -- 63 lbs.). Adjust used belts to 18.1 -- 22.7 kg (40 -- 50 lbs.). Check each belt separately. Tighten locking capscrew (2).

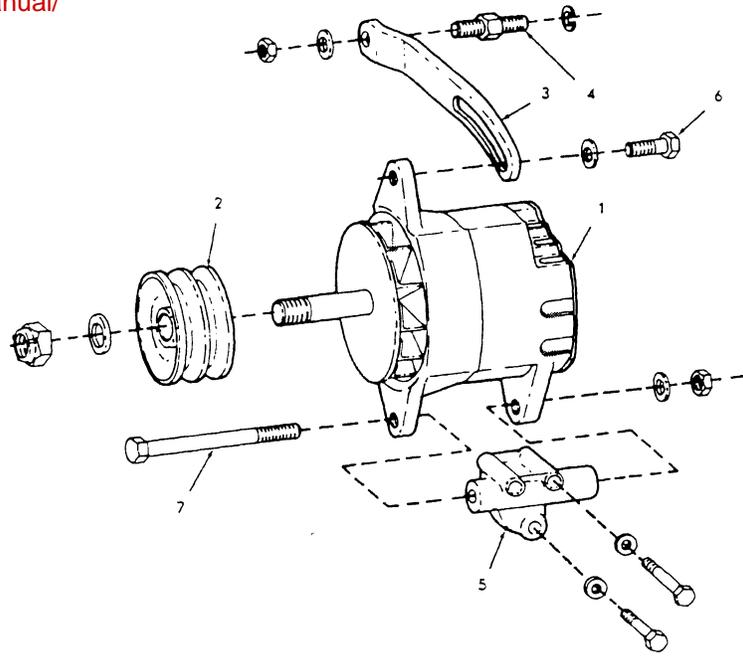

T-81782

Model 8065 Engine

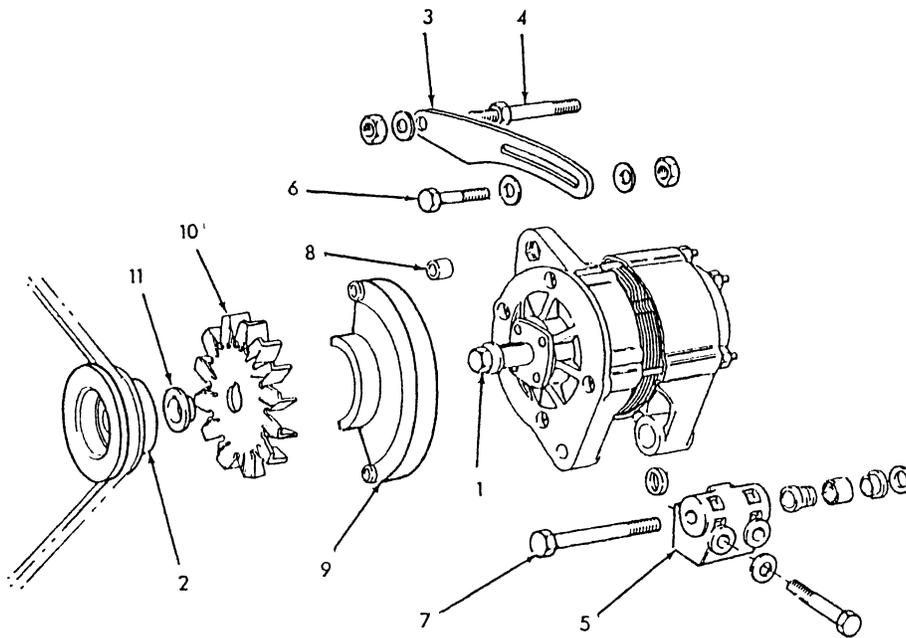

T-85810

Model 8061.105 Engine

FIG. 16 ALTERNATOR AND MOUNTING

- | | |
|--------------------|-------------|
| 1. Alternator | 7. Capscrew |
| 2. Pulley | 8. Spacer |
| 3. Adjusting strap | 9. Guard |
| 4. Stud | 10. Fan |
| 5. Support | 11. Spacer |
| 6. Capscrew | |