

Product: 2010 TEREX PT-100G,PT-100G Forestry Compact Track Loader Service Repair Workshop Manual

Full Download: <https://www.arepairmanual.com/downloads/2010-terex-pt-100gpt>

-100g forestry compact track loader service repair workshop manual



TEREX®

Service Manual

Compact Track Loader

PT-100G

PT-100G Forestry

Sample of manual. Download All 142 pages at:

<https://www.arepairmanual.com/downloads/2010-terex-pt-100gpt-100g-forestry-compact-track-loader-service-repair-workshop-r>

Part Number: 2076-286

Printed (8/10)

Product: 2010 TEREX PT-100G,PT-100G Forestry Compact Track Loader Service Repair Workshop Manual
Full Download: <https://www.arepairmanual.com/downloads/2010-terex-pt-100gpt-100g-forestry-compact-track-loader-service-repair-workshop-manual/>

Sample of manual. Download All 142 pages at:
<https://www.arepairmanual.com/downloads/2010-terex-pt-100gpt-100g-forestry-compact-track-loader-service-repair-workshop-r>

Table of Contents

1. Product Safety		
Chapter Overview	1-1	
Safety Messages	1-1	
Information Messages	1-1	
Basic Precautions	1-1	
Safety Labels	1-1	
Protective Equipment	1-1	
Entering and Exiting	1-2	
Lifting	1-2	
Hot Fluids and Components	1-2	
Corrosion Inhibitor	1-2	
Batteries	1-2	
Pressurized Items	1-2	
Repair	1-3	
Attachments	1-4	
Machine Labels and Decals	1-4	
Product Identification Number	1-4	
Safety Labels	1-4	
2. Technical Specifications		
Specifications	2-1	
Engine	2-1	
Transmission	2-1	
Drive Pumps	2-1	
Charge Pump	2-1	
Drive Motors	2-1	
Controls	2-1	
Auxiliary Pump	2-1	
Lift Arm Control Valve	2-1	
Oil Cooler	2-1	
Critical Torque Specifications	2-1	
Service Tools	2-1	
3. Circuit Diagrams		
Chapter Overview	3-1	
Hydraulic Charge Circuit	3-1	
Hydraulic Auxiliary Circuit	3-2	
Hydraulic Control Circuit	3-3	
Hydraulic Drive Circuit	3-4	
Lift Arm Control Valve	3-5	
Hydraulic Solenoid Blocks	3-6	
Electrical Attachment Outlet	3-7	
4. Maintenance		
Chapter Overview	4-1	
Personal Safety	4-1	
Lift-Arm Brace	4-1	
Tilt-up Cab	4-2	
Jacking Procedure	4-2	
Grease Fittings	4-3	
Undercarriages	4-3	
Track Tension	4-4	
Planetary Oil Change	4-4	
Drive Sprocket Rollers	4-5	
Track Removal	4-6	
Track Installation	4-8	
Air Cleaner	4-10	
Fuel Filter	4-11	
Water Separator	4-11	
Belt Removal/Installation	4-11	
Engine Oil/Filter Change	4-12	
Engine Oil Specifications	4-13	
Oil Level Check	4-13	
Hydraulic Fluid/Filter Change	4-14	
Radiator/Oil Cooler (cleaning)	4-15	
Engine (cleaning)	4-15	
Case Drain Filter	4-16	
Fuse Panel	4-16	
Maintenance Schedule	4-17	
5. Machine Controls and Instrumentation		
Chapter Overview	5-1	
Machine Controls	5-1	
Lift Arm Control	5-1	
Drive Control	5-1	
Throttle	5-1	
Instrumentation	5-1	
Switches	5-2	
6. Operator Enclosure		
Chapter Overview	6-1	
Personal Safety	6-1	
Machine Preparation	6-1	
Removal & Installation	6-1	
Lap Bar Gas Spring	6-1	
Removal Procedure	6-1	
Installation Procedure	6-2	
Dash Pod Covers	6-2	
Removal Procedure	6-2	
Installation Procedure	6-2	
Side Panels	6-3	
Removal Procedure	6-3	
Installation Procedure	6-3	
Pillar Harness Panel	6-3	
Removal Procedure	6-3	
Installation Procedure	6-3	
Seat	6-4	
Removal Procedure	6-4	
Installation Procedure	6-4	
Headliner	6-4	
Removal Procedure	6-4	
Installation Procedure	6-4	

7. Chassis and Fuel Tank		10. Lift Arm/Drive Controls	
Chapter Overview	7-1	Chapter Overview	10-1
Personal Safety	7-1	Personal Safety	10-1
Machine Preparation	7-1	Machine Preparation	10-1
Removal & Installation	7-1	Removal & Installation	10-1
Fuel Sending Unit	7-1	Joystick	10-1
Removal Procedure	7-1	Removal Procedure	10-1
Installation Procedure	7-2	Installation Procedure	10-2
Fuel Tank	7-2	Lift Arm Control Valve	10-3
Removal Procedure	7-2	Removal	10-3
Installation Procedure	7-3	Installation	10-3
Footwell	7-3		
Removal Procedure	7-3	11. Hydraulic Pumps/Motors	
Installation Procedure	7-4	Chapter Overview	11-1
Foot Throttle Assembly	7-4	Personal Safety	11-1
Removal Procedure	7-4	Machine Preparation	11-1
Installation Procedure	7-5	Removal & Installation	11-1
Hood Assembly	7-5	Charge Pump	11-1
Removal Procedure	7-5	Removal Procedure	11-1
Installation Procedure	7-5	Installation Procedure	11-2
		Auxiliary Pump	11-2
8. Radiator and Oil Cooler		Removal Procedure	11-2
Chapter Overview	8-1	Installation Procedure	11-3
Personal Safety	8-1	Tandem Drive Pump	11-3
Machine Preparation	8-1	Removal Procedure	11-3
Removal & Installation	8-1	Installation Procedure	11-5
Fan Guard	8-1	Drive Motor	11-5
Removal Procedure	8-1	Removal Procedure	11-5
Installation Procedure	8-2	Installation Procedure	11-6
Fan	8-2		
Removal Procedure	8-2	12. Engine	
Installation Procedure	8-2	Chapter Overview	12-1
Radiator/Oil Cooler/Fan Shroud	8-3	Personal Safety	12-1
Removal	8-3	Removal & Installation	12-1
Installation	8-4	Battery	12-1
		Removal Procedure	12-1
9. Hydraulic Reservoir		Installation Procedure	12-2
Chapter Overview	9-1	Exhaust System	12-2
Personal Safety	9-1	Removal Procedure	12-2
Machine Preparation	9-1	Installation Procedure	12-3
Removal & Installation	9-1	Air Cleaner	12-4
Hydraulic Reservoir	9-1	Removal Procedure	12-4
Removal Procedure	9-1	Installation Procedure	12-5
Installation Procedure	9-5	Engine	12-5
Suction Screen	9-5	Removal Procedure	12-5
Removal Procedure	9-5	Installation Procedure	12-7
Installation Procedure	9-5		

13. Undercarriage		16. Hydraulic Component Service	
Chapter Overview	13-1	Chapter Overview	16-1
Personal Safety	13-1	Personal Safety	16-1
Machine Preparation	13-1	Disassembly & Assembly	16-1
Removal & Installation	13-1	Hydraulic Cylinder	16-1
15" Idler Wheel)	13-1	Disassembly Procedure	16-1
Removal Procedure	13-1	Assembly Procedure	16-3
Installation Procedure	13-1	Lift Arm Control Valve	16-4
10" Bogie Wheel & Hub	13-2	Disassembly Procedure	16-4
Removal & Service Procedure	13-2	Assembly Procedure	16-5
Idler Hub	13-6	Drive Pump (Drive Relief Valves)	16-6
Removal & Service Procedure	13-6	Disassembly & Adjustment	16-6
Front and Rear Axles	13-11	Drive Pump (Solenoid/Spool)	16-6
Removal/Installation	13-11	Disassembly Procedure	16-6
		Assembly Procedure	16-7
14. Lift Arm Components		Auxiliary Pump	16-7
Chapter Overview	14-1	Disassembly Procedure	16-7
Personal Safety	14-1	Assembly Procedure	16-8
Machine Preparation	14-1		
Removal & Installation	14-1	17. Hydraulic Pressure & Flow	
Lift Cylinder	14-1	Chapter Overview	17-1
Removal Procedure	14-1	Personal Safety	17-1
Installation Procedure	14-3	Contamination Inspection	17-1
Bucket/Tilt Cylinder	14-3	Pressure/Flow Test and Troubleshooting	17-1
Removal Procedure	14-3	Charge Pressure Check & Adjust	17-1
Installation Procedure	14-5	Auxiliary Pressure Check & Adjust	17-3
Q/C Block PRV	14-5	Lift Arm Pressure Check	17-4
Removal Procedure	14-5	Drive Pressure Check	17-4
Installation Procedure	14-5		
15. Quick Attach		18. Troubleshooting	
Chapter Overview	15-1	Chapter Overview	18-1
Personal Safety	15-1	Personal Safety	18-1
Machine Preparation	15-1	Visual Inspection	18-1
Removal & Installation	15-1	General Troubleshooting Scenarios	18-1
Locking Pin	15-1	Engine/Machine Troubleshooting	18-3
Removal Procedure	15-1		
Installation Procedure	15-2	19. Service Tool	
Pivot Pin	15-3	Chapter Overview	19-1
Removal Procedure	15-3	Personal Safety	19-1
Installation Procedure	15-3	Service Tool	19-1
		Connecting the Service Tool	19-4
		Using the Service Tool	19-4
		20. Lubricant & Fuel specification	
		Chapter Overview	20-1
		Fluids	20-1
		Fuel Specifications	20-1
		21. Service Aids & Supplements	
		General Torque Specifications	21-1
		Fitting Torque Specifications	21-1

1. Product Safety

Chapter Overview

This chapter contains product safety information for the Terex PT-100G Compact Track Loaders. Read and understand all product safety information before attempting to service any Compact Track Loader.



Safety Alert Symbol

This symbol means: **Attention! Be alert! Your safety is involved!**

The safety alert symbol is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

This symbol is used as an attention-getting device throughout this manual as well as on decals and labels fixed to the machinery to assist in potential hazard recognition and prevention.

Property or equipment damage warnings in this publication are identified by the signal word "NOTICE".

NOTICE

"NOTICE" Indicates a hazardous situation which, if not avoided, could result in property or equipment damage.

The word "Note" is used throughout this manual to draw your attention to specific topics or to supplement the information provided in that section.



Improper or incomplete maintenance/repair of a Compact Track Loader can be dangerous and may result in machine damage, injury or death.

Do not attempt to perform any type of repair or maintenance on a Compact Track Loader until you have read and fully understood both this manual and the machine specific operation and maintenance manual.

Refer to the Operation and Maintenance manual for instructions regarding proper machine operation and maintenance techniques before operating or servicing any Compact Track Loader.

The person(s) in charge of servicing a Compact Track Loader may be unfamiliar with many of the systems on the machine. This makes it especially important to use caution when performing service tasks. Familiarize yourself with the affected system(s) and components before attempting any type of maintenance or service.

It is not possible to anticipate every potential hazard. The safety messages included in this document and displayed on the machine are not all-inclusive. They are intended to make you aware of potential risks and encourage a safe approach to performing service work. If you use a tool, procedure, work method or operating technique that is not specifically recommended by Terex, you must satisfy yourself that it is safe for you and others. You must also ensure that the machine will not be damaged or be made unsafe by the operation, lubrication, maintenance or repair procedures that you choose.

Basic Precautions

Safety Labels

Safety labels have been included and are displayed in various places throughout the machine to serve as warnings of potentially dangerous conditions. Read and understand all "Safety" labels on any Compact Track Loader before attempting to operate, maintain or repair it. Replace any damaged, illegible or missing labels immediately, prior to service.

Personal Protective Equipment

Personal protection equipment is recommended when performing maintenance or service on a machine. Always wear appropriate protective equipment for working conditions when working on or around the machine. Loose clothing should not be worn and long hair should be restrained. Wear hard hats, protective face/eyewear, safety shoes and any other equipment necessary to ensure your safety and the safety of others around you as you work.

Entering and Exiting

Always use steps and handholds when entering or exiting a Compact Track Loader. Clean any mud or debris from steps or work platforms before using them. Always face the machine when using steps and handholds. When it is not possible to use the designed entry/exit system, utilize ladders, scaffolds, or work platforms to safely gain access to the machine.

Lifting

Use a hoist when lifting components that weigh 50 lb (23 kg) or more, to avoid back injury. Make sure all chains, hooks, slings, etc., are in good condition and are of the correct capacity. Be sure hooks are positioned correctly and equipped with a spring latch. Lifting eyes are not to be side loaded during a lifting operation.

Hot Fluids and Components

Stay clear of hot components and system fluids of the engine, exhaust, radiator/oil cooler and hydraulic lines/tubes. Also, use caution when removing fill caps, breathers and plugs on the machine. Hold a rag over the cap or plug to prevent being sprayed or splashed by liquids under pressure. Be especially careful if the machine has been operated recently, fluids may still be hot. **To ensure your safety, allow the machine to cool before attempting any service procedure that involves hot fluids or components.**

Corrosion Inhibitor

Corrosion inhibitor contains alkali. Avoid contact with eyes. Avoid prolonged or repeated contact with skin. Do not take internally. In case of contact, wash skin immediately with soap and water. For eyes, flush with large amounts of water for at least 15 minutes. Call Physician. Keep out of reach of children.

Batteries

Do not smoke when inspecting the battery electrolyte level. Never disconnect any charging unit circuit or battery circuit cable from the battery when the charging unit is operating. A spark can cause an explosion from the flammable vapor mixture of hydrogen and oxygen that is released from the electrolyte through the battery outlets. Do not let electrolyte solution make contact with skin or eyes. Electrolyte solution is an acid. In case of contact, immediately wash skin with soap and water. For eyes, flush with large amounts of water for at least 15 minutes. Call Physician. Keep out of reach of children.

Pressurized Items

1. Do not use hands or any other body part to check for fluid leaks in the hydraulic system. Always use a solid material like wood or metal to check for this type of leak. Leaking fluid under pressure can penetrate body tissue. Fluid penetration can cause serious injury and even death. If fluid is injected into your skin, get treatment immediately. Seek treatment from a doctor that is familiar with this type of injury.
2. Relieve pressure from the hydraulic system before disconnecting or removing any lines, fittings or related items. Do this by relaxing all hydraulic actuators. If the lift arms are raised, make sure they are securely braced. Be alert for possible pressure release when disconnecting any device from a pressurized system.
3. Lower the lift arms before performing any work on the machine. If this cannot be done, make sure they are securely braced to prevent them from dropping unexpectedly during service.
4. Loose or damaged fuel, oil, hydraulic, lines, tubes and hoses can cause fires. Do not bend or strike high pressure lines or install ones that have been bent or damaged. Check lines, tubes and hoses carefully. See item 1 for precautions on checking for fluid leaks.
5. Pressurized air or water can also cause injury. When pressurized air or water is used for cleaning, wear a protective face shield, protective clothing, and protective shoes. The recommended maximum air pressure for cleaning purposes is 30 psi (205 kPa). When using a pressure washer, keep in mind that nozzle pressures are typically very high. Generally, pressures are well above 2000 psi (13790 kPa). Follow all recommended practices provided by the pressure washer manufacturer.

Repair



Accidental machine starting can cause injury or even death to personnel working on a Compact Track Loader.

As a precaution, disconnect the battery cables from the battery terminals, tape the battery clamps and remove the key from the ignition switch prior to performing any service work on a Compact Track Loader.

Place a “Do Not Operate” tag prominently on the machine to inform personnel that the machine is being serviced.

1. Disconnect the battery and discharge any capacitor before beginning work on a machine. Attach a **Do Not Operate** tag in the cab to alert any operator that service is in progress.
2. If possible, make all repairs with the machine parked on a level, hard surface. Use blocks to prevent the machine from rolling while working on or under the machine.
3. Do not work on or under any machine that is supported only by a hydraulic jack or hoist. Always use some sort of mechanical support to ensure that the machine will not fall. Terex jack stands work well to support the machine while performing maintenance or repair work.
4. Make sure the work area around the machine is safe and make yourself aware of any hazardous conditions that may exist. If the engine needs to be started inside an enclosure, make sure that the engine's exhaust is properly vented.
5. Be sure all protective devices including guards and shields are properly installed and functioning correctly before beginning any service task. If a guard or shield must be removed to perform the repair work, use extra caution.
6. Always use the appropriate tools for the work to be performed. Tools should be in good condition and you should understand how to use them properly before performing any service work.
7. When replacing fasteners, use parts of equivalent grade and size. Do not use a lesser quality fastener if replacements are necessary.
8. Be prepared to stop an engine if it has been recently overhauled or the fuel system has been recently serviced. If the engine has not been assembled correctly, or if the fuel settings are not correct, the engine can possibly overspeed and cause bodily injury, death or property damage. Be prepared to shut off the fuel and air supply to the engine in order to stop the engine.

9. Be careful when removing cover plates. Gradually back off the last two bolts or nuts located on opposite sides of the cover. Then, pry the cover loose to relieve any spring or other pressure before removing the last two nuts or bolts completely.
10. Repairs requiring welding should be performed only by personnel adequately trained and knowledgeable in welding procedures and with the guidance of appropriate reference information. Determine the type of metal being welded and select the correct welding procedure and filler material to provide a weld that is as strong or stronger than the original weld.

NOTICE

Prior to welding, disconnect the following to prevent component damage:

- **Negative battery cable**
- **J1/P1 connectors from the ECM (engine)**
- **Main controller (machine)**
- **Output module (machine)**
- **Display (machine)**

A proper ground is essential to protect the machine from damage when welding. Improper grounding can cause damage to mechanical, hydraulic and electrical components.

As a precaution, connect the welding ground clamp as close as possible to the weld area.

11. Take precautions to avoid damaging wiring during removal and installation operations. Carefully route wires so that they will not contact sharp corners, objects or hot surfaces during operation.
12. When performing service that requires the lift arms to be in the raised position, always utilize the lift arm brace located on the rear of the loader tower.
13. Relieve hydraulic system pressure by relaxing all hydraulic actuators prior to attempting any hydraulic maintenance or repair.
14. Always tighten connections to the correct torque specification. Make sure that all shields, clamps and guards are installed correctly to avoid excessive heat, vibration or unwanted contact between parts during operation. Shields that protect exhaust components from oil spray in event of a line, tube or seal failure must be correctly installed.
15. Do not operate a machine if any rotating part is damaged or contacts other parts during operation. Any high speed rotating component that has been damaged or altered should be checked for balance before reusing. Make sure all protective devices, including guards and shields, are properly installed and functioning correctly before starting the engine or operating the machine.

1. Product Safety

⚠ Attachments

Only use attachments that are recommended by Terex.

Make sure that all necessary guards and protective equipment are in place and functioning prior to operating any attachment.

Wear protective glasses and protective equipment as required by conditions or as recommended in the attachment's operation manual.

⚠ When replacement parts are required for your machine, use only genuine Terex replacement parts or parts that meet or exceed original specifications including, but not limited to physical dimensions, type, strength and material.

Installing lesser components can lead to premature failures, product damage, personal injury or death.

Ensure that all personnel are far enough away from the work area so they will not be struck by flying objects.


Stay clear of the cutting edges, pinching surfaces or crushing surfaces of the attachment while performing any attachment maintenance, testing or adjustments.

⚠ Machine Labels and Decals

Labels and decals placed on the machine provide safety information and operating instructions. Familiarize yourself with the location and significance of these labels to ensure your safety.

Product Identification Number

The Product Identification Number (PIN) is located on the front of the cab enclosure (figure 1-1). Always provide the PIN when contacting the dealer about parts, service, warranty or accessories. No warranty claims will be processed unless the PIN is provided.

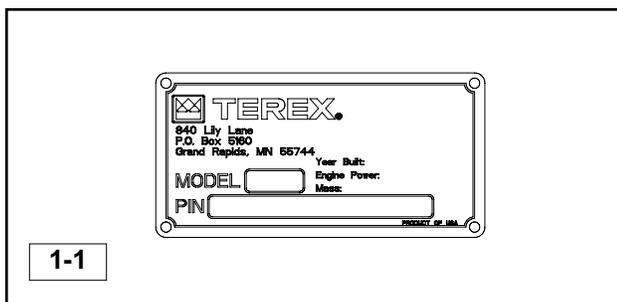

Safety Label Examples

Examples of the labels and decals displayed on the machine are shown on this page.

<p>⚠ WARNING</p> <p>Crush Hazard Death or serious injury can result from contact with moving lift arm or attachment.</p>	<p>Keep clear of lift arms and attachments.</p>
<p>⚠ WARNING</p> <p>CRUSH HAZARD Contact with moving machine can result in death or serious injury.</p>	<p>Keep clear of moving machine.</p> <p>2030-593</p>
<p>⚠ WARNING</p> <p>Fall Hazard Serious injury or death can result from falling.</p>	<p>Use the provided access system when entering or exiting the machine.</p>
<p>⚠ WARNING</p> <p>Injection Hazard Escaping fluid under pressure can penetrate skin, causing serious injury.</p>	<ul style="list-style-type: none"> Relieve internal pressure before disconnecting any line or fitting. Keep away from leaks or pinholes. Use cardboard to check for leaks. <p>Fluid injected into skin must be surgically removed within a few hours by a doctor familiar with this type of injury or gangrene will result.</p>
<p>⚠ WARNING</p> <p>Crush Hazard Death or serious injury can result from contact with moving lift arm or attachment.</p>	<p>Install lift arm brace prior to servicing.</p>
<p>⚠ WARNING</p> <p>Entanglement Hazard Rotating parts can cause personal injury.</p>	<p>Keep away from fan and belt while the engine is running. Stop engine before servicing.</p> <p>2030-600</p>
<p>⚠ WARNING</p> <p>Burn Hazard Hot fluid under pressure can scald.</p>	<p>Allow the machine to cool thoroughly before opening.</p> <p>2030-595</p>

WARNING



Improper operation or maintenance can result in serious injury or death.



Read and understand the operator's manual and all safety signs prior to operating or maintaining the machine.

WARNING



Crush Hazard
 Rollover can crush and result in serious injury or death.



Fasten Seat Belt

DANGER



Explosion/Burn Hazard
 Will cause death, burns or blindness due to ignition of explosive gasses or contact with corrosive acid.





- Keep all flames/sparks away!
- No Smoking!
- Read and understand all manuals prior to operation.

2030-603

WARNING



Fall Hazard
 Falling can result in serious injury or death.



Do not use the bucket/attachment as a work platform.

WARNING



Fall Hazard
 Falling from a machine can result in serious injury or death.



No Riders

NOTICE



Fire Hazard
 Flammable debris can collect near hot components and lead to a fire.



Read Operator's Manual
 Keep the engine, exhaust and chassis areas free of debris.

WARNING



Rollover/Ejection Hazard
 Serious injury or death can result.



Carry loads low. Load unload and turn on level ground. Travel on inclines with heaviest end of machine uphill.

2. Technical Specifications & Service Tools

PT-100G Specifications

Engine

- Model: Perkins 1104d-44T
- Displacement: 4.4 liter
- Gross horsepower: 99.9 hp (73.5 kW)
- Torque: 310 lb-ft. (420.3 Nm)
- Idle rpm: 1000 (low idle), 2200 (high idle)
- Average water /thermostat temperature: 190°F, 87.8°C

Transmission

- Model: Cat A10VG63 tandem (Rexroth)

Drive Pumps

- Displacement: 3.844 in3/rev (63 cc/rev)
- Relief pressure: 5500 psi (380 bar)
- Flow: 36.6 gpm (138.6 lpm) @ 2200 rpm (per pump)

Charge Pump

- Displacement @ 1.7:1: 1.49 in3/rev (24.5 cc/rev)
- Relief pressure: 392 +/- 30 psi (27 bar)
- Flow: 14.2 gpm (53.8 lpm) @2200 rpm

Drive Motors

- Model: Bonfiglioli 704 gearbox with KYB MAG 50 VP motor
- Displacement (High): 3.11 in3/rev (50.9 cc/rev)
- Displacement (Low): 1.73 in3/rev (28.4 cc/rev)
- Gear reduction: 18:47:1

Controls (Joysticks)

- Model:

Auxiliary Pump

- Model: A10VO85 (Rexroth)
- Type: Axial Piston, Variable Load Sense
- Displacement: 5.19 in3/rev (85 cc/rev)
- Low Flow: 0-20 gpm (0-75.7 lpm) @ 2200 rpm
- High Flow: 30-43 gpm (114-163 lpm) @ 2200 rpm
- Low Flow Relief Pressure: 3300 psi (22,750 kPa)
- High Flow Relief Pressure: 3800 psi (26,200 kPa)
- LS (Standby) Pressure: 218 psi (1,503 kPa)
- Cooling/filtering: Oil is filtered and cooled at all times. In auxiliary mode, the oil is filtered after the attachment to protect the machine if the attachment motor fails or contaminants are introduced from the quick couplers.

Lift Arm Control Valve

- Make: Rexroth
- Type: Load Sense

Oil Cooler

- Operating pressure: 150 psi (1034 kPa)
- Bypass relief pressure: 80 psi (689 kPa)
- Hot oil sending unit: 225°F (107.2°C)
- Avg. oil operating temp. 50-60°F / 28-33°C above ambient.
(High flow application 80°F / 44°C above ambient.)

Critical Torque Specs

- Drive Pump Mounting Bolts
 - 200 ft-lb. w/Blue Loctite
- Drive Sprocket Drive Teeth Nuts
 - 41 ft-lb.+180°/ 55.6 Nm -Dry
- 10" Idler Wheel Retaining Nut
 - 180 ft-lb. / 244 Nm -w/Red Loctite
- 15" Idler Wheel Retaining Nut
 - 350 ft-lb. / 475 Nm -Dry
- Drive Sprocket Lug Bolts
 - 199 ft-lb. / 270 Nm -Dry
- Drive Motor Mounting Bolts
 - 199 ft-lbs. / 270 Nm -Dry

Service Tools

Listed below are common service tools which are identified and utilized in the service procedures described in this manual. Use tools recommended by Terex whenever possible to reduce risk of injury and or machine damage during service.

- Heavy Duty Hydraulic Jack (5-ton rating)
- Test Gauge Kit (TEREX P/N: 0402-935)
- Ratchet Strap
- Long Pry Bar(s)


3. Circuit Diagrams

Chapter Overview

This chapter contains diagrams for the following PT-100G circuits: hydraulic charge circuit, hydraulic auxiliary circuit, hydraulic control circuit, hydraulic drive circuit, lift arm control valve, hydraulic solenoid blocks and electrical attachment outlet.


Hydraulic Charge Circuit

Figure 3-1 PT-100G Hydraulic Charge Circuit

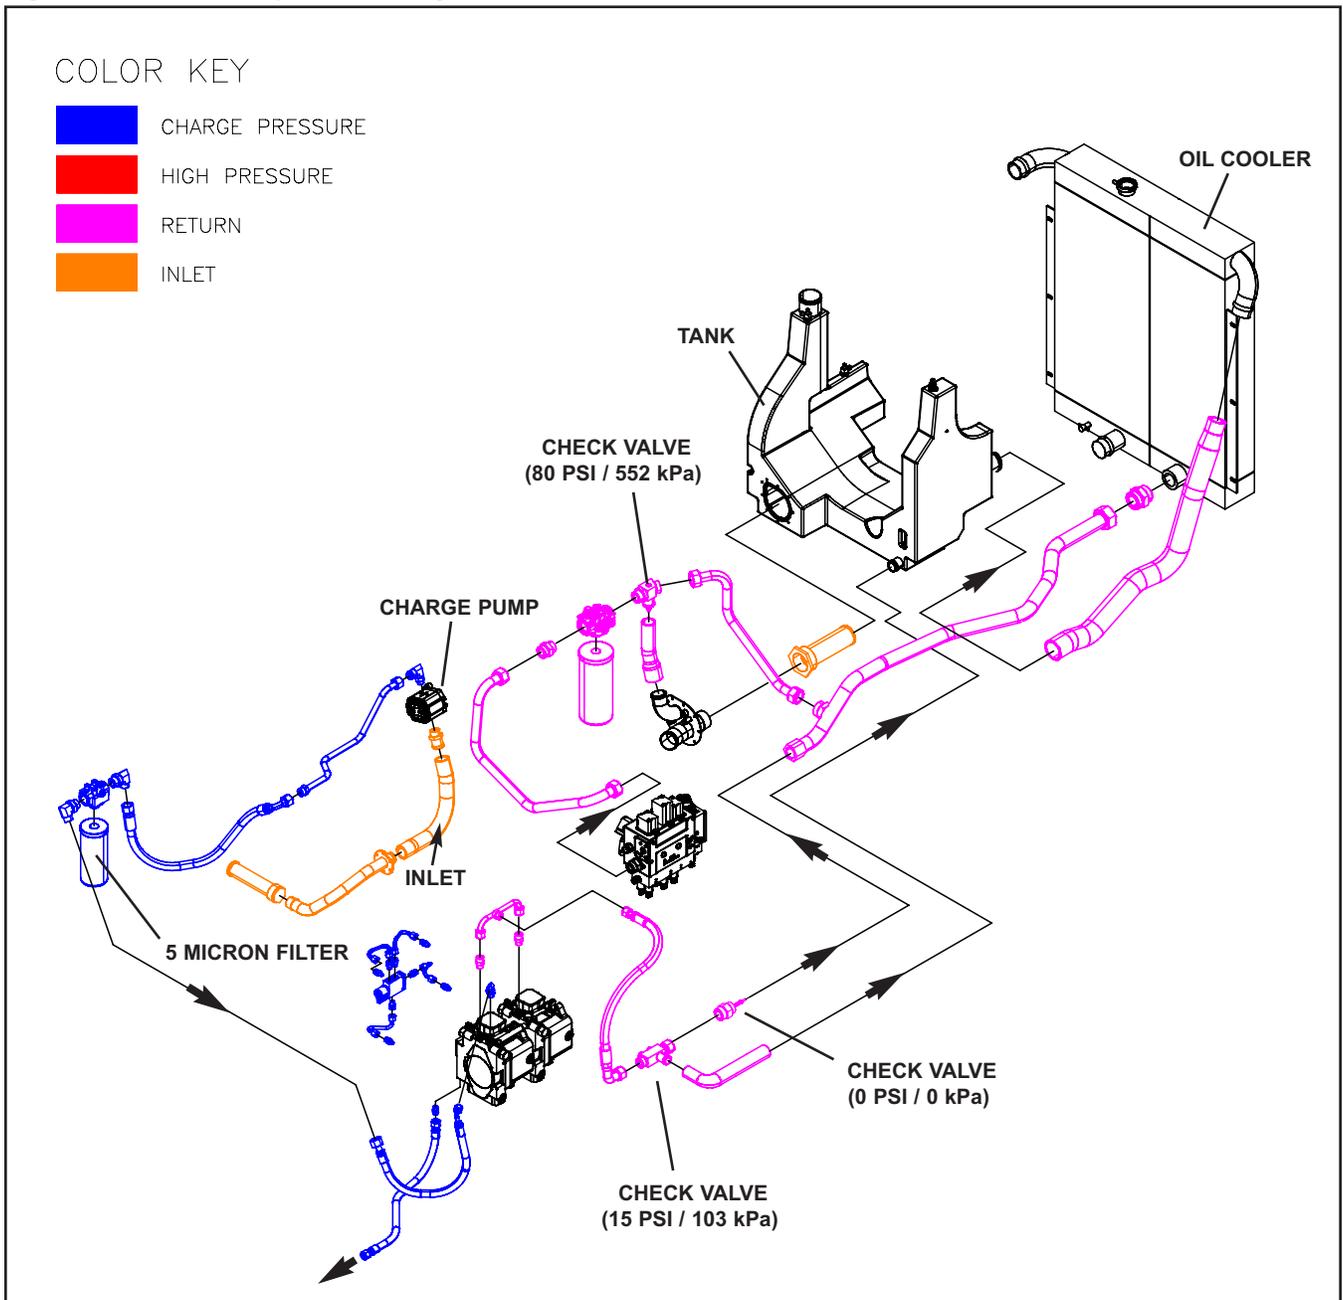


Hydraulic Auxiliary Circuit

Figure 3-2 PT-100G Hydraulic Auxiliary Circuit

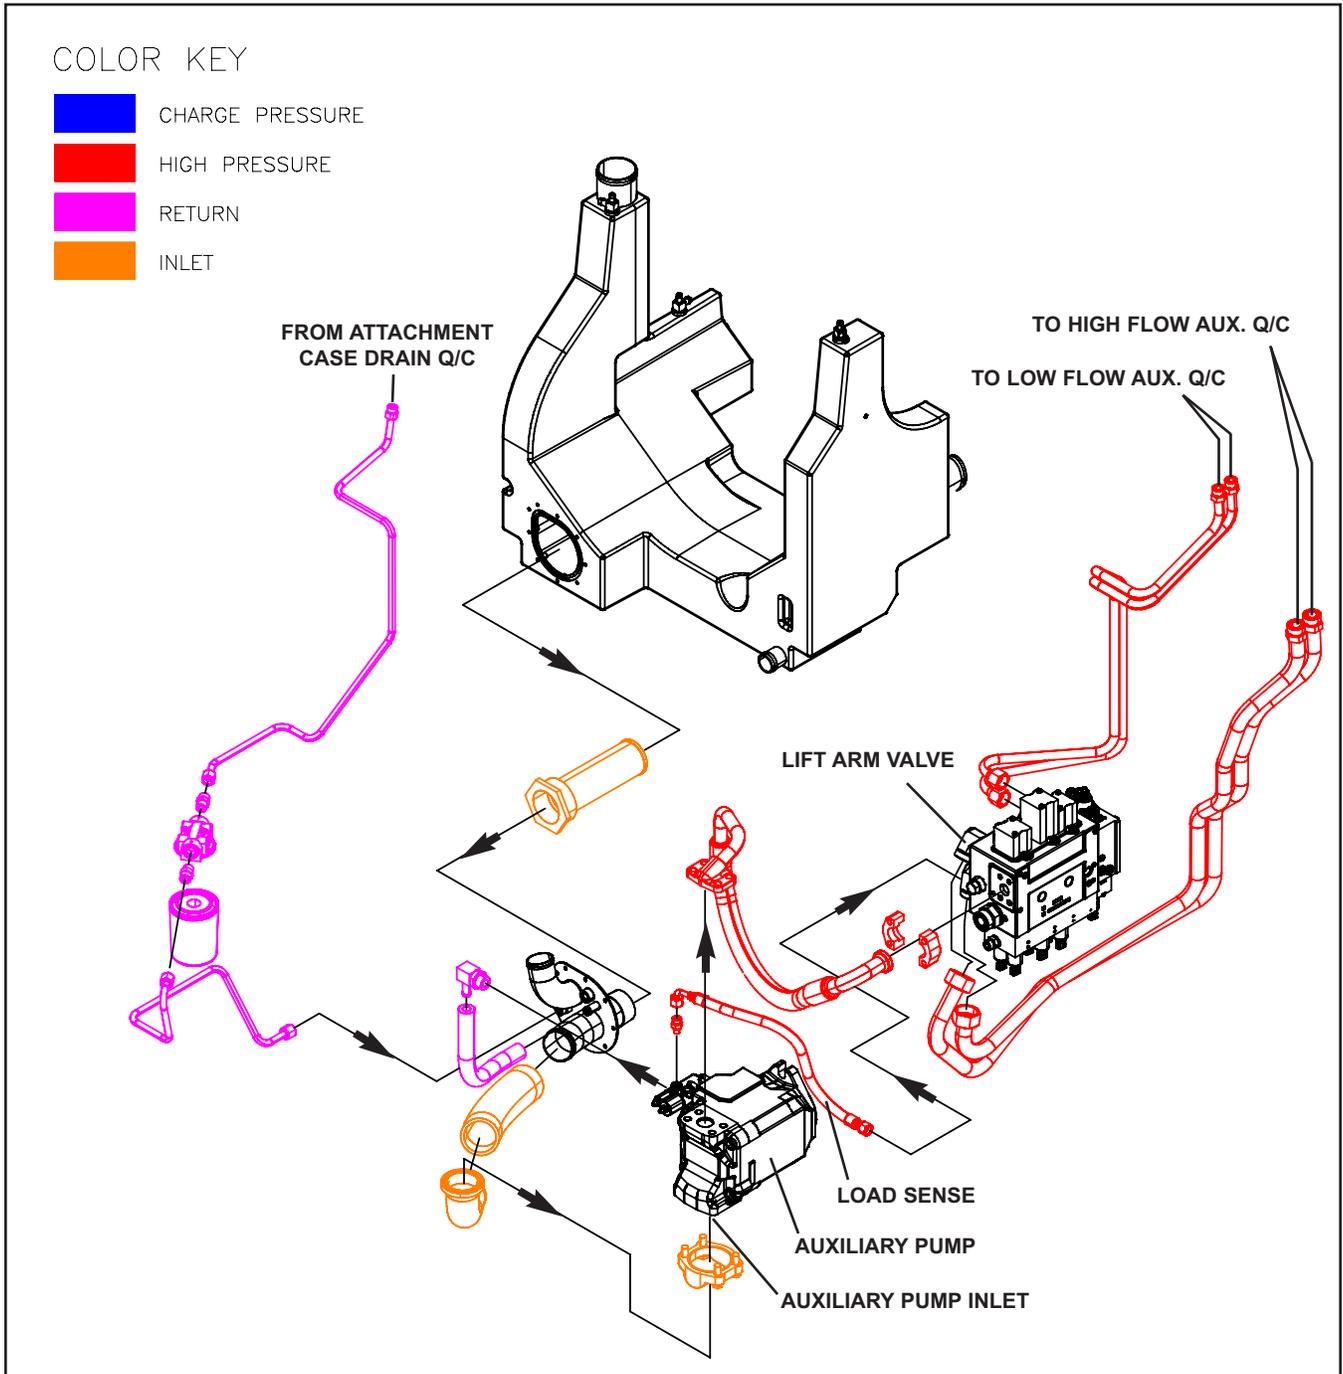


Hydraulic Control Circuit

Figure 3-3 PT-100G Hydraulic Control Circuit

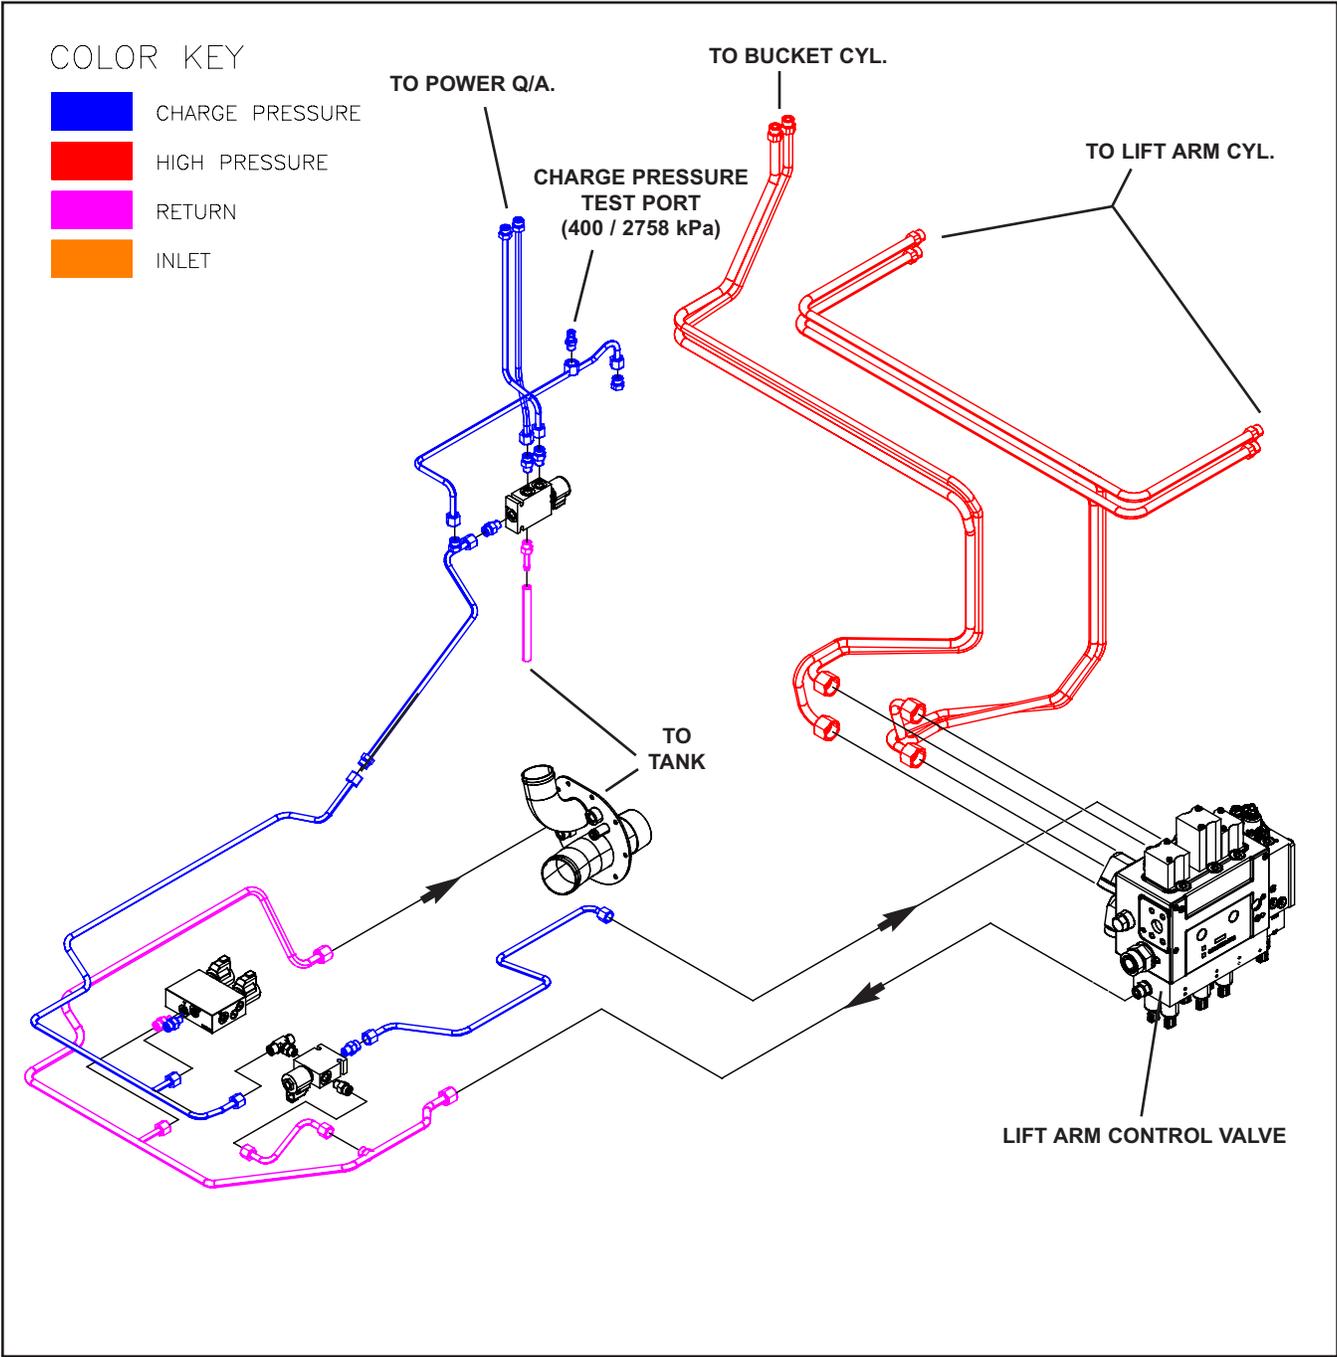


Hydraulic Drive Circuit

Figure 3-4 PT-100G Hydraulic Drive Circuit

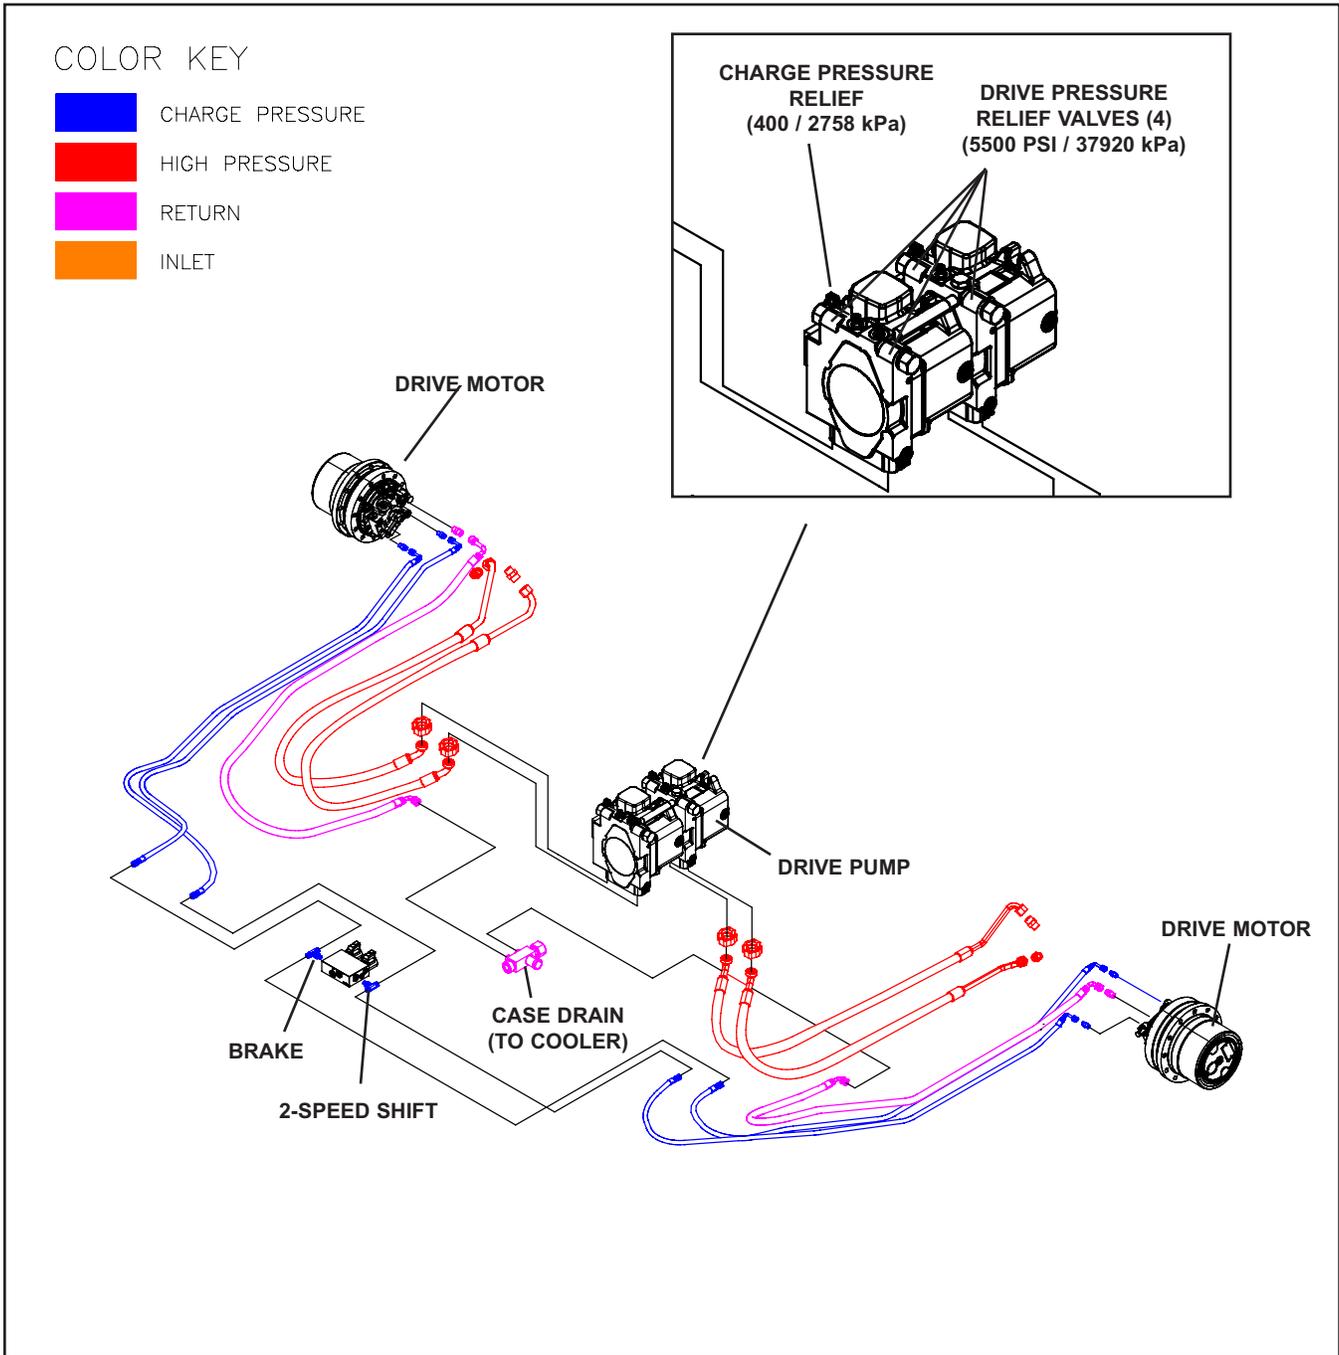


Lift Arm Control Valve

Figure 3-5 PT-100G Lift Arm Control Valve

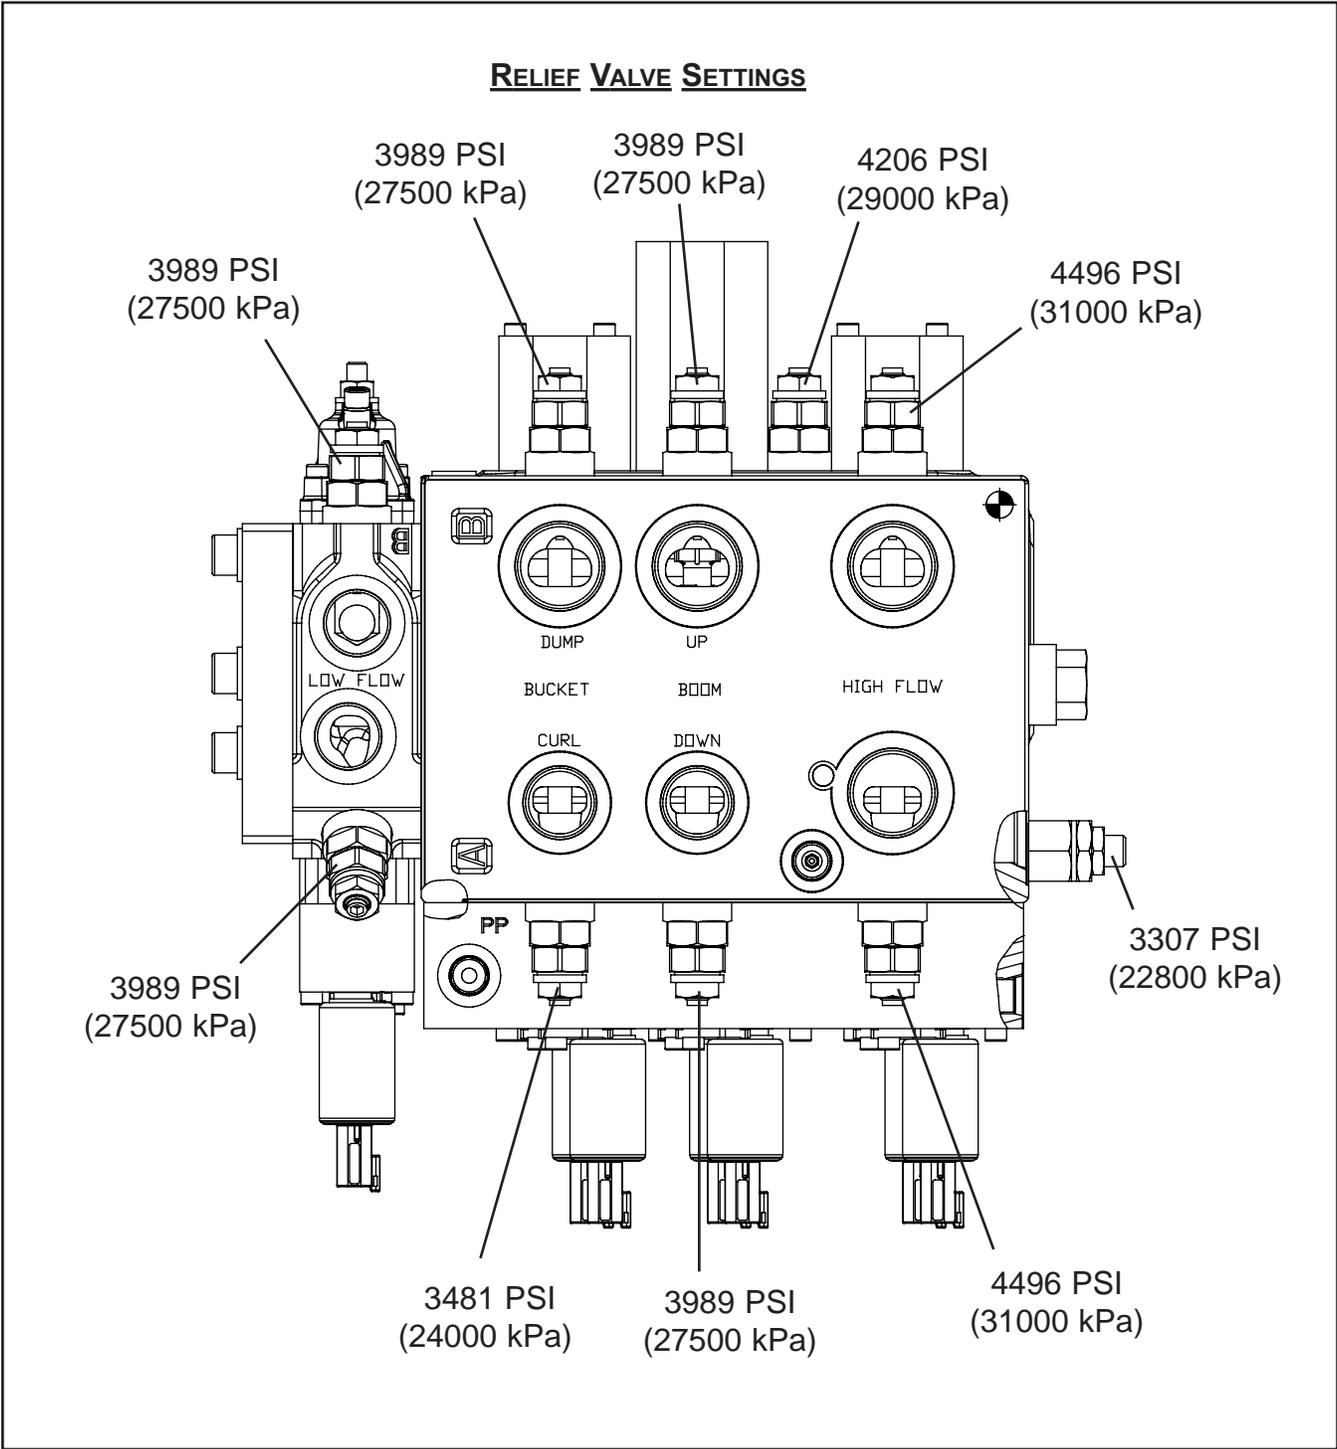


Hydraulic Solenoid Blocks

Figure 3-6 PT-100G Hyd. Solenoid blocks

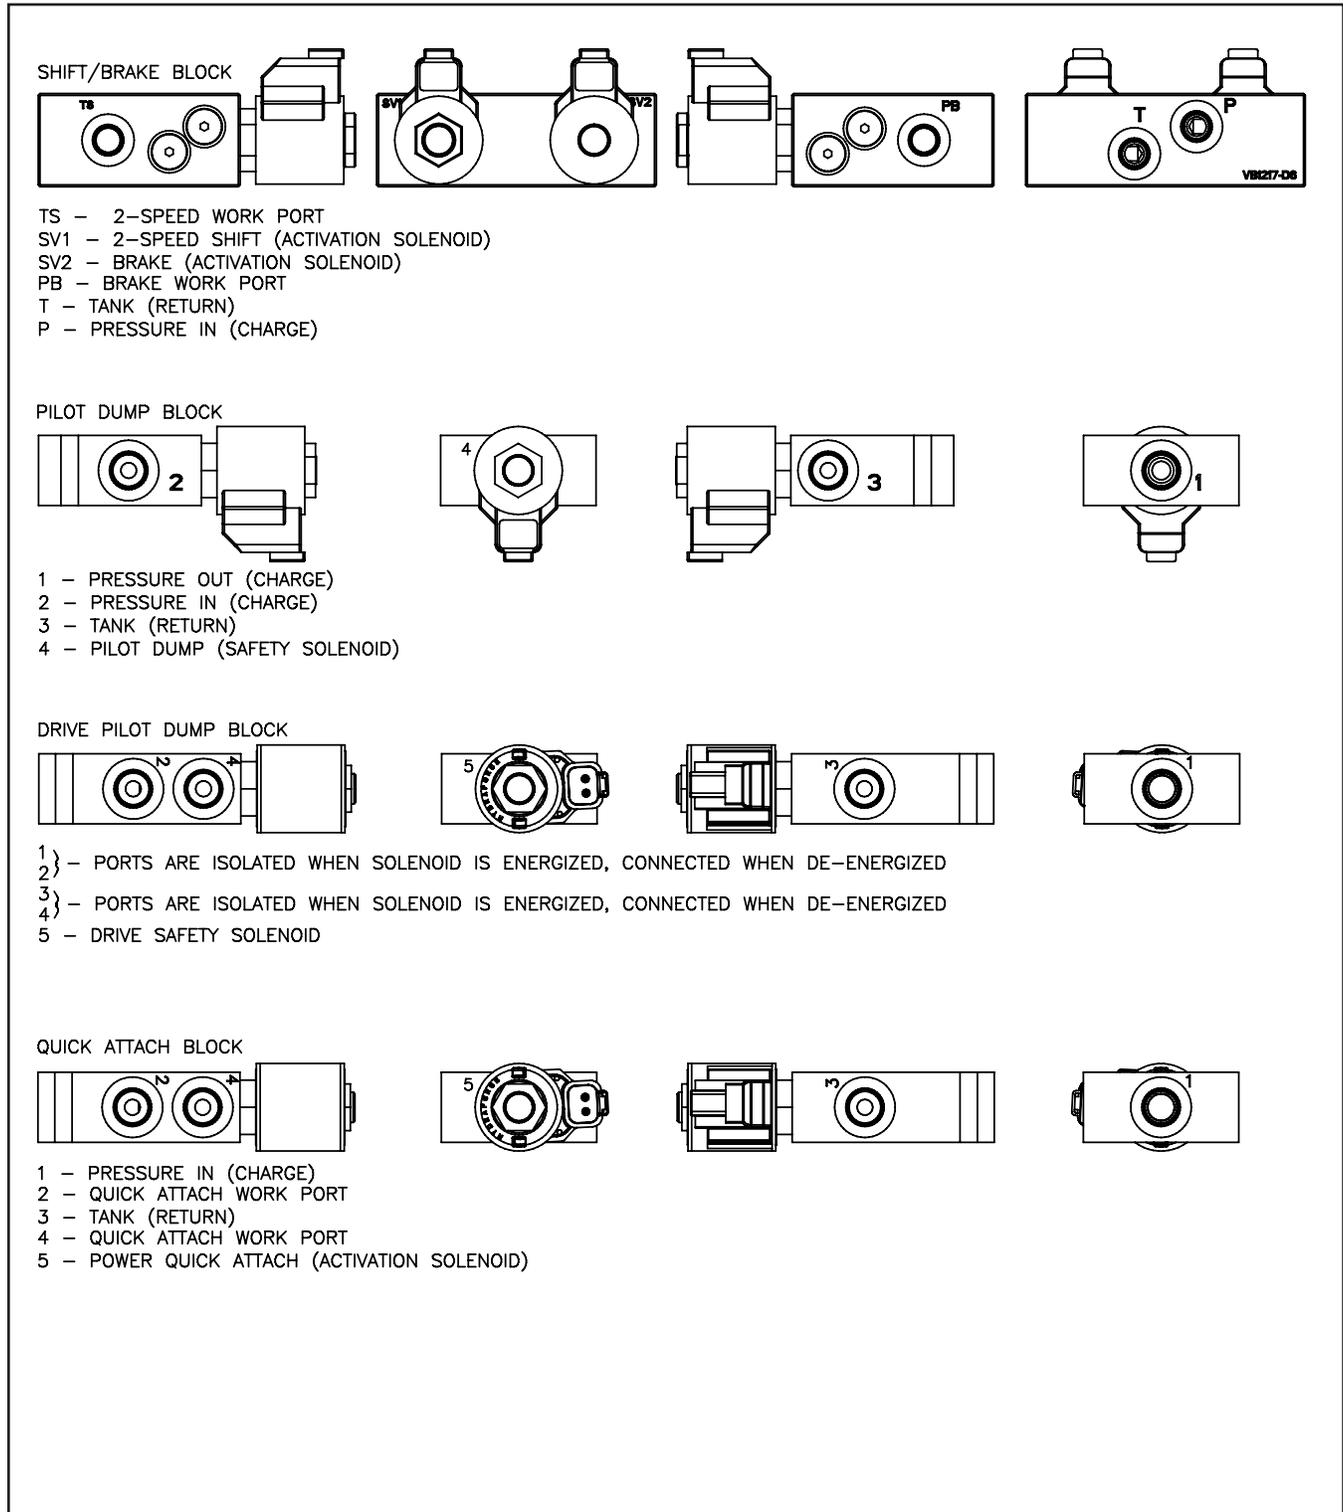

Electrical Attachment Outlet

Figure 3-7 PT-100G Electrical Attachment Outlet

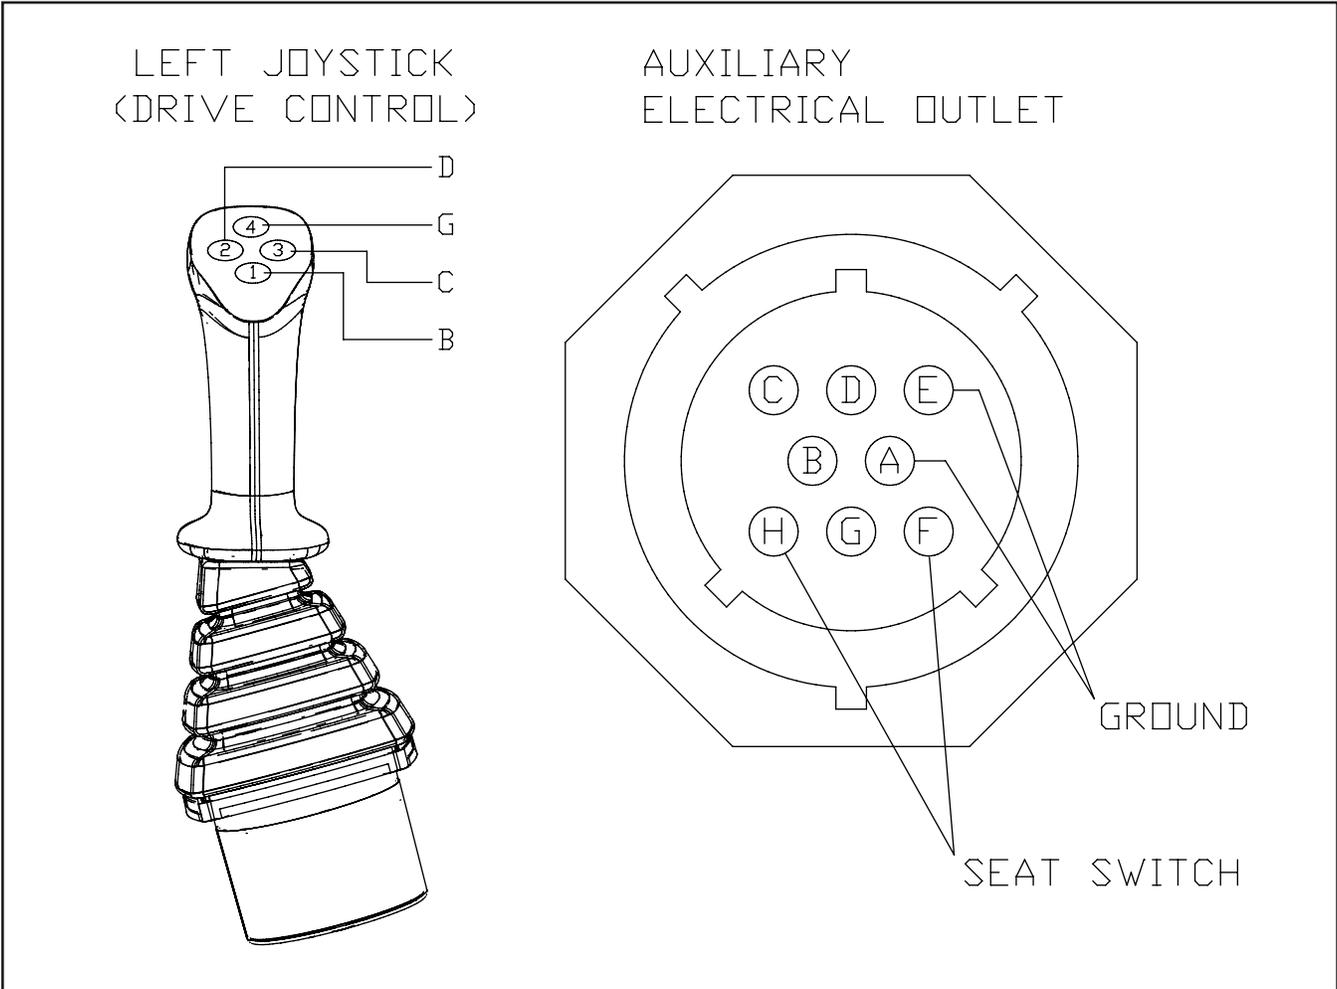

4. Maintenance

Chapter Overview

This chapter provides information on general maintenance procedures for the PT-100G. If there is an issue that requires troubleshooting, refer to Chapter 18, Troubleshooting.



Personal Safety

Improper or incomplete maintenance/repair of a Compact Track Loader can be dangerous and may result in machine damage, injury or even death.

Do not attempt to perform any type of repair or maintenance on a Compact Track Loader until you have read and fully understood the information in this manual.

Refer to the Operation and Maintenance manual for instructions regarding proper machine operation techniques before operating any Compact Track Loader.

Prior to performing any type of service work on a Compact Track Loader, read and understand Chapter 1 (Product Safety) for personal safety information.

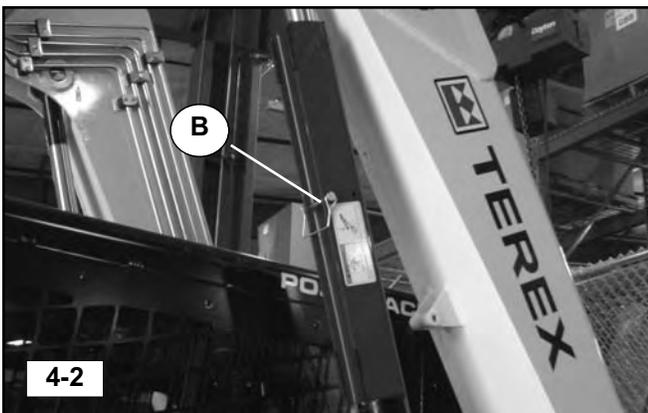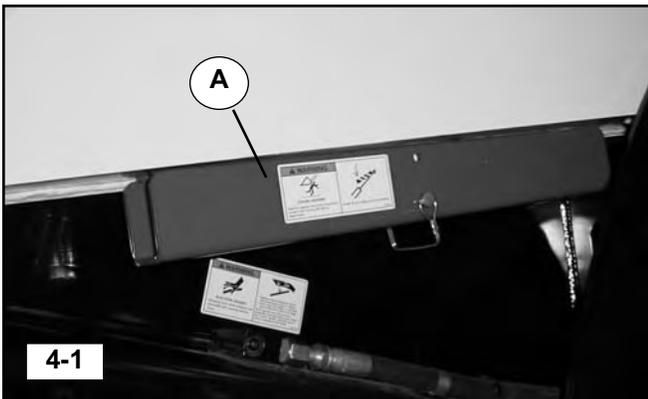

Lift Arm Brace

The lift arm brace (fig. 4-1, item A) is intended to keep service personnel safe when it is necessary to work on a machine with the lift arms in the raised position. It is not safe to rely on the hydraulic system to hold the lift arms in the raised position just as it is not safe to crawl under a machine supported only by a jack. The lift arm brace is used to support the weight of the lift arms much like jack stands are used to mechanically support vehicle weight.

To install the lift arm brace:

1. Park the machine on level ground in a safe area for performing service work.
2. Remove any attachments that may be fastened to the quick attach.
3. Have an assistant remove the retaining pins (fig. 4-2, item B) securing the lift arm brace and remove it from the machine.
4. Make sure bystanders are clear of the lift arms, then raise them to the upper limit.
5. Have an assistant install the brace around the cylinder shaft as shown and reinstall the pins to secure it to the cylinder.
6. Lower the lift arms slowly until they come to rest on the brace.
7. It is now safe to shut the engine off and exit the machine.


To remove the lift arm brace:



Do not work on or near the machine with the lift arms in the raised position unless the lift arm brace has been correctly installed.

1. Start the machine and raise the lift arms until they are clear of the brace.
2. Once clear, have an assistant remove the brace from the cylinder and stow it on the machine with the pins.
3. Once the brace has been stowed and the assistant is clear of the lift arms, lower the arms to the ground and shut the engine off to complete the procedure.

4. Maintenance

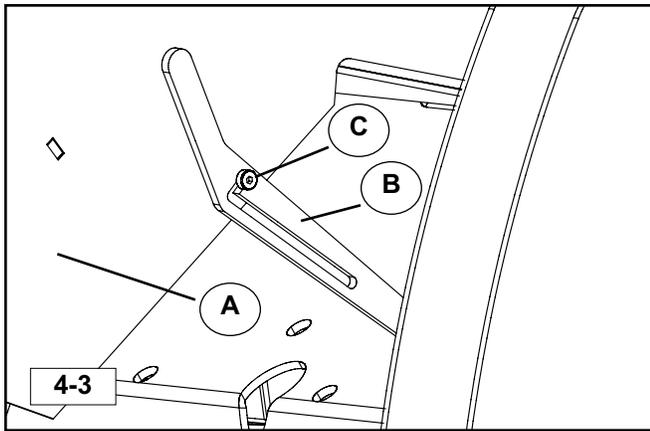

Tilt-Up Cab

The ROPS/FOPS approved cab (fig. 4-3, item A) tilts up to allow easy access to components while performing maintenance or service. It is equipped with a gas spring assist and a brace mechanism to hold it in place while tilted.

To tilt the cab:

1. Remove any attachments that may be fastened to the machine.
2. (Optional) Raise the lift arms and secure them with the lift arm brace. (See page 4-1)
3. Remove the pre-cleaner from the intake duct located behind the cab.
4. Remove the two bolts (four for forestry) that fasten the cab to the footwell. They are located along the upper edge of the footwell inside the cab, one in each of the front corners (rear as well on forestry machines).
5. Once the bolts have been removed, tilt the cab slowly upwards. The cab brace (fig. 4-3, item B) should fall onto the shoulder bolt (fig. 4-3, item C) locking the cab in its upright position.

The cab is now secure.

To lower the cab:

1. Raise the cab brace so that the locking channel is clear of the shoulder bolt.
2. Hold the brace upwards and lower the cab until the locking channel is clear of the shoulder bolt then release the brace.
3. The cab is now free to be lowered into operating position.
4. Lower the cab completely and then fasten it to the footwell with the bolts removed previously.
5. Reinstall the pre-cleaner.
6. Lower the lift arms (if raised) per page 4-1.



Jacking Procedure

Occasionally, your machine may need to be suspended off of the ground to perform maintenance. Exercise caution when jacking the machine. Always use a jack that is capable of lifting the machine and support its weight with Terex approved jack stands while suspended. Never work on or under a machine supported only by a jack.


To safely jack your machine:

1. Remove any attachments that may be fastened to the machine and raise the lift arms.
2. Install the lift arm brace as instructed on page 4-1.
3. Once the lift arms are secured, carefully exit the machine.
4. Roll or slide your jack under the front of the machine and center the lifting pad directly under the middle of the front torsion axle.
5. Once in place, jack the machine upward making sure it remains stable until it has reached sufficient height to install a Terex jack stand beneath the machine. (fig. 4-4)
6. Slide the jack stand into place making sure it is centered under the machine (left to right when viewed from the front) and far enough back for the machine to remain stable when the jack is lowered and the front of the machine rests on the stand. (fig. 4-5)
7. Once the stand is in place, slowly lower the machine onto the stand and then remove the jack.

Repeat steps 4-7 at the rear of the machine should both ends of the machine need to be off of the ground for service.

Grease Fitting Locations

- A. Lower Bucket Cylinder Pivot
- B. Upper Bucket Cylinder Pivot
- C. Front Lift Cylinder Pivot
- D. Lift Arm Pivot
- E. Rear Lift Cylinder Pivot
- F. Rear Axle Pivot (2)
- G. Front Axle Pivot (2)
- H. Lower Bucket Pivot

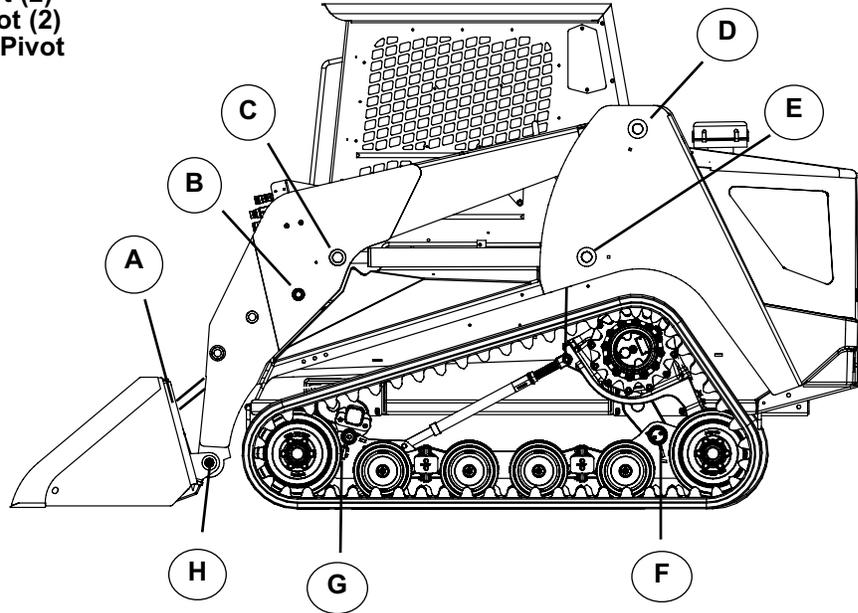

4-6

Grease Fittings

The PT 100G is equipped with grease fittings at pivot points throughout the machine. The illustration above shows the locations of all fittings on the left side of the machine. An identical fitting exists on the right side of the machine for each one identified in the illustration. Lubricate all fittings **DAILY** or after every 10 hours of operation to maximize component life and ensure proper machine function. (fig. 4-6)

Undercarriages

The undercarriage assemblies in Compact Track Loaders typically operate in harsh working conditions. They work in mud, gravel, debris and various other abrasive materials during operation. Terex recommends a daily inspection of the undercarriage assemblies and cleaning if necessary.

Materials that are particularly sticky or abrasive like clay, mud, or gravel should be cleaned from the undercarriages more often to minimize component wear. A pressure washer works well for cleaning materials from the undercarriages. At times when a pressure washer is not available, use a bar, shovel or similar device to remove foreign materials.

When cleaning, pay particular attention to the drive tables, sprockets, and the front and rear wheels where debris is likely to accumulate. If working in scrap or debris, inspect more often and remove foreign objects that may wrap around or lodge themselves between components causing premature wear and damage.

Operation in loamy sand or on turf or other finished surfaces may require less frequent cleaning, but daily inspection is still advised.

4. Maintenance


Track Tension (PT-100G)

Proper track tension must be maintained for optimal performance and track/undercarriage life. Running a track that is too loose may cause the track to misfeed possibly causing damage to the track and or undercarriage components. Running a track that is too tight may cause the track to stretch, create premature bearing failure, or other preventable damage to the machine. As a rule, a track should only be tightened to the point where there is no visible sag. Never tighten your tracks beyond this point.

Note: During the first 50 hours of operation the tracks will "break-in" and will most likely require adjustment.


To check track tension: (fig. 4-7, 4-8)

1. Drive the machine forward 5 feet to remove belt slack from the lower and rearward portions of the track.
2. Lay a straight edge along the top of the track bridging the drive sprocket and front idler wheel.
3. Apply 90 lbs. of down force to the the track by either placing weight on top, or by hanging the weight by using rope or wire, midway between the drive sprocket and front idler as seen in figure 4-8.
4. Measure from the bottom of the straight edge to the lug surface (top) of the track. The deflection should measure between 3/4" and 1" (1.9-2.5 cm).

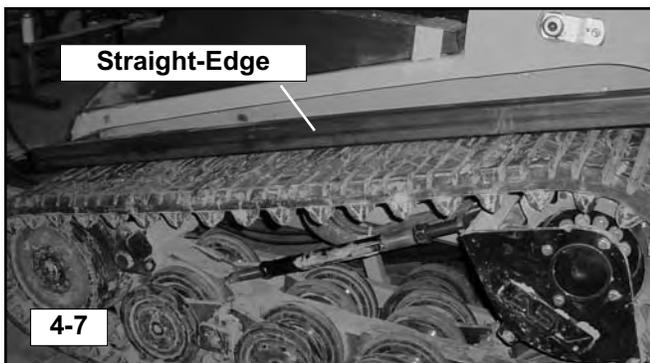


To adjust track tension: (fig. 4-9)


1. Loosen the lock nut (A) on the turnbuckle (B) and adjust by turning the turn buckle itself until proper tension has been achieved.
2. Then tighten the turnbuckle lock nut to complete the procedure.
3. Repeat the adjustment procedure on the other side of the machine if necessary.

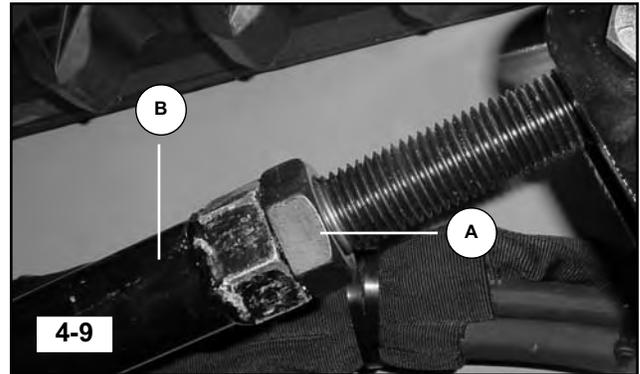

Planetary Oil Change (fig. 4-10)

1. Place the machine on jackstands as described in jacking prodedure in this chapter.
2. Orient the perimeter drain plug at the very bottom of the drive motor, then turn the engine off and remove the key to avoid accidental start.
3. Remove the plug and drain the oil into a suitable catch container. (fig. 4-10) Dispose oil according to mandates.
4. Start the machine (make sure all personnel are clear of the machine), then roll the drive motor over so that the drain/fill hole is on the very top of the drive motor. Stop the engine and remove the key to avoid accidental start.
5. Fill the planetary with .95qt (.9l) of 75-140 synthetic gear oil, reinstall plug.
6. Repeat the procedure on the opposite drive motor.

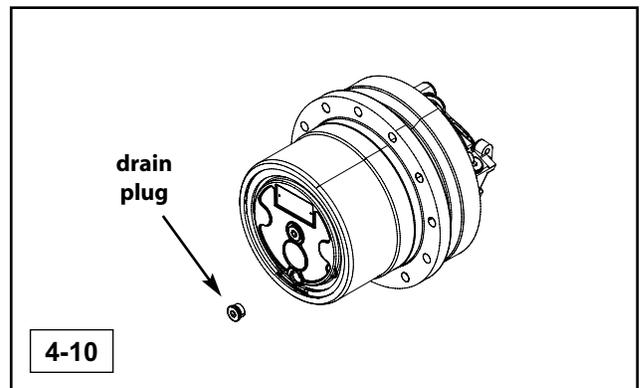

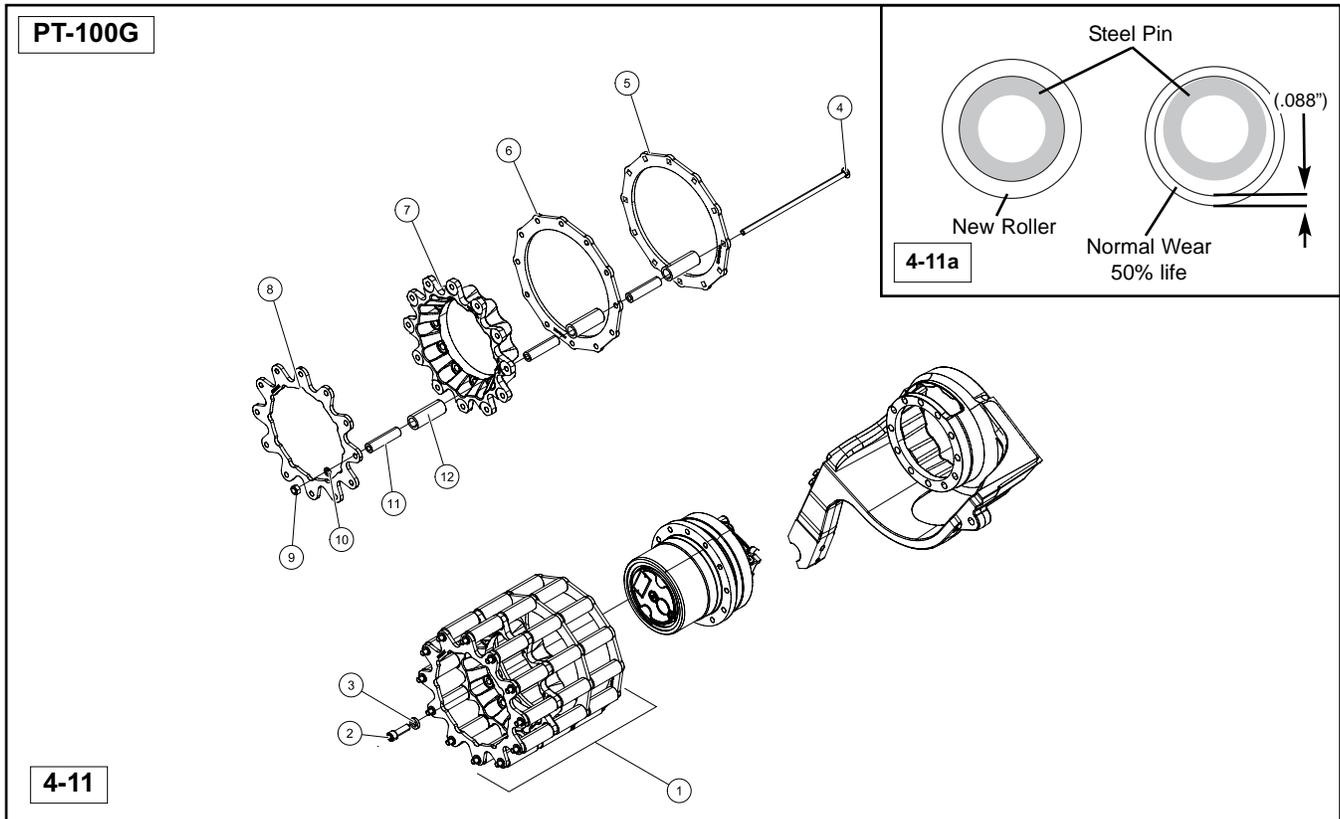

Drive Sprocket Rollers

Terex compact track loaders utilize rollers on the drive sprockets to drive the track. These rollers help minimize friction between the track and the drive sprocket to prolong track life.

The rollers rotate around hardened steel pins and usually wear on their inside surfaces. As they wear, the rollers become thinner, but will continue to function as long as they rotate freely around the pins. Sprocket rollers should be inspected every 50 hours of operation and replaced if cracked or worn to less than 35% of original thickness. (.088" / .22cm)

To replace worn rollers: (fig. 4-11)

1. Begin by performing steps 1-4 in the track removal procedure on page 4-6 to allow the sprocket to be removed.
2. Remove the sprocket mounting bolts (2) to release sprocket from drive motor; then remove the sprocket.

Note: You may need to pry or lift the track upwards with a hoist above the drive sprocket to provide clearance for removal.

3. Remove one bolt (4) holding the steel pins (11) and rollers (12) in place.
4. Install the new rollers over the pins, then slide the bolt back through the sprocket and pins and secure it with the nut (9).

5. Repeat this process as required throughout the sprocket.
6. Reinstall the sprocket by reversing steps 2-3.
7. Repeat steps 1-5 on the other side of the machine if necessary.
8. Perform the track tension adjustment and check procedures on page 4-4.

Note: Replace rollers as a set to simplify inspection and maintain proper sprocket function.

4. Maintenance

Track Removal/Installation

Tracks may need to be removed periodically to inspect undercarriage components or for replacement if worn or damaged. This section covers the procedure to remove and install a track on PT 100G machines.

Tools required:


- Socket/impact wrench
- Ratchet strap
- Heavy duty hydraulic jack
- Combination wrench
- Long pry bar(s)
- Terex approved jack stands (2)
- Spray lubricant
- Shop vac or pressure washer

Track Removal

1. Break up and remove any foreign material from the cavity between the suspension rail and the drive table support (fig. 4-12).


Note: A shop vac or pressure washer will work well to remove material from this cavity.

2. Clean the threads on the turnbuckle thoroughly using a stiff bristle brush.
3. Loosen the lock nut on the turnbuckle and spin it to the end of the threaded shaft to allow clearance when the drive table is lowered (fig. 4-13).
4. Rotate the turnbuckle and lower the drive table as far as it will go (fig. 4-14).
5. Remove the bolts securing the outer front wheel to the hub. Then remove the wheel (fig. 4-15, 4-16).

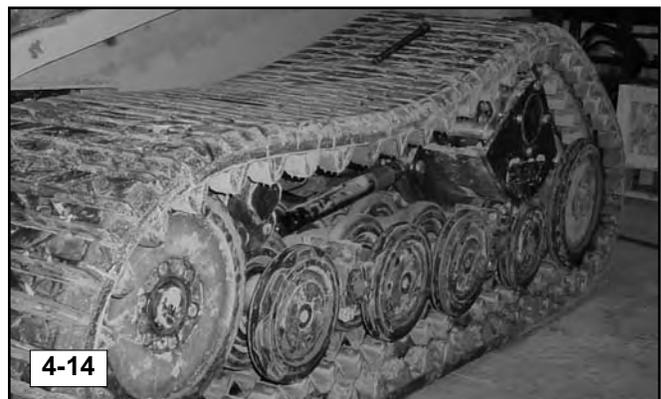



6. Remove the outer scraper plate from the suspension rail. (fig. 4-17)
7. Remove the bolts securing the inner wheel to the hub, then remove the wheel. (fig. 4-18, 4-19)
8. Use a pry bar to peel the track over the inner wheel(s) toward the outside of the machine. (fig. 4-20)
9. Once the track is off of the front wheel(s), pull the rear of the track clear of the suspension. (fig. 4-21, 4-22)

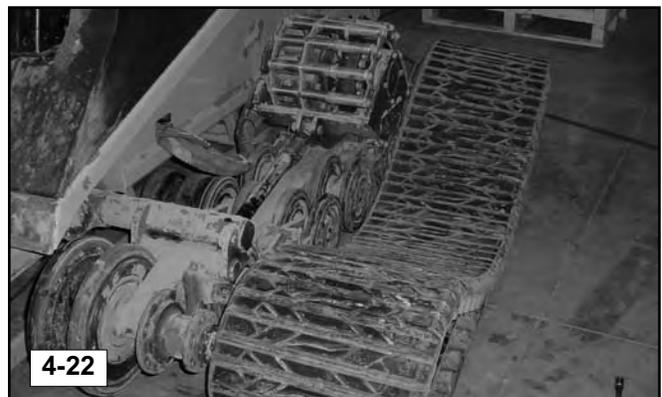

Track Installation

1. Slide the track over the drive sprocket at the rear of the machine (fig. 4-23, 4-24).
2. Slide the front of the track into position for installation (fig. 4-25).
3. Lubricate the inner front wheel and the inside of the front portion of the track with a spray lubricant (fig. 4-26).
4. Attach a ratchet strap to the upper front portion of the track and the other end to one of the tow hooks on the front of the machine (fig. 4-27).
5. Tighten the strap until the track is pulled upward slightly and in position to slide over the inner idler wheel at the front (fig. 4-27).
6. Pull all of the slack forward and make sure the track drive lugs are properly meshed with the sprocket to provide as much slack as possible for installation.
7. If you have an assistant, have them pull the track forward while you push inward on the track. Work the track over the wheel and into place.
8. If you do not have an assistant, push the track forward and inward in a quick forceful motion to slide the track into place. The ratchet strap will help to keep the track in place while you work it over the idler (fig. 4-28).

