

DIVISION/SECTION	SECTION NO	FORM NO
1. GENERAL		
Safety, General Information and Torque Specifications	1001	7-55741GB
General specifications	1002	7-38190GB
2. ENGINE		
Engine Removal and Installation	2002	7-38200GB
Engine Disassembly/Assembly, Lubrication System, Cooling System and Fuel System	2010	7-38210GB
4. ELECTRICAL		
Electrical Troubleshooting and Schematics	4001	7-38220GB
Alternator	4002	7-38230GB
Starter Motor	4003	7-38240GB
5. UNDERCARRIAGE		
Tracks, Rollers and Idlers	5002	7-38250GB
6. POWER TRAIN		
Travel Motor and Reduction	6002	7-38260GB
Swing Reduction Gear	6003	7-38270GB
7. UNDERCARRIAGE HYDRAULICS		
Hydraulic Swivel	7004	7-38010GB
8. UPPERSTRUCTURE HYDRAULICS		
Pressure setting, Troubleshooting, Hydraulic Schematics	8001	7-38280GB
Hydraulic Reservoir	8010	7-38290GB
Hydraulic Pump	8020	7-38300GB
Hydraulic Pilot Pump	8021	7-38310GB
Attachment Valve	8032	7-38320GB
Swing and offset cylinder flow selector valve	8035	7-38060GB
Pressure Limiter and Flow Cut-Off Valve	8036	7-38140GB
Swing Motor	8037	7-38330GB
Hand Control Valve	8050	7-38120GB
Attachment cylinders	8081	7-38340GB
9. UPPERSTRUCTURE/ATTACHMENTS		
Upperstructure and Turntable Bearing	9001	7-38350GB
Boom, Dipper, Bucket and Dozer Blade	9002	7-38360GB
Pedals and Levers	9003	7-38500GB
Operator's Cab and Canopy	9004	7-38110GB

Product: 2000 Case CK36-CK50 Crawler Excavator Service Manual 7-56381
Full Download: <https://www.arepairmanual.com/downloads/2000-case-ck36-ck50-crawler-excavator-service-manual-7-56381/>

Sample of manual. Download All 260 pages at:
<https://www.arepairmanual.com/downloads/2000-case-ck36-ck50-crawler-excavator-service-manual-7-56381/>

Section 1001

SAFETY INSTRUCTIONS, GENERAL INFORMATION AND TORQUE SPECIFICATIONS

TABLE OF CONTENTS

SAFETY INSTRUCTIONS.....	3
GENERAL INFORMATION.....	5
STANDARD FASTENER TORQUE SPECIFICATIONS.....	6
HYDRAULIC CONNECTION TORQUE SPECIFICATIONS.....	7


SAFETY



This symbol means ATTENTION ! BECOME ALERT ! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about safety. Carefully read the message, Make sure you fully understand the causes of possible injury or death.

To prevent injury always follow the Warning, Caution and Danger notes in this section and throughout the manual.

Put the warning tag shown below on the key for the keyswitch when servicing or repairing the machine. One warning tag is supplied with each machine. Additional tags Part Number 331-4614 are available from your service parts supplier.

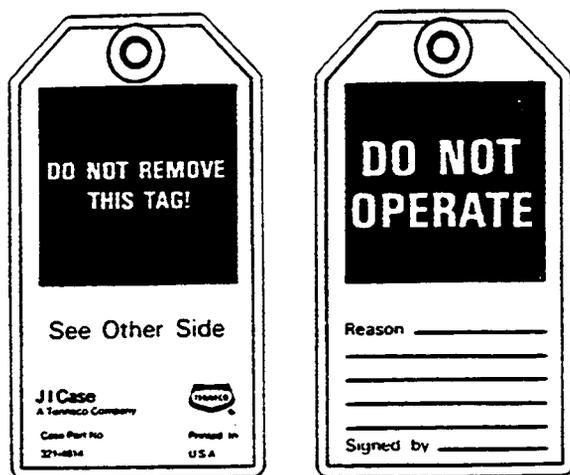

B004



Read the operator's manual to familiarize yourself with the correct control functions.



Operate the machine and equipment controls from the seat position only. Any other method could result in serious injury.



This is a one man machine, no riders allowed.



Before starting engine, study Operator's Manual safety messages. Read all safety signs on machine. Clear the area of other persons. Learn and practise safe use of controls before operating.

It is your responsibility to understand and follow manufacturers instructions on machine operation, service, and to observe pertinent laws and regulations. Operator's and Service Manuals may be obtained from your J.I. CASE dealer.



If you wear clothing that is too loose or do not use the correct safety equipment for your job, you can be injured. Always wear clothing that will not catch on objects. Extra safety equipment that can be required includes hard hat, safety shoes, ear protection, eye or face protection, heavy gloves and reflector clothing.



When working in the area of the fan belt with the engine running, avoid loose clothing if possible, and use extreme caution.



When doing checks and tests on the equipment hydraulics, follow the procedures as they are written. DO NOT change the procedure.



When putting the hydraulic cylinders on this machine through the necessary cycles to check operation or to remove air from a circuit, make sure all people are out of the way.



Use insulated gloves or mittens when working with hot parts.



Lower all attachments to the ground or use stands to safely support the attachments before you do any maintenance or service.



Pin sized and smaller streams of hydraulic oil under pressure can penetrate the skin and result in serious infection. If hydraulic oil under pressure does penetrate the skin, seek medical treatment immediately. Maintain all hoses and tubes in good condition. Make sure all connections are tight. Make a replacement of any tube or hose that is damaged or thought to be damaged. DO NOT use your hand to check for leaks, use a piece of cardboard or wood.



When removing hardened pins such as a pivot pin, or a hardened shaft, use a soft head (brass or bronze) hammer or use a driver made from brass or bronze and a steel head hammer.



When using a hammer to remove and install pivot pins or separate parts using compressed air or using a grinder, wear eye protection that completely encloses the eyes (approved goggles or other approved eye protectors).



Use suitable floor (service) jacks or chain hoist to raise wheels or tracks off the floor. Always block machine in place with suitable safety stands.



When servicing or repairing the machine. Keep the shop floor and operator's compartment and steps free of oil, water, grease, tools, etc. Use an oil absorbing material and or shop cloths as required. Use safe practices at all times.



Some components of this machine are very heavy. Use suitable lifting equipment or additional help as instructed in this Service Manual.



Engine exhaust fumes can cause death. If it is necessary to start the engine in a closed place, remove the exhaust fumes from the area with an exhaust pipe extension. Open the doors and get outside air into the area.



When the battery electrolyte is frozen, the battery can explode if (1), you try to charge the battery, or (2), you try to jump start and run the engine. To prevent the battery electrolyte from freezing, try to keep the battery at full charge. If you do not follow these instructions, you or others in the area can be injured.



Batteries contain acid and explosive gas. Explosions can result from sparks, flames or wrong cable connections. To connect the jumper cables correctly to the battery of this machine see the Operator's Manual. Failure to follow these instructions can cause serious injury or death.

GENERAL INFORMATION

CLEANING

Clean all metal components, except bearings, with steam or white spirit. Do not use caustic soda when steam-cleaning. After cleaning, dry and oil the components. Clean oil lines with compressed air. Clean bearings in kerosene, dry them completely and oil them.

INSPECTIONS

Carefully examine all disassembled components. Replace all parts showing signs of wear or damage. Light scores and scratches can be removed by honing or with a buffing compound. Fast, abnormal wear of components can be avoided by careful examination and early detection of wear and pitting.

BEARINGS

Check that bearings run freely. Replace bearings that show signs of too much play or seizing. Clean bearings in a good solvent or kerosene and allow them to dry naturally. **DO NOT DRY BEARINGS WITH COMPRESSED AIR.**

NEEDLE BEARINGS

Before installing needle bearings in their housing, remove any metal edges inside or around the housing. When installing bearings with a hydraulic press, grease the inside and the outside of the bearing with petroleum jelly.

GEARS

Check all gears for signs of damage or wear. Replace damaged or worn gears.

SEAL RINGS, O RINGS AND FLAT SEALS

Always install new seal rings, O-rings and flat seals, if removed. Lubricate seal rings and O-rings with petroleum jelly.

SHAFTS

Check all shafts showing signs of damage or wear. Check particularly to make sure that any surface of the shaft in contact with bearings or seal rings is not damaged.

SERVICE PARTS

Always use genuine CASE service parts. To order service parts, see the Spare Parts Catalog and remember to give the correct reference of the necessary CASE part. No warranty claims will be considered for failures involving parts which are not of CASE origin.

LUBRICATION

Never use oil or grease which is different from that specified in the Operator's Manual or the Service Manual. No warranty claims will be considered for failures due to the use of wrong oil or grease.

STANDARD FASTENER TORQUE SPECIFICATIONS

Unless otherwise specified, use the following torque specifications. Lubricate the threads with engine oil or ordinary grease.

STANDARD SIZE \ SCREWS	4	7	9
M6	7.8 to 9.3 Nm (5.75 to 6.86 lb ft)	9.8 to 11.3 Nm (7.23 to 8.33 lb ft)	12.3 to 14.2 Nm (9.07 to 10.47 lb ft)
M8	17.7 to 20.6 Nm (13.0 to 15.2 lb ft)	23.5 to 27.5 Nm (17.34 to 20.29 lb ft)	29.4 to 34.3 Nm (21.6 to 25.31 lb ft)
M10	39.2 to 45.1 Nm (28.9 to 33.28 lb ft)	48.0 to 55.9 Nm (35.42 to 41.25 lb ft)	60.8 to 70.6 Nm (44.8 to 52.10 lb ft)
M12	62.8 to 72.6 Nm (46.3 to 53.5 lb ft)	77.5 to 90.2 Nm (57.19 to 66.56 lb ft)	103.0 to 117.7 Nm (76.0 to 86.86 lb ft)
M14	107.9 to 125.5 Nm (79.6 to 92.6 lb ft)	123.6 to 147.1 Nm (91.2 to 108.5 lb ft)	166.7 to 196.1 Nm (123.0 to 144.7 lb ft)
M16	166.7 to 191.2 Nm (123.0 to 141.0 lb ft)	196.1 to 225.6 Nm (144.7 to 166.49 lb ft)	259.9 to 304.0 Nm (191.8 to 224.3 lb ft)
M18	245.2 to 284.4 Nm (180.9 to 209.88 lb ft)	274.6 to 318.7 Nm (202.6 to 235.2 lb ft)	343.2 to 402.1 Nm (253.2 to 296.74 lb ft)
M20	333.4 to 392.2 Nm (246.0 to 289.44 lb ft)	367.7 to 431.5 Nm (271.36 to 318.44 lb ft)	490.3 to 568.8 Nm (361.8 to 419.77 lb ft)

HYDRAULIC CONNECTION TORQUE SPECIFICATIONS

HOSE FITTINGS

THREAD SIZE	NUTS	FLARED FITTINGS	WRENCH SIZE
1/8"	7.80 to 11.80 Nm (5.75 to 8.7 lb ft)	14.71 to 19.61 Nm (10.85 to 14.47 lb ft)	17 mm
1/4"	24.50 to 29.40 Nm (18.8 to 21.6 lb ft)	36.30 to 44.10 Nm (26.7 to 32.5 lb ft)	19 mm
3/8"	49.00 to 53.90 Nm (36.0 to 39.7 lb ft)	39.20 to 49.00 Nm (28.9 to 36 lb ft)	22 mm
1/2"	58.80 to 63.70 Nm (43.4 to 47.0 lb ft)	49.00 to 68.60 Nm (36.0 to 50.6 lb ft)	27 mm
3/4"	117.70 to 127.50 Nm (86.8 to 94.0 lb ft)	127.50 to 147.10 Nm (94.0 to 108.5 lb ft)	36 mm
1"	137.30 to 147.10 Nm (101.3 to 108.5 lb ft)	147.10 to 166.10 Nm (108.5 to 122.5 lb ft)	41 mm

CONNECTORS

THREAD SIZE	TAPERED THREAD	STRAIGHT THREAD	WRENCH SIZE
1/8"	19.60 to 29.40 Nm (14.46 to 21.7 lb ft)	—————	17 mm
1/4"	36.30 to 46.10 Nm (26.8 to 34.0 lb ft)	58.80 to 78.50 Nm (43.4 to 57.0 lb ft)	19 mm
3/8"	39.20 to 49.00 Nm (28.9 to 36.2 lb ft)	78.50 to 98.10 Nm (58.0 to 72.4 lb ft)	23 mm
1/2"	49.00 to 68.60 Nm (36.2 to 50.6 lb ft)	117.70 to 137.30 Nm (86.8 to 101.3 lb ft)	26 mm

LINE NUTS

TUBE SIZE (OUTER DIAMETER)	NUTS	WRENCH SIZE
8 mm	29.40 to 39.20 Nm (21.7 to 29.0 lb ft)	17 mm
10 mm	39.20 to 44.10 Nm (29.0 to 32.5 lb ft)	19 mm
12 mm	53.99 to 63.70 Nm (39.9 to 47.0 lb ft)	21 mm
16 mm	88.30 to 98.10 Nm (65.16 to 72.4 lb ft)	29 mm
18 mm	127.50 to 137.30 Nm (94.0 to 101.3 lb ft)	32 mm
27.20 mm	235.40 to 254.97 Nm (173.7 to 188.2 lb ft)	41 mm

Section 1002

GENERAL SPECIFICATIONS

1002


TABLE OF CONTENTS

PRODUCT IDENTIFICATION AND SERIAL NUMBERS.....	3
GENERAL SPECIFICATIONS	
Capacities (CK36).....	3
Capacities (CK50).....	3
Travel Speed (CK36).....	3
Travel Speed (CK50).....	3
HYDRAULIC SPECIFICATIONS (CK36)	
General.....	4
Operating Speeds.....	4
Hydraulic Pumps.....	5
HYDRAULIC SPECIFICATIONS (CK50)	
General.....	6
Operating Speeds.....	6
Hydraulic Pumps.....	7
Electrical Specifications.....	8
Lubricants and Fluids.....	8
Machine Weights.....	8
Tracks, Rollers and Idlers (CK36).....	9
Tracks, Rollers and Idlers (CK50).....	10
ENGINE SPECIFICATIONS	
Run-in Instructions.....	11
Engine Cooling System.....	11
Engine Lubrication.....	11
ENGINE SPECIFICATIONS DETAILS	
General (CK36).....	12
General (CK50).....	12
General.....	12
Pistons.....	12
Main Bearings.....	12
Lubrication System.....	12
Fuel System.....	13
Cylinder Head.....	13
Valves (Inlet and Exhaust).....	13
Valve Springs.....	13
Rocker Arm Assembly.....	13
Camshaft.....	13
Pistons and Piston Rings.....	14
Connecting Rods.....	14
Crankshaft.....	14
Cylinder Liner.....	14
Engine Lubricating System.....	15
Cooling System.....	15
SPECIAL TORQUES.....	15
MACHINE DIMENSIONS.....	16

PRODUCT IDENTIFICATION AND SERIAL NUMBERS

When ordering parts or when requesting information or assistance always give the model and serial numbers of your machine.

Write the model and serial numbers of your machine on the lines below.

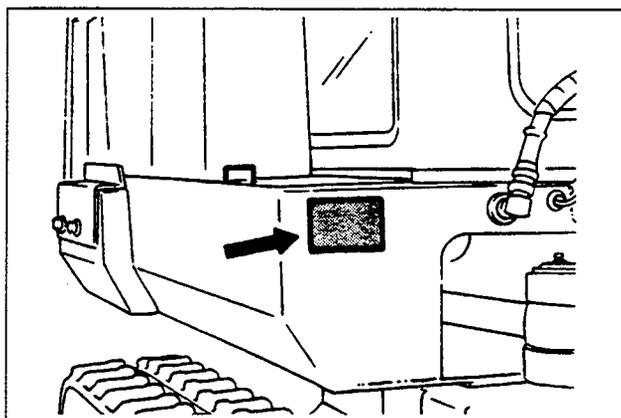

Model _____

Product Identification Number (PIN) _____

GENERAL SPECIFICATIONS

Capacities (CK36)

Engine Oil (without filter change).....	7.5 litres
Radiator.....	7 litres
Fuel Tank.....	57 litres
Hydraulic Oil Reservoir.....	59 litres
Hydraulic Circuit.....	93 litres
Bottom Track Roller.....	0.07 litre
Track Idler Wheel.....	0.04 litre
Travel Motor Reduction.....	0.6 litre

Capacities (CK50)

Engine Oil (without filter change).....	7.5 litres
Radiator.....	7 litres
Fuel Tank.....	66 litres
Hydraulic Oil Reservoir.....	75 litres
Hydraulic Circuit.....	110 litres
Bottom Track Roller.....	0.07 litre
Track Idler Wheel.....	0.04 litre
Travel Motor Reduction.....	1.2 litre

Travel Speed (CK36)

1st Speed.....	1.9 Km/h
2nd Speed.....	3.6 Km/h

Travel Speed (CK50)

1st Speed.....	1.8 Km/h
2nd Speed.....	3.6 Km/h

HYDRAULIC SPECIFICATIONS (CK36)

General

Engine Speed, no load.....2450 rpm
 Test Temperature of Hydraulic Oil.....45 to 50°C

Value on Pressure
Setting Pump

Value on Machine

Main Relief Valve, A1.....	157 to 167 bar (2275 to 2417 psi)	155 to 160 bar (2247 to 2318 psi)
Main Relief Valve, A2.....	206 to 216 bar (2986 to 3128 psi)	204 to 209 bar (2958 to 3029 psi)
Main Relief Valve, A3.....	196 to 206 bar (2844 to 2986 psi)	189 to 194 bar (2745 to 2816 psi)
Secondary Relief Valves :		
Boom : Raising b2, Lowering b1.....	240 to 260 bar (3484 to 3768 psi)	237 to 243 bar (3441 to 3527 psi)
Dipper : Extend b3, Retract b4.....	240 to 260 bar (3484 to 3768 psi)	237 to 243 bar (3441 to 3527 psi)
Levelling Blade : Lowering b5.....	240 to 260 bar (3484 to 3768 psi)	237 to 243 bar (3441 to 3527 psi)
Bucket : Closing b6.....	240 to 260 bar (3484 to 3768 psi)	237 to 243 bar (3441 to 3527 psi)
Swing Motor Brake Valve, c1.....	211 to 230 bar (3058 to 3342 psi)	196 to 202 bar (2844 to 2930 psi)
High Pressure Relief Valve, c2.....	274 to 294 bar (3982 to 4266 psi)	240 to 260 bar (3484 to 3768 psi)

Operating Speeds (in seconds)

		Reference Value	Authorised Limit	Note
Boom Cylinder (Cab)	Raising	2.8 to 2.4	2.9	1
	Lowering	3.3 to 3.9	4.7	1
Boom Cylinder (Canopy)	Raising	2.0 to 2.6	3.1	1
	Lowering	3.8 to 4.3	5.3	1
Dipper Cylinder	Retracting	2.8 to 3.4	4.1	2
	Extending	2.0 to 2.6	3.1	2
Bucket Cylinder	Closing	3.2 to 3.8	4.6	2
	Opening	2.3 to 2.9	3.5	2
Levelling Blade Cylinder	Lowering	2.4 to 3.0	3.6	2
	Raising	1.9 to 2.5	3.0	2
Swivel Speed	Left	17.4 to 21.2	25.4	3
	Right	17.4 to 21.2	25.4	3
Swing Cylinder	Left	5.9 to 6.5	7.8	4
	Right	5.2 to 5.8	7.0	4
Swing Start	Left/Right	1.7 to 2.3	2.8	0 to 90°

- NOTE :**
1. Cylinder to maximum height without end of stroke cushioning
 2. Complete cylinder stroke
 3. Three complete revolutions
 4. Not counting end of stroke cushioning

Hydraulic Pumps

	P1, P2	P3	P4
Pump Rotation Speed (rpm)	2450	2450	1700
Test Pressure	206 bar (2986 psi)	191 bar (2773 psi)	98 bar (1422 psi)
Theoretical Displacement	13.2 cm ³ (0.81 in ³)	8.7 cm ³ (0.52 in ³)	3.07 cm ³ (0.19 in ³)
Theoretical Output	32.2 l/min (7.1 gal/min)	21.3 l/min (4.7 gal/min)	4.84 l/min (1.06 gal/min)
Maximum Authorised Output for 85 % use	27.5 l/min (6.04 gal/min)	18.1 l/min (3.98 gal/min)	4.11 l/min (0.9 gal/min)
Maximum Authorised Output for 80 % use	25.8 l/min (5.67 gal/min)	17.0 l/min (3.7 gal/min)	3.87 l/min (0.85 gal/min)

P1 - First body, main pump

P2 - Second body, main pump

P3 - Swing pump

P4 - Pilot controlled pump

HYDRAULIC SPECIFICATIONS (CK50)

General

Engine Speed, no load.....2800 rpm
 Test Temperature of Hydraulic Oil.....45 to 50°C

	Value on Machine	Value on Pressure Setting Pump
Main Relief Valve, A1.....	186 to 196 bar (2702 to 2844 psi)	184 to 189 bar (2674 to 2745 psi)
Main Relief Valve, A2.....	211 to 220 bar (3057 to 3199 psi)	204 to 209 bar (2958 to 3029 psi)
Main Relief Valve, A3.....	196 to 206 bar (2844 to 2986 psi)	184 to 189 bar (2674 to 2745 psi)
Secondary Relief Valves :		
Boom : Raising b2, Lowering b1.....	245 to 265 bar (3555 to 3839 psi)	237 to 243 bar (3441 to 3527 psi)
Dipper : Extend b3, Retract b4.....	245 to 265 bar (3555 to 3839 psi)	237 to 243 bar (3441 to 3527 psi)
Levelling Blade : Lowering b5.....	245 to 265 bar (3555 to 3839 psi)	237 to 243 bar (3441 to 3527 psi)
Bucket : Closing b6.....	245 to 265 bar (3555 to 3839 psi)	237 to 243 bar (3441 to 3527 psi)
Swing Motor Brake Valve, c1.....	211 to 230 bar (3058 to 3342 psi)	196 to 202 bar (2844 to 2930 psi)
High Pressure Relief Valve, c2.....	274 to 294 bar (3982 to 4266 psi)	240 to 260 bar (3484 to 3768 psi)
Low Pressure Relief Valve, a4.....	137 to 147 bar (1991 to 2133 psi)	101 to 106 bar (1465 to 1536 psi)

Operating Speeds (in seconds)

		Reference Value	Authorised Limit	Note
Boom Cylinder (Cab)	Raising	2.4 to 3.0	3.6	1
	Lowering	3.4 to 4.0	4.8	1
Boom Cylinder (Canopy)	Raising	2.6 to 3.1	3.8	1
	Lowering	3.8 to 4.3	5.3	1
Dipper Cylinder	Retracting	4.0 to 4.6	5.5	2
	Extending	3.5 to 4.1	4.9	2
Bucket Cylinder	Closing	4.1 to 4.7	5.6	2
	Opening	2.6 to 3.2	3.8	2
Levelling Blade Cylinder	Lowering	3.1 to 3.7	4.4	2
	Raising	2.1 to 2.7	3.2	2
Swivel Speed	Left	19.6 to 23.7	28.4	3
	Right	19.6 to 23.7	28.4	3
Swing Cylinder	Left	8.6 to 9.6	11.5	4
	Right	8.0 to 9.0	10.8	4
Swing Start	Left/Right	1.7 to 2.3	2.8	0 to 90°

- NOTE :**
1. Cylinder to maximum height without end of stroke cushioning
 2. Complete cylinder stroke
 3. Three complete revolutions
 4. Not counting end of stroke cushioning

Hydraulic Pumps

	P1, P2	P3	P4
Pump Rotation Speed (rpm)	2700	2700	1700
Test Pressure	206 bar (2986 psi)	186 bar (2702 psi)	98 bar (1422 psi)
Theoretical Displacement	13.2 cm ³ (0.81 in ³)	11.2 cm ³ (0.68 in ³)	3.07 cm ³ (0.19 in ³)
Theoretical Output	37.0 l/min (8.14 gal/min)	31.4 l/min (6.91 gal/min)	4.84 l/min (1.06 gal/min)
Maximum Authorised Output for 85 % use	31.5 l/min (6.91 gal/min)	26.7 l/min (5.87 gal/min)	4.11 l/min (0.9 gal/min)
Maximum Authorised Output for 80 % use	29.6 l/min (6.51 gal/min)	25.1 l/min (5.52 gal/min)	3.87 l/min (0.85 gal/min)

P1 - First body, main pump

P2 - Second body, main pump

P3 - Swing pump

P4 - Pilot controlled pump

Electrical Specifications

BATTERY

Capacity (CK36).....12V 100AH
 Capacity (CK50).....12V 100AH

ALTERNATOR

Nominal Voltage.....12 Volts
 Maximum Output.....300 Watts
 Direction of Rotation.....Clockwise viewed from Pulley Side
 Polarity.....Negative Ground

STARTER MOTOR

Nominal Voltage.....12 Volts
 Nominal Output.....1.4 Kw
 Direction of Rotation.....Clockwise viewed from Pulley Side
 Time Rating.....30 Seconds

GLOW PLUG

Current Value after 6 Seconds at 10.5 Volts.....Approximately 9 Amps


Lubricants and Fluids

Battery.....Drinking or Distilled Water
 Coolant Solution.....Refer to Page 11
 Engine Lubrication.....Refer to Page 11
 Hydraulic Fluid.....Hydraulic Fluid
 Travel Reduction Gear Lubricant.....CASE GEAR LUBE (85W-140)
 Swing Reduction Gear Lubricant.....CASE GEAR LUBE (85W-140)
 Lower Roller and Idler Wheel Lubricant.....SAE 80
 Turntable Bearing Lubricant.....CASE IH Molybisulphide grease

Machine Weights


CK36 with Cab (Steel Tracks).....3510 Kg
 CK36 with Cab (Rubber Tracks).....3456 Kg
 CK36 with Canopy (Steel Tracks).....3360 Kg
 CK36 with Canopy (Rubber Tracks).....3306 Kg
 CK50 with Cab (Steel Tracks).....4900 Kg
 CK50 with Cab (Rubber Tracks).....4816 Kg
 CK50 with Canopy (Steel Tracks).....4750 Kg
 CK50 with Canopy (Rubber Tracks).....4666 Kg

Tracks, Rollers and Idlers (CK36)

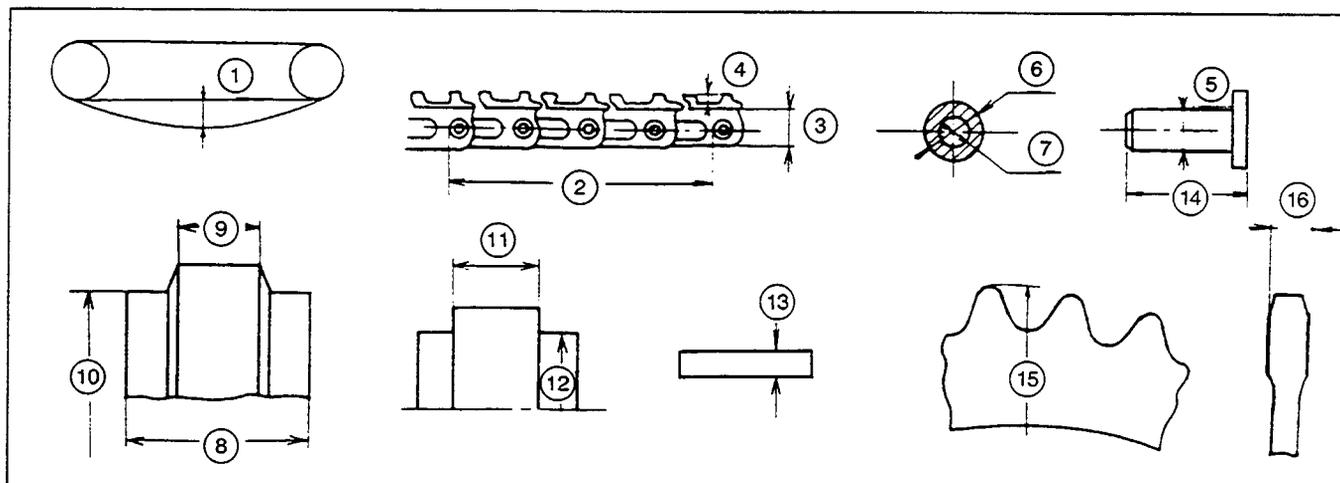

1. Track Tension


Rubber.....	10 to 15 mm	
Steel.....	40 to 45 mm	
2. 4 Link Stretch (Length).....	406 mm	416 mm maximum
3. Link Wear (Height).....	70.5 mm	65.5 mm minimum
4. Pad Wear (Height).....	16.5 mm	8 mm minimum
5. Link Pin Wear (O.D.).....	19 mm	17.5 mm minimum
6. Link Bushing Wear (O.D.).....	32.2 mm	30.7 mm minimum
7. Link Bushing Wear (I.D.).....	19 mm	21 mm maximum
8. Idler Wheel Outer Surface Wear (Width).....	80 mm	72 mm minimum
9. Idler Wheel Outer Surface Wear (Guide Width).....	30 mm	24 mm minimum
10. Idler Wheel Outer Surface Wear (O.D.).....	305 mm	297 mm minimum
11. Lower Roller Outer Surface Wear (Guide Width).....	34 mm	28 mm minimum
12. Lower Roller Outer Surface Wear (O.D.).....	96 mm	91 mm minimum
13. Upper Roller Outer Surface Wear (O.D.).....	85 mm	80 mm minimum
14. Master Pin Length.....		101 mm
15. Drive Sprocket Wear (O.D.).....	390 mm	382 mm minimum
16. Drive Sprocket Wear (Width).....	38 mm	34 mm minimum

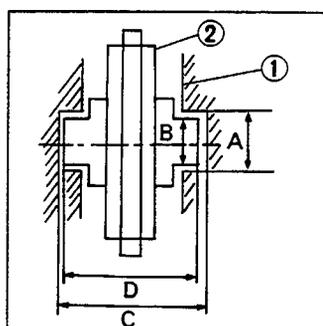

1. TRACK FRAME
2. IDLER WHEEL


Idler Wheel to Track Frame Clearance (A-B).....	6 mm
Idler Wheel to Track Frame Clearance (C-D).....	6 mm
Steel Track Height (Link and Pad).....	93 mm
Steel Track Pitch.....	101.6 mm
Rubber Track Height (Link and Pad).....	155 mm
Rubber Track Pitch.....	109 mm
Steel Track Weight.....	199.5 Kg
Rubber Track Weight.....	146 Kg

Tracks, Rollers and Idlers (CK50)

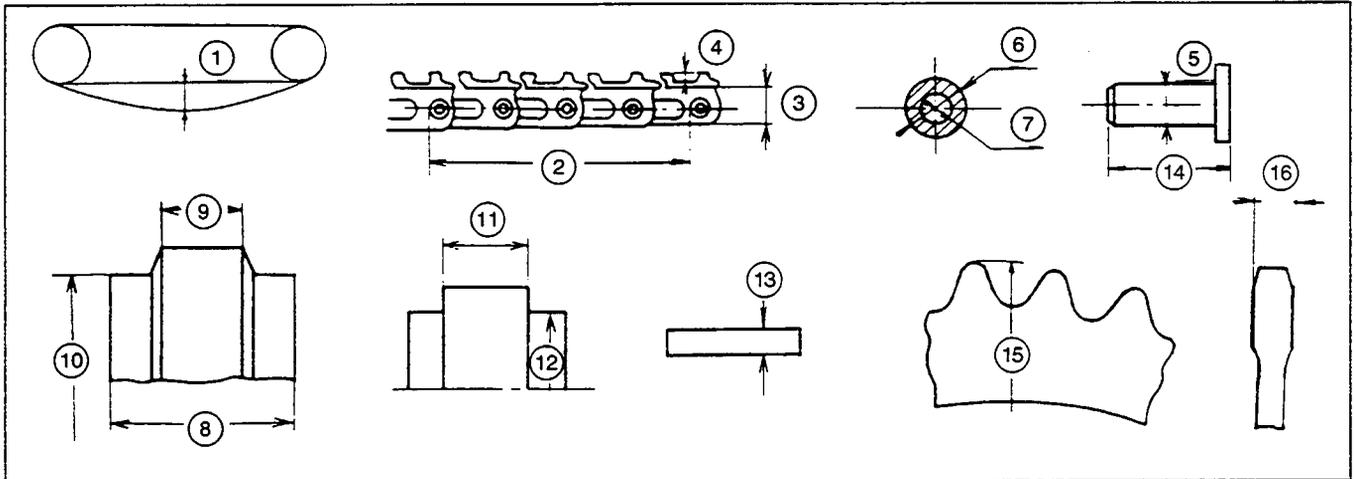

1. Track Tension

Rubber.....10 to 15 mm
Steel.....40 to 45 mm
2. 4 Link Stretch (Length).....	540 mm 550 mm maximum
3. Link Wear (Height).....	80 mm 75 mm minimum
4. Pad Wear (Height).....	14 mm 7 mm minimum
5. Link Pin Wear (O.D.).....	23.85 mm 22.35 mm minimum
6. Link Bushing Wear (O.D.).....	42.2 mm 40.7 mm minimum
7. Link Bushing Wear (I.D.).....	24.15 mm 26.15 mm maximum
8. Idler Wheel Outer Surface Wear (Width).....	91 mm 85 mm minimum
9. Idler Wheel Outer Surface Wear (Guide Width).....	39 mm 33 mm minimum
10. Idler Wheel Outer Surface Wear (O.D.).....	360 mm 352 mm minimum
11. Lower Roller Outer Surface Wear (Guide Width).....	36 mm 32 mm minimum
12. Lower Roller Outer Surface Wear (O.D.).....	104 mm 99 mm minimum
13. Upper Roller Outer Surface Wear (O.D.).....	100 mm 95 mm minimum
14. Master Pin Length.....140 mm
15. Drive Sprocket Wear (O.D.).....	476 mm 468 mm minimum
16. Drive Sprocket Wear (Width).....	39 mm 35 mm minimum

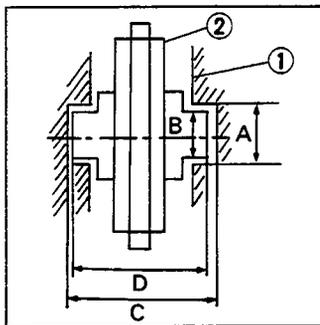

**1. TRACK FRAME
2. IDLER WHEEL**

Idler Wheel to Track Frame Clearance (A-B).....6 mm
Idler Wheel to Track Frame Clearance (C-D).....6 mm
Steel Track Height (Link and Pad).....100.3 to 101.6 mm
Steel Track Pitch.....134.9 to 135.1 mm
Rubber Track Height (Link and Pad).....235 mm
Rubber Track Pitch.....141 to 143 mm
Steel Track Weight.....334 Kg
Rubber Track Weight.....250 Kg

ENGINE SPECIFICATIONS

Run-in Instructions

For an increase in working life, greater performance and more economical operation, pay particular attention to the engine during the first 20 operating hours.

During this period, follow the recommendations listed below :

1. Warm up the engine before you use it under load.
2. Do not idle the engine for long periods.
3. Keep a close watch on the indicator lamps.
4. Frequently check the engine oil and coolant levels.

The following operation must be carried out in addition to those given in the Servicing Chart :

After the first 35 hours.....Change the engine oil

Engine Cooling System

Coolant Solution.....Ethylene-glycol

WARNING : When using ethylene-glycol coolant solutions, always have a minimum of 50 % ethylene-glycol in the cooling system.


Engine Lubrication

CASE IH N°1 engine oil is recommended for your engine. This oil ensures correct lubrication of your engine in all working conditions. If you cannot obtain CASE IH N°1 single grade oil, only use API grade CD engine oil.

See the chart below for recommended viscosity in different temperatures.

NOTE : DO NOT put performance additives or other oil additive products into the engine crankcase.

Engine Oil Viscosity

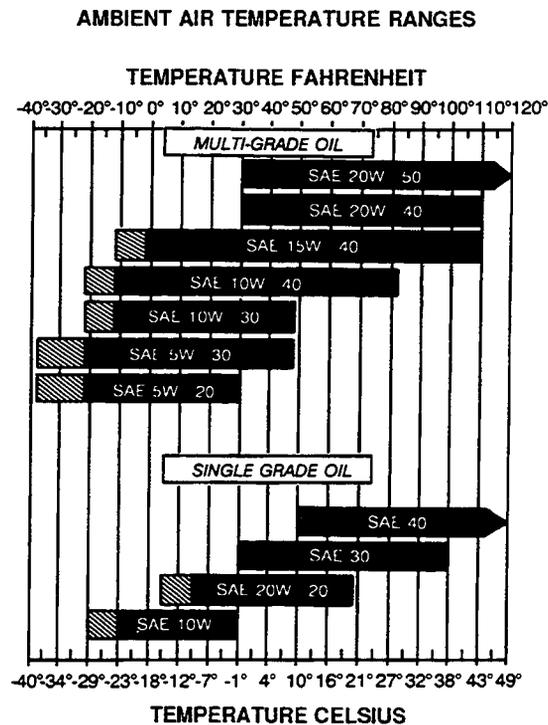

ENGINE SPECIFICATIONS DETAILS

General (CK36)

Make and Model.....	KUBOTA V1902-BH5	
Type.....	4 Cylinder, 4 Stroke Cycle	
Horsepower : SAE.....	37 HP	27.3 KW
Horsepower : PIN.....	33 HP	24.3 KW
Firing Order.....	1-3-4-2	
Piston Displacement.....	1861 cm ³	
Rated Engine Speed.....	2670 rpm	
Engine Idle Speed.....	1000 to 1200 rpm	
Engine Oil Capacity (without filter change).....	7.5 litres	

General (CK50)

Make and Model.....	KUBOTA V1902-BH6	
Type.....	4 Cylinder, 4 Stroke Cycle	
Horsepower : SAE.....	43.3 HP	31.9 KW
Horsepower : PIN.....	39 HP	28.7 KW
Firing Order.....	1-3-4-2	
Piston Displacement.....	1861 cm ³	
Rated Engine Speed.....	3000 rpm	
Engine Idle Speed.....	1000 to 1200 rpm	
Engine Oil Capacity (without filter change).....	7.5 litres	

NOTE : *The following Specifications are common to CK36 and CK50 Excavators.*

General

Bore x Stroke.....	85 x 82 mm
Compression Ratio.....	21 : 1
Valve Clearance (Cold).....	0.18 to 0.22 mm
Direction of Rotation.....	Counterclockwise, viewed from flywheel side

Pistons

Rings per Pistons.....	3
Number of Compression Rings.....	2
Number of Oil Rings (two piece).....	1

Main Bearings

Number of Bearings - 4 Cylinder Engine.....	5
Type of Bearings.....	Replaceable

Lubrication System

Type.....	Forced Lubrication by Pump	
Oil Pressure.....	2.5 to 4.4 bar	35.6 to 64 psi
Oil Pump.....	Rotor Type	
Oil Filter.....	Cartridge Type	

Fuel System

Fuel Injection Pump.....	BOSCH K TYPE MINI
Fuel Injection Pump Timing.....	23° to 25° before TDC
Fuel Injectors.....	BOSCH MINI NOZZLE DNOPD
Fuel Injector Opening Pressure.....	137 to 147 bar 1991 to 2133 psi

Cylinder Head

Warpage.....	0.05 mm maximum
Top Clearance.....	0.7 to 0.9 mm
Compression Pressure.....	28.4 to 32.4 bar 412 to 469 psi
Minimum.....	22.6 bar 327 psi

Valves (Inlet and Exhaust)

Valve Clearance (Cold).....	0.18 to 0.22 mm
Valve Recess below Cylinder Head.....	1.1 to 1.3 mm 1.6 mm maximum
Valve Seat Width.....	2.1 mm
Valve Face Angle	
Inlet.....	45°
Exhaust.....	45°
Valve Stem Diameter.....	7.960 to 7.975 mm
Valve Guide I.D.....	8.015 to 8.030 mm
Clearance between Valve Stem and Valve Guide.....	0.04 to 0.07 mm 0.10 mm maximum
Valve Timing	
Inlet Valve - Open.....	20° before TDC
Inlet Valve - Closed.....	45° after BDC
Exhaust Valve - Open.....	50° before BDC
Exhaust Valve - Closed.....	15° after TDC

Valve Springs

Free Length.....	41.7 to 42.2 mm 41.2 mm minimum
Setting Load/Setting Length.....	117.4 N/35.12 mm
Valve Spring Tilt.....	1.0 mm maximum

Rocker Arm Assembly

Clearance between Rocker Shaft and Rocker Arm.....	0.018 to 0.070 mm 0.15 mm maximum
Rocker Arm Shaft O.D.....	13.973 to 13.984 mm
Rocker Arm I.D.....	14.002 to 14.043 mm

Camshaft

Camshaft Lobe Height	
Inlet.....	33.36 mm 33.31 mm minimum
Exhaust.....	33.36 mm 33.31 mm minimum
Clearance between Camshaft Journal and Camshaft Bearing.....	0.05 to 0.091 mm 0.15 mm maximum
Camshaft Journal O.D.....	39.934 to 39.950 mm
Camshaft Bearing I.D.....	40.000 to 40.025 mm
Gear Backlash.....	0.042 to 0.115 mm 0.15 maximum

Pistons and Piston Rings

Piston Pin Bore.....	23.000 to 23.013 mm	23.053 mm maximum
Clearance between Compression Ring 2 and Ring Groove.....	0.093 to 0.120 mm	
Clearance between Oil Ring and Ring Groove.....	0.020 to 0.052 mm	
Ring Gap		
Compression Ring 1.....	0.30 to 0.45 mm	1.25 mm maximum
Compression Ring 2.....	0.30 to 0.45 mm	1.25 mm maximum
Oil Ring.....	0.25 to 0.45 mm	1.25 mm maximum

Connecting Rods

Connecting Rod Alignment.....	0.2 mm	0.5 mm maximum
Clearance between Piston Pin and Small End Bushing.....	0.014 to 0.038 mm	0.15 mm maximum
Piston Pin O.D.....	23.002 to 23.011 mm	
Small End Bushing I.D.....	23.025 to 23.040 mm	

Crankshaft

Crankshaft Alignment.....	0.02 mm	0.08 mm maximum
Clearance between Crankshaft and		
Crankshaft Bearing 1.....	0.040 to 0.118 mm	0.2 mm maximum
Clearance between Crankshaft and Crankshaft Bearings		
2-3-4-5.....	0.040 to 0.104 mm	0.2 mm maximum
Crankshaft O.D.....	51.921 to 51.940 mm	
Bearing 1 I.D.....	51.980 to 52.039 mm	
Bearing 2 I.D.....	51.980 to 52.025 mm	
Clearance between Crank Pin and Crank Pin Bearing.....	0.035 to 0.093 mm	0.2 mm maximum
Crank Pin O.D.....	43.959 to 43.975 mm	
Bearing I.D.....	44.010 to 44.052 mm	
Crankshaft Side Clearance.....	0.15 to 0.31 mm	0.5 mm maximum

Cylinder Liner

Cylinder Liner I.D.....	85.000 to 85.022 mm	+0.15 mm
-------------------------	---------------------	----------

Engine Lubricating System

Engine Oil Pressure		
At Rated Speed.....	2.9 to 4.4 bar	43 to 64 psi
Oil Pump		
Clearance between Outer Rotor and Pump Body.....	0.11 to 0.19 mm	0.25 mm maximum
Clearance between Inner and Outer Rotor.....	0.04 to 0.13 mm	0.2 mm maximum
End Clearance between Inner Rotor and Cover.....	0.105 to 0.150 mm	0.20 mm maximum


Cooling System

Thermostat		
Opening Temperature.....	80.5 to 83.5°C	
Completely Open.....	95°C	
Radiator Cap.....	0.9 bar	12.8 psi
Fan Belt Tension.....	7 to 9 mm at 98 N	

SPECIAL TORQUES

Rocker Cover Retaining Nuts.....	6.9 to 8.8 Nm	5.1 to 6.5 lb ft
Cylinder Head Bolts.....	93.2 to 98.1 Nm	68.7 to 72.3 lb ft
Bearing Case To Cylinder Bolts (Non Flange).....	63.7 to 68.6 Nm	47 to 50.6 lb ft
Bearing Case To Cylinder Bolts (Flange Type).....	68.6 to 73.5 Nm	50.6 to 54.2 lb ft
Flywheel Retaining Bolts.....	98.1 to 107.9 Nm	72.3 to 79.6 lb ft
Rocker Arm Retaining Nuts.....	23.5 to 27.5 Nm	17.4 to 20.3 lb ft
Connecting Rod Cap Bolts (Non Flange).....	36.3 to 41.2 Nm	26.6 to 30.4 lb ft
Connecting Rod Cap Bolts (Flange Type).....	44.1 to 49 Nm	32.5 to 36.2 lb ft
Bearing Case Bolts (With Washers).....	29.4 to 34.3 Nm	21.7 to 25.3 lb ft
Bearing Case Bolts (Flange Type).....	36.3 to 41.2 Nm	26.8 to 30.4 lb ft

MACHINE DIMENSIONS

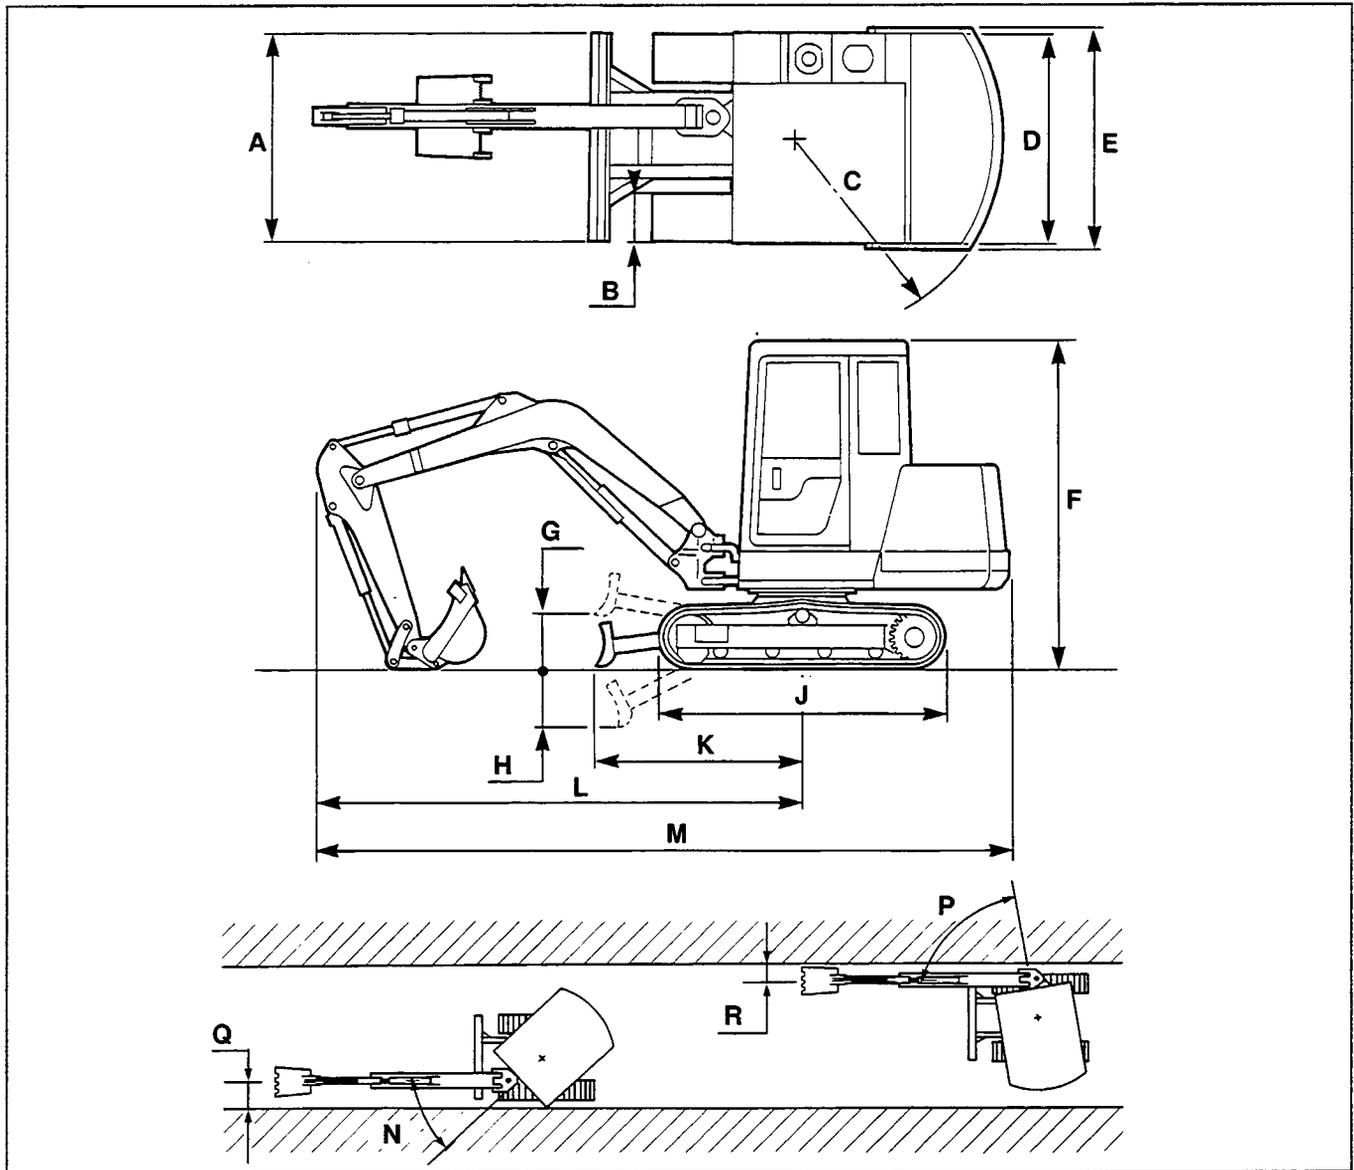

	CK36	CK50
A.....	1.51 m	1.84 m
B.....	0.35 m	0.40 m
C (Radius).....	1.49 m	1.52 m
D.....	1.51 m	1.67 m
E.....	1.61 m	1.84 m
F (With Canopy).....	2.34 m	2.43 m
F (With Cab).....	2.36 m	2.45 m
G.....	0.37 m	0.41 m
H.....	0.45 m	0.46 m
J.....	2.07 m	2.43 m
K.....	1.49 m	1.51 m
L.....	3.50 m	4.00 m
M.....	4.99 m	5.52 m
N.....	43°	43°
P.....	80°	80°
Q.....	0.45 m	0.56 m
R.....	0.21 m	0.34 m

Section 2002

ENGINE REMOVAL AND INSTALLATION

2002

TABLE OF CONTENTS

SPECIFICATIONS.....2

SPECIAL TORQUES.....2

SHOP EQUIPMENT TOOLS.....2

Removal and Installation.....3

 *This symbol is used throughout this manual to draw attention to important safety messages. Whenever you see this symbol, carefully read the message that follows, since it warns of a risk of serious injury.*

SPECIFICATIONS

Fan to Radiator Clearance.....30 mm or more

Fan to Fan Shroud Clearance, Top and Sides.....15 mm or more

Fan to Fan Shroud Clearance, Bottom.....20 mm or more

Engine Oil Capacity (CK36).....7.5 litres

Engine Oil Capacity (CK50).....7.5 litres

Hydraulic Oil Reservoir Capacity (CK36).....59 litres

Hydraulic Oil Reservoir Capacity (CK50).....75 litres

Cooling System Capacity.....8 litres

SPECIAL TORQUES

Protector Mounting Bolts

M12.....77 to 90 Nm

M16.....166 to 197 Nm

Hood Sheet Mounting Bolts

M10.....48 to 56 Nm

M12.....77 to 90 Nm

Engine Mounting Bolts

M10.....48 to 56 Nm

M12.....77 to 90 Nm

M14.....124 to 147 Nm

SHOP EQUIPMENT TOOLS

1. TORQUE WRENCH
OEM 6475

2. LOCTITE 271

Removal and Installation

STEP 1

Park the machine on hard level ground. Lower the attachment to the ground. Release pressure in the hydraulic circuits and stop the engine.

STEP 2


Disconnect the battery, negative (-) terminal first.

NOTE : For installation, install and tighten the positive (+) terminal first.

STEP 3

Remove the Cab or Canopy, refer to Section 9004.

STEP 4

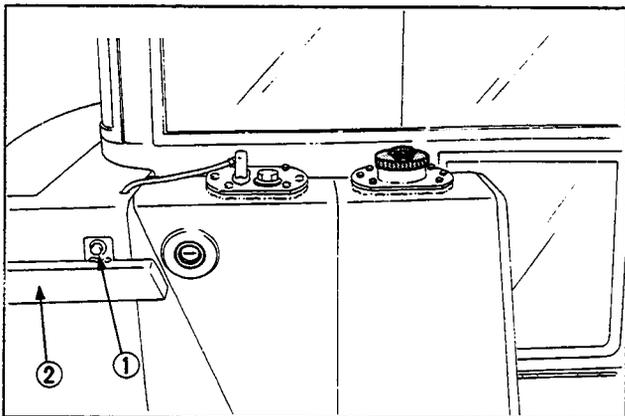


Remove the bolts (1) and the protector (2).

NOTE : For Installation, apply Loctite 271 to the bolts and tighten to a torque of :
 M12 - 77 to 90 Nm
 M16 - 166 to 197 Nm

STEP 5

Remove the Hydraulic Oil Reservoir, refer to Section 8010.


STEP 6

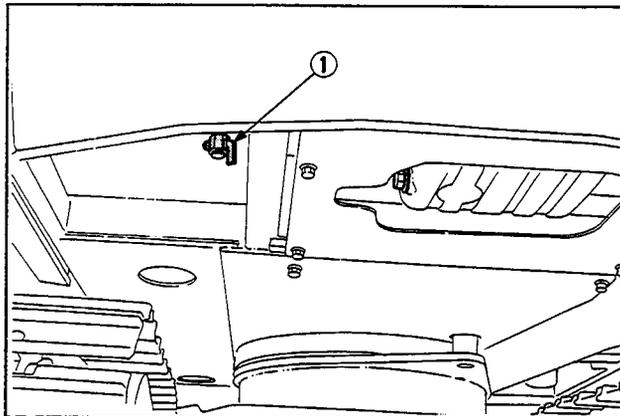

Put a container with a capacity of a least 8 litres under the radiator drain valve (1) and drain the coolant.


NOTE : For Installation, install coolant to the correct level.

STEP 7

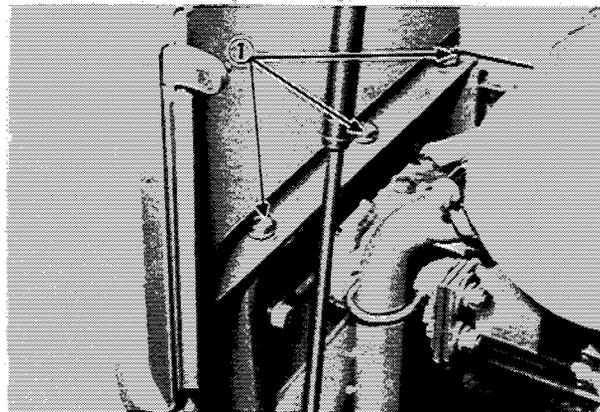


Remove the hood mounting bolts (1) from the inside of the engine compartment.

NOTE : For Installation, apply Loctite 271 to the bolts (1) and tighten to a torque of :
 M10 - 48 to 56 Nm
 M12 - 77 to 90 Nm

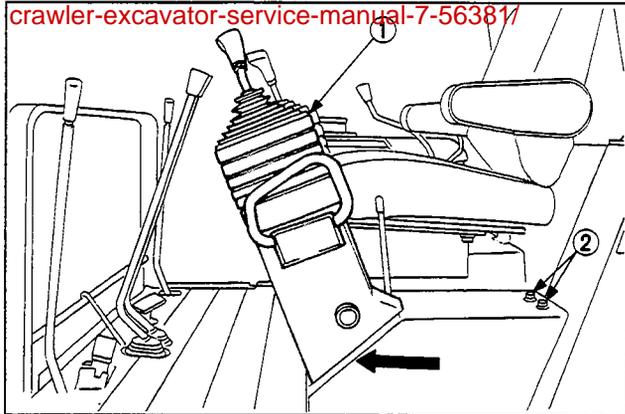


Remove the bolts (2) and slide the control box (1) forwards.

STEP 9

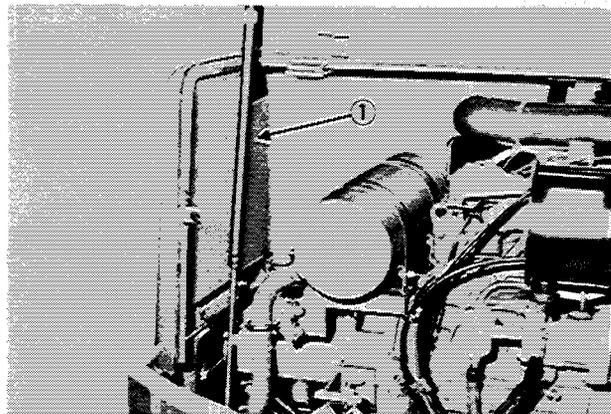

Disconnect and remove the gas strut (1) on the hood. Support the hood on suitable lifting equipment. Remove the hood.

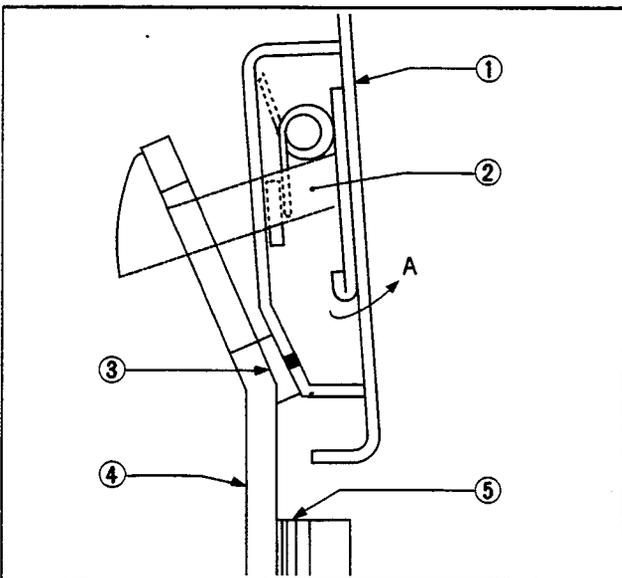


NOTE : When the hood (1) is closed make sure the catch (2) comes in close contact with the bracket (4). When opening the hood (1) make sure the catch (2) easily comes off the bracket (4), if necessary adjust with shims (5).

STEP 10


Remove the battery and the fluid level sensor.

STEP 11

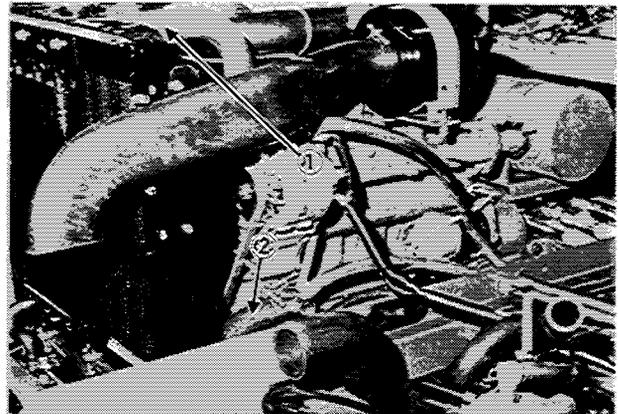


Disconnect and cap the radiator hoses (1) and (2).

STEP 12

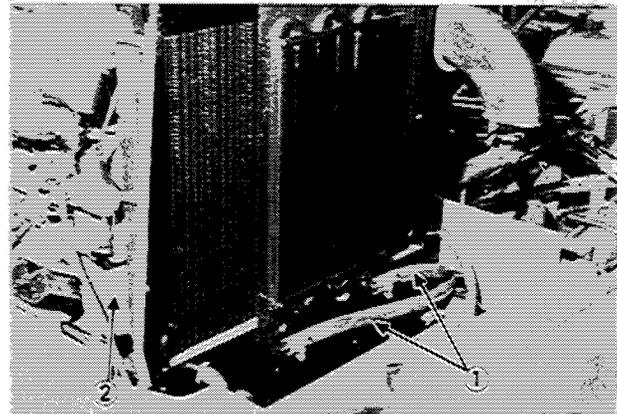

Disconnect and cap the oil cooler hoses (1) and radiator return hose (2).

STEP 13

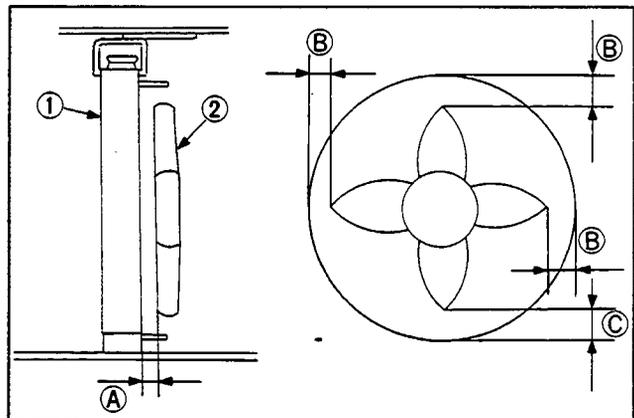

Remove the radiator/oil cooler assembly.

NOTE : For Installation, make sure the radiator (1) and fan (2) have the following clearances :

A = 30 mm or more

B = 15 mm or more

C = 20 mm or more