

Product: New Holland Guardian? SP.260R/Guardian? SP.300R Tier 4B (final) Sprayer Service Repair Manual

Full Download: <https://www.arepairmanual.com/downloads/new-holland-guardian>

-sp-260r-guardian-sp-300r-tier-4b-final-sprayer-service-repa

ir-manual/

# SERVICE MANUAL

## Guardian™ SP.260R Guardian™ SP.300R Tier 4B (final) Sprayer

*PIN YFYM00925 and above*

**Part number 47828487**

1<sup>st</sup> edition English

September 2015. Download All 927 pages at:

<https://www.arepairmanual.com/downloads/new-holland-guardian-sp-260r-guardian-sp-300r-tier-4b-final-sprayer-service-repair-ir-manual/>





## SERVICE MANUAL

**SP.260R Angle drive adjustable axle 1000 Gallon product tank [YFYM00925 - ] , SP.260R Angle drive fixed axle 1000 Gallon product tank [YFYM00925 - ] , SP.260R Drop box 1000 Gallon product tank [YFYM00925 - ] , SP.260R Drop box 1200 Gallon product tank [YFYM00925 - ] , SP.300C Axle Tech 2WD [YFYM00950 - ] , SP.300C Axle Tech 4WD [YFYM00950 - ] , SP.300R 2WD RR Drive 1000 Gallon product tank [YFYM00925 - ] , SP.300R 2WD RR Drive 1200 Gallon product tank [YFYM00925 - ] , SP.300R 4WD 1000 Gallon product tank [YFYM00925 - ] , SP.300R 4WD 1200 Gallon product tank [YFYM00925 - ]**

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.202] Air cleaners and lines .....	10.2
[10.206] Fuel filters .....	10.3
[10.210] Lift pump and lines .....	10.4
[10.216] Fuel tanks .....	10.5
[10.400] Engine cooling system .....	10.6
[10.414] Fan and drive .....	10.7
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.8
Transmission.....	21
[21.112] Power shuttle transmission.....	21.1
[21.145] Gearbox internal components.....	21.2
[21.200] Dropbox .....	21.3
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.400] Non-powered front axle .....	25.2
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
Brakes and controls .....	33
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.106] Variable displacement pump .....	35.2

[35.300] Reservoir, cooler, and filters.....	35.3
[35.359] Main control valve.....	35.4
<b>Pneumatic system .....</b>	<b>36</b>
[36.100] Pneumatic system.....	36.1
[36.200] Pneumatic operated components .....	36.2
<b>Frames and ballasting .....</b>	<b>39</b>
[39.100] Frame .....	39.1
<b>Steering.....</b>	<b>41</b>
[41.200] Hydraulic control components.....	41.1
[41.206] Pump .....	41.2
[41.216] Cylinders .....	41.3
<b>Wheels .....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
[44.520] Rear wheels .....	44.2
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating .....	50.1
[50.104] Ventilation .....	50.2
[50.200] Air conditioning .....	50.3
<b>Electrical systems .....</b>	<b>55</b>
[55.015] Engine control system.....	55.1
[55.100] Harnesses and connectors.....	55.2
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.3
[55.201] Engine starting system .....	55.4
[55.301] Alternator .....	55.5
[55.302] Battery.....	55.6
[55.521] Cab sprayer controls .....	55.7
[55.518] Wiper and washer system.....	55.8
[55.000] Electrical system .....	55.9

[55.640] Electronic modules .....	55.10
<b>Spraying .....</b>	<b>78</b>
[78.110] Chemical spraying .....	78.1
[78.120] Foam marking system .....	78.2
<b>Accessories .....</b>	<b>88</b>
[88.100] Accessories .....	88.1
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.105] Machine shields and guards .....	90.1
[90.118] Protections and footboards .....	90.2
[90.124] Pneumatically-adjusted operator seat .....	90.3
[90.150] Cab .....	90.4
[90.151] Cab interior .....	90.5
[90.160] Cab interior trim and panels .....	90.6



## INTRODUCTION

# Contents

---

## INTRODUCTION

Personal safety (*) .....	3
Safety rules (*) .....	6
Safety rules (*) .....	7
Safety rules - Ecology and the environment (*) .....	8
Torque - Minimum tightening torques for normal assembly (*) .....	10
Torque - Standard torque data for hydraulics (*) .....	15
Basic instructions - Important notice regarding equipment servicing (*) .....	17
Basic instructions - Shop and assembly (*) .....	18
General specification - Tire and rim repair (*) .....	20
Capacities (*) .....	22
Product identification - Machine serial number (*) .....	23
Product identification - Machine orientation (*) .....	24
Product identification - Component Identification (*) .....	26

(\*) See content for specific models

## Personal safety

SP.260R Angle drive adjustable axle 1000 Gallon product tank [YFYM00925 - ]	NA
SP.260R Angle drive fixed axle 1000 Gallon product tank [YFYM00925 - ]	NA
SP.260R Drop box 1000 Gallon product tank [YFYM00925 - ]	NA
SP.260R Drop box 1200 Gallon product tank [YFYM00925 - ]	NA
SP.300C Axle Tech 2WD [YFYM00950 - ]	NA
SP.300C Axle Tech 4WD [YFYM00950 - ]	NA
SP.300R 2WD RR Drive 1000 Gallon product tank [YFYM00925 - ]	NA
SP.300R 2WD RR Drive 1200 Gallon product tank [YFYM00925 - ]	NA
SP.300R 4WD 1000 Gallon product tank [YFYM00925 - ]	NA
SP.300R 4WD 1200 Gallon product tank [YFYM00925 - ]	NA

### ⚠ WARNING

**Misuse hazard!**

Before starting the engine, make sure you are fully aware of the location and the function of each control.

Failure to comply could result in death or serious injury.

W0226A

### ⚠ WARNING

**Hazard to bystanders!**

Always sound the horn before starting the machine. Make sure the work area is clear of other persons, domestic animals, tools, etc. before you operate the machine. Never allow anyone in the work area during machine operation.

Failure to comply could result in death or serious injury.

W0304A

### ⚠ WARNING

**Unexpected machine movement!**

Always sit in the operator's seat to operate the machine. DO NOT bypass the key start switch. Sudden and unexpected machine movement or machine runaway could result.

Failure to comply could result in death or serious injury.

W0464A

### ⚠ WARNING

**Entanglement hazard!**

Always keep hair and clothing away from moving parts. Do not wear loose clothing, jewelry, or other items that could entangle with moving parts and/or levers.

Failure to comply could result in death or serious injury.

W0445A

### ⚠ WARNING

**Escaping fluid!**

Hydraulic fluid or diesel fuel leaking under pressure can penetrate the skin and cause infection or other injury. To prevent personal injury: Relieve all pressure before disconnecting fluid lines or performing work on the hydraulic system. Before applying pressure, make sure all connections are tight and all components are in good condition. Never use your hand to check for suspected leaks under pressure. Use a piece of cardboard or wood for this purpose. If injured by leaking fluid, see your doctor immediately.

Failure to comply could result in death or serious injury.

W0178A

## ⚠ WARNING

Avoid injury! Always do the following before lubricating, maintaining, or servicing the machine.

1. Disengage all drives.
2. Engage parking brake.
3. Lower all attachments to the ground, or raise and engage all safety locks.
4. Shut off engine.
5. Remove key from key switch.
6. Switch off battery key, if installed.
7. Wait for all machine movement to stop.

Failure to comply could result in death or serious injury.

W0047A

## ⚠ CAUTION

Flying objects!

Wear eye protection. Do not strike steel parts with a steel hammer. Parts may break.

Failure to comply could result in minor or moderate injury.

C0024A

## ⚠ CAUTION

Flying debris!

Compressed air can propel dirt, rust, etc. into the air. Wear eye and face protection when using compressed air.

Failure to comply could result in minor or moderate injury.

C0049A

## ⚠ WARNING

Personal Protective Equipment (PPE) required.

When assembling, operating, or servicing the machine, wear protective clothing and PPE necessary for the particular procedure. Some PPE that may be necessary includes protective shoes, eye and/or face protection, hard hat, heavy gloves, filter mask, and hearing protection.

Failure to comply could result in death or serious injury.

W0353A

## ⚠ WARNING

Crushing hazard!

Unit could fall if not properly supported. Follow jacking instructions provided for the unit. Use suitable jack stands. Be sure to position them properly.

Failure to comply could result in death or serious injury.

W0919A

## ⚠ WARNING

Explosive gas!

Batteries emit explosive hydrogen gas and other fumes while charging. Ventilate the charging area. Keep the battery away from sparks, open flames, and other ignition sources. Never charge a frozen battery.

Failure to comply could result in death or serious injury.

W0005A

## ⚠ WARNING

Hazardous chemicals!

Battery electrolyte contains sulfuric acid. Contact with skin and eyes could result in severe irritation and burns. Always wear splash-proof goggles and protective clothing (gloves and aprons). Wash hands after handling.

Failure to comply could result in death or serious injury.

W0006A

**⚠ WARNING**

**Battery gas can explode!**

**To prevent an explosion: 1. Always disconnect the negative (-) battery cable first. 2. Always connect the negative (-) battery cable last. 3. Do not short circuit the battery posts with metal objects. 4. Do not weld, grind, or smoke near a battery.**

**Failure to comply could result in death or serious injury.**

W0011A

**⚠ DANGER**

**Explosion hazard!**

**Welding to a wheel can create an explosive air and gas mixture. Removing air from the tire or loosening the tire on the wheel (breaking the bead) will NOT eliminate the hazard. ALWAYS remove the tire completely from the wheel before welding.**

**Failure to comply will result in death or serious injury.**

D0033A

**⚠ WARNING**

**Explosion hazard!**

**A tire can explode during inflation. Properly seat the tire before inflating. Never increase air pressure beyond 240 kPa (35 psi) to seat the bead on the wheel rim. Never use force on a partially or fully inflated tire. Do not exceed the inflation pressure recommended by the tire manufacturer.**

**Failure to comply could result in death or serious injury.**

W0456A

## Safety rules

SP.260R Angle drive adjustable axle 1000 Gallon product tank [YFYM00925 - ]	
SP.260R Angle drive fixed axle 1000 Gallon product tank [YFYM00925 - ]	
SP.260R Drop box 1000 Gallon product tank [YFYM00925 - ]	
SP.260R Drop box 1200 Gallon product tank [YFYM00925 - ]	
SP.300C Axle Tech 2WD [YFYM00950 - ]	NA
SP.300C Axle Tech 4WD [YFYM00950 - ]	NA
SP.300R 2WD RR Drive 1000 Gallon product tank [YFYM00925 - ]	
SP.300R 2WD RR Drive 1200 Gallon product tank [YFYM00925 - ]	
SP.300R 4WD 1000 Gallon product tank [YFYM00925 - ]	
SP.300R 4WD 1200 Gallon product tank [YFYM00925 - ]	

### CALIFORNIA PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

Battery post, terminals and related accessories contain lead and lead compounds.

**Wash hands after handling**

## Safety rules

SP.260R Angle drive adjustable axle 1000 Gallon product tank [YFYM00925 - ]	
SP.260R Angle drive fixed axle 1000 Gallon product tank [YFYM00925 - ]	
SP.260R Drop box 1000 Gallon product tank [YFYM00925 - ]	
SP.260R Drop box 1200 Gallon product tank [YFYM00925 - ]	
SP.300C Axle Tech 2WD [YFYM00950 - ]	NA
SP.300C Axle Tech 4WD [YFYM00950 - ]	NA
SP.300R 2WD RR Drive 1000 Gallon product tank [YFYM00925 - ]	
SP.300R 2WD RR Drive 1200 Gallon product tank [YFYM00925 - ]	
SP.300R 4WD 1000 Gallon product tank [YFYM00925 - ]	
SP.300R 4WD 1200 Gallon product tank [YFYM00925 - ]	

## Personal safety



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

Throughout this manual you will find the signal words DANGER, WARNING, and CAUTION followed by special instructions. These precautions are intended for the personal safety of you and those working with you.

Read and understand all the safety messages in this manual before you operate or service the machine.

**⚠ DANGER** indicates a hazardous situation that, if not avoided, will result in death or serious injury.

**⚠ WARNING** indicates a hazardous situation that, if not avoided, could result in death or serious injury.

**⚠ CAUTION** indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

## FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION MESSAGES COULD RESULT IN DEATH OR SERIOUS INJURY.

### Machine safety

**NOTICE:** *Notice indicates a situation that, if not avoided, could result in machine or property damage.*

Throughout this manual you will find the signal word Notice followed by special instructions to prevent machine or property damage. The word Notice is used to address practices not related to personal safety.

### Information

**NOTE:** *Note indicates additional information that clarifies steps, procedures, or other information in this manual.*

Throughout this manual you will find the word Note followed by additional information about a step, procedure, or other information in the manual. The word Note is not intended to address personal safety or property damage.

## Safety rules - Ecology and the environment

SP.260R Angle drive adjustable axle 1000 Gallon product tank [YFYM00925 - ]	
SP.260R Angle drive fixed axle 1000 Gallon product tank [YFYM00925 - ]	
SP.260R Drop box 1000 Gallon product tank [YFYM00925 - ]	
SP.260R Drop box 1200 Gallon product tank [YFYM00925 - ]	
SP.300C Axle Tech 2WD [YFYM00950 - ]	NA
SP.300C Axle Tech 4WD [YFYM00950 - ]	NA
SP.300R 2WD RR Drive 1000 Gallon product tank [YFYM00925 - ]	
SP.300R 2WD RR Drive 1200 Gallon product tank [YFYM00925 - ]	
SP.300R 4WD 1000 Gallon product tank [YFYM00925 - ]	
SP.300R 4WD 1200 Gallon product tank [YFYM00925 - ]	

Soil, air, and water quality is important for all industries and life in general. When legislation does not yet rule the treatment of some of the substances that advanced technology requires, sound judgment should govern the use and disposal of products of a chemical and petrochemical nature.

Familiarize yourself with the relative legislation applicable to your country, and make sure that you understand this legislation. Where no legislation exists, obtain information from suppliers of oils, filters, batteries, fuels, anti-freeze, cleaning agents, etc., with regard to the effect of these substances on man and nature and how to safely store, use, and dispose of these substances.

### Helpful hints

- Avoid the use of cans or other inappropriate pressurized fuel delivery systems to fill tanks. Such delivery systems may cause considerable spillage.
- In general, avoid skin contact with all fuels, oils, acids, solvents, etc. Most of these products contain substances that may be harmful to your health.
- Modern oils contain additives. Do not burn contaminated fuels and or waste oils in ordinary heating systems.
- Avoid spillage when you drain fluids such as used engine coolant mixtures, engine oil, hydraulic fluid, brake fluid, etc. Do not mix drained brake fluids or fuels with lubricants. Store all drained fluids safely until you can dispose of the fluids in a proper way that complies with all local legislation and available resources.
- Do not allow coolant mixtures to get into the soil. Collect and dispose of coolant mixtures properly.
- The air-conditioning system contains gases that should not be released into the atmosphere. Consult an air-conditioning specialist or use a special extractor to recharge the system properly.
- Repair any leaks or defects in the engine cooling system or hydraulic system immediately.
- Do not increase the pressure in a pressurized circuit as this may lead to a component failure.
- Protect hoses during welding. Penetrating weld splatter may burn a hole or weaken hoses, allowing the loss of oils, coolant, etc.

### Battery recycling

Batteries and electric accumulators contain several substances that can have a harmful effect on the environment if the batteries are not properly recycled after use. Improper disposal of batteries can contaminate the soil, groundwater, and waterways. NEW HOLLAND strongly recommends that you return all used batteries to a NEW HOLLAND dealer, who will dispose of the used batteries or recycle the used batteries properly. In some countries, this is a legal requirement.



### Mandatory battery recycling

**NOTE:** The following requirements are mandatory in Brazil.

Batteries are made of lead plates and a sulfuric acid solution. Because batteries contain heavy metals such as lead, CONAMA Resolution 401/2008 requires you to return all used batteries to the battery dealer when you replace any batteries. Do not dispose of batteries in your household garbage.

Points of sale are obliged to:

- Accept the return of your used batteries

## INTRODUCTION

---

- Store the returned batteries in a suitable location
- Send the returned batteries to the battery manufacturer for recycling

## Torque - Minimum tightening torques for normal assembly

SP.260R Angle drive adjustable axle 1000 Gallon product tank [YFYM00925 - ]	
SP.260R Angle drive fixed axle 1000 Gallon product tank [YFYM00925 - ]	
SP.260R Drop box 1000 Gallon product tank [YFYM00925 - ]	
SP.260R Drop box 1200 Gallon product tank [YFYM00925 - ]	
SP.300C Axle Tech 2WD [YFYM00950 - ]	NA
SP.300C Axle Tech 4WD [YFYM00950 - ]	NA
SP.300R 2WD RR Drive 1000 Gallon product tank [YFYM00925 - ]	
SP.300R 2WD RR Drive 1200 Gallon product tank [YFYM00925 - ]	
SP.300R 4WD 1000 Gallon product tank [YFYM00925 - ]	
SP.300R 4WD 1200 Gallon product tank [YFYM00925 - ]	


## METRIC NON-FLANGED HARDWARE

NOM. SIZE	CLASS 8.8 BOLT and CLASS 8 NUT		CLASS 10.9 BOLT and CLASS 10 NUT		LOCKNUT CL.8 W/CL8.8 BOLT	LOCKNUT CL.10 W/CL10.9 BOLT
	UNPLATED	PLATED W/ZnCr	UNPLATED	PLATED W/ZnCr		
M4	2.2 N·m (19 lb in)	2.9 N·m (26 lb in)	3.2 N·m (28 lb in)	4.2 N·m (37 lb in)	2 N·m (18 lb in)	2.9 N·m (26 lb in)
M5	4.5 N·m (40 lb in)	5.9 N·m (52 lb in)	6.4 N·m (57 lb in)	8.5 N·m (75 lb in)	4 N·m (36 lb in)	5.8 N·m (51 lb in)
M6	7.5 N·m (66 lb in)	10 N·m (89 lb in)	11 N·m (96 lb in)	15 N·m (128 lb in)	6.8 N·m (60 lb in)	10 N·m (89 lb in)
M8	18 N·m (163 lb in)	25 N·m (217 lb in)	26 N·m (234 lb in)	35 N·m (311 lb in)	17 N·m (151 lb in)	24 N·m (212 lb in)
M10	37 N·m (27 lb ft)	49 N·m (36 lb ft)	52 N·m (38 lb ft)	70 N·m (51 lb ft)	33 N·m (25 lb ft)	48 N·m (35 lb ft)
M12	64 N·m (47 lb ft)	85 N·m (63 lb ft)	91 N·m (67 lb ft)	121 N·m (90 lb ft)	58 N·m (43 lb ft)	83 N·m (61 lb ft)
M16	158 N·m (116 lb ft)	210 N·m (155 lb ft)	225 N·m (166 lb ft)	301 N·m (222 lb ft)	143 N·m (106 lb ft)	205 N·m (151 lb ft)
M20	319 N·m (235 lb ft)	425 N·m (313 lb ft)	440 N·m (325 lb ft)	587 N·m (433 lb ft)	290 N·m (214 lb ft)	400 N·m (295 lb ft)
M24	551 N·m (410 lb ft)	735 N·m (500 lb ft)	762 N·m (560 lb ft)	1016 N·m (750 lb ft)	501 N·m (370 lb ft)	693 N·m (510 lb ft)


**NOTE:** M4 through M8 hardware torque specifications are shown in pound-inches. M10 through M24 hardware torque specifications are shown in pound-feet.

**METRIC FLANGED HARDWARE**

NOM. SIZE	CLASS 8.8 BOLT and CLASS 8 NUT		CLASS 10.9 BOLT and CLASS 10 NUT		LOCKNUT CL.8 W/CL8.8 BOLT	LOCKNUT CL.10 W/CL10.9 BOLT
	UNPLATED	PLATED W/ZnCr	UNPLATED	PLATED W/ZnCr		
M4	2.4 N·m (21 lb in)	3.2 N·m (28 lb in)	3.5 N·m (31 lb in)	4.6 N·m (41 lb in)	2.2 N·m (19 lb in)	3.1 N·m (27 lb in)
M5	4.9 N·m (43 lb in)	6.5 N·m (58 lb in)	7.0 N·m (62 lb in)	9.4 N·m (83 lb in)	4.4 N·m (39 lb in)	6.4 N·m (57 lb in)
M6	8.3 N·m (73 lb in)	11 N·m (96 lb in)	12 N·m (105 lb in)	16 N·m (141 lb in)	7.5 N·m (66 lb in)	11 N·m (96 lb in)
M8	20 N·m (179 lb in)	27 N·m (240 lb in)	29 N·m (257 lb in)	39 N·m (343 lb in)	18 N·m (163 lb in)	27 N·m (240 lb in)
M10	40 N·m (30 lb ft)	54 N·m (40 lb ft)	57 N·m (42 lb ft)	77 N·m (56 lb ft)	37 N·m (27 lb ft)	53 N·m (39 lb ft)
M12	70 N·m (52 lb ft)	93 N·m (69 lb ft)	100 N·m (74 lb ft)	134 N·m (98 lb ft)	63 N·m (47 lb ft)	91 N·m (67 lb ft)
M16	174 N·m (128 lb ft)	231 N·m (171 lb ft)	248 N·m (183 lb ft)	331 N·m (244 lb ft)	158 N·m (116 lb ft)	226 N·m (167 lb ft)
M20	350 N·m (259 lb ft)	467 N·m (345 lb ft)	484 N·m (357 lb ft)	645 N·m (476 lb ft)	318 N·m (235 lb ft)	440 N·m (325 lb ft)
M24	607 N·m (447 lb ft)	809 N·m (597 lb ft)	838 N·m (618 lb ft)	1118 N·m (824 lb ft)	552 N·m (407 lb ft)	

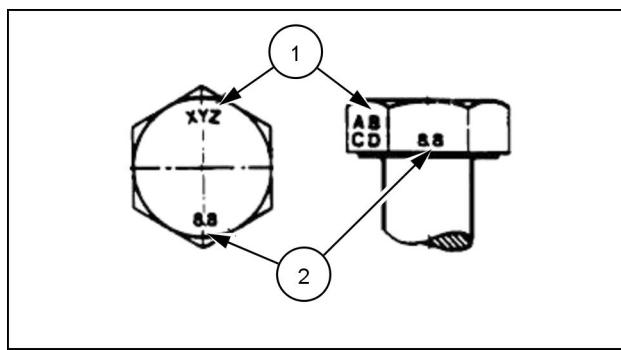**IDENTIFICATION****Metric Hex head and carriage bolts, classes 5.6 and up**

1. Manufacturer's Identification
2. Property Class

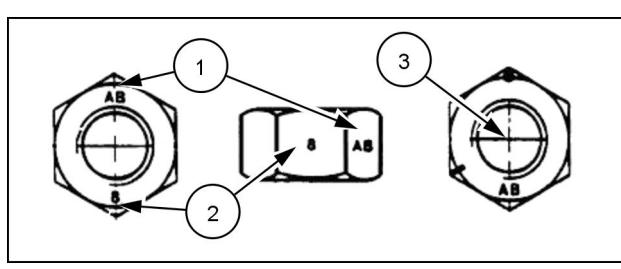**Metric Hex nuts and locknuts, classes 05 and up**

---

1. Manufacturer's Identification
2. Property Class
3. Clock Marking of Property Class and Manufacturer's Identification (Optional), i.e. marks **60** ° apart indicate Class 10 properties, and marks **120** ° apart indicate Class 8.

## INCH NON-FLANGED HARDWARE

NOMINAL SIZE	SAE GRADE 5 BOLT and NUT		SAE GRADE 8 BOLT and NUT		LOCKNUT GrB W/ Gr5 BOLT	LOCKNUT GrC W/ Gr8 BOLT
	UN-PLATED or PLATED SILVER	PLATED W/ZnCr GOLD	UN-PLATED or PLATED SILVER	PLATED W/ZnCr GOLD		
1/4	8 N·m (71 lb in)	11 N·m (97 lb in)	12 N·m (106 lb in)	16 N·m (142 lb in)	8.5 N·m (75 lb in)	12.2 N·m (109 lb in)
5/16	17 N·m (150 lb in)	23 N·m (204 lb in)	24 N·m (212 lb in)	32 N·m (283 lb in)	17.5 N·m (155 lb in)	25 N·m (220 lb in)
3/8	30 N·m (22 lb ft)	40 N·m (30 lb ft)	43 N·m (31 lb ft)	57 N·m (42 lb ft)	31 N·m (23 lb ft)	44 N·m (33 lb ft)
7/16	48 N·m (36 lb ft)	65 N·m (48 lb ft)	68 N·m (50 lb ft)	91 N·m (67 lb ft)	50 N·m (37 lb ft)	71 N·m (53 lb ft)
1/2	74 N·m (54 lb ft)	98 N·m (73 lb ft)	104 N·m (77 lb ft)	139 N·m (103 lb ft)	76 N·m (56 lb ft)	108 N·m (80 lb ft)
9/16	107 N·m (79 lb ft)	142 N·m (105 lb ft)	150 N·m (111 lb ft)	201 N·m (148 lb ft)	111 N·m (82 lb ft)	156 N·m (115 lb ft)
5/8	147 N·m (108 lb ft)	196 N·m (145 lb ft)	208 N·m (153 lb ft)	277 N·m (204 lb ft)	153 N·m (113 lb ft)	215 N·m (159 lb ft)
3/4	261 N·m (193 lb ft)	348 N·m (257 lb ft)	369 N·m (272 lb ft)	491 N·m (362 lb ft)	271 N·m (200 lb ft)	383 N·m (282 lb ft)
7/8	420 N·m (310 lb ft)	561 N·m (413 lb ft)	594 N·m (438 lb ft)	791 N·m (584 lb ft)	437 N·m (323 lb ft)	617 N·m (455 lb ft)
1	630 N·m (465 lb ft)	841 N·m (620 lb ft)	890 N·m (656 lb ft)	1187 N·m (875 lb ft)	654 N·m (483 lb ft)	924 N·m (681 lb ft)


**NOTE:** For Imperial Units, **1/4 in** and **5/16 in** hardware torque specifications are shown in pound-inches. **3/8 in** through **1 in** hardware torque specifications are shown in pound-feet.

## INCH FLANGED HARDWARE

NOMINAL SIZE	SAE GRADE 5 BOLT and NUT		SAE GRADE 8 BOLT and NUT		LOCKNUT GrF W/ Gr5 BOLT	LOCKNUT GrG W/ Gr8 BOLT
	UNPLATED or PLATED SILVER	PLATED W/ZnCr GOLD	UNPLATED or PLATED SILVER	PLATED W/ZnCr GOLD		
1/4	9 N·m (80 lb in)	12 N·m (106 lb in)	13 N·m (115 lb in)	17 N·m (150 lb in)	8 N·m (71 lb in)	12 N·m (106 lb in)
5/16	19 N·m (168 lb in)	25 N·m (221 lb in)	26 N·m (230 lb in)	35 N·m (310 lb in)	17 N·m (150 lb in)	24 N·m (212 lb in)
3/8	33 N·m (25 lb ft)	44 N·m (33 lb ft)	47 N·m (35 lb ft)	63 N·m (46 lb ft)	30 N·m (22 lb ft)	43 N·m (32 lb ft)
7/16	53 N·m (39 lb ft)	71 N·m (52 lb ft)	75 N·m (55 lb ft)	100 N·m (74 lb ft)	48 N·m (35 lb ft)	68 N·m (50 lb ft)
1/2	81 N·m (60 lb ft)	108 N·m (80 lb ft)	115 N·m (85 lb ft)	153 N·m (113 lb ft)	74 N·m (55 lb ft)	104 N·m (77 lb ft)
9/16	117 N·m (86 lb ft)	156 N·m (115 lb ft)	165 N·m (122 lb ft)	221 N·m (163 lb ft)	106 N·m (78 lb ft)	157 N·m (116 lb ft)
5/8	162 N·m (119 lb ft)	216 N·m (159 lb ft)	228 N·m (168 lb ft)	304 N·m (225 lb ft)	147 N·m (108 lb ft)	207 N·m (153 lb ft)
3/4	287 N·m (212 lb ft)	383 N·m (282 lb ft)	405 N·m (299 lb ft)	541 N·m (399 lb ft)	261 N·m (193 lb ft)	369 N·m (272 lb ft)
7/8	462 N·m (341 lb ft)	617 N·m (455 lb ft)	653 N·m (482 lb ft)	871 N·m (642 lb ft)	421 N·m (311 lb ft)	594 N·m (438 lb ft)
1	693 N·m (512 lb ft)	925 N·m (682 lb ft)	979 N·m (722 lb ft)	1305 N·m (963 lb ft)	631 N·m (465 lb ft)	890 N·m (656 lb ft)

## IDENTIFICATION


## Inch Bolts and free-spinning nuts

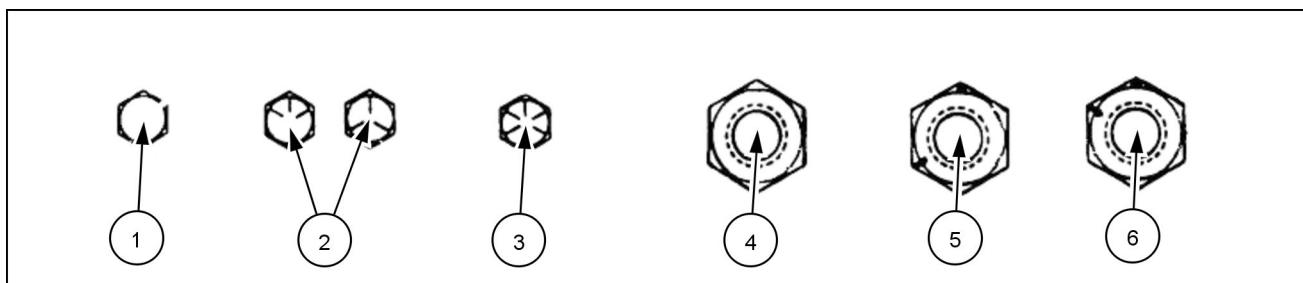

Grade Marking Examples

SAE Grade Identification			
1	Grade 2 - No Marks	4	Grade 2 Nut - No Marks
2	Grade 5 - Three Marks	5	Grade 5 Nut - Marks 120 ° Apart
3	Grade 8 - Five Marks	6	Grade 8 Nut - Marks 60 ° Apart

---

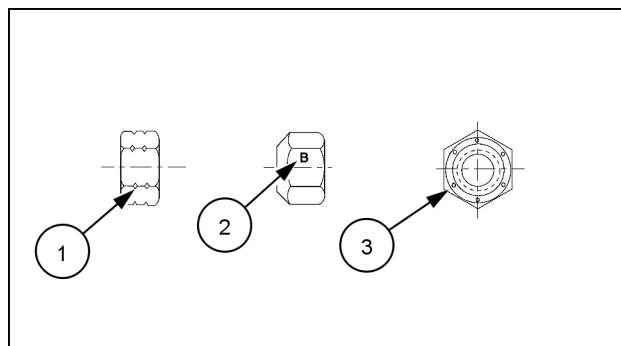**Inch Lock Nuts, All Metal (Three optional methods)**

20090268 4

**Grade Identification**

Grade	Corner Marking Method (1)	Flats Marking Method (2)	Clock Marking Method (3)
Grade A	No Notches	No Mark	No Marks
Grade B	One Circumferential Notch	Letter B	Three Marks
Grade C	Two Circumferential Notches	Letter C	Six Marks


## Torque - Standard torque data for hydraulics

SP.260R Angle drive adjustable axle 1000 Gallon product tank [YFYM00925 - ]	
SP.260R Angle drive fixed axle 1000 Gallon product tank [YFYM00925 - ]	
SP.260R Drop box 1000 Gallon product tank [YFYM00925 - ]	
SP.260R Drop box 1200 Gallon product tank [YFYM00925 - ]	
SP.300C Axle Tech 2WD [YFYM00950 - ]	NA
SP.300C Axle Tech 4WD [YFYM00950 - ]	NA
SP.300R 2WD RR Drive 1000 Gallon product tank [YFYM00925 - ]	
SP.300R 2WD RR Drive 1200 Gallon product tank [YFYM00925 - ]	
SP.300R 4WD 1000 Gallon product tank [YFYM00925 - ]	
SP.300R 4WD 1200 Gallon product tank [YFYM00925 - ]	

## INSTALLATION OF ADJUSTABLE FITTINGS IN STRAIGHT THREAD O RING BOSSES

1. Lubricate the O-ring by coating it with a light oil or petroleum. Install the O-ring in the groove adjacent to the metal backup washer which is assembled at the extreme end of the groove (4).
2. Install the fitting into the SAE straight thread boss until the metal backup washer contacts the face of the boss (5).
3. Position the fitting by turning out (counterclockwise) up to a maximum of one turn. Holding the pad of the fitting with a wrench, tighten the locknut and washer against the face of the boss (6).

**NOTE:** Do not over tighten and distort the metal backup washer.

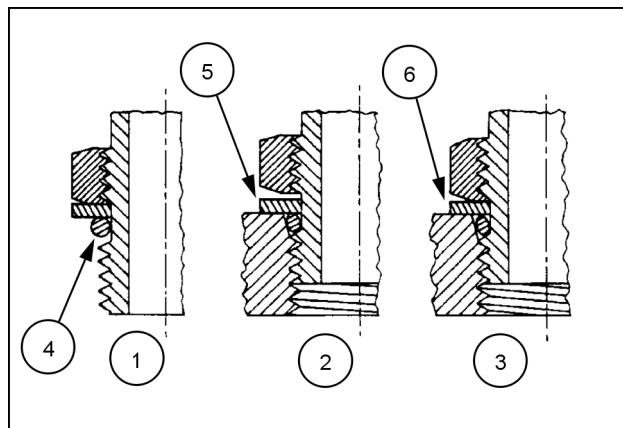

23085659 1

## STANDARD TORQUE DATA FOR HYDRAULIC TUBES AND FITTINGS

TUBE NUTS FOR 37° FLARED FITTINGS				O-RING BOSS PLUGS ADJUSTABLE FITTING LOCKNUTS, SWIVEL JIC- 37° SEATS
SIZE	TUBING OD	THREAD SIZE	TORQUE	TORQUE
4	6.4 mm (1/4 in)	7/16-20	12 - 16 N·m (9 - 12 lb ft)	8 - 14 N·m (6 - 10 lb ft)
5	7.9 mm (5/16 in)	1/2-20	16 - 20 N·m (12 - 15 lb ft)	14 - 20 N·m (10 - 15 lb ft)
6	9.5 mm (3/8 in)	9/16-18	29 - 33 N·m (21 - 24 lb ft)	20 - 27 N·m (15 - 20 lb ft)
8	12.7 mm (1/2 in)	3/4-16	47 - 54 N·m (35 - 40 lb ft)	34 - 41 N·m (25 - 30 lb ft)
10	15.9 mm (5/8 in)	7/8-14	72 - 79 N·m (53 - 58 lb ft)	47 - 54 N·m (35 - 40 lb ft)
12	19.1 mm (3/4 in)	1-1/16-12	104 - 111 N·m (77 - 82 lb ft)	81 - 95 N·m (60 - 70 lb ft)
14	22.2 mm (7/8 in)	1-3/16-12	122 - 136 N·m (90 - 100 lb ft)	95 - 109 N·m (70 - 80 lb ft)
16	25.4 mm (1 in)	1-5/16-12	149 - 163 N·m (110 - 120 lb ft)	108 - 122 N·m (80 - 90 lb ft)
20	31.8 mm (1-1/4 in)	1-5/8-12	190 - 204 N·m (140 - 150 lb ft)	129 - 158 N·m (95 - 115 lb ft)
24	38.1 mm (1-1/2 in)	1-7/8-12	217 - 237 N·m (160 - 175 lb ft)	163 - 190 N·m (120 - 140 lb ft)
32	50.8 mm (2 in)	2-1/2-12	305 - 325 N·m (225 - 240 lb ft)	339 - 407 N·m (250 - 300 lb ft)

These torques are not recommended for tubes of **12.7 mm (1/2 in)** OD and larger with wall thickness of **0.889 mm (0.035 in)** or less. The torque is specified for **0.889 mm (0.035 in)** wall tubes on each application individually.

Before installing and torquing **37°** flared fittings, clean the face of the flare and threads with a clean solvent or Loctite cleaner and apply hydraulic sealant **LOCTITE® 569** to the **37°** flare and the threads.

Install fitting and torque to specified torque, loosen fitting and retorque to specifications.

**PIPE THREAD FITTING TORQUE**

Before installing and tightening pipe fittings, clean the threads with a clean solvent or Loctite cleaner and apply sealant **LOCTITE® 567 PST PIPE SEALANT** for all fittings including stainless steel or **LOCTITE® 565 PST** for most metal fittings. For high filtration/zero contamination systems use **LOCTITE® 545**.

**INSTALLATION OF ORFS (O-RING FLAT FACED) FITTINGS**


When installing ORFS fittings thoroughly clean both flat surfaces of the fittings (1) and lubricate the O-ring (2) with light oil. Make sure both surfaces are aligned properly. Torque the fitting to specified torque listed throughout the repair manual.

**NOTICE:** *If the fitting surfaces are not properly cleaned, the O-ring will not seal properly. If the fitting surfaces are not properly aligned, the fittings may be damaged and will not seal properly.*

**NOTICE:** *Always use genuine factory replacement oils and filters to ensure proper lubrication and filtration of engine and hydraulic system oils.*

The use of proper oils, grease, and keeping the hydraulic system clean will extend machine and component life.

PIPE THREAD FITTING	
Thread Size	Torque (Maximum)
1/8-27	13 N·m (10 lb ft)
1/4-18	16 N·m (12 lb ft)
3/8-18	22 N·m (16 lb ft)
1/2-14	41 N·m (30 lb ft)
3/4-14	54 N·m (40 lb ft)

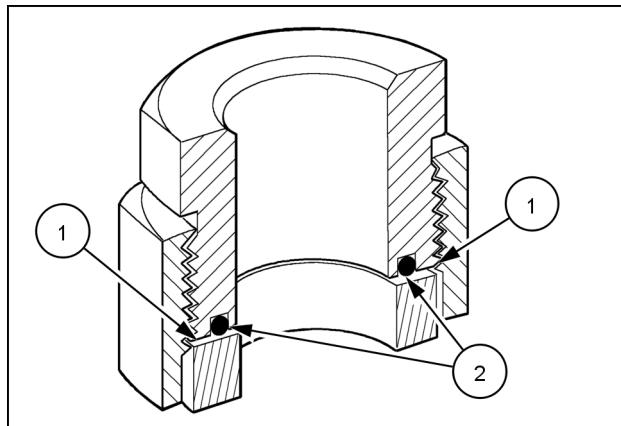

50011183 2

## Basic instructions - Important notice regarding equipment servicing

SP.260R Angle drive adjustable axle 1000 Gallon product tank [YFYM00925 - ]	
SP.260R Angle drive fixed axle 1000 Gallon product tank [YFYM00925 - ]	
SP.260R Drop box 1000 Gallon product tank [YFYM00925 - ]	
SP.260R Drop box 1200 Gallon product tank [YFYM00925 - ]	
SP.300C Axle Tech 2WD [YFYM00950 - ]	NA
SP.300C Axle Tech 4WD [YFYM00950 - ]	NA
SP.300R 2WD RR Drive 1000 Gallon product tank [YFYM00925 - ]	
SP.300R 2WD RR Drive 1200 Gallon product tank [YFYM00925 - ]	
SP.300R 4WD 1000 Gallon product tank [YFYM00925 - ]	
SP.300R 4WD 1200 Gallon product tank [YFYM00925 - ]	

All repair and maintenance work listed in this manual must be carried out only by qualified dealership personnel, strictly complying with the instructions given, and using, whenever possible, the special tools.

Anyone who performs repair and maintenance operations without complying with the procedures provided herein shall be responsible for any subsequent damages.

The manufacturer and all the organizations of its distribution chain, including - without limitation - national, regional, or local dealers, reject any responsibility for damages caused by parts and/or components not approved by the manufacturer, including those used for the servicing or repair of the product manufactured or marketed by the manufacturer. In any case, no warranty is given or attributed on the product manufactured or marketed by the manufacturer in case of damages caused by parts and/or components not approved by the manufacturer.

The information in this manual is up-to-date at the date of the publication. It is the policy of the manufacturer for continuous improvement. Some information could not be updated due to modifications of a technical or commercial type, or changes to the laws and regulations of different countries.

In case of questions, refer to your NEW HOLLAND Sales and Service Networks.

## Basic instructions - Shop and assembly

SP.260R Angle drive adjustable axle 1000 Gallon product tank [YFYM00925 - ]	
SP.260R Angle drive fixed axle 1000 Gallon product tank [YFYM00925 - ]	
SP.260R Drop box 1000 Gallon product tank [YFYM00925 - ]	
SP.260R Drop box 1200 Gallon product tank [YFYM00925 - ]	
SP.300C Axle Tech 2WD [YFYM00950 - ]	NA
SP.300C Axle Tech 4WD [YFYM00950 - ]	NA
SP.300R 2WD RR Drive 1000 Gallon product tank [YFYM00925 - ]	
SP.300R 2WD RR Drive 1200 Gallon product tank [YFYM00925 - ]	
SP.300R 4WD 1000 Gallon product tank [YFYM00925 - ]	
SP.300R 4WD 1200 Gallon product tank [YFYM00925 - ]	

### Shimming

For each adjustment operation, select adjusting shims and measure the adjusting shims individually using a micrometer, then add up the recorded values. Do not rely on measuring the entire shimming set, which may be incorrect, or the rated value shown on each shim.

### Rotating shaft seals

For correct rotating shaft seal installation, proceed as follows:

1. Before assembly, allow the seal to soak in the oil it will be sealing for at least thirty minutes.
2. Thoroughly clean the shaft and check that the working surface on the shaft is not damaged.
3. Position the sealing lip facing the fluid.

**NOTE:** *With hydrodynamic lips, take into consideration the shaft rotation direction and position the grooves so that they will move the fluid towards the inner side of the seal.*

4. Coat the sealing lip with a thin layer of lubricant (use oil rather than grease). Fill the gap between the sealing lip and the dust lip on double lip seals with grease.
5. Insert the seal in its seat and press down using a flat punch or seal installation tool. Do not tap the seal with a hammer or mallet.
6. While you insert the seal, check that the seal is perpendicular to the seat. When the seal settles, make sure that the seal makes contact with the thrust element, if required.
7. To prevent damage to the seal lip on the shaft, position a protective guard during installation operations.

### O-ring seals

Lubricate the O-ring seals before you insert them in the seats. This will prevent the O-ring seals from overturning and twisting, which would jeopardize sealing efficiency.

### Sealing compounds

Apply a sealing compound on the mating surfaces when specified by the procedure. Before you apply the sealing compound, prepare the surfaces as directed by the product container.

### Spare parts

Only use CNH Original Parts or NEW HOLLAND Original Parts.

Only genuine spare parts guarantee the same quality, duration, and safety as original parts, as they are the same parts that are assembled during standard production. Only CNH Original Parts or NEW HOLLAND Original Parts can offer this guarantee.

When ordering spare parts, always provide the following information:

- Machine model (commercial name) and Product Identification Number (PIN)
- Part number of the ordered part, which can be found in the parts catalog

---

## Protecting the electronic and/or electrical systems during charging and welding

To avoid damage to the electronic and/or electrical systems, always observe the following practices:

1. Never make or break any of the charging circuit connections when the engine is running, including the battery connections.
2. Never short any of the charging components to ground.
3. Always disconnect the ground cable from the battery before arc welding on the machine or on any machine attachment.
  - Position the welder ground clamp as close to the welding area as possible.
  - If you weld in close proximity to a computer module, then you should remove the module from the machine.
  - Never allow welding cables to lie on, near, or across any electrical wiring or electronic component while you weld.
4. Always disconnect the negative cable from the battery when charging the battery in the machine with a battery charger.

**NOTICE:** *If you must weld on the unit, you must disconnect the battery ground cable from the machine battery. The electronic monitoring system and charging system will be damaged if this is not done.*

5. Remove the battery ground cable. Reconnect the cable when you complete welding.

### **WARNING**

**Battery acid causes burns. Batteries contain sulfuric acid.**

**Avoid contact with skin, eyes or clothing. Antidote (external): Flush with water. Antidote (eyes): flush with water for 15 minutes and seek medical attention immediately. Antidote (internal): Drink large quantities of water or milk. Do not induce vomiting. Seek medical attention immediately.**

**Failure to comply could result in death or serious injury.**

W0111A

## Special tools

The special tools that NEW HOLLAND suggests and illustrate in this manual have been specifically researched and designed for use with NEW HOLLAND machines. The special tools are essential for reliable repair operations. The special tools are accurately built and rigorously tested to offer efficient and long-lasting operation.

By using these tools, repair personnel will benefit from:

- Operating in optimal technical conditions
- Obtaining the best results
- Saving time and effort
- Working in safe conditions

## General specification - Tire and rim repair

SP.260R Angle drive adjustable axle 1000 Gallon product tank [YFYM00925 - ]	NA
SP.260R Angle drive fixed axle 1000 Gallon product tank [YFYM00925 - ]	NA
SP.260R Drop box 1000 Gallon product tank [YFYM00925 - ]	NA
SP.260R Drop box 1200 Gallon product tank [YFYM00925 - ]	NA
SP.300C Axle Tech 2WD [YFYM00950 - ]	NA
SP.300C Axle Tech 4WD [YFYM00950 - ]	NA
SP.300R 2WD RR Drive 1000 Gallon product tank [YFYM00925 - ]	NA
SP.300R 2WD RR Drive 1200 Gallon product tank [YFYM00925 - ]	NA
SP.300R 4WD 1000 Gallon product tank [YFYM00925 - ]	NA
SP.300R 4WD 1200 Gallon product tank [YFYM00925 - ]	NA

### ⚠ WARNING

#### Explosion hazard!

Do not remove, install, or make repairs to a tire on a wheel rim. Take the tire and rim to a tire shop where persons with special training and special safety tools are available. Failure to comply could result in death or serious injury.

W0365A

## Tire installation

Always have a qualified tire mechanic service the tires and rims on this machine. If the tire has lost all air pressure, take the tire and rim to a tire shop for service. The use of correct equipment and correct procedures will prevent accidents. Explosive separation of the tire can cause serious injury.

## Tire inflation procedure


Do not inflate a tire that has had a complete loss of air. If the tire has lost all air pressure, have a qualified tire mechanic service the tire.

To add air to a partly inflated tire, use the following procedure:

1. Use an air hose with a remote shutoff valve and a self-locking air chuck.
2. Stand behind the tread of the tire and make sure all persons are away from the side of the tire before you start to add air.
3. Inflate the tire to the recommended air pressure. DO NOT inflate the tire more than the recommended pressure.

## Tire inflation examples

This example shows the cross section of a tire inflated for maximum load but with a minimum load on the tire. The tire tread is not making full contact with the ground which will give poor performance.

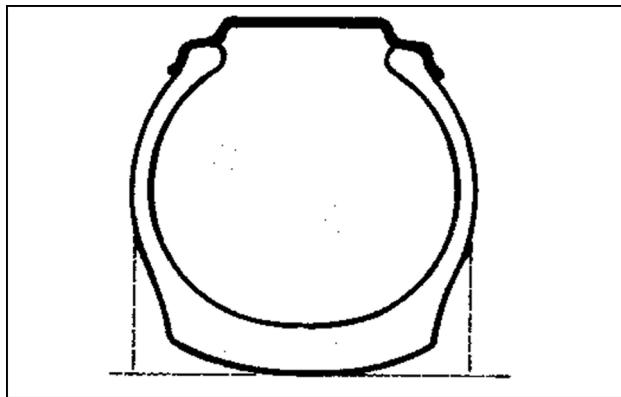


RCIL08CCH012AAB 1

## INTRODUCTION

---

This example shows the cross section of a tire with the inflated pressure correctly adjusted to the load on the tire. The tire tread is making full contact with the ground which will give maximum performance.

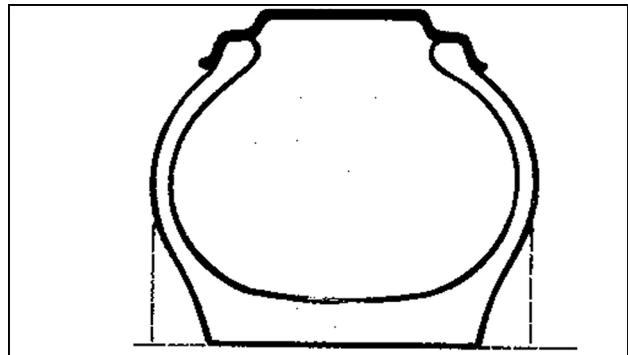

RCIL08CCH013AAB 2

## Capacities

SP.260R Angle drive adjustable axle 1000 Gallon product tank [YFYM00925 - ]	NA
SP.260R Angle drive fixed axle 1000 Gallon product tank [YFYM00925 - ]	NA
SP.260R Drop box 1000 Gallon product tank [YFYM00925 - ]	NA
SP.260R Drop box 1200 Gallon product tank [YFYM00925 - ]	NA
SP.300C Axle Tech 2WD [YFYM00950 - ]	NA
SP.300C Axle Tech 4WD [YFYM00950 - ]	NA
SP.300R 2WD RR Drive 1000 Gallon product tank [YFYM00925 - ]	NA
SP.300R 2WD RR Drive 1200 Gallon product tank [YFYM00925 - ]	NA
SP.300R 4WD 1000 Gallon product tank [YFYM00925 - ]	NA
SP.300R 4WD 1200 Gallon product tank [YFYM00925 - ]	NA

Engine	
Oil type	<b>NEW HOLLAND AMBRA MASTERSGOLD™ ENGINE OIL CJ-4 SAE 10W-30</b>
Capacity	Refer to Cummins manual
Cooling system	
Coolant type	<b>NEW HOLLAND AMBRA ACTIFULL™ OT EXTENDED LIFE COOLANT</b>
Hydraulic system	
Oil type	<b>NEW HOLLAND AMBRA HYDROSYSTEM 68</b>
Tank capacity	Approximately 95 l (25 US gal)
Air conditioning system	
Refrigerant type	<b>CNH REFRIGERANT HFC-134A 2.8 kg (6.2 lb)</b>
ITL differential	
Oil type	<b>BENZ THL-303 Hydraulic Oil or MOBIL 424</b>
Capacity	Approximately 11.4 l (3 US gal)
Axle Tech limited slip differential	
Oil type	<b>API GL-5 75W90 SYNTHETIC gear lube</b>
Capacity	Approximately 7.6 l (2 US gal)
Limited slip additive recommended (before adding oil)	237 ml (8 US fl oz).
<b>NEW HOLLAND AMBRA LIMITED SLIP ADDITIVE.</b>	
Drop box	
Oil type	<b>API GL-5 85W140 gear lube</b>
Capacity	Approximately 26.5 l (7 US gal) each
Planetary wheel hubs	
Oil type	<b>API GL-5 85W140 gear lube</b>
Capacity	Approximately 7.6 l (2 US gal) each

## Product identification - Machine serial number

SP.260R Angle drive adjustable axle 1000 Gallon product tank [YFYM00925 - ]	NA
SP.260R Angle drive fixed axle 1000 Gallon product tank [YFYM00925 - ]	NA
SP.260R Drop box 1000 Gallon product tank [YFYM00925 - ]	NA
SP.260R Drop box 1200 Gallon product tank [YFYM00925 - ]	NA
SP.300C Axle Tech 2WD [YFYM00950 - ]	NA
SP.300C Axle Tech 4WD [YFYM00950 - ]	NA
SP.300R 2WD RR Drive 1000 Gallon product tank [YFYM00925 - ]	NA
SP.300R 2WD RR Drive 1200 Gallon product tank [YFYM00925 - ]	NA
SP.300R 4WD 1000 Gallon product tank [YFYM00925 - ]	NA
SP.300R 4WD 1200 Gallon product tank [YFYM00925 - ]	NA


### Sprayer model and serial number

Write your model number, machine serial number and serial number of major components on the lines provided. If needed, give these numbers to your dealer when you need parts or information for your machine.

Model:

Serial number:


**NOTE:** Located on the right side of frame below hood.

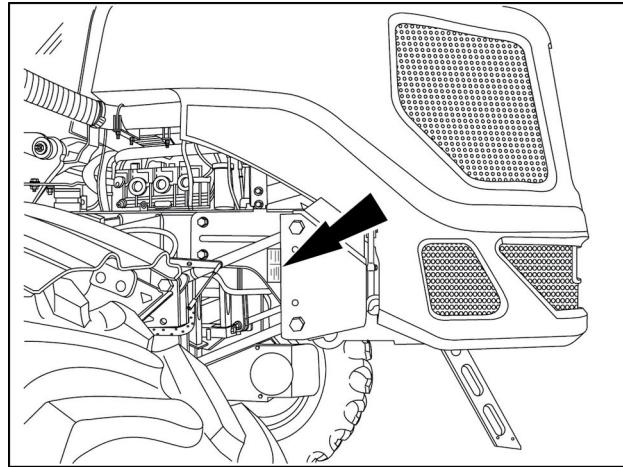

RAIL15SP00925AA 1

## Product identification - Machine orientation

SP.260R Angle drive adjustable axle 1000 Gallon product tank [YFYM00925 - ]	NA
SP.260R Angle drive fixed axle 1000 Gallon product tank [YFYM00925 - ]	NA
SP.260R Drop box 1000 Gallon product tank [YFYM00925 - ]	NA
SP.260R Drop box 1200 Gallon product tank [YFYM00925 - ]	NA
SP.300C Axle Tech 2WD [YFYM00950 - ]	NA
SP.300C Axle Tech 4WD [YFYM00950 - ]	NA
SP.300R 2WD RR Drive 1000 Gallon product tank [YFYM00925 - ]	NA
SP.300R 2WD RR Drive 1200 Gallon product tank [YFYM00925 - ]	NA
SP.300R 4WD 1000 Gallon product tank [YFYM00925 - ]	NA
SP.300R 4WD 1200 Gallon product tank [YFYM00925 - ]	NA

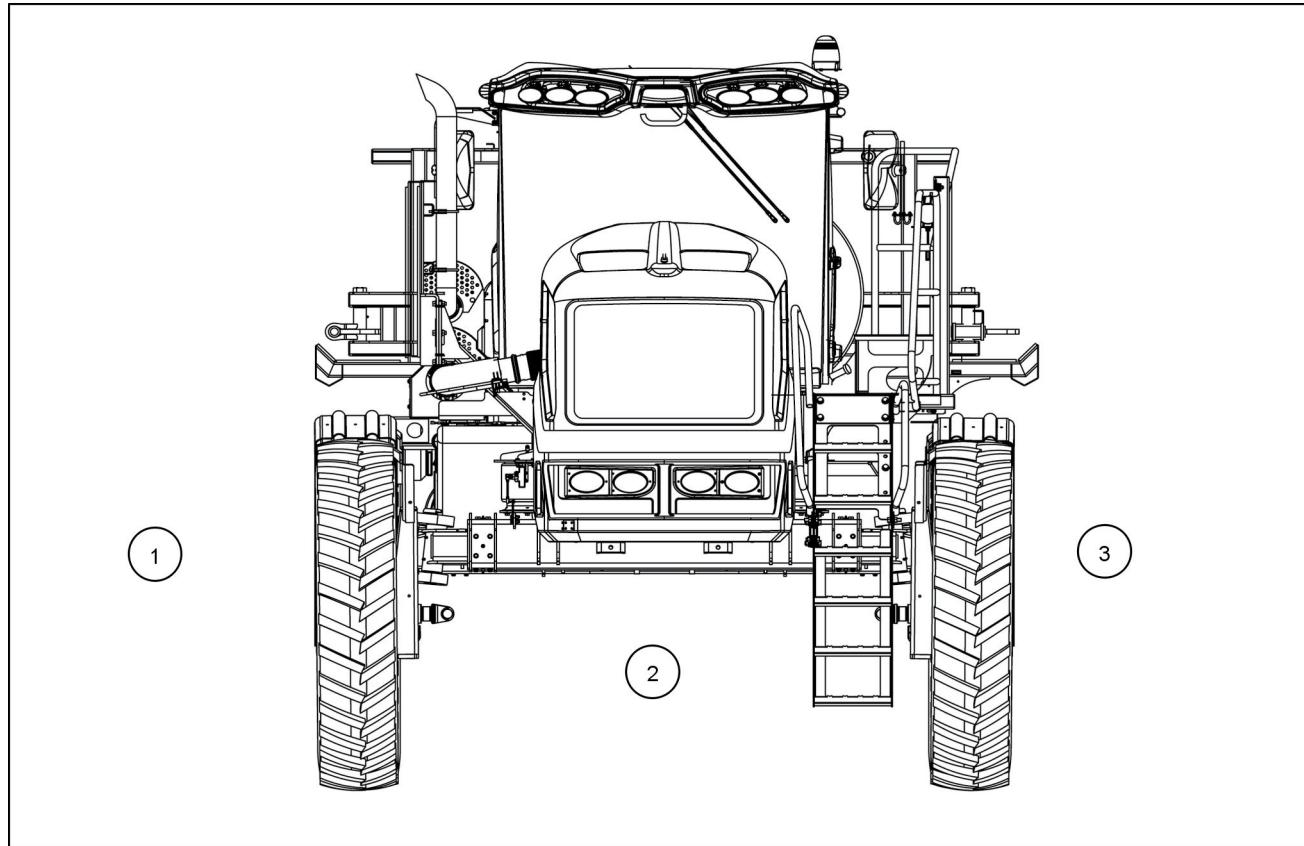

RAIL15SP00785FA 1

1. Right hand side

2. Front of unit


3. Left hand side

## INTRODUCTION

Product: New Holland Guardian? SP.260R/Guardian? SP.300R Tier 4B (final) Sprayer Service Repair Manual

Full Download: <https://www.arepairmanual.com/downloads/new-holland-guardian>

~~sp-260r-guardian-sp-300r-tier-4b-final-sprayer-service-repair-manual/~~

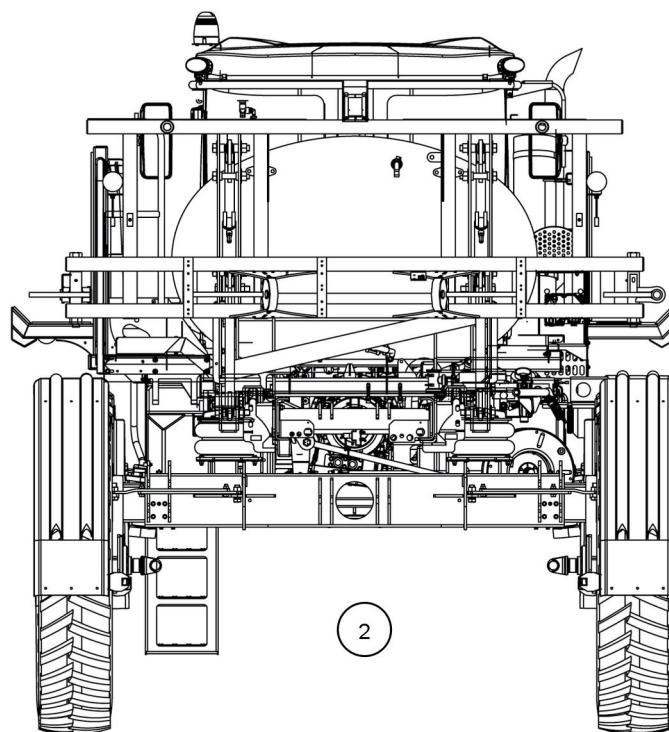

RAIL15SP00784FA 2

1. Left hand side

2. Rear of unit

3. Right hand side

Sample of manual. Download All 927 pages at:

<https://www.arepairmanual.com/downloads/new-holland-guardian-sp-260r-guardian-sp-300r-tier-4b-final-sprayer-service-repair-manual/>

47828487 24/09/2015