

# SERVICE MANUAL

**Durabine™ 416**

**Durabine™ 419**

**Durabine™ 416 Specialty  
Disc Header**

**Part number 48049006**

3<sup>rd</sup> edition English

November 2016 Download All 441 pages at:

<https://www.arepairmanual.com/downloads/new-holland-durabine-416-419-416-specialty-disc-header-service-repair-manual/>



Product: New Holland Durabine? 416/419/416 Specialty Disc Header Service Repair Manual  
Full Download: <https://www.arepairmanual.com/downloads/new-holland-durabine-416-419-416-specialty-disc-header-service-repair-manual/>



# SERVICE MANUAL

**Durabine™ 416 Specialty**  
**Durabine™ 416**  
**Durabine™ 419**

Sample of manual. Download All 441 pages at:

<https://www.arepairmanual.com/downloads/new-holland-durabine-416-419-416-specialty-disc-header-service-repair-manual/>

48049006 17/11/2016

EN

# Contents

---

## INTRODUCTION

Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.910] Head and header hydraulic drive .....	35.2
Frames and ballasting .....	39
[39.110] Drawbar and hitch assembly .....	39.1
Wheels .....	44
[44.536] Gauge wheels .....	44.1
Electrical systems .....	55
[55.000] Electrical system .....	55.1
[55.100] Harnesses and connectors.....	55.2
[55.404] External lighting .....	55.3
[55.820] Chopping and cutting control systems .....	55.4
Attachments/Headers.....	58
[58.100] Attachment/Header support and drives .....	58.1
[58.110] Attachment/Header cutting mechanism .....	58.2
[58.120] Attachment/Header feed auger .....	58.3
[58.130] Attachment/Header frame.....	58.4
[58.224] Header drive .....	58.5
Product feeding .....	60
[60.000] Product feeding .....	60.1
[60.120] Header drive system .....	60.2
[60.620] Roll conditioning.....	60.3
[60.630] Flail conditioning .....	60.4
Platform, cab, bodywork, and decals .....	90
[90.108] Decals and plates .....	90.1

[90.119] Guards and shields..... 90.2





# INTRODUCTION

# Contents

---

## INTRODUCTION

Foreword - Important notice regarding equipment servicing .....	3
Safety rules .....	4
Safety rules - Personal safety .....	5
Safety rules - Ecology and the environment .....	6
Torque - Nominal tightening torques for normal assembly .....	7
Torque - Standard torque data for hydraulic connections .....	12
Basic instructions - Shop and assembly .....	19
Specifications – General - Durabine™ 416 and Durabine™ 416 Specialty .....	21
Specifications – General - Durabine™ 419 .....	23
Capacities .....	25
Product identification .....	26
Product identification - Machine orientation .....	27

---

## **Foreword - Important notice regarding equipment servicing**

All repair and maintenance work listed in this manual must be carried out only by qualified dealership personnel, strictly complying with the instructions given, and using, whenever possible, the special tools.

Anyone who performs repair and maintenance operations without complying with the procedures provided herein shall be responsible for any subsequent damages.

The manufacturer and all the organizations of its distribution chain, including - without limitation - national, regional, or local dealers, reject any responsibility for damages caused by parts and/or components not approved by the manufacturer, including those used for the servicing or repair of the product manufactured or marketed by the manufacturer. In any case, no warranty is given or attributed on the product manufactured or marketed by the manufacturer in case of damages caused by parts and/or components not approved by the manufacturer.

The manufacturer reserves the right to make improvements in design and changes in specifications at any time without notice and without incurring any obligation to install them on units previously sold. Specifications, descriptions, and illustrative material herein are as accurate as known at time of publication but are subject to change without notice.

In case of questions, refer to your NEW HOLLAND Sales and Service Networks.

## Safety rules

### Personal safety



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

Throughout this manual you will find the signal words DANGER, WARNING, and CAUTION followed by special instructions. These precautions are intended for the personal safety of you and those working with you.

Read and understand all the safety messages in this manual before you operate or service the machine.

 DANGER indicates a hazardous situation that, if not avoided, will result in death or serious injury.

 WARNING indicates a hazardous situation that, if not avoided, could result in death or serious injury.

 CAUTION indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

**FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION MESSAGES COULD RESULT IN DEATH OR SERIOUS INJURY.**

### Machine safety

**NOTICE:** Notice indicates a situation that, if not avoided, could result in machine or property damage.

Throughout this manual you will find the signal word Notice followed by special instructions to prevent machine or property damage. The word Notice is used to address practices not related to personal safety.

### Information

**NOTE:** Note indicates additional information that clarifies steps, procedures, or other information in this manual.

Throughout this manual you will find the word Note followed by additional information about a step, procedure, or other information in the manual. The word Note is not intended to address personal safety or property damage.

---

## Safety rules - Personal safety

**Carefully study these precautions, and those included in the external attachment operators manual, and insist that they be followed by those working with and for you.**

1. Thoroughly read and understand this manual and the attachment Operator's Manual before operating this or any other equipment.
2. Be sure all people and pets are clear of the machine before starting. Sound the horn, if equipped, three times before starting engine.
3. Only the operator should be on the machine when in operation. Never allow anyone to climb on to the machine while it is in motion. If the machine is equipped with an Instructors Seat, this must only be used for training purposes. Passengers must not be allowed to use the Instructors Seat.
4. Keep all shields in place. Never work around the machine or any of the attachments while wearing loose clothing that might catch on moving parts.
5. Observe the following precautions whenever lubricating the machine or making adjustments.
  - Disengage all clutching levers or switches.
  - Lower the attachment, if equipped, to the ground or raise the attachment completely and engage the cylinder safety locks. Completing these actions will prevent the attachment from lowering unexpectedly.
  - Engage the parking brake.
  - Shut off the engine and remove the key.
  - Wait for all machine movement to stop before leaving the operators platform.
6. Always keep the machine in gear while travelling downhill.
7. The machine should always be equipped with sufficient front or rear axle weight for safe operation.
8. Under some field conditions, more weight may be required at the front or rear axle for adequate stability. This is especially important when operating in hilly conditions or/when using heavy attachments.
9. Always lower the attachment, shut off the engine, set the parking brake, engage the transmission gears, remove the key and wait for all machine movement to stop before leaving the operators platform.
10. If the attachment or machine should become obstructed or plugged; set the parking brake, shut off the engine and remove the key, engage the transmission gears, wait for all machine or attachment motion to come to a stop, before leaving the operators platform to removing the obstruction or plug.
11. Never disconnect or make any adjustments to the hydraulic system unless the machine and/or the attachment is lowered to the ground or the safety lock(s) is in the engaged position.
12. Use of the flashing lights is highly recommended when operating on a public road.
13. When transporting on a road or highway, use accessory lights and devices for adequate warning to the operators of other vehicles. In this regard, check local government regulations. Various safety lights and devices are available from your NEW HOLLAND dealer.
14. Practice safety 365 days a year.
15. Keep all your equipment in safe operating condition.
16. Keep all guards and safety devices in place.
17. Always set the parking brake, shut off the engine and remove the key, engage the transmission gears, wait for all machine or attachment motion to come to a stop, before leaving the operators platform to service the machine and attachment.
18. Remember: A careful operator is the best insurance against an accident.
19. Extreme care should be taken in keeping hands and clothing away from moving parts.

---

## Safety rules - Ecology and the environment

Soil, air, and water quality is important for all industries and life in general. When legislation does not yet rule the treatment of some of the substances that advanced technology requires, sound judgment should govern the use and disposal of products of a chemical and petrochemical nature.

Familiarize yourself with the relative legislation applicable to your country, and make sure that you understand this legislation. Where no legislation exists, obtain information from suppliers of oils, filters, batteries, fuels, anti-freeze, cleaning agents, etc., with regard to the effect of these substances on man and nature and how to safely store, use, and dispose of these substances.

### Helpful hints

- Avoid the use of cans or other inappropriate pressurized fuel delivery systems to fill tanks. Such delivery systems may cause considerable spillage.
- In general, avoid skin contact with all fuels, oils, acids, solvents, etc. Most of these products contain substances that may be harmful to your health.
- Modern oils contain additives. Do not burn contaminated fuels and or waste oils in ordinary heating systems.
- Avoid spillage when you drain fluids such as used engine coolant mixtures, engine oil, hydraulic fluid, brake fluid, etc. Do not mix drained brake fluids or fuels with lubricants. Store all drained fluids safely until you can dispose of the fluids in a proper way that complies with all local legislation and available resources.
- Do not allow coolant mixtures to get into the soil. Collect and dispose of coolant mixtures properly.
- The air-conditioning system contains gases that should not be released into the atmosphere. Consult an air-conditioning specialist or use a special extractor to recharge the system properly.
- Repair any leaks or defects in the engine cooling system or hydraulic system immediately.
- Do not increase the pressure in a pressurized circuit as this may lead to a component failure.
- Protect hoses during welding. Penetrating weld splatter may burn a hole or weaken hoses, allowing the loss of oils, coolant, etc.

### Battery recycling

Batteries and electric accumulators contain several substances that can have a harmful effect on the environment if the batteries are not properly recycled after use. Improper disposal of batteries can contaminate the soil, groundwater, and waterways. NEW HOLLAND strongly recommends that you return all used batteries to a NEW HOLLAND dealer, who will dispose of the used batteries or recycle the used batteries properly. In some countries, this is a legal requirement.



### Mandatory battery recycling

**NOTE:** *The following requirements are mandatory in Brazil.*

Batteries are made of lead plates and a sulfuric acid solution. Because batteries contain heavy metals such as lead, CONAMA Resolution 401/2008 requires you to return all used batteries to the battery dealer when you replace any batteries. Do not dispose of batteries in your household garbage.

Points of sale are obliged to:

- Accept the return of your used batteries
- Store the returned batteries in a suitable location
- Send the returned batteries to the battery manufacturer for recycling

## Torque - Nominal tightening torques for normal assembly

**NOTE:** In the metric tables, nominal sizes M4 through M8 hardware torque specifications are shown as a Newton meters (pound-inches) numerical value.

Nominal sizes M10 through M24 hardware torque specifications are shown as a Newton meters (pound-feet) numerical value.

### Metric hex head (non-flange) hardware

Plain (PLN) – an unplated hardware finish with residual manufacturing oils

Zinc-dichromate (ZND) – a yellow colored chemical plating formula yellow applied to the hardware

Nominal size	Class (CL) 8.8 bolt and Class (CL) 8 nut	Class (CL) 10.9 bolt and Class (CL) 10 nut	Locknut CL 8 w/CL 8.8 bolt	Locknut CL 10 w/CL 10.9 bolt
	PLN and ZND	PLN and ZND	ZND	ZND
	N·m (lb in)	N·m (lb in)	N·m (lb in)	N·m (lb in)
M4	3.5 (31)	5.0 (44)	1.4 (13)	2.8 (25)
M5	7.0 (62)	10 (88)	2.9 (26)	5.5 (49)
M6	11.8 (104)	17 (150)	4.9 (43)	9.4 (83)
M8	28.8 (255)	41.3 (366)	11.9 (105)	23 (204)
	N·m (lb ft)	N·m (lb ft)	N·m (lb ft)	N·m (lb ft)
M10	57 (42)	82 (60)	24 (17)	45 (33)
M12	100 (74)	143 (105)	41 (30)	79 (38)
M14	159 (117)	227 (168)	66 (48)	125 (92)
M16	248 (183)	354 (261)	102 (75)	195 (144)
M18	352 (260)	487 (359)	145 (107)	268 (198)
M20	500 (369)	690 (509)	206 (152)	380 (280)
M24	865 (638)	1195 (882)	357 (263)	657 (485)

### Metric flange head hardware


Plain (PLN) – an unplated hardware finish with residual manufacturing oils

Zinc-dichromate (ZND) – a yellow colored chemical plating formula yellow applied to the hardware

Nominal size	Class (CL) 8.8 bolt and Class (CL) 8 nut	Class (CL) 10.9 bolt and Class (CL) 10 nut	Flange locknut CL 8 w/CL 8.8 bolt	Flange locknut CL 10 w/CL 10.9 bolt
	PLN and ZND	PLN and ZND	ZND	ZND
	N·m (lb in)	N·m (lb in)	N·m (lb in)	N·m (lb in)
M4	3.8 (34)	5.5 (49)	4.2 (37)	6.1 (54)
M5	7.7 (68)	11 (97)	8.5 (75)	12 (106)
M6	13 (115)	18.7 (166)	14.3 (127)	20.6 (182)
M8	31.7 (281)	45.5 (403)	35 (310)	50 (443)
	N·m (lb ft)	N·m (lb ft)	N·m (lb ft)	N·m (lb ft)
M10	63 (47)	90 (66)	69 (51)	99 (73)
M12	110 (81)	157 (116)	121 (89)	173 (128)
M14	175 (129)	250 (184)	193 (142)	275 (202)
M16	272 (201)	389 (287)	299 (221)	428 (316)
M18	387 (286)	535 (395)	426 (315)	589 (435)
M20	550 (406)	759 (560)	605 (447)	835 (616)
M24	951 (702)	1315 (970)	1046 (772)	1447 (1067)

**Identification markings**

**Metric hex head, flange hex head and carriage bolts, Classes (CL) 5.6 and upward**

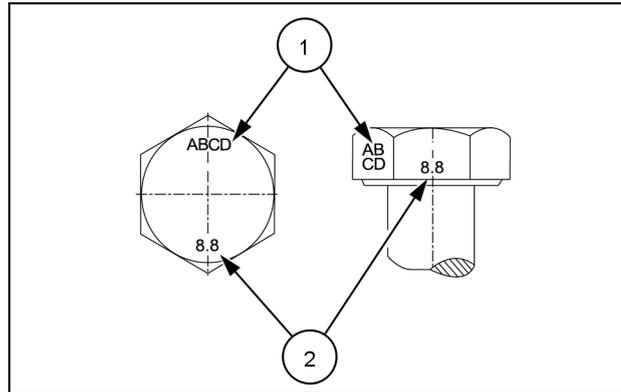


NHIL14RB00662AA 1

**Metric bolt identification markings**

1. Manufacturer's identification
2. Property class

**Metric hex nuts and locknuts, Classes (CL) 05 and upward**

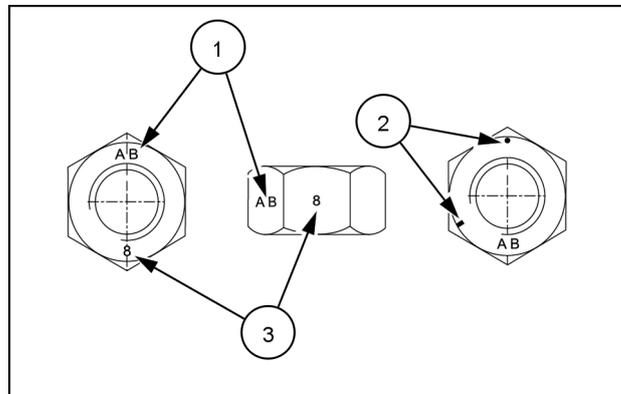

NHIL14RB00663AA 2

**Metric hex nut identification markings**

- **(1)** – Manufacturer's identification
- **(3)** – Property class
- **(2)** – Clockwise type markings indicate property class and may include manufacturer identification (if applied), Example: property marks **240°** apart (shown) at the eight o'clock position indicate a Class 8 property, and marks **300°** apart at the ten o'clock position indicate a Class 10 property.

**NOTE:** In the Imperial units tables, the nominal sizes, **1/4 (0.25) in (inch)** and **5/16 (0.3125) in (inch)** hardware torque specifications are shown as a Newton meters (pound-inches) numerical value.  
Nominal sizes **3/8 (0.375) in (inch)** through **1 (1.0) in (inch)** hardware torque specifications are shown as a Newton meters (pound-feet) numerical value.

**Inch hex head (non-flange) hardware**

Plain (PLN) – an unplated hardware finish with residual manufacturing oils

Zinc-dichromate (ZND) – a yellow colored chemical plating formula yellow applied to the hardware

Nominal size	SAE Grade (GR) 5 bolt and nut	SAE Grade (GR) 8 bolt and nut	Locknut GR B w/ GR 5 bolt	Locknut GR C w/ GR 8 bolt
	PLN and ZND	PLN and ZND	ZND	ZND
	N·m (lb in)	N·m (lb in)	N·m (lb in)	N·m (lb in)
<b>1/4 (0.25) in</b>	13 (115)	18 (159)	7.2 (64)	10 (89)
<b>5/16 (0.3125) in</b>	27 (239)	38 (336)	14.9 (132)	21 (186)
	N·m (lb ft)	N·m (lb ft)	N·m (lb ft)	N·m (lb ft)
<b>3/8 (0.375) in</b>	47 (35)	67 (49)	26 (19)	37 (27)
<b>7/16 (0.4375) in</b>	76 (56)	107 (79)	42 (31)	59 (44)
<b>1/2 (0.50) in</b>	116 (85)	164 (121)	64 (47)	90 (67)
<b>9/16 (0.5625) in</b>	167 (123)	236 (174)	92 (68)	130 (96)
<b>5/8 (0.625) in</b>	231 (170)	326 (240)	127 (94)	179 (132)
<b>3/4 (0.75) in</b>	410 (302)	578 (426)	226 (166)	318 (234)
<b>7/8 (0.875) in</b>	660 (486)	931 (687)	363 (267)	512 (378)
<b>1 (1.0) in</b>	989 (729)	1396 (1030)	544 (401)	768 (567)

**Inch flange head hardware**

Plain (PLN) – an unplated hardware finish with residual manufacturing oils


Zinc-dichromate (ZND) – a yellow colored chemical plating formula yellow applied to the hardware

Nominal size	SAE Grade (GR) 5 bolt and nut	SAE Grade (GR) 8 bolt and nut	Flange locknut GR F w/ GR 5 bolt	Flange locknut GR G w/ GR 8 bolt
	PLN and ZND	PLN and ZND	ZND	ZND
	N·m (lb in)	N·m (lb in)	N·m (lb in)	N·m (lb in)
<b>1/4 (0.25) in</b>	14 (124)	20 (177)	15.4 (136)	22 (195)
<b>5/16 (0.3125) in</b>	29 (257)	42 (372)	32 (283)	46 (407)
	N·m (lb ft)	N·m (lb ft)	N·m (lb ft)	N·m (lb ft)
<b>3/8 (0.375) in</b>	52 (38)	74 (54)	57 (42)	81 (9)
<b>7/16 (0.4375) in</b>	84 (62)	118 (87)	92 (68)	130 (96)
<b>1/2 (0.50) in</b>	127 (94)	180 (133)	140 (103)	198 (146)
<b>9/16 (0.5625) in</b>	184 (136)	259 (191)	202 (150)	285 (210)
<b>5/8 (0.625) in</b>	254 (187)	358 (264)	279 (206)	394 (290)
<b>3/4 (0.75) in</b>	450 (332)	636 (469)	495 (365)	700 (516)
<b>7/8 (0.875) in</b>	725 (535)	1024 (755)	798 (589)	1126 (831)
<b>1 (1.0) in</b>	1088 (802)	1536 (1133)	1197 (882)	1690 (1246)

**Identification marking**

**Grades of inch bolts and free-spinning nuts**

**SAE (J995) bolt head and nut grade identification**

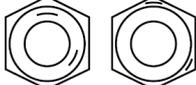Grade identification marking	Grade Marking description
	<b>Grade 2</b> No line marks
	<b>Grade 5</b> Three line marks
	<b>Grade 8</b> Six line marks
	<b>Grade 2</b> No circumferential line marks
	<b>Grade 5</b> Two circumferential line marks located 120° apart
	<b>Grade 2</b> Two circumferential line marks located 60° apart
	<b>Grade 2</b> No circumferential line marks
	<b>Grade 5</b> Two circumferential line marks located 120° apart
	<b>Grade 8</b> Two circumferential line marks located 60° apart

**Grades of inch prevailing torque locknuts, all metal (three common marking methods)**

On prevailing torque locknuts, the grade of nut is identified by one of three different sets of markings that denote the strength level and manufacturer.

**Common prevailing torque locknut grade identification markings**

Grade identification marking	Grade Marking description
	<p><b>Grade A</b> No marks</p>
	<p><b>Grade B (hex nut) and Grade F (flange nut)</b> Three raised or indented dot marks (Marks do not have to be in corners.)</p>
	<p><b>Grade C (hex nut) and Grade F (flange nut)</b> Six raised or indented dot marks (Marks do not have to be in corners.)</p>
	<p><b>Grade A</b> No letter mark on side flat</p>
	<p><b>Grade B</b> Letter B on side flat</p>
	<p><b>Grade C</b> Letter C on side flat</p>
	<p><b>Grade A</b> No notches</p>
	<p><b>Grade B</b> One circumferential notch on all six corners</p>
	<p><b>Grade C</b> Two circumferential notches on all six corners</p>

---

## Torque - Standard torque data for hydraulic connections

### General information

- Hydraulic connections require a minimum assembly torque in order to provide zero leakage at rated pressure with adequate fatigue resistance. Over-torquing of a hydraulic connection can also lead to leakage or failure. For some connections, NEW HOLLAND requires a different torque value than is listed in the ISO and SAE standards.
- The torque values in this document should be used whenever possible or applicable.

**NOTICE:** Always follow the instructions in this manual for specific torque values when you service components. The information in this section is for general guidance only when a procedure contains no specific torque value.

### Tolerance

- The tolerance for all torque values is  $\pm 10\%$ . This tolerance must include all assembly variation, not only the torque wrench repeatability.

### Lubrication

Application of grease or other lubricants to hydraulic connectors should be avoided. If clean hydraulic oil is already on the connection, it is not required to remove the oil. Generally, application of grease:

- May cause a significant change in the torque required to properly tighten the connection.
- May reduce the connection's resistance to vibration.
- Excessive grease may displace an elastomer seal during tightening.
- Grease extrusion when connection is tightened may be mistaken for leakage.

NEW HOLLAND products generally use O-Ring Boss (ORB) connectors that have Teflon™-coated O-rings, eliminating the need for O-ring lubrication during installation. For connections which are made into aluminum manifolds or with stainless steel connectors, it may be required to apply a lubricant to prevent galling.

Use of **LOCTITE®** and other thread-locking compounds is prohibited. These compounds:

- May cause a significant change in the torque required to properly tighten the connections.
- Reduce the serviceability of the joint.
- May prevent the O-ring from properly sealing if the compound gets on the O-ring.

INTRODUCTION

**Torque values for metric O-Ring Boss (ORB) port connections**

Metric thread	S-Series *		L-Series **	
	Ferrous N·m (lb ft) ± 10 %	Non-Ferrous N·m (lb ft) ± 10 %	Ferrous N·m (lb ft) ± 10 %	Non-Ferrous N·m (lb ft) ± 10 %
M8 x 1	10.5 (7.7)	6.3 (4.6)	8.5 (6.3)	5 (3.7)
M10 x 1	21 (15.5)	12.5 (9.2)	15.5 (11.4)	9.3 (6.9)
M12 x 1.5	37 (27.3)	22 (16.2)	27 (19.9)	16 (11.8)
M14 x 1.5	47 (34.7)	28 (20.7)	37 (27.3)	22 (16.2)
M16 x 1.5	58 (42.8)	35 (25.8)	42 (31)	25 (18.4)
M18 x 1.5	74 (54.6)	44 (32.5)	47 (34.7)	28 (20.7)
M22 x 1.5	105 (77.4)	63 (46.5)	63 (46.5)	38 (28)
M27 x 2	178 (131.3)	107 (78.9)	105 (77.4)	63 (46.5)
M30 x 2	225 (166)	135 (99.6)	136 (100.3)	82 (60.5)
M33 x 2	325 (239.7)	195 (143.8)	168 (123.9)	101 (74.5)
M42 x 2	345 (254.5)	207 (152.7)	220 (162.3)	132 (97.4)
M48 x 2	440 (324.5)	264 (194.7)	273 (201.4)	164 (121)
M60 x 2	525 (387.2)	315 (232.3)	330 (243.4)	198 (146)

\* S-Series connectors are used with O-Ring Face Seals (ORFS).

\*\* L-Series connectors are used with 37 ° flare.

**Torque values for metric O-Ring Boss (ORB) port plugs**

Metric thread	Ferrous		Non-ferrous N·m (lb ft) ± 10 %
	Internal hex N·m (lb ft) ± 10 %	External hex N·m (lb ft) ± 10 %	
M8 x 1	8.5 (6.3)	10.5 (7.7)	6.3 (4.6)
M10 x 1	16 (11.8)	21 (15.5)	12.5 (9.2)
M12 x 1.5	23 (17)	37 (27.3)	22 (16.2)
M14 x 1.5	47 (34.7)	47 (34.7)	28 (20.7)
M16 x 1.5	58 (42.8)	58 (42.8)	35 (25.8)
M18 x 1.5	74 (54.6)	74 (54.6)	44 (32.5)
M22 x 1.5	105 (77.4)	105 (77.4)	63 (46.5)
M27 x 2	178 (131.3)	178 (131.3)	107 (78.9)
M30 x 2	225 (166)	225 (166)	135 (99.6)
M33 x 2	325 (239.7)	325 (239.7)	195 (143.8)
M42 x 2	345 (254.5)	345 (254.5)	207 (152.7)
M48 x 2	440 (324.5)	440 (324.5)	264 (194.7)
M60 x 2	525 (387.2)	525 (387.2)	315 (232.3)

INTRODUCTION

**Torque values for port connections (British Standard Pipe Parallel (BSPP) thread ports and stud ends)**

BSPP thread G- Gas; A- medium coarse threads	Metric tube Outside Diameter (OD) mm (in)		Ferrous		Non-Ferrous	
	S-Series *	L-Series **	S-Series N·m (lb ft) ± 10 %	L-Series N·m (lb ft) ± 10 %	S-Series N·m (lb ft) ± 10 %	L-Series N·m (lb ft) ± 10 %
G 1/8 A	–	6 (0.236)	–	21 (15.5)	–	12.5 (9.2)
G 1/4 A	6 (0.236) or 8 (0.315)	8 (0.315) or 10 (0.394)	63 (46.5)	53 (39.1)	38 (28)	32 (23.6)
G 3/8 A	10 (0.394) or 12 (0.472)	12 (0.472)	95 (70.1)	84 (62)	57 (42)	50 (36.9)
G 1/2 A	16 (0.630)	15 (0.591) or 18 (0.709)	136 (100.3)	105 (77.4)	82 (60.5)	63 (46.5)
G 3/4 A	20 (0.787)	22 (0.866)	210 (154.9)	210 (154.9)	126 (92.9)	126 (92.9)
G 1 A	25 (0.984)	28 (1.102)	400 (295)	400 (295)	240 (177)	240 (177)
G 1 1/4 A	30 (1.181)	35 (1.378)	525 (387.2)	525 (387.2)	315 (232.3)	315 (232.3)
G 1 1/2 A	38 (1.496)	42 (1.654)	660 (486.8)	660 (486.8)	396 (292.1)	396 (292.1)

\* S-Series connectors are used with O-Ring Face Seals (ORFS).

\*\* L-Series connectors are used with 37 ° flare.

**Torque values for metric port connections (Metric face-seal ports and stud ends)**

Metric thread	Metric tube Outside Diameter (OD) mm (in)		Ferrous		Non-Ferrous	
	S-Series *	L-Series **	S-Series N·m (lb ft) ± 10 %	L-Series N·m (lb ft) ± 10 %	S-Series N·m (lb ft) ± 10 %	L-Series N·m (lb ft) ± 10 %
M10 x 1	–	4 (0.157)	–	21 (15.5)	–	12.5 (9.2)
M12 x 1.5	4 (0.157)	6 (0.236)	47 (34.7)	32 (23.6)	28 (20.7)	19 (14)
M14 x 1.5	5 (0.197)	7 (0.276)	63 (46.5)	53 (39.1)	38 (28)	32 (23.6)
M16 x 1.5	7 (0.276)	9 (0.354)	84 (62)	63 (46.5)	50 (36.9)	38 (28)
M18 x 1.5	8 (0.315)	11 (0.433)	105 (77.4)	84 (62)	63 (46.5)	50 (36.9)
M20 x 1.5	10 (0.394)	–	147 (108.4)	–	88 (64.9)	–
M22 x 1.5	12 (0.472)	14 (0.551)	158 (116.5)	147 (108.4)	95 (70.1)	88 (64.9)
M26 x 1.5	–	18 (0.709)	–	210 (154.9)	–	126 (92.9)
M27 x 1.2	16 (0.630)	–	210 (154.9)	–	126 (92.9)	–
M33 x 2	20 (0.787)	23 (0.906)	400 (295)	400 (295)	240 (177)	240 (177)
M42 x 2	25 (0.984)	30 (1.181)	525 (387.2)	525 (387.2)	315 (232.3)	315 (232.3)
M48 x 2	32 (1.260)	36 (1.417)	630 (464.7)	630 (464.7)	396 (292.1)	396 (292.1)

\* S-Series connectors are used with O-Ring Face Seals (ORFS).

\*\* L-Series connectors are used with 37 ° flare.

INTRODUCTION

**Torque values for Inch O-Ring Boss (ORB) port non-adjustable connections**

SAE dash size	UN/UNF thread size	Inch tube OD mm (in)	S-Series *		L-Series **	
			Ferrous N·m (lb ft) ± 10 %	Non-Ferrous N·m (lb ft) ± 10 %	Ferrous N·m (lb ft) ± 10 %	Non-Ferrous N·m (lb ft) ± 10 %
2	5/16-24	3.18 (0.125)	–	–	8.5 (6.3)	5 (3.7)
3	3/8-24	4.76 (0.187)	15.5 (11.4)	9.3 (6.9)	10.5 (7.7)	6.3 (4.6)
4	7/16-20	6.35 (0.250)	37 (27.3)	22 (16.2)	19 (14)	11.5 (8.5)
5	1/2-20	7.94 (0.313)	42 (31)	25 (18.4)	26 (19.2)	15.5 (11.4)
6	9/16-18	9.52 (0.375)	47 (34.7)	28 (20.7)	32 (23.6)	19 (14)
8	3/4-16	12.7 (0.500)	89 (65.6)	53 (39.1)	53 (39.1)	32 (23.6)
10	7/8-14	15.88 (0.625)	121 (89.2)	73 (53.8)	63 (46.5)	38 (28)
12	1-1/16-12	19.05 (0.750)	178 (131.3)	107 (78.9)	100 (73.8)	60 (44.3)
14	1-3/16-12	22.22 (0.875)	225 (166)	135 (99.6)	131 (96.6)	79 (58.3)
16	1-5/16-12	25.4 (1.000)	283 (208.7)	170 (125.4)	156 (115.1)	94 (69.3)
20	1-5/8-12	31.75 (1.250)	300 (221.3)	180 (132.8)	210 (154.9)	126 (92.9)
24	1-7/8-12	38.1 (1.500)	388 (286.2)	233 (171.9)	220 (162.3)	132 (97.4)
32	2-1/2-12	50.8 (2.000)	388 (286.2)	233 (171.9)	315 (232.3)	189 (139.4)

\* S-Series connectors are used with O-Ring Face Seals (ORFS).

\*\* L-Series connectors are used with 37 ° flare.

**Torque values for inch O-Ring Boss (ORB) port adjustable connections**

SAE dash size	UN/UNF thread size	Inch tube OD mm (in)	S-Series *		L-Series **	
			Ferrous N·m (lb ft) ± 10 %	Non-Ferrous N·m (lb ft) ± 10 %	Ferrous N·m (lb ft) ± 10 %	Non-Ferrous N·m (lb ft) ± 10 %
2	5/16-24	3.18 (0.125)	–	–	8.5 (6.3)	5 (3.7)
3	3/8-24	4.76 (0.187)	10.5 (7.7)	9.3 (6.9)	10.5 (7.7)	6.3 (4.6)
4	7/16-20	6.35 (0.250)	21 (15.5)	21 (15.5)	19 (14)	11.5 (8.5)
5	1/2-20	7.94 (0.313)	42 (31)	25 (18.4)	26 (19.2)	15.5 (11.4)
6	9/16-18	9.52 (0.375)	47 (34.7)	28 (20.7)	32 (23.6)	19 (14)
8	3/4-16	12.7 (0.500)	89 (65.6)	53 (39.1)	53 (39.1)	32 (23.6)
10	7/8-14	15.88 (0.625)	121 (89.2)	73 (53.8)	63 (46.5)	38 (28)
12	1-1/16-12	19.05 (0.750)	178 (131.3)	107 (78.9)	100 (73.8)	60 (44.3)
14	1-3/16-12	22.22 (0.875)	225 (166)	135 (99.6)	131 (96.6)	79 (58.3)
16	1-5/16-12	25.4 (1.000)	285 (210.2)	170 (125.4)	156 (115.1)	94 (69.3)
20	1-5/8-12	31.75 (1.250)	300 (221.3)	180 (132.8)	210 (154.9)	126 (92.9)
24	1-7/8-12	38.1 (1.500)	388 (286.2)	233 (171.9)	220 (162.3)	132 (97.4)
32	2-1/2-12	50.8 (2.000)	388 (286.2)	233 (171.9)	315 (232.3)	189 (139.4)

\* S-Series connectors are used with O-Ring Face Seals (ORFS).

\*\* L-Series connectors are used with 37 ° flare.

INTRODUCTION

**Torque values for inch O-Ring Boss (ORB) port plugs**

SAE dash size	UN/UNF thread size	Ferrous		Non-Ferrous
		Internal hex N·m (lb ft) ± 10 %	External hex N·m (lb ft) ± 10 %	N·m (lb ft) ± 10 %
2	5/16-24	7.5 (5.5)	12.5 (9.2)	7.5 (5.5)
3	3/8-24	14.5 (10.7)	21 (15.5)	12.5 (9.2)
4	7/16-20	21 (15.5)	37 (27.3)	22 (16.2)
5	1/2-20	28 (20.7)	42 (31)	25 (18.4)
6	9/16-18	47 (34.7)	47 (34.7)	28 (20.7)
8	3/4-16	89 (65.6)	89 (65.6)	53 (39.1)
10	7/8-14	116 (85.6)	116 (85.6)	70 (51.6)
12	1-1/16-12	176 (129.8)	176 (129.8)	106 (78.2)
14	1-3/16-12	247 (182.2)	247 (182.2)	148 (109.2)
16	1-5/16-12	284 (209.5)	284 (209.5)	170 (125.4)
20	1-5/8-12	357 (263.3)	357 (263.3)	214 (157.8)
24	1-7/8-12	441 (325.3)	441 (325.3)	265 (195.5)
32	2-1/2-12	536 (395.3)	536 (395.3)	322 (237.5)

**Torque values for four-bolt flange connections (Metric Screws, Class 10.9)**

Metric size mm	Imperial size in	Screw code 61	Code 61 N·m (lb ft) ± 10 %	Screw code 62	Code 62 N·m (lb ft) ± 10 %
13	1/2	M8 x 1.25	34 (25.1)	M8 x 1.25	34 (25.1)
19	3/4	M10 x 1.5	74 (54.6)	M10 x 1.5	74 (54.6)
25	1	M10 x 1.5	74 (54.6)	M12 x 1.75	137 (101)
32	1-1/4	M10 x 1.5	74 (54.6)	M12 x 1.75	137 (101)
				M14 x 1.5	189 (139.4)
38	1-1/2	M12 x 1.75	137 (101)	M16 x 2	310 (228.6)
51	2	M12 x 1.75	137 (101)	M20 x 2.5	575 (424.1)
64	2-1/2	M12 x 1.75	137 (101)	M24 x 3	575 (424.1)
76	3	M16 x 2	310 (228.6)	M30 x 3.5	680 (501.5)
89	3-1/2	M16 x 2	310 (228.6)	–	–
102	4	M16 x 2	310 (228.6)	–	–
127	5	M16 x 2	310 (228.6)	–	–

**Torque values for four-bolt flange connections (Metric Screws, Class 8.8)**

Metric size mm	Imperial size in	Screw code 61	Code 61 N·m (lb ft) ± 10 %	Screw code 62	Code 62 N·m (lb ft) ± 10 %
13	1/2	M8 x 1.25	29 (21.4)	M8 x 1.25	29 (21.4)
19	3/4	M10 x 1.5	57(42)	M10 x 1.5	57(42)
25	1	M10 x 1.5	57(42)	M12 x 1.75	100 (73.8)
32	1-1/4	M10 x 1.5	57(42)	M12 x 1.75	100 (73.8)
				M14 x 1.5	160 (118)
38	1-1/2	M12 x 1.75	100 (73.8)	M16 x 2	250 (184.4)
51	2	M12 x 1.75	100 (73.8)	M20 x 2.5	500 (368.8)
64	2-1/2	M12 x 1.75	100 (73.8)	M24 x 3	575 (424.1)
76	3	M16 x 2	250 (184.4)	M30 x 3.5	680 (501.5)
89	3-1/2	M16 x 2	250 (184.4)	–	–
102	4	M16 x 2	250 (184.4)	–	–
127	5	M16 x 2	250 (184.4)	–	–

INTRODUCTION

**Torque values for four-bolt flange connections (Inch Screws, Grade 8)**

Metric size mm	Imperial size in	Screw code 61	Code 61 N·m (lb ft) ± 10 %	Screw code 62	Code 62 N·m (lb ft) ± 10 %
13	1/2	5/16-18	34 (25.1)	5/16-18	34 (25.1)
19	3/4	3/8-16	63 (46.5)	3/8-16	63 (46.5)
25	1	3/8-16	63 (46.5)	7/16-14	97 (71.5)
32	1-1/4	7/16-14	97 (71.5)	1/2-13	158 (116.5)
38	1-1/2	1/2-13	158 (116.5)	5/8-11	310 (228.6)
51	2	1/2-13	158 (116.5)	3/4-10	473 (348.9)
64	2-1/2	1/2-13	158 (116.5)	–	–
76	3	5/8-11	310 (228.6)	–	–
89	3-1/2	5/8-11	310 (228.6)	–	–
102	4	5/8-11	310 (228.6)	–	–
127	5	5/8-11	310 (228.6)	–	–

**Tapered thread connection tightening**

British Standard Pipe Taper (BSPT) thread size (inch)	National Pipe Thread Fuel (NPTF) thread size (inch)	Turns from finger tight
1/8-28	1/8-27	2 - 3
1/4-19	1/4-18	2 - 3
3/8-19	3/8-18	2 - 3
1/2-14	1/2-14	2 - 3
3/4-14	3/4-14	2 - 3
1-11	1-11 1/2	1.5 - 2.5
1-1/4-11	1-1/4-11 1/2	1.5 - 2.5
1-1/2-11	1-1/2-11 1/2	1.5 - 2.5
2-11	2-11 1/2	1.5 - 2.5

**Torque values for banjo bolt connections (Copper washer style)**

Bolt thread (metric)	Hex size (mm)	Torque N·m (lb ft) ± 10 %
M8 x 1.25	13	13 (9.6)
M10 x 1.25	17	16 (11.8)
M12 x 1.5	17	40 (29.5)
M14 x 1.5	19	45 (33.2)
M16 x 1.5	22	48 (35.4)
M18 x 1.5	24	50 (36.9)
M20 x 1.5	27	73 (53.8)
M22 x 1.5	32	73 (53.8)
M24 x 1.5	32	73 (53.8)

INTRODUCTION

**Torque values for O-Ring Face Seals (ORFS) connections**

SAE dash size	UN/UNF thread size	Inch tube OD (mm)	Metric tube OD (mm)	Hex size (mm) (Reference only)	* Swivel nut torque N·m (lb ft) ± 10 %	** Swivel nut torque N·m (lb ft) ± 10 %
4	9/16-18	6.35	6	17	27 (19.9)	27 (19.9)
5	5/8-18	7.94	8	19	34 (25.1)	34 (25.1)
6	11/16-16	9.52	10	22	44 (32.5)	44 (32.5)
8	13/16-16	12.7	12	24	65 (47.9)	65 (47.9)
10	1-14	15.88	16	30	100 (73.8)	100 (73.8)
12	1-3/16-12	19.05	20	36	150 (110.6)	131 (96.6)
14	1-5/16-12	22.23	22	41	163 (120.2)	131 (96.6)
16	1-7/16-12	25.4	25	41	210 (154.9) ***	131 (96.9)
20	1-11/16-12	31.75	30	50	280 (206.5) ***	178 (131.3)
24	2-12	38.1	38	60	375 (276.6) ***	210 (154.9)

\* High/Medium-pressure applications > 50 bar (725 psi).

\*\* Low-pressure applications < 50 bar (725 psi).

\*\*\* It is recommended to use a four-bolt flange connection instead of O-Ring Face Seals (ORFS) sizes "16" and up.

**Torque values for 37 ° flare connections - Joint Industry Council (JIC)**

SAE dash size	UN/UNF thread size	Metric tube OD (mm)	Inch tube OD (mm)	Swivel nut torque N·m (lb ft) ± 10 %
2	5/16-24	–	3.18	8.25 (6.1)
3	3/8-24	–	4.76	11.5 (8.5)
4	7/16-20	6	6.35	15.5 (11.4)
5	1/2-20	8	7.94	20 (14.8)
6	9/16-18	10	9.52	25 (18.4)
8	3/4-16	12	12.7	52 (38.4)
10	7/8-14	16	15.88	81 (59.7)
12	1-1/16-12	20	19.05	112 (82.6)
14	1-3/16-12	–	22.22	133 (98.1)
16	1-5/16-12	25	25.4	155 (114.3)
20	1-5/8-12	30/32	31.75	180 (132.8)
24	1-7/8-12	38	38.1	225 (166)
32	2-1/2-12	50	50.8	348 (256.7)

**Torque values for 30 ° flare, 60 ° cone connections**

Nominal size (mm)	British Standard Pipe Parallel (BSPP) thread size	Hex size (mm)	Swivel nut torque N·m (lb ft) ± 10 %
5, 6, 6.3	G 1/4	17	25 (18.4)
8, 9, 10	G 3/8	19	34 (25.1)
12, 12.5	G 1/2	22	64 (47.2)
15, 16, 19	G 3/4	30	132 (97.4)
25	G 1	36	196 (144.6)
31.5, 32	G 1-1/4	46	225 (166)
38	G 1-1/2	50	255 (188.1)
50, 51	G 2	65	316 (223.1)

---

## Basic instructions - Shop and assembly

### Shimming

For each adjustment operation, select adjusting shims and measure the adjusting shims individually using a micrometer, then add up the recorded values. Do not rely on measuring the entire shimming set, which may be incorrect, or the rated value shown on each shim.

### Rotating shaft seals

For correct rotating shaft seal installation, proceed as follows:

1. Before assembly, allow the seal to soak in the oil it will be sealing for at least thirty minutes.
2. Thoroughly clean the shaft and check that the working surface on the shaft is not damaged.
3. Position the sealing lip facing the fluid.

**NOTE:** *With hydrodynamic lips, take into consideration the shaft rotation direction and position the grooves so that they will move the fluid towards the inner side of the seal.*

4. Coat the sealing lip with a thin layer of lubricant (use oil rather than grease). Fill the gap between the sealing lip and the dust lip on double lip seals with grease.
5. Insert the seal in its seat and press down using a flat punch or seal installation tool. Do not tap the seal with a hammer or mallet.
6. While you insert the seal, check that the seal is perpendicular to the seat. When the seal settles, make sure that the seal makes contact with the thrust element, if required.
7. To prevent damage to the seal lip on the shaft, position a protective guard during installation operations.

### O-ring seals

Lubricate the O-ring seals before you insert them in the seats. This will prevent the O-ring seals from overturning and twisting, which would jeopardize sealing efficiency.

### Sealing compounds

Apply a sealing compound on the mating surfaces when specified by the procedure. Before you apply the sealing compound, prepare the surfaces as directed by the product container.

### Spare parts

Only use CNH Original Parts or NEW HOLLAND Original Parts.

Only genuine spare parts guarantee the same quality, duration, and safety as original parts, as they are the same parts that are assembled during standard production. Only CNH Original Parts or NEW HOLLAND Original Parts can offer this guarantee.

When ordering spare parts, always provide the following information:

- Machine model (commercial name) and Product Identification Number (PIN)
- Part number of the ordered part, which can be found in the parts catalog

---

## Protecting the electronic and/or electrical systems during charging and welding

To avoid damage to the electronic and/or electrical systems, always observe the following practices:

1. Never make or break any of the charging circuit connections when the engine is running, including the battery connections.
2. Never short any of the charging components to ground.
3. Always disconnect the ground cable from the battery before arc welding on the machine or on any machine attachment.
  - Position the welder ground clamp as close to the welding area as possible.
  - If you weld in close proximity to a computer module, then you should remove the module from the machine.
  - Never allow welding cables to lie on, near, or across any electrical wiring or electronic component while you weld.
4. Always disconnect the negative cable from the battery when charging the battery in the machine with a battery charger.

**NOTICE:** *If you must weld on the unit, you must disconnect the battery ground cable from the machine battery. The electronic monitoring system and charging system will be damaged if this is not done.*

5. Remove the battery ground cable. Reconnect the cable when you complete welding.

### **WARNING**

**Battery acid causes burns. Batteries contain sulfuric acid.**

**Avoid contact with skin, eyes or clothing. Antidote (external): Flush with water. Antidote (eyes): flush with water for 15 minutes and seek medical attention immediately. Antidote (internal): Drink large quantities of water or milk. Do not induce vomiting. Seek medical attention immediately. Failure to comply could result in death or serious injury.**

W0111A

## Special tools

The special tools that NEW HOLLAND suggests and illustrate in this manual have been specifically researched and designed for use with NEW HOLLAND machines. The special tools are essential for reliable repair operations. The special tools are accurately built and rigorously tested to offer efficient and long-lasting operation.

By using these tools, repair personnel will benefit from:

- Operating in optimal technical conditions
- Obtaining the best results
- Saving time and effort
- Working in safe conditions

## Specifications – General - Durabine™ 416 and Durabine™ 416 Specialty

Header to Speedrower® windrower compatibility	
Models	Speedrower® 200
	Speedrower® 220
	Speedrower® 240
	Speedrower® 260
Tire sizes	18.4 x 26
	16.9 x 28
	21L x 28
	480/80R26
	580/70R26
	600/65R28

Header dimensions	
Ground clearance to skid shoe *	686 mm (27 in) minimum tilt
Overall width **	5 m (16.3 ft)

\* With 18.4 x 26 tires

\*\* Overall width at ground level – Right-hand belt shield extends past the end of the cutterbar

Header weights	
Shipping – Header with conditioner*	2314 kg (5100 lb) [with chevron rubber rolls or flail conditioner]*
Shipping – Header without conditioner	1923 kg (4240 lb)
Operating – Header with conditioner*	2132 kg (4700 lb) [with chevron rubber rolls or flail conditioner]*
Operating – Header without conditioner	1686 kg (3717 lb)

\* For weights with steel rolls, add 32 kg (70 lb)

MowMax™ II cutterbar	
Cutting width	4.9 m (16.1 ft)
Cutting height *	18 - 89 mm (0.7 - 3.5 in)
Cutting height with optional hi-stubble shoes	76 - 159 mm (3.0 - 6.25 in)
Cutterbar angle range*	0 - 10 °
Cutterbar type	Modular with individual oil sumps
Cutterbar disc rotation configuration	Five pairs of counter-rotating discs- no co-rotating discs
Number of discs	10
Number of reversible, swing-away knives per disc	2
Disc cutting diameter	618 mm (24.3 in)
Disc drive – Type	Bevel gear sets in individually-sealed modules
Disc rotational speed – Maximum	2500 RPM
Knife tip speed	291 km/h (181 mph)
ShockPRO™ Shock protection	Frangible splines in the disc drive hub are standard on all non-drive discs

\* With 18.4 x 26 tires

Header drive	
Cutterbar input drive	Hydraulic driven with two hydraulic motors Left-hand: 49 cm³/rev (3 in³/rev) Right-hand: 65 cm³/rev (3.92 in³/rev)
Drive pressure – Forward	345 bar (5000 psi)
Drive pressure – Reverse	400 bar (5800 psi)

INTRODUCTION

<b>Header auger</b>	
Type	Floating
Diameter	<b>508 mm (20 in)</b>
Auger pitch	<b>508 mm (20 in)</b>
Length	<b>4355 mm (171.5 in)</b>
Flighting depth	<b>178 mm (7 in)</b>
Flighting thickness	<b>8 mm (0.312 in)</b>
Float range	<b>56 mm (2.2 in)</b>
Number of driven sprocket teeth / speed – Roll conditioner	33 teeth / <b>370 RPM</b> or <b>11.3 km/h (7 mph)</b> (standard)
	37 teeth / <b>329 RPM</b> or <b>10.1 km/h (6.25 mph)</b> (available through service parts)
Number of driven sprocket teeth / speed – Flail conditioner	33 teeth / <b>516 RPM</b> or <b>15.8 km/h (9.8 mph)</b>

<b>Header roll conditioner</b>	
Removable	Yes
Conditioner drive	4HB V-belt, enclosed gears with U-joints
Roll– Length	<b>2591 mm (102 in)</b>
Roll – Diameter	<b>264 mm (10.4 in)</b>
Roll – Speed	<b>938 RPM</b>
Roll – Material (Standard)	Rubber
Alternate roll material	Steel (with welded intermeshing lugs)
	High-contact urethane (with chevron grooves)
Roll surface pattern (Standard)	Chevron intermeshing lugs
Roll pressure system	Torsion bar (rolls separate automatically on-the-go to allow thick material to pass)
Roll adjustment method	Single crank
Roll gap	Adjustable, with stop bolt at each end
Windrow / swath width (minimum/maximum)	<b>965 - 2438 mm (38 - 96 in)</b>

<b>Header flail conditioner</b>	
Removable	Yes
Conditioner drive	4HB V-belt, enclosed gears with U-joints
Flail type	Individual free-swinging cast iron flails
Flail rotor – Length	<b>2286 mm (90 in)</b>
Flail speed at full cutterbar speed	<b>1310 RPM</b>
Windrow swath width (minimum/maximum)	<b>965 - 2134 mm (38 - 84 in)</b>

## Specifications – General - Durabine™ 419

Header to Speedrower® windrower compatibility	
Models	Speedrower® 240
	Speedrower® 260
Tire sizes	18.4 x 26
	16.9 x 28
	21L x 28
	480/80R26
	580/70R26
	600/65R28

Header dimensions	
Ground clearance to skid shoe *	754 mm (29.6 in) min tilt
Overall width **	5.9 m (19.4 ft)

\* With 23.1 x 26 tires

\*\* Overall width at ground level – Right-hand header drive belt shield extends past the end of the cutterbar

Header weights	
Shipping – Header with conditioner*	2604 kg (5740 lb) [with chevron rubber rolls]*
Shipping – Header without conditioner	2211 kg (4874 lb)
Operating – Header with conditioner*	2422 kg (5340 lb) [with chevron rubber rolls]*
Operating – Header without conditioner	1974 kg (4351 lb)

\* For header weights with steel rolls, add 32 kg (70 lb)

MowMax™ II cutterbar	
Cutting width	5.9 m (19.3 ft)
Cutting height *	18 - 89 mm (0.7 - 3.5 in)
Cutting height with optional hi-stubble shoes	76 - 159 mm (3.0 - 6.25 in)
Cutter bar tilt angle *	0 ° to -10 °
Cutterbar type	Modular with individual oil sumps
Cutterbar disc rotation configuration	Six pairs of counter-rotating discs – no co-rotating discs
Number of discs	12
Number of reversible, swing-away knives per disc	2
Disc cutting diameter	618 mm (24.3 in)
Disc drive – Type	Bevel gearsets in individually-sealed modules
Disc rotational speed – Maximum	2500 RPM
Knife tip speed	291 km/h (181 mph)
Shock protection	ShockPRO™ frangible splines in disc drive hub standard on all non-drive discs

\* With 23.1 x 26 tires

Header drive	
Cutterbar input drive	Hydraulic driven with two hydraulic motors Left-hand: 49 cm <sup>3</sup> /rev (3 in <sup>3</sup> /rev) Right-hand: 65 cm <sup>3</sup> /rev (3.92 in <sup>3</sup> /rev)
Drive pressure – Forward	345 bar (5000 psi)
Drive pressure – Reverse	400 bar (5800 psi)

Header auger	
Type	Floating, with reinforced flighting
Diameter	508 mm (20 in)
Auger pitch	508 mm (20 in)

INTRODUCTION

<b>Header auger</b>	
Length	<b>5311 mm (209.1 in)</b>
Flighting depth	<b>178 mm (7 in)</b>
Flighting thickness	<b>8 mm (0.312 in)</b>
Float range	<b>56 mm (2.2 in)</b>
Number of driven sprocket teeth / speed – Roll conditioner	33 teeth / <b>370 RPM</b> or <b>11.3 km/h (7 mph)</b> (standard)
	37 teeth / <b>329 RPM</b> or <b>10.1 km/h (6.25 mph)</b> (available through service parts)

<b>Header roll conditioner</b>	
Removable	Yes
Conditioner drive	4HB V-belt, enclosed gears with U-joints
Conditioner type	Rolls
Roll type	Machined rubber with intermeshing chevron lugs, chevron steel with intermeshing welded lugs, or machined urethane high-contact with chevron grooves
Roll length	<b>2591 mm (102 in)</b>
Roll diameter	<b>264 mm (10.4 in)</b>
Roll speed at full cutterbar speed	<b>938 RPM</b>
Roll tensioning	Torsion-bar roll pressure system adjusts with a single crank, rolls separate automatically on-the-go to allow thick material to pass
Roll gap	Adjustable, with stop bolt at each end
Windrow swath width (minimum/maximum)	<b>965 - 2438 mm (38 - 96 in)</b>

## Capacities

**NOTICE:** While any company can perform necessary maintenance or repairs on your equipment, NEW HOLLAND strongly recommends that you use only authorized NEW HOLLAND dealers and products that meet the given specifications. Improperly or incorrectly performed maintenance and repair voids the equipment warranty and may affect service intervals.

**NOTICE:** When you perform more detailed maintenance services such as service that are described in the machine service manual and that your NEW HOLLAND dealer service technician generally performs, always use the service-specific listed consumable products in the service manual. The service manual consumable products may vary from consumable products listed here for general maintenance of the machine.

The following table lists the types of consumable products for use when you perform general service on this machine.

Consumable product	Material specification	Use	Capacity
<b>Grease lubricant</b>			
<b>NEW HOLLAND AMBRA GR-9 MULTI-PURPOSE GREASE</b>	CNH Industrial: <b>MAT3550</b> Performance: <b>NLGI 2</b>	All grease fittings	Amount as specified for each fitting
<b>NEW HOLLAND AMBRA HI TEMP EP GREASE</b>	CNH Industrial: <b>MAT3550</b> Performance: <b>NLGI 2, GC-LB</b>	<b>ShockPRO™</b> hub	Not specified; amount as required
<b>Lubricating oils</b>			
<b>TUTELA HYPOIDE EP GEAR LUBE SAE 80W-90</b> or <b>CNH HYPOIDE SSL SYNTHETIC GEAR LUBE 75W-90 (synthetic)</b>	CNH Industrial: <b>MAT3511</b> Performance: <b>API GL-5, SAE J2360, MIL-PRF-2105E</b>	Header drive gearbox	<b>2.5 l (2.6 US qt)</b>
		Conditioner roll gearbox	<b>500 ml (16.9 US fl oz)</b>
		Cutterbar modules	<b>310 mL (10.5 US fl oz) each</b>
<b>TUTELA ENGINE OIL SAE 30</b>	CNH Industrial: <b>MAT3507</b> Performance: <b>API CF-2</b>	Auger drive chain	Not specified; amount as required
<b>Sealants</b>			
<b>LOCTITE® 242®</b>	<b>ASTM D5363 MIL-S-46163A TYPE II GRADE N</b>	Specified hardware	Not specified; amount as required
<b>LOCTITE® 567™ PST PIPE SEALANT</b>	<b>ASTM D6396 MH8007 MH27131</b>	Hydraulic fittings	Not specified; amount as required
<b>LOCTITE® 592™ PST</b>	-	Cutterbar module oil drain plug	Not specified; amount as required
		Conditioner roll drive gearbox oil drain plug and check level plug	
<b>LOCTITE® SI 598™ BLACK</b>	-	Header drive gearbox oil drain plug	Not specified; amount as required
<b>Cleaners</b>			
<b>LOCTITE® ODC-FREE CLEANER AND DEGREASER</b>	-	Flushing out metal fines from the cutterbar modules	Not specified; amount as required