

Product: New Holland TT3840F/TT3840/TT3880F/TT4030 Tractor Service Repair Manual

Full Download: <https://www.arepairmanual.com/downloads/new-holland-tt3840f-tt3840-tt3880f-tt4030-tractor-service-repair-manual/>



SERVICE MANUAL

TT3840F

TT3840

TT3880F

TT4030

Sample of manual. Download All 940 pages at:

<https://www.arepairmanual.com/downloads/new-holland-tt3840f-tt3840-tt3880f-tt4030-tractor-service-repair-manual/>

Product: New Holland TT3840F/TT3840/TT3880F/TT4030 Tractor Service Repair Manual

Full Download: <https://www.arepairmanual.com/downloads/new-holland-tt3840f-tt3840-tt3880f-tt4030-tractor-service-repair-manual/>

Link Product / Engine

Product	Market Product	Engine
TT3840	International Region	8035.05.716
TT3840	Latin America	8035.05.716
TT3840F	Latin America	8035.05.716
TT3840F	International Region	8035.05.716
TT3880F	Latin America	8045.05.716
TT3880F	International Region	8045.05.716

Sample of manual. Download All 940 pages at:

<https://www.arepairmanual.com/downloads/new-holland-tt3840f-tt3840-tt3880f-tt4030-tractor-service-repair-manual/>

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.102] Pan and covers	10.2
[10.106] Valve drive and gears	10.3
[10.101] Cylinder heads	10.4
[10.105] Connecting rods and pistons.....	10.5
[10.103] Crankshaft and flywheel.....	10.6
[10.110] Balancer and damper	10.7
[10.114] Pump drives	10.8
[10.210] Lift pump and lines	10.9
[10.218] Fuel injection system.....	10.10
[10.202] Air cleaners and lines	10.11
[10.254] Intake and exhaust manifolds and muffler	10.12
[10.400] Engine cooling system	10.13
[10.414] Fan and drive	10.14
[10.304] Engine lubrication system.....	10.15
Clutch	18
[18.104] Clutch hydraulic release control.....	18.1
[18.110] Clutch and components	18.2
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.140] Mechanical transmission internal components.....	21.3
Four-Wheel Drive (4WD) system	23
[23.304] Four-Wheel Drive (4WD) gearbox	23.1
[23.314] Drive shaft.....	23.2

Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.310] Final drives	25.4
[25.400] Non-powered front axle	25.5
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO)	31
[31.101] Rear mechanical control	31.1
[31.114] Two-speed rear Power Take-Off (PTO)	31.2
Brakes and controls	33
[33.120] Mechanical service brakes	33.1
[33.110] Parking brake or parking lock	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.106] Variable displacement pump	35.2
[35.100] Main lift system.....	35.3
[35.116] Three-point hitch cylinder	35.4
[35.114] Three-point hitch control valve	35.5
Hitches, drawbars, and implement couplings.....	37
[37.110] Rear three-point hitch	37.1
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2

[41.216] Cylinders	41.3
Wheels	44
[44.511] Front wheels	44.1
Electrical systems	55
[55.100] Harnesses and connectors	55.1
[55.201] Engine starting system	55.2
[55.301] Alternator	55.3
[55.302] Battery	55.4
[55.408] Warning indicators, alarms, and instruments	55.5
Platform, cab, bodywork, and decals	90
[90.151] Cab interior	90.1



INTRODUCTION

Contents

INTRODUCTION

Foreword	3
TT3840, TT3840F, TT3880F, TT4030 INT, TT4030 LA	
Foreword Ecology and the Environment	4
TT3840, TT3840F, TT3880F, TT4030 INT, TT4030 LA	
Advice	5
TT3840, TT3840F, TT3880F, TT4030 INT, TT4030 LA	
International symbols	6
TT3840, TT3840F, TT3880F, TT4030 INT, TT4030 LA	
Safety rules	7
TT3840, TT3840F, TT3880F, TT4030 INT, TT4030 LA	
Safety rules	11
TT3840, TT3840F, TT3880F, TT4030 INT, TT4030 LA	
Basic instructions Hardware	12
TT3840, TT3840F, TT3880F, TT4030 INT, TT4030 LA	
Torque Specification Tables	13
TT3840, TT3840F, TT3880F, TT4030 INT, TT4030 LA	
General specification - Biodiesel Fuels	18
TT3840, TT3840F, TT3880F, TT4030 INT, TT4030 LA	
Consumables Loctite® Product Chart	19
TT3840, TT3840F, TT3880F, TT4030 INT, TT4030 LA	

Foreword

TT3840, TT3840F, TT3880F, TT4030 INT, TT4030 LA

This repair manual provides the technical information needed to properly service the New Holland TT model tractor. Use this manual in conjunction with the operator's manual for complete operation, adjustment, and maintenance information.

On New Holland equipment, left and right are determined by standing behind the unit, looking in the direction of travel.

Foreword Ecology and the Environment

TT3840, TT3840F, TT3880F, TT4030 INT, TT4030 LA

Soil, air, and water are vital factors of agriculture and life in general. When legislation does not yet rule the treatment of some of the substances which are required by advanced technology, common sense should govern the use and disposal of products of a chemical and petrochemical nature.

NOTICE: *The following are recommendations which may be of assistance:*

- Become acquainted with and ensure that you understand the relative legislation applicable to your country.
- Where no legislation exists, obtain information from suppliers of oils, filters, batteries, fuels, antifreeze, cleaning agents, etc., with regard to their effect on man and nature and how to safely store, use and dispose of these substances.
- Agricultural consultants will, in many cases, be able to help you as well.

HELPFUL HINTS

- Avoid filling tanks using cans or inappropriate pressurized fuel delivery systems which may cause considerable spillage.
- In general, avoid skin contact with all fuels, oils, acids, solvents, etc. Most of them contain substances which may be harmful to your health.
- Modern oils contain additives. Do not burn contaminated fuels and or waste oils in ordinary heating systems.
- Avoid spillage when draining off used engine coolant mixtures, engine, gearbox and hydraulic oils, brake fluids, etc. Do not mix drained brake fluids or fuels with lubricants. Store them safely until they can be disposed of in a proper way to comply with local legislation and available resources.
- Modern coolant mixtures, i.e. antifreeze and other additives, should be replaced every two years. They should not be allowed to get into the soil but should be collected and disposed of properly.
- Do not open the air-conditioning system yourself. It contains gases which should not be released into the atmosphere. Your NEW HOLLAND dealer or air conditioning specialist has a special extractor for this purpose and will have to recharge the system properly.
- Repair any leaks or defects in the engine cooling or hydraulic system immediately.
- Do not increase the pressure in a pressurized circuit as this may lead to a component failure.
- Protect hoses during welding as penetrating weld splatter may burn a hole or weaken them, allowing the loss of oils, coolant, etc.

Advice

TT3840, TT3840F, TT3880F, TT4030 INT, TT4030 LA

**CALIFORNIA
PROPOSITION 65 WARNING**

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

Battery post, terminals and related accessories contain lead and lead compounds.

Wash hands after handling

BT09A213 1

International symbols

TT3840, TT3840F, TT3880F, TT4030 INT, TT4030 LA

As a guide to the operation of the machine, various universal symbols have been utilized on the instruments, controls, switches, and fuse box. The symbols are shown below with an indication of their meaning.

 Thermostat	Start-up help	 Radio	 PTO	 Control	Control
 Alternator charging		KAM	Keep alive memory	N	Transmission in neutral
 Fuel level		 Turn signals		 Creeper gears	Accessory socket
 Auto Fuel shut-off		 Turn signals -one trailer		 Slow or low setting	Implement socket
 Engine speed(rev/min x 100)		 Turn signals -two trailers		 Fast or high setting	% slip
 Hours recorded		 Windshield front wash/wipe		 Ground speed	Hitch raise (rear)
 Engine oil pressure		 Windshield front wash/wipe		 Differential lock	Hitch lower (rear)
 Engine coolant temperature		 Temperature control		 rear axle temperature rear axle	Hitch height limit (rear)
 Coolant level		 Heater fan		 Transmission oil pressure	Hitch height limit (front)
 Tractor lights		 Air COND.		 FWD engaged	Hitch disabled
 Head Light main beam		 Air filter plugged		 FWD disengaged	Filter transmission system
 Head Light dipped beam		 Parking sw		 Warning!	Remote valve extend
 Work lamps		 Brake fluid level		 Hazard warning lights	Remote oscillating
 valve retraction lamps		 Trailer sw		 Variable control	Remote valve float
 Klaxon		 Roof beacon		 Pressurized!	Malfunction! See Operator's manual
		 Warning! Corrosive substance		Open carefully	Malfunction! (alternative symbol)

Safety rules

TT3840, TT3840F, TT3880F, TT4030 INT, TT4030 LA

PRECAUTIONARY STATEMENTS

Personal Safety

LEGAL DUTIES

Your machine may be equipped with special guarding or other devices in compliance with local legislation. Some of these require active use by the operator. Therefore, check local legislation on the usage of this machine.

ACCIDENT PREVENTION

Most accidents or injuries that occur in workshops are the result of a non compliance to simple and fundamental safety regulations. For this reason, IN MOST CASES THESE ACCIDENTS CAN BE AVOIDED by foreseeing possible causes and consequently acting with the necessary caution and care.

Accidents may occur with all types of machines, regardless of how well the machine in question was designed and built.

A careful and informed service technician is the best guarantee against accidents.

Great awareness of the most basic safety rules is normally sufficient to avoid many serious accidents.

ATTENTION: *Switch off the machine and remove the key. Check that all moving parts have stopped and that all pressure in the systems is relieved before you clean, adjust or lubricate the equipment. Failure to comply with these procedures can result in death or serious injury.*

SAFETY REQUIREMENTS FOR FLUID AND HYDRAULIC SYSTEM COMPONENTS - (EUROPEAN STANDARD PR EN 982)

Flexible hose assemblies must not be constructed from hoses which have been previously used as part of a hose assembly.

Do not weld hydraulic piping.

When flexible hoses or piping are damaged, replace them immediately.

It is forbidden to modify a hydraulic accumulator by machining, welding or any other means.

Before removing hydraulic accumulators for maintenance, the liquid pressure in the accumulators must be reduced to zero.

Pressure check on hydraulic accumulators shall be carried out by method recommended by the accumulator manufacturer.

Care must be taken not to exceed the maximum allowable pressure of the accumulator. After any check of adjustment there must be no leakage of gas.

SAFETY RULES

A careful operator is the best operator. Most accidents can be avoided by observing certain precautions. To help prevent accidents, read and take the following precautions before operating this tractor. Equipment should be operated only by those who are responsible and instructed to do so.

THE TRACTOR

1. Read the Operator's Manual carefully before using the tractor. Lack of operating knowledge can lead to accidents.
2. Use an approved roll bar and seat belt for safe operation. Overturning a tractor without a roll bar can result in death or injury. If your tractor is not equipped with a roll bar and seat belt, see your NEW HOLLAND Dealer.
3. Always wear your seat belt. The only instance when the seat belt should not be used is if the roll bar has been removed from the tractor or folding ROPS is in down position.

INTRODUCTION

4. If a front end loader is to be installed, always use a FOPS (Falling Object Protective Structure) canopy to avoid injury from falling objects.
5. Use the handholds and step plates when getting on and off the tractor to prevent falls. Keep steps and platform cleared of mud and debris.
6. Do not permit anyone but the operator to ride on the tractor. There is no safe place for riders.
7. Keep all safety decals clean of dirt and grime, and replace all missing, illegible, or damaged safety decals.

SERVICING THE TRACTOR

1. The cooling system operates under pressure which is controlled by the radiator cap. It is dangerous to remove the cap while the system is hot. Always turn the cap slowly to the first stop and allow pressure to escape before removing the cap entirely.
2. Keep any type of open flame away from the tractor and do not smoke while refueling. Let the engine cool down before refueling.
3. Keep the tractor and equipment, particularly brakes and steering, maintained in a reliable and satisfactory condition to ensure your safety and comply with legal requirements.
4. Keep open flame or cold weather starting aids away from the battery to prevent fires or explosions. Use jumper cables according to instructions to prevent sparks which could cause explosion.
5. Stop the engine before performing any service on the tractor.
6. Escaping hydraulic/diesel fluid under pressure can penetrate the skin causing serious injury. If fluid is injected into the skin, obtain medical attention immediately or gangrene may result.
 - DO NOT use your hand to check for leaks.
 - Use a piece of cardboard or paper to search for leaks.
 - Stop the engine and relieve pressure before connecting or disconnecting lines.
 - Tighten all connections before starting the engine or pressurizing lines.
7. Do not modify or permit anyone else to modify or alter this tractor or any of its components or functions without first consulting a NEW HOLLAND Dealer.
8. The fuel oil in the injection system is under high pressure and can penetrate the skin. Unqualified persons should not remove or attempt to adjust a pump, injector, nozzle, or any other part of the fuel injection system. Failure to follow these instructions can result in serious injury.
9. Continuous long-term contact with used engine oil may cause skin cancer. Avoid prolonged contact with used engine oil. Wash your skin with soap and water immediately.
10. Some components of your tractor, such as gaskets and friction surfaces (brake linings, clutch linings, etc.) may contain asbestos. Breathing asbestos dust is dangerous to your health. You are advised to have any maintenance or repair on such components carried out by an authorized NEW HOLLAND Dealer. However, if service operations are to be undertaken on parts that contain asbestos, the essential precautions listed below must be observed:
 - Work out of doors or in a well ventilated area.
 - Dust found on the tractor or produced during work on the tractor should be removed by extraction, not by blowing.
 - Dust waste should be dampened, placed in a sealed container, and marked to ensure safe disposal.
 - If any cutting, drilling, etc. is attempted on materials containing asbestos, the item should be dampened and only hand tools or low speed power tools used.

OPERATING THE TRACTOR

1. Before starting the tractor, apply the parking brake, place the PTO lever in the 'OFF' position, the lift control lever in the down position, the remote control valve levers in the neutral position, and the transmission in neutral.
2. Always sit in the tractor seat when starting the engine or operating controls. Do not start the engine or operate controls while standing beside the tractor.
3. Do not bypass the neutral start switches. Consult your NEW HOLLAND Dealer if your neutral start controls malfunction. Use jumper cables only in the recommended manner. Improper use can result in tractor runaway.

INTRODUCTION

4. Avoid accidental contact with the gear shift lever while the engine is running, as this can cause unexpected tractor movement.
5. Before getting off the tractor, disengage the PTO, turn the engine off, and apply the parking brake. Never get off the tractor while it is in motion.
6. Do not park the tractor on a steep incline.
7. Do not operate the tractor engine in an enclosed building without adequate ventilation. Exhaust fumes can cause death or illness.
8. If the power steering or engine ceases operating, stop the tractor immediately.
9. Pull only from the drawbar or the lower link drawbar in the down position. Use only a drawbar pin that locks in place. Pulling from the tractor rear axle or any point above the axle may cause the tractor to upset.
10. If the front end of the tractor tends to rise when heavy implements are attached to the three-point hitch, install front end or front wheel weights. Do not operate the tractor with a light front end.
11. Always set the hydraulic selector lever in position control when attaching or transporting equipment. Ensure hydraulic couplers are properly mounted and will disconnect safely in case of accidental detachment of implement
12. Do not leave equipment in the raised position.
13. Use the flasher/turn signal lights and SMV signs when traveling on public roads both day and night (unless prohibited by law).
14. When operating at night, adjust lights to prevent blinding oncoming drivers.

DRIVING THE TRACTOR

1. Watch where you are going, especially at row ends, on roads, around trees and low hanging obstacles.
2. To avoid upsets, drive the tractor with care and at a safe speed. Use extra caution when operating over rough ground, when crossing ditches or slopes, and when turning corners.
3. To provide two-wheel braking, lock tractor brake pedals together when transporting on roads.
4. Do not coast or free wheel down hills. Use the same gear when going downhill as is used when going uphill.
5. Any towed vehicle with a total weight exceeding that of the towing tractor should be equipped with brakes for safe operation.
6. If the tractor becomes stuck or the tires become frozen to the ground, back up the tractor to prevent upset.
7. Always check overhead clearance, especially when transporting the tractor.
8. When operating at night, adjust lights to prevent blinding oncoming drivers.

OPERATING THE PTO

1. When operating PTO driven equipment, shut off the engine and wait until the PTO stops before getting off the tractor and disconnecting the equipment.
2. Do not wear loose clothing when operating the power take-off or when near rotating equipment.
3. When operating stationary PTO driven equipment, always place all gear shift levers in neutral position.
4. To avoid injury, do not clean, adjust, unclog, or service PTO driven equipment when the tractor engine is running.
5. Ensure the PTO master shield is installed at all times. Always replace the PTO shield cap when the PTO is not in use.

DIESEL FUEL

1. UNDER NO CIRCUMSTANCES should gasoline, alcohol, or blended fuels be added to diesel fuel. These combinations can create an increased fire or explosive hazard. Such blends are more explosive than pure gasoline in a closed container such as a fuel tank. DO NOT USE THESE BLENDS.
2. Never remove the fuel cap with the engine running or hot.
3. Do not smoke while refueling or when standing near fuel.
4. Maintain control of the fuel filler pipe nozzle when filling the tank.
5. Do not fill the fuel tank to capacity. Allow room for some expansion.
6. Wipe up spilled fuel immediately.

7. Always tighten the fuel tank cap securely.
8. If the original fuel tank cap is lost, replace it with a NEW HOLLAND approved cap. A non-approved, proprietary cap may not be safe.
9. Keep equipment clean and properly maintained.
10. Do not drive equipment near open fires.
11. Never use fuel for cleaning purposes.
12. Arrange fuel purchases so that winter grade fuels are not held over and used in the spring.

SAFETY FRAME (ROPS)

Your NEW HOLLAND tractor is equipped with a safety frame. It must be maintained in a serviceable condition. Be careful when driving through doorways or working in confined spaces with low headroom.

UNDER NO CIRCUMSTANCES should you:

- Modify, drill, or alter the safety frame in any way. Doing so may render you liable to legal prosecution.
- Attempt to straighten or weld any part of the main frame or retaining brackets which have suffered damage. Doing so may weaken the structure and endanger your safety.
- Secure any parts on the main frame or attach your safety frame with anything other than the special high tensile bolts and nuts specified.
- Attach chains or ropes to the main frame for pulling purposes.
- Take unnecessary risks even though your safety frame affords you the maximum protection possible.

Safety rules

TT3840, TT3840F, TT3880F, TT4030 INT, TT4030 LA

Personal safety



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

Throughout this manual and on machine safety signs, you will find the signal words DANGER, WARNING, and CAUTION followed by special instructions. These precautions are intended for the personal safety of you and those working with you.

Read and understand all the safety messages in this manual before you operate or service the machine.

⚠ DANGER indicates a hazardous situation that, if not avoided, will result in death or serious injury. The color associated with DANGER is RED.

⚠ WARNING indicates a hazardous situation that, if not avoided, could result in death or serious injury. The color associated with WARNING is ORANGE.

⚠ CAUTION indicates a hazardous situation that, if not avoided, could result in minor or moderate injury. The color associated with CAUTION is YELLOW.

FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION MESSAGES COULD RESULT IN DEATH OR SERIOUS INJURY.

Machine safety

NOTICE: *Notice indicates a situation that, if not avoided, could result in machine damage or property damage. The color associated with Notice is BLUE.*

Throughout this manual you will find the signal word Notice followed by special instructions to prevent machine damage or property damage. The word Notice is used to address practices not related to personal safety.

Information

NOTE: *Note indicates additional information that clarifies steps, procedures, or other information in this manual.*

Throughout this manual you will find the word Note followed by additional information about a step, procedure, or other information in the manual. The word Note is not intended to address personal safety or property damage.

Basic instructions Hardware

TT3840, TT3840F, TT3880F, TT4030 INT, TT4030 LA

General

The TT tractor has been built using metric hardware.

NOTE: Be sure to use the hardware specified when using tapped holes, as trying to install a metric bolt in an inch thread, or an inch bolt in a metric thread, will damage the thread.

Certain hardware must be tightened to specific torque specifications. If specific torque specifications are not noted, tighten the hardware to the standard torque chart specification listed in this manual.

Plating

Hardware used on New Holland balers is plated with zinc chromate (gold color). Gold colored hardware has different torquing requirements from unplated or zinc plated (silver color) hardware because of the difference in the coefficient of friction of the plating material. The torque charts in this manual list the correct specifications for gold, silver, and unplated bolts.

Nut Tightening

Whenever possible, the nut should be tightened, not the head of the bolt. When tightening using the bolt head, the clamp load can be lost because some of the torque applied twists the bolt instead of tensioning (stretching) it. The tension on the bolt is what holds the joint together.

Approximately 90% of the torque applied during assembly goes to overcoming friction between the parts. The other 10% is used to tension (stretch) the bolt. After assembly, the frictional forces disappear, which is the basis for the saying 'If it does not fail during assembly, it will not fail in service.' The bolt may later fail due to other factors, but not from being over tightened.

Locknuts

Most locknuts are coated with a special lubricant that is dry to the touch. Anytime a locknut is used, a lower than normal torque is required. Refer to the torque charts in this manual for specific values.

Jam Nuts

When using a jam nut to lock a regular nut, the jam nut should be installed first and tightened to one half the recommended torque, then held in place while installing a regular nut to the recommended torque.

Thread Lubrication

The addition of antiseize compound, Molykote, oil, graphite, or any other lubricant to a bolt decreases the friction between it and a nut. This makes it necessary to reduce the recommended torque to prevent over tensioning of the bolt. When using the torque charts in this manual, decrease the value by 20% whenever a lubricant is used.

Torque Specification Tables

TT3840, TT3840F, TT3880F, TT4030 INT, TT4030 LA

Standard Bolt Hardware & Hydraulic Connector Torques, Specifications and Information

This specification establishes general torque values to be used in bolted joints for metric and inch hardware. This specification is assumed to apply unless another specification (standard or specified requirement) is indicated in the repair manual.

NOTE: These Standards do not include electrical or hydraulic components, they are referred to in their specific charts or tables.

INCH 'NON-FLANGED' HARDWARE AND LOCKNUTS {MINIMUM HARDWARE TIGHTENING TORQUES}

IN NEWTON-METERS (FOOT-POUNDS) FOR NORMAL ASSEMBLY APPLICATIONS								
	SAE GRADE 2		SAE GRADE 5		SAE GRADE 8		LOCKNUTS	
Nominal Size	Unplated or Plated Silver	Plated w/ZnCr Gold	Unplated or Plated Silver	Plated w/ZnCr Gold	Unplated or Plated Silver	Plated w/ZnCr Gold	Gr.B w/Gr5 Bolt	Gr.C w/Gr8 Bolt
1/4	6.2 (55)*	8.1 (72)*	9.7 (86)*	13 (112)*	14 (121)*	18 (157)*	8.5 (75)*	12.2 (109)*
5/16	13 (115)*	17 (149)*	20 (178)*	26 (229)*	28 (21)	37 (27)	17.5 (155)*	25 (220)*
3/8	23 (17)	30 (22)	35 (26)	46 (34)	50 (37)	65 (48)	31 (23)	44 (33)
7/16	37 (27)	47 (35)	57 (42)	73 (54)	80 (59)	104 (77)	50 (37)	71 (53)
1/2	57 (42)	73 (54)	87 (64)	113 (83)	123 (91)	159 (117)	76 (56)	108 (80)
9/16	81 (60)	104 (77)	125 (92)	163 (120)	176 (130)	229 (169)	111 (82)	156 (115)
5/8	112 (83)	145 (107)	174 (128)	224 (165)	244 (180)	316 (233)	153 (113)	215 (159)
3/4	198 (146)	256 (189)	306 (226)	397 (293)	432 (319)	560 (413)	271 (200)	383 (282)
7/8	193 (142)	248 (183)	495 (365)	641 (473)	698 (515)	904 (667)	437 (323)	617 (455)
1	289 (213)	373 (275)	742 (547)	960 (708)	1048 (773)	1356 (1000)	654 (483)	924 (681)

NOTE: Torque values shown with * are inch pounds.

NOTICE: Values shown on these charts are minimum hardware tightening torques unless otherwise stated.

METRIC 'NON-FLANGED' HARDWARE AND LOCKNUTS {MINIMUM HARDWARE TIGHTENING TORQUES}

	CLASS 5.8		CLASS 8.8		CLASS 10.9		LOCK-NUTS
Nominal Size	Unplated	Plated w/ZnCr	Unplated	Plated w/ZnCr	Unplated	Plated w/ZnCr	Cl.8 w/Cl8.8 Bolt
M4	1.7 (15)*	2.2 (19)*	2.6 (23)*	3.4 (30)*	3.7 (33)*	4.8 (42)*	2.3 (20)*
M6	5.8 (51)*	7.6 (67)*	8.9 (79)*	12 (102)*	13 (115)*	17 (150)*	7.8 (69)*
M8	14 (124)*	18 (159)*	22 (195)*	28 (21)	31 (23)	40 (30)	19 (169)*
M10	28 (21)	36 (27)	43 (32)	56 (41)	61 (45)	79 (58)	38 (28)
M12	49 (36)	63 (46)	75 (55)	97 (72)	107 (79)	138 (102)	66 (49)
M16	121 (89)	158 (117)	186 (137)	240 (177)	266 (196)	344 (254)	164 (121)
M20	237 (175)	307 (226)	375 (277)	485 (358)	519 (383)	671 (495)	330 (243)
M24	411 (303)	531 (392)	648 (478)	839 (619)	897 (662)	1160 (855)	572 (422)

NOTE: Torque values shown with * are inch pounds.

SAE HARDWARE IDENTIFICATION CHART

Grade	1 or 2	5	8
SAE Markings for Bolts and Cap Screws			

SAE Markings for Hex Nuts			
Grade A-B-C Locknuts	A (No Notches)	B (Three Marks)	C (Six Marks)

METRIC HARDWARE IDENTIFICATION CHART

Class	5.8	8.8	10.9
Hex Cap Screw and Carriage Bolts	Located on the face or flat, on the cap of the bolt	Located on the face or flat, on the cap of the bolt	Located on the face or flat, on the cap of the bolt
Hex Nuts and Locknuts	Located on the face or flat of the nut	Located on the face or flat of the nut	Located on the face or flat of the nut

Metric cap screws and nuts are identified by the grade number stamped on the head of the cap screw or on the surface of the nuts. U.S. customary cap screws are identified by radial lines stamped on the head of the cap screw.

DEFINITIONS:

1. Break-Away Torque - Torque measured in the direction of tightening, the moment before the bolt/nut starts to turn.
2. Clamping Force - Force equal to the tension in the fastener that clamps the parts together.
3. Stabilized Torque - Torque measured on a joint that has had a settling time after fastener installation, and the torque is measured in the direction of tightening, the moment after the bolt/nut begins to turn.
4. Proof Load - Safe test load for fasteners, approximately 10% below the yield load.
5. Torque - Force on the wrench handle times the handle length.
6. Torque and Turn - Bolting method utilizing a torque sufficient to close the joint, followed by rotation of a specific angle to obtain the desired bolt stretch.
7. Torque to Yield - Bolting method that tightens the joint until 0.2% yield is detected. Generally requires a computer monitored tightening tool.
8. Target Torque - Torque specified by engineering, generally nominal torque.
9. Ultimate Load - Load when bolt failure occurs.
10. Yield Load - Load when 0.2% deformation occurs.

NOTE: Fasteners should be replaced with the same or higher grade. If higher grade fasteners are used, these should only be tightened to the strength of the original. When replacing cap screws, always use a cap screw of the same measurement and strength as the cap screw being replaced.

NOTE: Make sure the fasteners threads are clean, and that thread engagement is started. This will prevent them from failing when being tightened. Assure that joints that utilize threaded fasteners are properly tightened, and that they remain tight during the period of their intended usage.

NOTE: Tighten plastic insert or crimped steel-type lock nuts to approximately 50 % of table torque, applied to the nut, not the bolt head. Tighten toothed or serrated type lock nuts to their full torque value.


NOTE: Always use the torque values listed in the supplied charts in this section when values are not supplied in a procedure.

NOTE: DO NOT use these torque values when values are given in a specified procedure.

NOTE: Reuse of fasteners. Fasteners that have been tightened above yield point during assembly should not be reused after disassembly. They have been permanently deformed and the elastic range has been shifted closer to the ultimate tensile point.

NOTE: Torque and Turn is a recommended procedure for manufacturing and service when sophisticated tools are not available, especially for large diameter fasteners.

NOTE: Large diameter fasteners, unless specifically stated, should be tightened in sequence using the related torque chart below, at a low torque that is sufficient until the joint is closed. Each bolt is then rotated 90 degrees in sequence. Each bolt is then rotated another 90 degrees in sequence. The result is a clamp load above the yield point. This procedure results in a consistent clamp load. The fasteners should not be reused after disassembly.

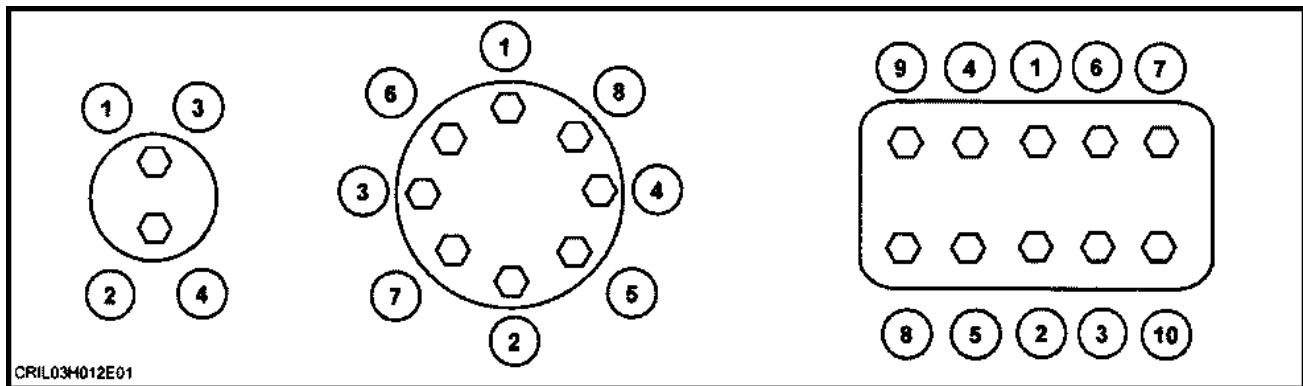

NOTE: Shown above is the suggested initial torque tightening sequences for general applications, tighten in sequence from item 1 through to the last item of hardware.

Hydraulic Hoses and Tubes

NOTE: Tightening the joint to the proper torque will keep it leak free, and prevent it from damaging the hose or fitting.

Always replace hoses and tubes with damaged cone ends or the end connections.

When installing a new hose, loosely connect each end and make sure the hose fits its desired location, without kinking or twisting, before tightening the connection. Tighten non-swivel end of hose first if applicable. Tighten the hose clamps enough to hold the hose without chafing but not so tight as to crush the ends.

Keep the hoses and tubes clear of moving parts and replace any hoses and fittings that have moved from their original positions over time. A hose with a chafed outer cover will allow moisture to get into the system. Concealed corrosion of the wire reinforcement will then occur along the hose length and result in hose failure.

Ballooning of the hose indicates internal leakage as the hose deteriorates. This condition can rapidly lead to hose failure.

Kinked, crushed, stretched or damaged hoses generally suffer internal structural damage that restricts fluid flow, reduces performance and ultimately causes the hose to fail.

Do not allow free moving, unsupported hoses or tubes to touch each other or related working surfaces. This causes chafing and reduces line life.

National Pipe Thread (NPT) Fittings

Before installing and tightening pipe fittings, clean the threads with a cleaning solvent or Loctite® brand cleaner. Apply the appropriate Loctite® brand sealant to all fittings including stainless steel, unless as otherwise stated. Generally Loctite® 567™ can be used for all fittings including stainless steel. Loctite® 565™ is used for most metal fittings. For high filtration/zero contamination systems use Loctite® 545™.

NPT PIPE FITTING TORQUE CHART

Thread Size	Torque (Maximum)
1/8" - 27	13 Nm (10 lb ft)
1/4" - 18	16 Nm (12 lb ft)
3/8" - 18	22 Nm (16 lb ft)
1/2" - 14	41 Nm (30 lb ft)
3/4" - 14	54 Nm (40 lb ft)

PIPE FITTING

Nom. SAE Dash Size	Thread Size	TFFT (Turns For Finger Tight)
-2	1/8 - 27	2.0 - 3.0
-4	1/4 - 18	2.0 - 3.0
-6	3/8 - 18	1.5 - 3.0
-8	1/2-14	2.0 - 3.0
-12	3/4 - 14	2.0 - 3.0
-16	1 - 11-1/2	1.5 - 2.5
-20	1-1/4 - 11-1/2	1.5 - 2.5
-24	1-1/2 - 11-1/2	1.5 - 2.5
-32	2 - 11-1/2	1.5 - 2.5

Apply sealant/lubricant to male pipe threads. The first two threads should be left uncovered to avoid system contamination. Screw pipe fitting into female pipe port to the finger tight position. Wrench tighten fitting to the appropriate turns from finger tight (TFFT) shown in table above, making sure the tube end of an elbow or tee fitting is aligned to receive incoming tube or hose fitting.

Installation of Adjustable Fittings in Straight Thread O Ring Bosses

1. Lubricate the O ring by coating it with light oil or petroleum jelly. Install the O ring in the groove adjacent to the metal backup washer which is assembled at the extreme end of the groove.

2. Install the fitting into the SAE straight thread boss until the metal backup washer contacts the face of the boss.

NOTE: Do not over tighten and distort the metal backup washer.

3. Position the fitting by turning out (counter clockwise) up to a maximum of one turn. Holding the pad of the fitting with a wrench, tighten the locknut and washer against the face of the boss.

4. When hose ends or connectors are made of materials other than steel, different torque values may be required.

INTRODUCTION

O RING BOSS END FITTING OR LOCK NUT

Nom. SAE Dash Size	Thread Size	Newton-meters	lb/in	lb/ft
-6	9/16 - 18	48 to 54	432 to 480	
-8	3/4 - 16	70 to 78	612 to 684	
-10	7/8 - 14	102 to 114		75 to 84
-12	1-1/16 - 12	142 to 160		105 to 117
-16	1-5/16 - 12	237 to 254		175 to 187

37 DEGREE FLARE FITTING (STEEL HYDRAULIC FITTINGS)

Nom. SAE Dash Size	Tube OD/Hose ID	Thread Size	Newton-meters	lb/in	lb/ft
-2		5/16 - 24	8 to 9	72 to 84	
-3		3/8 - 24	11 to 12	96 to 108	
-4	6.4 mm	1/4 inch	14 to 16	120 to 144	
-5	7.9 mm	5/16 inch	18 to 21	156 to 192	
-6	9.5 mm	3/8 inch	27 to 33	240 to 300	
-8	12.7 mm	1/2 inch	46 - 56	408 to 504	
-10	15.9 mm	5/8 inch	77 to 85	684 to 756	
-12	19.0 mm	3/4 inch	107 to 119		79 to 88
-14	22.2 mm	7/8 inch	127 to 140		94 to 103
-16	25.4 mm	1.0 inch	131 to 156		97 to 117
-20	31.8 mm	1-1/4 inch	197 to 223		145 to 165
-24	38.1 mm	1-1/2 inch	312 to 338		230 to 250

37 DEGREE FITTINGS

TUBE NUTS FOR 37 DEGREE FLARED FITTINGS					O RING BOSS PLUGS ADJUSTABLE FITTING LOCKNUTS, SWIVEL JIC-37° SEATS				
Size	Tubing OD		Thread Size	TORQUE		TORQUE			
	mm	in.		Min.	Max.	Min.	Max.	Min.	Max.
4	6.4	1/4	7/16-20	12	16	9	12	8	14
5	7.9	5/16	1/2-20	16	20	12	15	14	20
6	9.5	3/8	9/16-18	29	33	21	24	20	27
8	12.7	1/2	3/4-16	47	54	35	40	34	41
10	15.9	5/8	7/8-14	72	79	53	53	47	54
12	19.1	3/4	1-1/16-12	104	111	77	82	81	95
14	22.2	7/8	1-3/16-12	122	136	90	100	95	109
16	25.4	1	1-5/16-12	149	163	110	120	108	122
20	31.8	1-1/4	1-5/8-12	190	204	140	150	129	158
								95	115

These torques are not recommended for tubes of **12.7 mm (0.5 in)** OD and larger with wall thickness of **0.89 mm (0.035 in)** or less. The torque is specified for **0.89 mm (0.035 in)** wall tubes on each application individually. Before installing and torquing 37° flared fittings, clean the face of the flare and threads with a cleaning solvent or Loctite® brand cleaner, and apply hydraulic sealant Loctite® 569™ to the 37° flare and the threads. Install fitting, and torque to specified torque, loosen fitting and re-torque to specifications.

General specification - Biodiesel Fuels

TT3840, TT3840F, TT3880F, TT4030 INT, TT4030 LA

Fatty Acid Methyl Ester Biodiesel (Biodiesel Fuel) consists of a family of fuels derived from vegetable oils treated with methyl esters.

NOTICE: *Biodiesel Fuel blends are approved for your engine only if they comply with EN14214 Specification Standards or ASTM D6751.*

NOTICE: *It is imperative that you check which blend is approved for your engine with your NEW HOLLAND dealer. Be aware that the use of Biodiesel Fuel that does not comply with the Standards mentioned above could lead to severe damage to the engine and fuel system of your machine. The use of fuels that are not approved may void NEW HOLLAND Warranty coverage.*

Biodiesel Fuel Usage Conditions

NOTICE: *The Biodiesel Fuel must meet the fuel Specification mentioned above.*

Biodiesel Fuel must be purchased from a trusted supplier that understands the product and maintains good fuel quality. Biodiesel Fuel must be pre-blended by the supplier. Mixing Biodiesel Fuels on-site can result in incorrect mixture that can lead to problems with both engine and fuel system.

Engine performance is affected by the use of Biodiesel Fuel. There may be up to **12 %** reduction in power or torque depending on the blend used.

NOTICE: *DO NOT modify the engine and/or injection pump settings to recover the reduced performance.*

The reduced power must be accepted if using any Biodiesel Fuel blend.

Some modification may be required to allow your engine to run Biodiesel Fuel. Consult your dealer for complete information on these modifications.

Biodiesel Fuel has a higher cloud point than Diesel Fuel.

NOTICE: *The use of high Biodiesel Fuel blends are not recommended in cold weather conditions.*

With Biodiesel Fuels, it may be necessary to change the engine oil, engine oil filter and fuel filter elements more frequently than with Diesel Fuels. Biodiesel Fuel can remove rust and particles from the inside of on-site fuel storage tanks that would normally adhere to the sides of the tank. Like particle deposits that commonly occur with Diesel Fuel, these particles can become trapped by the machine fuel filters, causing blockage and shortening filter life. In cold weather, this is more likely to happen. Consult your NEW HOLLAND dealer for information on cold weather operation and proper maintenance intervals when using any Biodiesel Fuel blend.

When handling Biodiesel Fuel, care must be taken not to allow water into the fuel supply. Biodiesel Fuel will actually attract moisture from the atmosphere.

Fuel tanks must be kept as full as possible to limit the amount of air and water vapors in them. It may be necessary to drain the fuel filter water tap more frequently.

Potential oxidation and stability could be a problem with the fuel stored in the machine.

NOTICE: *Machines must not be stored for more than three months with Biodiesel Fuel blends in the fuel system.*

If long storage periods are necessary, the engine must run on Diesel Fuel for 20 hours to flush the Biodiesel Fuel out of the engine fuel system prior to storage.

NOTICE: *Biodiesel Fuel must not be stored in on-site storage tanks for more than three months.*

Any spillage of Biodiesel Fuel must be cleaned up immediately before it can cause damage to the environment and the paint finish of the machine.

Before using Biodiesel Fuel blends you should consult with your dealer to receive full information about the approved blend for your machine and any detailed conditions of its usage.

NOTICE: *Be aware that not fulfilling the requirements and conditions of Biodiesel Fuel usage will void your machine's NEW HOLLAND Warranty coverage.*

Consumables Loctite® Product Chart

TT3840, TT3840F, TT3880F, TT4030 INT, TT4030 LA

Bonding Adhesives					
Product	Color	Strength	Fixture/Full Cure (Steel/Steel) Time	Recommended Primer or Activator	Description
312	Clear	9.8 - 17.2 MPa (1421 - 2495 psi)	2 min/24 hrs	736	Typical applications include bonding dissimilar materials such as metals, glass or ceramics and where fast fixturing is required between close fitting parts.
324	Light amber	34 - 614 MPa (4932 - 89061 psi)	30 min/24 hrs	7075	Is used to bond flat parts together. Especially suitable for joining dissimilar materials, e.g. ferrite to plated materials in electric motors, loudspeakers, etc. This product is specifically formulated for toughness and impact strength.
326	Yellow to light amber	34 - 300 MPa (4932 - 43515 psi)	3 min/6 hrs	7649 on one surface	Typical applications include bonding ferrites to plated materials in electric motors, loudspeaker hardware and jewelry where fast fixturing is required.
380	Black	26 MPa (3770 psi)	2 min/24 hrs	none	Is a rubber toughened adhesive with increased flexibility and peel strength along with enhanced resistance to shock.
409	Clear to slightly cloudy	18 - 26 MPa (2611 - 3771 psi)	2 min/24 hrs	none	Is a general purpose cyanoacrylate adhesive gel. The gel consistency prevents adhesive flow even on vertical surfaces.
426	Black	4.8 - 20.7 MPa (696 - 3003 psi)	10 sec/40 sec.	none	Is an adhesive gel toughened with elastomers for impact and peel strength along with improved resistance to heat and humidity.
454	Clear to slightly cloudy	19 - 28 MPa (2756 - 4061 psi)	1 min/72 hrs	none	Is particularly suited for bonding porous or absorbent materials such as wood, paper, leather and fabric.
455	Clear to light yellow	9.7 MPa (1407 psi)	30 sec/24 hrs	none	Is a general purpose cyanoacrylate adhesive gel with low odor and low blooming properties and is particularly suitable for applications where vapor control is difficult.
480	Black	22 - 30 MPa (3191 - 4352 psi)	2 min/24 hrs	none	Is a rubber toughened adhesive with increased flexibility and peel strength along with enhanced resistance to shock.
495	Clear to straw colored	12 - 26 MPa (1741 - 3771 psi)	10 sec/30 sec.	none	Is a general purpose cyanoacrylate instant adhesive.
E60HP	Pale yellow	29.8 MPa (4322 psi)	3 hrs/24 hrs	none	Is a toughened, mediumviscosity, industrial grade epoxy adhesive with extended work life. Once mixed, the two-component epoxy cures at room temperature to form a tough, off-white, bond line which provides high peel resistance and high shear strengths. The fully cured epoxy is resistant to a wide range of chemicals and solvents, and acts as an excellent electrical insulator.

INTRODUCTION

Surface Preparation			
Product	Color	Active (Steel/Steel) Time	Description
7380	Yellow to light amber	6 hours	Is designed to initiate the cure of Loctite toughened acrylic adhesives.
7471	Yellow to light amber	30 to 70 seconds	Is used where increased cure speed of LOCTITE® anaerobic products is required. It is especially recommended for applications with passive metals or inert surfaces and with large bond gaps. Is particularly recommended when prevailing temperature is low < 15 °C (60 °F).
7649	Green	30 to 70 seconds	Is used where increased cure speed of LOCTITE® anaerobic products is required. It is especially recommended for applications with passive metals or inert surfaces and with large bond gaps. Is particularly recommended when prevailing temperature is low < 15 °C (60 °F).

Retain, Cylindrical Assemblies					
Product	Color	Strength	Fixture/Full Cure (Steel/Steel) Time	Recommended Primer or Activator	Description
603	Green	13.5 - 22.5 MPa (1958 - 3264 psi)	7 min/6 hrs	7471 or 7469	Is designed for the bonding of cylindrical fitting parts, particularly where consistently clean surfaces cannot be assured. The product cures when confined in the absence of air between close fitting metal surfaces and prevents loosening and leakage from shock and vibration. Typical applications include retaining roller bearings or oil impregnated bushings into housings.
609	Green	10.3 - 15.8 MPa (1494 - 2292 psi)	25 min/6 hrs	7471 or 7469	Is designed for the bonding of cylindrical fitting parts. The product cures when confined in the absence of air between close fitting metal surfaces and prevents loosening and leakage from shock and vibration. Typical applications include rotor to shafts in fractional and subfractional horsepower motors. Locks bushings and sleeves in housings on shafts. Augments press fits.
620	Green	17.2 - 24.1 MPa (2495 - 3496 psi)	1 hr 10 min/18 hrs	7471 or 7469	Is designed for the bonding of cylindrical fitting parts. The product cures when confined in the absence of air between close fitting metal surfaces and prevents loosening and leakage from shock and vibration. Typical applications include locating pins in radiator assemblies, sleeves into pump housings and bearings in auto transmissions. Particularly suitable for applications where temperature resistance up to 200 °C (395 °F) is required.
635	Green opaque	13.8 - 31.0 MPa (2002 - 4497 psi)	30 min/72 hrs	7471 or 7469	Is designed for the bonding of cylindrical fitting parts. The product cures when confined in the absence of air between close fitting metal surfaces and prevents loosening and leakage from shock and vibration. Typical applications include rotor to shafts in fractional and subfractional horsepower motors. Locks bushings and sleeves in housings on shafts. Augments press fits.

INTRODUCTION

Retain, Cylindrical Assemblies					
Product	Color	Strength	Fixture/Full Cure (Steel/Steel) Time	Recommended Primer or Activator	Description
638	Green	13.5 - 25.0 MPa (1958 - 3626 psi)	4 min/6 hrs	7471 or 7469	Is designed for the bonding of cylindrical fitting parts, particularly where bond gaps can approach 0.25 mm (0.01 in.) and where maximum strength at room temperature is required. The product cures when confined in the absence of air between close fitting metal surfaces and prevents loosening and leakage from shock and vibration. Typical applications include locking bushings and sleeves into housings and on shafts.
648	Green	13.5 - 25.0 MPa (1958 - 3626 psi)	4 min/1.5 hrs	7471 or 7469	Is designed for the bonding of cylindrical fitting parts. The product cures when confined in the absence of air between close fitting metal surfaces and prevents loosening and leakage from shock and vibration. Typical applications include holding gears and sprockets onto gearbox shafts and rotors on electric motor shafts.
660	Metallic grey	17.2 MPa (2495 psi)	15 min/1.5 hrs	7471 or 7469	Is designed for the bonding of cylindrical fitting parts, particularly where bond gaps can approach 0.50 mm (0.02 in). The product cures when confined in the absence of air between close fitting metal surfaces and prevents loosening and leakage from shock and vibration. This product possesses excellent gap cure characteristics. Typical applications include restoring correct fits on worn shafts, spun bearings, and damaged keyways.
680	Green	19.3 - 24.1 MPa (2799 - 3496 psi)	20 min/1.1 hrs	7471 or 7469	Is designed for the bonding of cylindrical fitting parts, particularly where low viscosity is required. The product cures when confined in the absence of air between close fitting metal surfaces and prevents loosening and leakage from shock and vibration.

RTV Sealants					
Product	Color	Strength	Fixture/Full Cure (Steel/Steel) Time	Description	
5699	Grey	1.3 - 2.1 MPa (189 - 305 psi)	30 min/14 days	Is designed primarily for flange sealing with excellent oil resistance on rigid flange sealing for example on transmissions and cast metal housings.	
587	Blue	NA	2 hrs/24 hrs	Forms tough, flexible gaskets directly on the flange. Sensor-safe, low odor, non-corrosive. Excellent oil resistance and joint movement values. Eight times more flexible than cork/composite gaskets; three times more oil resistant than conventional silicones. Temperature range -59 - 260 °C (-75 - 500 °F) intermittent; resists auto and shop fluids.	
593	Black	1.5 MPa (218 psi)	5 min/24 hrs	Is designed for superior bonding and sealing properties to most surfaces (not recommended for concrete). This product resists aging, weathering and thermal cycling without hardening, shrinking or cracking. It is formulated to withstand extreme temperature cycling, UV light and ozone. The thixotropic nature reduces the migration of liquid product after application to the substrate.	

INTRODUCTION

RTV Sealants				
Product	Color	Strength	Fixture/Full Cure (Steel/Steel) Time	Description
595	Clear	1.5 MPa (218 psi)	5 min/24 hrs	Is designed for superior bonding and sealing properties to most surfaces (not recommended for concrete). This product resists aging, weathering and thermal cycling without hardening, shrinking or cracking. It is formulated to withstand extreme temperature cycling, UV light and ozone. The thixotropic nature reduces the migration of liquid product after application to the substrate.
596	Red	NA	5 min/24 hrs	Is specifically formulated for gasketing and sealing where high temperatures 315 °C (600 °F) are experienced such as exhaust manifolds - crossovers, high temperature ovens and furnaces. Applications where sealing and bonding are required under frequent exposure to temperatures above 235 - 315 °C (450 - 600 °F) .

Gasket Sealants					
Product	Color	Strength	Fixture/Full Cure (Steel/Steel) Time	Recommended Primer or Activator	Description
509	Blue to greenish paste	8 - 9 MPa (1160 - 1305 psi)	1 hr/72 hrs	7471 or 7469	Provides resistance to low pressures immediately after assembly of flanges. It seals close fitting joints between rigid metal faces and flanges. Typically used as a form-in-place gasket on rigid flanged connections, e.g. gearbox and engine casings, etc. The thixotropic nature reduces the migration of liquid product after application to the substrate.
515	Opaque, dark purple	6 - 14 MPa (870 - 2031 psi)	30 min/18 hrs	7471 or 7469	It seals close fitting joints between rigid metal faces and flanges and will flex with minor flange movements. Provides resistance to low pressures immediately after assembly of flanges. Typically used as a form-in-place gasket for pumps, thermostats, compressors, transmission housings and axle covers.
518	Red	7.5 - 8.5 MPa (1088 - 1233 psi)	30 min/8 hrs	7471 or 7469	Typical applications include sealing close fitting joints between rigid metal faces and flanges. Provides resistance to low pressures immediately after assembly of flanges. Typically used as a form-in-place gasket on rigid flanged connections, e.g. gearbox and engine casings, etc.
542	Brown	9 - 25 Nm (80 - 222 lb in)	20 min/8 hrs	7471 or 7469	Is designed for the locking and sealing of metal pipes and fittings. The product cures when confined in the absence of air between close fitting metal surfaces and prevents loosening and leakage from shock and vibration.
545	Purple	2 Nm (20 lb in)	30 min/24 hrs	7471 or 7469	Is designed for the locking and sealing of metal pipes and fittings. The product cures when confined in the absence of air between close fitting metal surfaces and prevents loosening and leakage from shock and vibration. This product is specially formulated to offer lubricity for easy assembly.
567	Off white	0.3 - 1.7 Nm (3 - 15 lb in)	4 hrs/72 hrs	7471 or 7469	Is designed for the locking and sealing of metal tapered threads and fittings.
569	Brown	1.1 - 2.8 Nm (10 - 25 lb in)	2 hr/24 hrs	7471 or 7469	Is designed for the locking and sealing of plastic and metal pipes and fittings.

INTRODUCTION

Gasket Sealants					
Product	Color	Strength	Fixture/Full Cure (Steel/Steel) Time	Recommended Primer or Activator	Description
592	White	0.113 - 0.330 Nm (1 - 3 lb in)	72 hrs	none	Is a medium strength anaerobic sealant with Teflon® for tapered pipe threads. The high lubricating properties of this compound prevent galling on pipe threads and fittings. It will provide immediate low pressure sealing and allow the readjustment of fittings shortly after assembly. After 72 hours the joint is sealed to pipe burst pressure.
598	Metallic black	1.31 MPa (190 psi)	25 min/72 hrs	none	This product resists aging, weathering and thermal cycling without hardening, shrinking or cracking. Typical applications include oil pans, transmission pans, valve covers, valves and guides, timing gear covers, and differential covers. This product is typically used in applications with an operating range of -54 - 260 °C (-65 - 500 °F) .

Thread Locker and Sealing					
Product	Color	Strength	Fixture/Full Cure (Steel/Steel) Time	Recommended Primer or Activator	Description
204	Pink	12.4 - 24.9 Nm (110 - 220 lb in)	10 min/72 hrs	none	Is a dry-to-the-touch, preapplied film for threaded fasteners. It remains inert on the fastener until assembly of the threads releases a quick curing resin. The resin fills all the voids in the threads and cures to securely lock and seal the assembly.
222	Purple	4 - 14 Nm (35 - 124 lb in)	20 min/3 hrs	7471 or 7469	Is designed for the locking and sealing of threaded fasteners which require easy disassembly with standard hand tools.
242	Blue	5.6 - 17 Nm (50 - 150 lb in)	3 min/6 hrs	7471 or 7469	Is designed for the locking and sealing of threaded fasteners which require normal disassembly with standard hand tools.
243	Blue	7 - 24 Nm (62 - 212 lb in)	10 min/1 hr	7471 or 7469	Is designed for the locking and sealing of threaded fasteners which require normal disassembly with standard hand tools.
246	Blue	2 - 5.7 Nm (18 - 50 lb in)	10 min/6 hrs	7471 or 7469	Is designed for the locking and sealing of threaded fasteners which require normal disassembly with standard hand tools. The product cures when confined in the absence of air between close fitting metal surfaces and prevents loosening and leakage from shock and vibration. Particularly suitable for heavy duty applications such as bolts used in transmissions, construction equipment or railroad assemblies where resistance to heavy shock, vibration and stress level is required along with exposure to elevated temperatures.
262	Red	22 - 40 Nm (195 - 354 lb in)	15min/7 hrs	7471 or 7469	Is designed for the permanent locking and sealing of threaded fasteners.
271	Red	16.9 - 34 Nm (150 - 300 lb in)	10 min/24 hrs	7471 or 7469	Is designed for the permanent locking and sealing of threaded fasteners.
277	Red	32 - 40 Nm (283 - 354 lb in)	30 min/7 hrs	7471 or 7469	Is designed for the permanent locking and sealing of threaded fasteners.

Thread Locker and Sealing					
Product	Color	Strength	Fixture/Full Cure (Steel/Steel) Time	Recommended Primer or Activator	Description
290	Green	10 - 40 Nm (90 - 355 lb in)	20 min/4 hrs	7471 or 7469	Is designed for the locking and sealing of threaded fasteners. Because of its low viscosity and capillary action, the product wicks between engaged threads and eliminates the need to disassemble prior to application.
425	Dark blue	0.23 - 8.5 Nm (2 - 75 lb in)	2 min/24 hrs	7113	Is designed as a fast curing, low strength adhesive for locking metal and plastics fasteners. The product is designed for pre- or post-application. LOCTITE® 425™ cures quickly on plated metal and plastics fasteners; fixturing is achieved in less than 2 minutes and full strength within 24 hours.

Sample of manual. Download All 940 pages at:

<https://www.arepairmanual.com/downloads/new-holland-tt3840f-tt3840-tt3880f-tt4030-tractor-service-repair-manual/>